

NECN630

User Manual

<Version No. V0.2 MP>

English

Software Version< NEC_N630_VER_02.04>

Jan. 2005

These instructions are published by Wuhan NEC Mobile Communication Co., Ltd. Wuhan NEC Mobile Communication Co., Ltd has right to modify or improve the potential print errors, contradiction with the updated message, improvement on the program or device in these instructions without any guaranty. You will not be notified with respect to these modifications, which may be compiled in the owner's manual of the new version.

Copyright Wuhan NEC Mobile Communication Co., Ltd reserves all the rights.

Precaution:

Not all of the services/functions described in these instructions are supported by the network.

Please contact the network manager or service provider if any service/function is unclear.

Before you use the mobile phone, please read chapters of "Precautions on Safety" and "Maintenance guide".

Table of Contents

PRECAUTIONS ON SAFETY.....	7
CHAPTER 1 INTRODUCTIONS.....	12
THE STRUCTURE OF THE HONEYCOMB PHONE SYSTEM	12
OVERVIEW OF THE PHONE	12
SIDE KEY	14
SIM CARD, BATTERY.....	15
CHARGING METHOD.....	16
SWITCH ON THE PHONE.....	17
SWITCH OFF	17
SCREEN DISPLAY AND OPERATION	17
ABOUT THE TERMS AND THE PICTURES USED IN THE INSTRUCTIONS	22
CHAPTER 2 INPUT METHOD	22
INPUT METHOD INDICATE SYMBOL	22
HAND WRITING METHOD.....	23
PINYIN INPUT METHOD.....	23
STROKE INPUT METHOD.....	25
SMART ENGLISH INPUT METHOD.....	25
ENGLISH SMALL LETTER INPUT METHOD	26
ENGLISH CAPITAL LETTER INPUT METHOD	26
NUMBER INPUT METHOD.....	27
INPUTTING A BLANK OR CHANGING A LINE.....	27
CHAPTER 3 BASIC OPERATION DIRECTIONS	27
MAIN PROPERTIES	27
PIN AND PIN2 CODE	28
PUK CODE AND PUK2 CODE.....	28
GENERAL INSTRUCTIONS OF THE FUNCTION OF THE PHONE	29
BASIC FUNCTION	29
DIALING AN INTERNATIONAL CALL	30
DIRECTLY DIALING AN EXTENSION TELEPHONE OR VOICE MAIL BOX.....	30
DIALING AN EMERGENCY TELEPHONE	30
SPEED DIAL VIA SIM CARD PHONE BOOK	30
SINGLE KEY SPEED DIAL	31

RECEIVING A CALL	31
USING A COMMON EARPHONE.....	31
FUNCTIONS DURING A CALL	31
MAKE MULTI-SIDE CALL	32
CHAPTER 4 SETTING	33
PHONE MODE	34
DISPLAY	37
CALL SETTINGS.....	37
TIME & DATE	38
CALIBRATE	39
AUTO LOCK	39
SECURITY.....	39
LANGUAGE.....	45
FIREWALL.....	45
FACTORY.....	46
CHAPTER 5 MESSAGE	46
MESSAGE	47
CREATE AND SEND MESSAGE	47
READ MESSAGE	48
QUICK TEXT.....	49
LONG MESSAGE	50
PUSH MESSAGE	50
MULTIMEDIA MESSAGE	50
CREATE AND SEND MULTIMEDIA MESSAGE	51
BROWSE MULTIMEDIA INFORMATION	53
INBOX, OUTBOX, SENT AND DRAFTS.....	54
MY FOLDER	56
SETTINGS	56
CHAPTER 6 MY FAVORITE	58
JAVA BOX	59
PICTURES.....	59
RING TONE	60
MOVIES.....	60
MEMORY STATUS.....	61

CHAPTER 7 PHONE BOOK.....	61
SHOWING THE LIST OF PHONE BOOK	62
GROUP SETUP	62
ADDING NEW CONTACT	63
FUNCTION MENU ON DETAILED INFORMATION OF CONTACT	64
COPY THE DATA INFORMATION OF CONTACT.....	66
DELETE CONTACT	67
FIND CONTACT	68
MEMORY STATUS.....	70
SET UP THE PORTRAIT.....	70
CALL HISTORY	70
MY NUMBER.....	71
CHAPTER 8 CHINA MOBILE SERVICE.....	72
CHAPTER 9 MONTERNET.....	73
STARTING THE BROWSER.....	73
BROWSING INFORMATION AND USING THE FUNCTION OF VISIT	73
LIST OF OFFLINE STATE ON BROWSER	74
MENU OF BROWSER ONLINE STATE.....	76
DOWNLOADING PICTURE.....	77
DOWNLOADING RING.....	78
CHAPTER 10 GAMES	78
CARGADOR	78
COLORFUL BUBBLE	78
LIGHT UP.....	79
TASTY FRUIT	79
GAME AUDIO	80
CHAPTER 11 ACCESSORIES	80
RADIO	80
SCHEDULE.....	81
CALENDAR.....	84
WORLD TIME.....	85
ANNIVERSARY	85
CALCULATOR.....	86

ALARM 闹钟	87
POWERWORD	88
UNIT CONVERSION	88
CURRENCY EXCHANGE	89
PC TOOLS	90
IR RECEIVING	93
CHAPTER 12 CAMERA	93
ATTENTIONS FOR USING CAMERA	93
CAMERA FUNCTION	94
SHOOTING IMAGES	95
SHOOTING MOVIE	95
SAVING IMAGES	95
IMAGE LIST	95
SHOOT MODE	96
ZOOM	96
LIGHT	96
SELF SHOOT SWITCH	97
SELF SHOOT TIMER	97
SETUP	97
SENDING IMAGES	97
CHAPTER 13 STK APPLICATION	98
CHAPTER 14 COMMON PROBLEMS AND SOLUTIONS	98
CHAPTER 15 TECHNICAL PARAMETERS	99
CHAPTER 16 MAINTENANCE MANUAL	100

Precautions on Safety

Please carefully read the following information in order to safely and effectively use your phone:

Common Notes

The phone comprises precise electronic circuit, magnets and battery system, to handle it, please be careful, especially of the following main points:

- Keep the phone and its accessories away from liquid or humid environment.
- Keep the phone away from an environment too high or too low in temperature.
- Do not let a metal object (such as a coin or a key coil), which may result in a short circuit, to contact the phone.
- The vibration function of the phone may move the phone, so do not put the phone near a flame or a lit cigar or cigarette.
- Do not scrawl on the phone.
- Prevent the phone from falling off or any other rude knocking.
- Keep the phone away from computer magnetic disk, credit card, traveling card, or other magnetic objects, otherwise the message stored in the magnetic disk or credit card may be affected.
- Do not place your phone or battery in an environment exceeding 60°C, for example, on an automobile panel, window, or behind a glass plate irradiated by the sunshine.
- Please do not take out the phone battery in a switching-on state.
- Do not throw the battery in a fire.
- Do not keep the phone battery in the mouth, since that the electrolyte swallowed down may poison you. If an error operation is taken for carelessness, please contact the doctor as soon as possible.
- Do not attempt to disassemble the phone or the other accessories.
- The built-in battery in the phone can only be changed by a professional service engineer. If it is replaced with a battery of an error type, an explosion may arise. Be sure to handle the used battery according to the induction of the producer.
- It may have a potential danger to use any one of battery, charger, vehicle-type charger (optional) or seat-type charger (optional) not designated by the producer.
- The headphone may generate heat, and the phone may also generate heat when being charged.
- Only wet or electricity-proof cloth may be used to wipe the phone. Please do not use a dry or a charged cloth to wipe the phone. Please do not use a chemical reagent or a cleanser containing abrasive sand; otherwise the shell may be damaged.
- Please do not keep the state of having no battery in the battery compartment or outage; otherwise some data may be initialized.

- The metal material contained in the phone may cause you in hypersusceptibility, which depends on you physique or health status.
- Since that parts such as liquid crystal display and pick-up head belong to fragile parts, please carefully keep them such that the phone may not be impacted or squeezed.
- The flash lamp should not close with your or other's eyes.

Precautions for carrying with it

In order to comply with the stipulation on radiofrequency leakage, if you carry with the phone, please put the phone in the accessories provided or approved by NEC. It may result in exceed the upper limit stipulated on radiofrequency leakage to use an accessory not approved by NEC. If these special accessories for carrying provided or approved by NEC, and the phone is placed at an unusual position, please be sure to keep a distance of 1 inch (2.5cm) or more from your body to the phone.

Precautions for using the information function

When a message function of the phone is used (no matter whether be with a cable), please keep the phone with a distance at least 1 inch (2.5 cm) to your body.

Pacemaker

The pacemakerproducer may demand to keep the phone with a distance of at least 6 inch (15 cm) to the pacemaker. The pacemaker user should note:

- When switching on the phone, be sure to keep the phone with a distance 6 inch (15 cm) or more to the pacemaker.
- Do not put the phone in the pocket of the frock.
- Please use the phone on the other side of the pacemaker in order to reduce the potential disturbance.
- If you are suspicious of a possible disturbance, please witch off the phone at once.

Audiphone

Some digital phone may generate disturbance to some audiphone. If such a disturbance occurs, please contact the audiphone producer to seek a solution.

Other medical equipment

If you use the other personal medical equipment, please consult the producer of these equipments to make sure whether they can adequately shield surrounding radiofrenqucy signal. You may consult a doctor about the related information.

Airplane safety rules

Please switch off the phone and take out the battery when on an airplane or near an airplane. It belongs to an illegal action to use a mobile phone on an airplane, since that it may bring danger to the operation of an airplane or may damage the mobile phone network. The phone service may be paused or cancelled to the violator, who even may be indicted or be subjected to double punishments.

Hospital safety rules

Please switch off the phone in a place where a phone is forbidden. Please comply with the directions and stipulations of each medical institution when using the phone.

General safety rules

- Please comply with the directions of a marker such as “shut off bidirectional wireless equipment” at or near a place storing oil, chemical or explosive objects.
- Do not let children play with the phone and its accessories.
- The phone is fixed with some small fittings, which should not be contacted by the children since it has a danger of being swallowed.
- Pay a special attention to the volume of incoming call voice and setting on vibration for a user suffering from a heart trouble.
- If the vibration function is turned on, please keep the phone away a heating source (such as a warmer) and avoid slipping from the tabletop as a result of vibration.

Rode safety rules

- You should safely control the automobile and pay attention to drive all the time.
- Please comply with all of the stipulation in local traffic safety rules.
- According to the demand of driving condition, please dial or lift a phone after sheering the vehicle off the driveway.
- Unless in an emergency, it is forbidden to stop a vehicle at a separating pier of a highway to lift or dial a phone.
- When entering a gas station (such as a gasoline station), even if your vehicle is not oiled, the phone should be shut off.
- Please do not store or convey an inflammable and explosive object with wireless emission equipment (such as a phone) altogether.
- The electronic system in an automobile, such as a unlock brake, speed control and fuel ejection system, may be effected by the wireless electric wave. The produce of these equipments will tell you whether these equipments have a perfect shielding function. If you are suspicious that

the wireless electric wave may result in a malfunction of an automobile, please contact the dealer.

Places where explosion may be caused

Before coming into a place where an explosion may be caused for some potential factors, please shut off your phone. Please do not take out, install or charge the phone in these places. A spark may cause an explosion or a fire and cause a personal injury or even death in an environment where explosion may occurs.

Note: The areas where an explosion may be caused comprising: fuel area (such as area under the board of a ship, or an establishment for conveying and storing a fuel or chemical products), places where the air contains chemical substance or particles (such as dust and metal powder). The places having danger of explosion is usually provided with a mark, but not all of places are provided with such a mark.

Automobile with safety gasbag

A safety gasbag may generate a strong force with expanding, so wireless communication equipment should not be installed or disposed under a safety gasbag or in an area that a safety gasbag may touch. If the vehicle-loaded wireless communication equipment is not correctly installed, the safety gasbag may cause serious injury once it expands.

Equipments provided by the other producer

The guarantee of NEC to keep your phone in good repair may be invalid and the normal functions of the phone may be affected if you use an equipment, cable or accessories not produced or authorized by NEC. For example, you must use the power supply wire adapted to its traveling charger provided by NEC.

Services

There is not a part that the user may repair of himself in the charger or seat-type charger (optional) of the phone, so it is recommended that you deliver your NEC phone to a servicing organization to make a repair. When you need a service, please consult the service provider or NEC for details.

Leakage of radiofrequency energy

Your phone is a wireless transmitter and receiver with lower power. Once switched on, it will receive and transmit wireless signal intermittently. The network may control the transmission power of the phone. The design of this phone provided by NEC complies with the local stipulation related to the leakage of radiofrequency energy in your country.

Electromagnetic radiation

Your phone completely complies with the standard related to wireless irradiation enacted by the authority of the state and International Health Association. These limiting standards are parts of comprehensive rules and constitute public wireless irradiation permission standards. These standards are developed and formed after a long-term intensive scientific research by independent scientific organizations such as ICNIRP (International Commission on Non-ionizing Radiation Protection). These limiting standards contain a large surplus to insure the safety of all of the people, no matter and take the variable factor of various measurement conditions in consider.

Copyright permission

- T9™ word input and T9 mark is a registered trade mark of Tegic Communication.
“The authorizations of T9 word input are as follows:
U.S. Patent No.: 5,818,437, 5,953,541, 5,187,480, 5,945,928, 6,011,554 and 6,307,548; Austria Patent No.: 727539; Canada Patent No.: 1,331,057; U. K. Patent No.: 2238414B; Hong Kong standard Patent No.: HK0940329; Singapore Patent No.: 51383; Europe Patent No.: 0 842 463(96927260.8) DE/DK, FI, FR, IT, NL, PT, ES, SE, GB; Korea Patent No. :KR201211B1 and KR226206B1; The patents in the other countries are in application”
- KINGSOFT PowerWord LOGO graph and KINGSOFT LOGO are registered trade marks of Kingsoft Company. Kingsoft Company has the copyright and reserves all the rights.

If the contents in these instructions are not consistent with your phone, your phone should be considered to be correct.

NEC has the right to finally explain these instructions.

NEC reserves the right to modify the technology rules without notification.

NEC reserves the right to modify these instructions without notification.

The producer reserves the right to modify the specification of the technology product without notification in advance.

Chapter 1 Introductions

The structure of the honeycomb phone system

Each time you use the phone, some various organizations may be related to.



手机制造商: Phone producer

网络商: Network facilitator

提供 SIM 卡和收费的服务商: Facilitator for providing SIM cards and charging

网络: Network



信号的传输者: Transmitter of the signal

WAP 服务提供商: WAP facilitator

提供 WAP 服务: Providing WAP services

Your phone supports all of the functions introduced in these instructions. In order to use these functions, however, you must possess a SIM card (provided by a network facilitator) supporting these functions. In addition, even if you have possessed a SIM having all of the functions, your phone still cannot use these functions if the transmitting network does not support them.

Overview of the phone

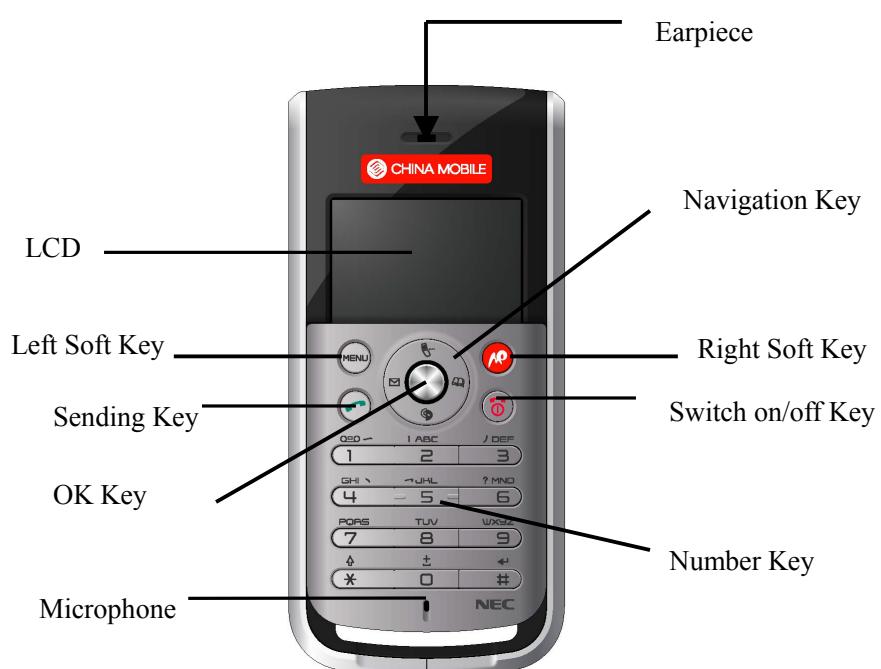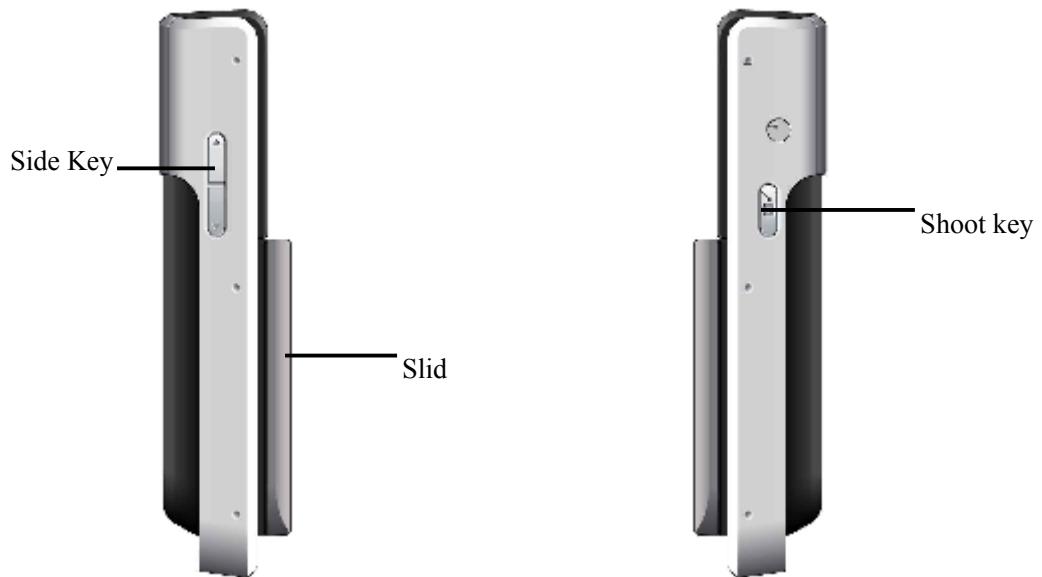



Side Key

1. The volume of the earpiece may be adjusted by pressing the side key when keeping in a standby state or during a talk.
2. The menu icons in the main menu are selected up and down by pressing the side key.
3. The focus may be adjusted by pressing the side key in the shooting preview window.
4. The input methods may be switched by pressing the side key during the process of inputting words.

5. The incoming call ring may be switched off by pressing the side key when the slide is closed.
6. The display mode of the screen may be switched by continuously pressing the upper side key when the slide is closed.
7. After a radio function is switched on, the volume of the radio may be adjusted by pressing the side key under a standby state or in a radio display interface.

SIM card, battery

The SIM card (user identity identifying module) contains the number of the phone and the detail information of the service items, and can be used to store the telephone number and personal information.

⚠Note: Put the SIM card in a place where the children cannot touch it.

⚠Note: The SIM should be handled with care since that the SIM card and its touch point may be subjected to a damage caused by scuffing or bending, for example, when inserting or extracting the SIM card.

⚠Note: Do not let the SIM card to touch static, dust or immerse it into water.

⚠Note: The SIM card can be installed only after the phone is switched off and the battery is unloaded.

The battery is extracted and the SIM card is installed according to the following steps:

1. Put the phone with the front side upwards, and handhold the phone body with palm upwards;
2. Press the releasing button on the back of the phone and take the back cover of the phone down;
3. Lock the right side of the battery and take the battery out of the battery compartment.
4. Insert the SIM card in the card slot, and insure that the corner cuts of the SIM card collimate the corner cuts of the card slot with the metal surface downwards; push the metal press sheet to fix the SIM in the card slot;
5. Put the battery with the end having the metal contact point downwards and insert card at the top of the battery into the groove at the top of the battery compartment.
6. Press the other end of the battery until the battery is entirely locked in the battery compartment.
7. Then install the back shell of the battery until the back shell is closely combined with the phone body

💡Hint: If the SIM card is in a trouble, please contact your network service provider.

💡Hint: The capacity of the battery of this phone is 700mAh, and the standby time is about 110 hours. The system environment, the setting state of the phone or playing a game may affect the standby time of the phone.

💡Hint: battery properties and maintenances

1. The power of this phone is supplied with a secondary battery.
2. Be note that only after a period of complete charge and discharge for two or

three times can a new battery reach its optimum properties.

3. The battery may be charged and discharged for hundreds of times, but may fail finally. When the operating time (calling time and standby time) of the battery is obviously shortened, it should be replaced with a new one.
4. Only a battery approved by the phone producer can be used, and only a charger approved by the phone producer can be used to charge the battery. The power supply should be cut off when the charger is not in operation. The time to connect the battery to the charge should not exceed one week, since that the life of an overcharged battery may be shortened. If a completely discharged battery is laid aside, then the battery itself will discharge after a period of time.
5. The charging capability of the battery may be affected when being placed in an environment too high or too low in temperature. The range of the environment temperature is 0~45°C when the phone is charged.
6. Do not use the battery in the other devices.
7. Be sure not to use any damaged charger or battery.
8. Do not put the battery in a short circuit. If you put a backup battery in a pocket or a bag, and if some metal substances (such as a coin, a pin or a pen) in it accidentally directly connect the positive electrode and the negative electrode (that is, the small metal strips on the battery) of the battery, a short circuit is caused. The short circuit may damage the battery and the connector.
9. If the battery is put in a place too hot or too cold, the capability and the life of the battery may be reduced. Keep as possible the temperature of the battery to be in a range between 15°C and 25°C
10. Do not throw the battery into a fire.
11. Please handle the battery (such recycling) according to the stipulations. Do not treat with the battery as domestic garbage.

Charging method

When the electric quantity of battery goes below the operation voltage, the screen will display a charging hint and empty battery icon. Meanwhile the phone sends out a hinting voice and hinting information. If the phone is not charged in time, it will be automatically shut off after a period of time.

The battery appended by this phone is a secondary lithium battery. Please use the original charger and battery to insure service life of the battery.

1. Carefully insert the plug of the charger into the jack at the bottom of the battery.
2. Connect the charge to the power supply socket. When the phone is charged under a power-off

state, the display screen will display “charging”. When the phone is charged under a power-on state, the battery indicating icon flashes and the grids showing the electrical quantity continuously increase, and the phone can still be normally used at that time.

3. After charging is completed, the indicating icon of the battery stops flashing. If the phone is under a power-off state, the display screen will displays “charged”
4. Disconnect the charger and the power supply and the phone.
5. Please use a charger approved by the mobile phone producer, and read the instructions on the charger before using it.

Switch on the phone

Press switch on/off key for 2-3 sec under a power-off state, and then the phone is switched on. During switching on the phone, you may hear switch-on music and the screen displays a switch-on motion picture. After the phone is switched on, if a PIN code is set, the phone may hint to input PIN code. If the phone is locked, the phone may hint to input the phone password. If no SIM card is inserted, the phone may hit no SIM, and you can select whether to switch off the phone.



Hint: Please refer to the related contents in “Safety Settings” for the method of setting PIN code.

If the PIN code is correctly inputted, the phone then carries out a network registration.

The standby interface is displayed after a successful registration.

Switch off

Continuously press the switch on/off key under a standby state till the screen display the switch-off motion picture. A switch-off music may be heard during switching off the phone.

Screen display and operation

Inner display function



⚠ Note: the drawings in these instructions are merely reference describing the functions. If they are not consistent with your phone, please take your phone as correct.



Main Menu icon: click this icon could enter into the main menu.



Radio icon: click this icon after insert the earphone, could enter into the Radio function.



China Mobile Service icon: click this icon could enter into the interface of China Mobile Service.



💡 Hint: Under the standby mode, click the time and date that shown on the Main screen could enter into the schedule function.

1. The icons in the status bar displays the various operation states of the phone and comprises:



Signal intensity indicate: to display the intensity of the signal of the phone, and more upright bars means stronger signal.



Battery electric quantity indicate: to display the electric quantity of the phone. Full grid means the electric quantity is enough; if no grid is displayed, the phone needs to be charged.



Alarm clock icon: used to show whether an alarm function is set at present.



Message icon: to denote unread message icon, and display



The short messages in the phone are full: to show that the short messages stored in the phone are full.



The short messages in the SIM card are full: to show that the short messages stored in the SIM card are full.

-  The short messages in both of the phone and SIM card are full: to show that the short messages stored in both of the phone and SIM card are full.
-  Call transfer: to show that a incoming call transfer function in the call transfer is set at present.
-  Standard mode: to show a standard mode in the scene modes is set at present.
-  Conference mode: to show a conference mode in the scene modes is set at present.
-  Outdoors mode: to show an outdoors mode in the scene modes is set at present.
-  Self-defining mode: to show a self-defining mode in the scene modes is set at present.
-  GPRS function: to show that SIM card supports a GPRS function, but said function is not activated.
-  GPRS function: to show that GPRS function is used now.
-  Talking icon: to show it is in a talking state (or a CSD function is used now).
-  Icon for non-lifting telephone: to show that you have some non-lifting telephone.
-  Roam: to show that the phone is in an international roam state.

3. Function icons

-  Setting: to set you phone and carry out a personal setting.
-  Message: to use the message function to receive and send SMS and EMS and to receive PUSH message.
-  My Favorites: to show the file list and to make an examination and management. It also comprises Java programs unloaded or installed by the user.
-  Phone Book: to record the information of the contacts, calling recording and number of this phone.
-  China mobile service: to enter into China mobile service function.
-  Monternet: a WAP browser to visit the Internet.
-  games: it comprises some games for user entertainment.



Accessories: A plurality of tools in common use are built in.



STK application: to enter a STK application and display service list.

3. The functions of the keys

The keys in the keypad	Command and Function
Power on/off key	<ul style="list-style-type: none"> The phone can be switched on by continuously pressing this key in a power off state. The phone can be switched off by continuously pressing this key in a power on state. Directly return to the standby interface by pressing this key in a function interface.
Left soft key	<ul style="list-style-type: none"> To execute the corresponding functions in the left soft key menu. In the standby state, open the slide, pressing this key can enter the main menu . When the keypad was locked, pressing the left soft key first, then pressing the “*”key, can unlock the keypad To switch the input method by pressing this key during word input.
Right soft key	<ul style="list-style-type: none"> To execute the corresponding functions in the right soft key menu. In the standby state, open the slide, pressing this key can enter into “China Mobile Service”. In the standby state, open the slide, continuously pressing this key can enter into the home page of “Monternet”. To switch among “dialed call”, “lifted call” and “un-lifted call” by pressing this key after entering the list of “dialed call” by pressing the sending key in a standby state
Sending key	<ul style="list-style-type: none"> To dial out a call number. To lift an incoming call. To enter the list of the most recent 20 dialed call by pressing this key in a standby state.
Navigation key	Upper navigation key <ul style="list-style-type: none"> To upwards adjust the menu option in the main menu. To enter the “Phone Mode” by pressing this key in a standby state. To activate the “Meeting Mode” by continuously pressing this key in a standby state.
	Lower navigation key <ul style="list-style-type: none"> To downwards adjust the menu option in the main menu. To enter the “My favorites” by pressing this key in a standby state.

	<p>Left navigation key</p> <ul style="list-style-type: none"> ● To leftwards adjust the menu option in the main menu. ● In the standby state, open the slide, pressing this key can enter into “Message”. ● To turn pages in the contact list of phone book <p>Right navigation key</p> <ul style="list-style-type: none"> ● To right wards adjust the menu option in the main menu. ● To directly enter into the contact list of “ Phone Book” by pressing this key in a standby state. ● To turn pages in the contact list of phone book.
OK key	<ul style="list-style-type: none"> ● To affirm the function selected by user. ● In the standby state, insert the earphone, pressing this key can enter into “Radio” when the slide is open. ● In the standby state, insert the earphone, continuously pressing this key can turn on the radio directly when the slide is close.
Side key	<ul style="list-style-type: none"> ● To adjust the volume of the earpiece by pressing this key in a calling state. ● To select the menu option by pressing this key in the main menu. ● To adjust the focus by pressing this key in a shooting preview window. ● To switch the input method in an input method state. ● To switch off the incoming call hint voice by continuously pressing the side key when a phone is called in and when the slide is closed. ● To switch the display mode of the screen clock by continuously pressing the upper side key when the slide is closed. ● After a radio function is switched on, the volume of the radio may be adjusted by pressing the side key under a standby state or in a radio display interface.
Shoot key	<ul style="list-style-type: none"> ● In the standby state, open the slide, pressing this key can enter into “Camera”. ● At the shooting preview window, pressing this key can shoot photos or movies. ● The flash light may emit light continuously and may serve as “electric torch” by continuously pressing the shoot key when the slide is closed.
* key	<ul style="list-style-type: none"> ● To input symbol of “P” by continuously pressing this key in a standby state. ● To switch the input method by pressing this key when words are inputted. ● To turn page forwards to the month by pressing this key in a calendar interface. ● In the standby state, continuously pressing this key can lock the keypad.
0 key	<ul style="list-style-type: none"> ● To input symbol of + by continuously pressing this key in a standby state. ● To input a bland by pressing “0” key when an input method other than number and symbol.
# key	<ul style="list-style-type: none"> ● To input a separator of “;” by continuously pressing this key when messages are sent in a group; ● To display a common symbol by pressing this key when there is not a candidate letter in an input method state.

- The prompt will move to home of the next line to input in a new line if “#” key is continuously pressed when there is not a candidate word list.
- To turn page backwards to the month by pressing this key in a calendar interface.

About the terms and the pictures used in the instructions

“Click” means to point at some position of the screen with a screen-touching pen and quickly leave the screen.

The pictures used in these instructions are merely functional schematic diagram. If it is different from the display of your phone, please consider your phone to be correct.

Chapter 2 Input Method

This phone provides various convenient word input method adapted to the other functions.

Input method indicate symbol

The indicate symbol of the present input method, such as Pinyin input method 拼音, may be displayed at the left lower area of the screen.

💡 Hint: Select an area where words are to be inputted to enter a text edit interface, and the input interface may automatically display the input method with the input mode of this area. (Where a number of a contact is to be inputted, the simulate keypad is automatically displayed as the picture shown below, input the number by clicking the number key shown on the screen).



Switching the input methods

- Switching can be executed among the input methods by repeatedly pressing “*” key.
- Switching can be done among the input methods by repeatedly pressing the left soft key.
- Repeatedly press the side key so as to switch to the input method needed.

Hand Writing method

Hand writing is the main input method for the user to input the Chinese character, English character or the numbers conveniently. It can be used at all functions that need enter the characters.



After entering a word edit interface, switch the input method type by means of the left soft key, side key or “*” key so as to select the hand writing input method. Click the 数、英 and 汉 to select the character type. Write the character on the input area of the screen with the touch pen, and then the word that was identified by the system will shown on the input area. Meanwhile, the candidate word list will displayed on the candidate word area. If the word that shown on the input area was not the character that you wanted, you can select the candidate word to replace it.

💡 Hint: In the process of input words, click and at the candidate word area will display more candidate words; click can input a blank; click can delete the characters that shown before the cursor, continuously click can delete all the content that was input.

Pinyin input method

1. After entering a word edit interface, switch the input method type by means of the left soft key, side key or “*” key so as to select the Pinyin input method **拼音**. Press the number key with said letter according to the Pinyin order of the Chinese character needed (the letter ü is denoted with V in the screen and keypad). For example, please sequentially press the [7 key]、[4 key]、[6 key] in order to input “pin”. The inputted letters or the combination thereof appears in the display area, as shown in the figure.



After input all of the spelling letters, you can press the [1 key] to input the tune, and — ✓ √ × • respectively represent tunes one, two, three and four. Press the [1 key] for one time to input tune one, and press it for two times to input tune two, and the rest may be deduced by analogy. You can input tune light by pressing it for five times. If the tune inputted is ineffective to a spelling, this tune is displayed as grey, and the candidate list do not implement a sieving effect.

2. Press the sending key or “#” key to select a combination of the spelling letters, meanwhile the candidate word list corresponding to this spelling is displayed in the candidate word area and the first candidate word is prominently displayed. If the word you need is not found in the present list, press the upper and lower navigation key to see the candidate words in the last or next line (When the candidate words occupies more than one line, the right side of the candidate list may display an arrow upwards or downwards), and press the left, right navigation key to prominently display the needed Chinese characters, and press the affirm key to make a “selection”, then said Chinese character is displayed at the prompt of the input field. The inputted contents may be cleared by pressing the right soft key during inputting.
3. After a Chinese character is inputted with the spelling input method, a list of the associated character will be displayed. Press the navigation key in four directions to prominently the needed associated character and then press the affirm key to input it. If needing not an associated character list or finding no needed character, you can directly press the number keys to go on to input spelling of the next character.

💡 Hint: The inputted tunes and spelling letters can be deleted one by one from left to right by repeatedly pressing the right soft key in the spelling letter/tune inputting state. After the last spelling letter is deleted, the input display area may be closed, and the Chinese characters at the left side of the prompt can be deleted one by one from right to left by repeatedly pressing the right soft key at that time. Continuous pressing on the right soft key may delete all of the contents. The associated character list can be closed by

pressing the right soft key when the associated characters are displayed.

Stroke Input Method

- 1、After entering a word input interface, you can switch the type of the input method by the side key or “*” key to select the stroke input method **笔划**. The horizontal, vertical, left-falling, dot, turning strokes respectively correspond to number keys of the [1 key]— [5 key]. Press the number key corresponding to the stroke of the character to be inputted according to the order of strokes. As shown in the figure, the inputted strokes and the candidate word corresponding to these strokes appear in the display area.
- 2、If you are not aware of the type of a special stroke, press the [6 key] to replace this stroke. This stroke is represented by a question mark (“?”) in the input area, and you can go on to input the other strokes.
- 3、Press the upper and lower navigation keys to see candidate characters in the last and next line, and press the right navigation key to prominently display the needed Chinese characters, and press the affirm key to make a “selection”. Then this Chinese character is displayed at the flashing promptly in the input field. During inputting, the right soft key can be pressed to clear the inputted contents.
- 4、The stroke input method supports the associated Chinese character function. Press the right navigation key to prominently display the needed associated character, and then press the affirm key to input it.



Smart English input method

Press the left soft key, side key or “*” key to select Intellect English input method **QEng**, input English letters, and then the inputted letter group appear in a candidate area (as shown in the following figure). The needed letter combination may be selected by means of left and right navigation keys. Press the affirm key to make a “selection” or press “0” key to select and input a blank, then this word will be displayed in the prompt in the input field. Press the right soft key to

sequentially delete the contents in the candidate area.



English Small Letter Input Method

Press the side key or “*” key to switch the input type and select English small letter input method **abc**. As shown in the figure, continuously press the corresponding number keys on the keypad until the needed letter appears on the screen.

💡 Hint: If the letter to be inputted and the last letter are located on the same key, please first press the navigation key to affirm the input of the last letter, or wait for the prompt appears again, and then input the new letters.



English Capital Letter Input Method

Press the side key or “*” key to switch the input type and select English capital letter input method **ABC**. As shown in the figure, continuously press the corresponding number keys on the keypad until the needed letter appears on the screen.

💡 Hint: If the letter to be inputted and the last letter are located on the same key, please first press the navigation key to affirm the input of the last letter, or wait for the prompt appears again, and then input the new letters.

Number Input Method

This input method is mainly used to input the code. Press the side key or “*” key to switch the input type and select English capital letter input method **数字**, and press the number keys to input numbers at the prompt.



Inputting a blank or changing a line

- A blank may be inputted by pressing “0” key if there is not a candidate word list when an input method other than number and symbol is used.
- Continuously press “#” key when there is not a candidate word list, and then the prompt may move to the home of the next line to input in the next line.

💡 Hint: When there is not a candidate letter combination, press “#” key to display Chinese or Latin symbol list. Press the navigation keys in four directions to move to the needed symbol and press the affirm key to input it.

💡 Hint: Continuously press the right soft key to clear all of the inputted contents during inputting.

Chapter 3 Basic Operation Directions

Main Properties

Your phone, which can be used in anywhere having a three-frequency network, comprises the following properties:

- LCD of 2.0 inch, 176*220 pixels, 65K colors
- Message function (SMS/EMS/MMS)
- 4 games
- 64 chord rings
- The phone directory can store 500 telephone directory recording.
- WAP service
- IR receive

- PC tool
- Digital camera
- Radio
- Calculator
- World time
- Schedule
- Alarm
- Anniversary
- Calendar
- Unit conversion
- Currency exchange
- PowerWord
- Java box

PIN and PIN2 code

PIN code: PIN code (personal identifying code) can prevent the others from using your SIM card without your permission. PIN code is usually provided with SIM card. If PIN code function is switched on, the phone may demand to input PIN code each time to switch on the phone. If you continuously input error PIN code for three times, SIM card may be automatically locked, and the information is displayed to show that the SIM card is locked and PUK code should be inputted to unlock it.

PIN2 code: Some special functions using the SIM card need a PIN2 code. In general, the network service provider does not provide this code, and you can contact your network service provider for details. If you continuously input error PIN code for three times, a PUK2 code should be inputted to unlock it.

PUK code and PUK2 code

PUK code: PUK code (personal unlocking code) is needed in order to change the locked PIN code. PUK code is generally provided with SIM card. If PUK code is not provided with SIM card, please inquire for it to the provider providing the SIM card. If you continuously input error PUK code, SIM card may be eternally locked. The user can not change the PUK code. You should contact the network service provider if it is lost.

PUK2 code: Generally, PUK2 code is not provided with SIM card. The PUK2 code is needed to change the locked PIN2 code. If you continuously input error PUK2 code, the function using PIN2 code may be eternally disabled.

General Instructions of the function of the phone

Multimedia Messaging Service, MMS: This phone can send multimedia message composed of words, pictures and voices, and can receive the message composed of words, pictures and voices. You can store the pictures or voices in the phone so as to personally set the phone.

Composed tone ring (MIDI): Composed tone is composed of tones simultaneously played, and thus the voice from the speaker is like a real music. The composed tone may be used as a ring or message hinting voice. You can receive the composed tone through a multimedia message service.

General Packet Radio Service, GPRS: It uses a GPRS technology, and the user can send and receive data through a network based on IP (Internet Protocol) with phone. So GPRS is a data transmission mode, and it supports data business such as wirelessly accessing internet. The application using GPRS technology comprises WAP service, multimedia information service, email.

Basic function

When the phone enters the service area, a bar graph  appears on the display screen.

Except that the sending key should be pressed after the zone code and telephone number are inputted, the operation for dial a call with this phone is that same as that with conventional keystroke telephone. An international long-distance code should be inputted first in order to dial an international trunkcall.

Dialing a call

- 1、Input the telephone number and check the telephone number displayed on the screen.
- 2、Press the sending key to dial out.

 **Hint:** When calling out, the screen will display the calling number or a name stored in the telephone directory (If the name and the corresponding number are stored in the phone or the telephone directory of SIM card).

You can also use the following modes to dial a call:

- Single key speed dial
- Speed dial of the SIM card telephone directory
- Dial out after extracting a number from the received message
- Dial a telephone number in the call recording
- Enter the telephone directory to call out a number

Correct the dialed telephone number

During input a telephone number, press the left and right navigation key to move the cursor, and then press the right soft key to delete the number before the cursor.

Dialing an international call

Insert the international trunkcall prefix of “+” (“+” may appear in the number field by pressing “0” key for a few seconds) before the number, and then input the state zone code and the telephone number, and then press the sending key to dial an international call.

Directly dialing an extension telephone or voice mail box

This phone permits you to directly dial an extension telephone or voice mail box. You can insert a pause symbol “P” among the number series of the telephone number; where there is a pause; the phone may delay the dial and wait for the response of the central exchange of the other party. Once there is a response, the phone will go on to dial the number of the extension telephone. The steps of inserting the pause symbols are as follows:

1. Firstly, please continuously press the switch on/off key to switch on the phone (Note: a SIM card being capable of network registration is indispensable).
2. Input the number of the central exchange in a common dial mode, and then continuously press “*” to input the pause symbol of “P”, and then input the number of the extension telephone.
3. Press the sending key to dial said number. After the central exchange is put through, the phone will automatically dial the number of the extension telephone.

Dialing an emergency telephone

Your service provider sets one or more emergency telephones (such as 112) that can be called out in any cases. If the phone is in the network service area, input the emergency telephone number and press the sending key, then emergency telephone can be dialed even without a SIM card.

Speed dial via SIM card phone book

If you store some numbers in the SIM card, then these numbers (the amount of the numbers that can be stored in the SIM card depends on the type of the SIM card) can be directly dialed out. It needs not to input the number one by one to use this dial mode.

1. Input position number of the number stored in the SIM card with the key board in the standby state.
2. Then press “#” key, now the screen display the name of the contact, if no name is available, the number is displayed.
3. Press the sending key or left soft key to dial this number.

 **Hint:** If you input an empty position number (that is, no number is stored in this position of SIM

card), the phone will hint “invalid address”

Single key speed dial

If you store a number in the SIM card, then you can dial the numbers stored in the SIM the position of which are 2-9 by continuously pressing number keys 2-9 in a standby state.

◆ You can call out the voice number by continuously pressing number 1 key.

💡 **Hint:** If the positions 2-9 in SIM card do not set corresponding number of the single key dial, the phone hints “invalid address” when you continuously press this number key in a standby state.

Receiving a call

When a call is incoming,

- Incoming telephone ring (presetted).
- When a call is incoming, press the left soft key or sending key to response the call.
- When “Answer option” is set as “Flip open”, then open the cover to response the call.
- When “Answer option” is set as “any key” and the phone is in an opening state, press any key (except the right soft key and switch on/off key) to response the call.
- The telephones lifted are stored in the list of “Answered call” of the “call history”.

💡 **Hint:** If you insert an earphone with an answer button in advance, you can response the call by pressing the answer button on the earphone

Using a common earphone

1. Connecting the earphone---insert the plug of the connection wire of the earphone into the jack at the right side of the phone. The earphone is provided with a microphone for talk.
2. Listening a call with the earphone---user can listen and ring off by pressing the remote control key on the earphone. Continuous pressing on the remote control key means refusing the incoming telephone; transient pressing on the remote control key means lifting the incoming telephone. You can ring off by transiently pressing the remote control key during the call.

💡 **Hint:** You may be insensitive to the voice in the surrounding environment if you are using an earphone, so do not use an earphone in a case where your safety may be threatened.

Functions during a call

⚠ **Note:** whether it can be used depends on whether the network service provider provides this function and whether you have made an application for this function.

During a call, you can execute many other operations. During a call, press the left soft key to enter the conversation menu that includes Address, message, hold, and Mute on.

During a call:

Mute

During a call, press the left soft key and select “Mute on” in the menu to temporarily switch off the microphone. To resume the talk, you can press the left soft key for the second time and select “Mute off” in the menu so as to resume the talk.

Hold

A call can be held by pressing the left soft key and selecting “hold” in the menu during a talk. At that time, you can dial another number and select “switch” in the menu pressing the left soft key after it is put through, and then the current talk is held and the held talk is switched to the current talk. By using this method, you can talk to either of the two talking parties in turn. But at one moment, only the calling party can hear your voice, and the held party cannot hear it.

At that time, press the right soft key to execute the following operations:

End on call—hangs up the current talk, and the held talk is still in a holding state.

End hold call—hang up the holding talk and go on to talk to the current talking party.

End all—hang up all of the calls.

Message

The operations related to the short message can be executed by pressing the left soft key and selecting “message” in the menu during a talk. You can edit the contacts and select a contact in the telephone directory.

Make Multi-side call

⚠ Note: whether it can be used depends on whether the network service provider provides this function and whether you have made an application for this function. This function connects the current talk and the holding talk, thus you can organize a multi-side call. During the talk, all of the members can hear the voice of each member. You also can add or remove the multi-side call member according to the demand.

Convening a telephone conference

To convene a telephone conference, operate according to the following steps:

1. First, dial a call to one of the receivers.
2. Then, hold this call, and call another number (see the related contents of “hold” in “functions during a call”).
3. After putting through the call, press the left soft key and select “add” in the menu, so you, the current call, and the holding call can form a multi-side call.
4. Repeat steps 2 and 3 so as to add the new member in the multi-side call. During a multi-side call,

the incoming telephone can be replied (the function of “call waiting” set as “On”, the special operation method referring to “network service” in “Setting”). When a new call is put through, the original multi-side call will be held. You can add the incoming telephone in the multi-side call use the same method.

5. The multi-side call is composed of 5 calls or less.

Separating the members in the multi-side call

1. Press the left soft key and select “split” in the menu during the multi-side call.
2. Use the upper and lower navigation keys to select the members (name or telephone number) to be separated from the multi-side call.
3. Press the affirm key to separate the selected member, and go back to the talk state.
4. After a separation, you can only talk to one separated party (the multi-side call to the other parties will be held), or you can hang up this call and form a multi-side call once again with the temporarily held parties (of course, after individual talk is finished, you can, not hanging up the individual talk, form a new multi-side call by pressing the left soft key to select “join” in the menu)

Chapter 4 Setting

Reset settings of the phone allow you to access a variety of functions right away with the SIM card inserted. With regard to more available communication demands and application modes, this phone allows you to enable and change these settings at your discretion to meet all kinds of communication demands.

Menu under Setting include: Phone Mode, Display, Call Setting, Time & Date, Security, Network Services, Language, Firewall and Factory. Each settings includes several items with options or value input display, whose data performs automatic control of the phone.

In the standby mode, press the soft key on the left to enter the main menu, select the “Setting” icon and press the OK key or the left soft key; then the menu of “Setting” will appears as shown below. Press the four-direction navigation key or the side key to let the scroll screen show settings that you want to view or revise. Press the right soft key to return to the main menu.



手机设置: Setting

情景模式: Phone Mode

屏幕设置: Display

通话设置: Call Setting

时间日期: Time & Date

屏幕校准: Calibrate

自动加锁: Auto lock

确定: OK

返回: Back

Phone Mode

This function provides you with user-defined functions including Call alert, Ring Tone, Ring Volume, Message alert, Message Tone and Keypad volume to help you get accustomed to all circumstances and environments.

These options are used for setting the prompt mode, prompt ring & volume and other functions in the case of incoming call or message.

•Standard

This option provides you with standard ring settings of incoming call & message in normal environment.

Activate——You could set each item in “Personality”, then select “Activate” to activate the standard mode.

Personality——Select this option can defined functions including Call alert, Ring Tone, Ring Volume, Message alert, Message Tone and Keypad volume.

Auto answer—— You could set the “Auto answer” function in the Phone mode. After enabling this option, you don’t need to do any operation when a calling is coming in since the phone

will reply the incoming call automatically in 5 ~ 10 seconds.

⚠ Note: “Auto answer” function is accessible only when the common earphone is inserted to the phone.

Slide tone— You could set slide tone status in the option. If the status was set as “On”, then when you open or close the slide, you will hear the slide tone.

•Meeting

This option is used for setting the phone to vibration without prompt tone in the case of either incoming call or message. You could set each item in “Personality”, then select “Activate” to activate the Meeting mode.

•Outdoor

This option provides you with ring settings of incoming call & message in noisy environment. You could set each item in “Personality”, then select “Activate” to activate the Outdoor mode.

•User Mode

You could enter the user mode to set the Call alert, Ring Tone, Ring Volume, Message alert, Message Tone and Keypad volume by yourself. Then, select “Activate” to activate the user-defined mode.

Call alert

This option is used for setting the prompt mode of incoming call.

1. Enter the “Personality” setting menu.

Click the “Call alert” with touch pen . The following options will appear for your selection:

—Ring only: The phone is ringing to indicate an incoming call.

—Vibrator only: The phone is vibrating to indicate an incoming call.

—Ring and Vibrator: The phone is ringing and vibrating at the same time to indicate an incoming call.

—Ring after Vibrator: The phone is first vibrating, then ringing to indicate an incoming call.

—Off: The phone gives no ringing voice or vibration when a call is coming in.

2. Click the call alert options to confirm setting.

Ring Tone

This option is used for setting the ring tone of an incoming call.

Press the up & down navigation key or the side key to move the focus point to select different ring tone with the corresponding tone ringing:

1. Enter the “Personality” setting menu.
2. Click “Ring Tone” with the touch pen.
3. Press the up & down navigation key to move the cursor to select the desired ring tone of incoming call, and press the OK key to confirm setting. (Or, press the soft key on the left and select “Set as Ring Tone” in the menu.)

Ring Volume

This option is used for adjusting the ring volume of the phone.

1. Enter the “Personality” setting menu.
2. Click “Ring Volume” with the touch pen.
3. Adjust the ring volume by clicking  and  or pressing the up & down navigation key.
4. Click “ok” or pressing the OK key to confirm setting.

Message alert

This option is used for setting the prompt mode of message.

1. Enter the “Personality” setting menu.
2. Click “Message alert” with touch pen.
 - Ring only: The phone rings one time to indicate an incoming message.
 - Vibrator only: The phone vibrates one time to indicate an incoming message.
 - Ring and vibrator: The phone rings and vibrates one time to indicate an incoming message.
 - Off: The phone gives no ringing sound or vibration when a message is coming in.
3. Click the message alert options to confirm setting.

Message Tone

This option is used for setting different message tones of incoming message.

Press the up & down navigation key or the side key to move the focus point to select different message tone with the corresponding tone ringing:

1. Enter the “Personality” setting menu.
2. Click “Message Tone” with the touch pen.
3. Press the up & down navigation key to move the cursor to select the desired tone of incoming message, and press the OK key to confirm setting. (Or, press the soft key on the left and select “Set as Message Tone” in the menu.)

Keypad Volume

This option is used for adjusting the ring volume of the phone.

1. Enter the “Personality” setting menu.
2. Click “Keypad Volume” with the touch pen.
3. Adjust the ring volume by clicking  and  or pressing the up & down navigation key.
4. Click “ok” or pressing the OK key to confirm setting.

Display

You could set the wallpaper color theme, backlight time and Idle banner at Display function.

Wallpaper

You could choose one you prefer as desktop background pattern from optional background images, shot images and downloaded images, and you could also browse the image effect. Press the four-direction navigation key or the side key to browse background images before pressing the OK key to replace the background image; then, press the soft key on the right to return to the menu of inner LCD setting.

Color theme

You could change the color of the title bar. This phone provides three color changing versions for you to choose your favorite color tone and style. In the mean time, you could self define the three color versions by pressing the soft key on the left to select “Edit” before matching colors to your taste.

Backlight

This option is used for selecting the time length of the backlight on. Select from time lengths of 5 / 10 / 20 / 40 / 60 seconds or “Off”, then press the OK key to confirm setting. Press the soft key on the right to return to the menu of inner LCD setting.

Idle banner

You could individuate your desktop from other's by setting background characters that would display on the desktop after the phone is turned on. This phone bears a greeting message with input of 10 Chinese characters or 20 English characters.

Call Settings

•Answer option

Answer key —— When selecting Reply Key Answer, you could answer an incoming call by pressing the soft key on the left or the Send key.

Any Key —— When selecting Any Key Answer, you could answer an incoming call by unfolding the top cover and pressing any key except for the On/Off key and the right soft key.

Slide open —— When selecting Slide open, you could answer an incoming call by just opening the slide.

•Auto Redial

After Auto Redial is on, you don't have to press the Send key again for redial in the case of busy network and no reply from the called party since the phone automatically redials the number. Auto Redial makes the phone to repeat automatic redialing 10 times at most since the failure of first calling.

•Alert tone

Connection —— This option means that your phone gives a prompt tone just when the called party answers your calling.

Minutes alert —— This option helps you to control the speaking time with effect. When this option is selected, the phone gives a prompt tone 8-9 seconds before the end of every speaking minute to make you aware of the speaking time.

Time & Date

In the “Setting” menu, select “Time & Date” as shown in the figure and set the time and date respectively. In the time format, set the time to 12-hour or 24-hour system. Enter the time and date setting interface and use the keypad to put in time and date before pressing the OK key to confirm setting.



时间日期: Time & Date

时间格式: Time Format

时间设置: Set time

日期设置: Set Date

确定: OK

返回: Back

Calibrate

You should calibrate screen when you feel that touch pen can not point accurate location.

1. Click Calibarte at setting menu
2. Follow the instruction and click the center of cross. After you click three crosses correctly. “Calibrate succeed” will show at screen.

Auto Lock

If you choose to open auto lock, then the keypad will be locked automatically when the phone on the state of standby or slide closed. Click “switch”, you can open or close auto lock function. Click “Timeout”, you can set how long will keypad be automatically locked after closing slide.

 **Hint:** At the state of standby, when slide is closing, you can lock keypad by pressing “*”key for a while.

 **Hint:** When keypad is locking, you can unlock keypad by pressing left soft key and “*” key.

Security

Each function of Security Settings, through setting and revision of each password and option, prevents others from using your phone and browsing the phone content without authorization from you.

•Phone Lock

(1) Lock now

Use this option to lock the phone immediately. Lock function makes it impossible to use each function of the phone until accurate phone password is entered. The display, with this option, shows the input surface of the phone password. Enter the unlock password by pressing the digit keypad, then press the OK key to confirm setting. If wrong password is entered, the display will show corresponding information. Reset password of the phone is 0000.

 **Hint:** When a call is coming in but the phone is in “Present Lock”, you should enter the phone password; then, automatic answer dispenses with the need for pressing the Send key.

(2) Power on lock

Use this option to let the phone automatically lock itself every time it starts. This option has two settings: Enable or Disable.

•SIM PIN

PIN code is the password of the SIM card. Set the PIN code to prevent others from using your SIM card without permission. This option is used for checking the PIN code and changing the PIN code and PIN2 code.

—— PIN check

Show the “On” or “Off” option for start this function. To change the “on” or “off” option, enter the PIN code and press the OK key to confirm setting.

—— Change PIN

The PIN code could be set with a group of 4 ~ 8 digits. If wrong PIN code is entered for three consecutive times, the SIM card will lockup automatically by showing the lockup information. The PUK code (Personal Unlock Key) is necessary to unlock the locked PIN code. The PUK code is provided along with the SIM card. If the PUK code is not available, ask the network dealer for this code. If wrong PUK code is entered for ten consecutive times, the SIM card will be locked permanently.

—— Change PIN2

The PIN2 code is set with a group of 4~8 digits. The PUK2 code is usually provided separately without the SIM card, and the PUK2 code is necessary to unlock the locked PIN2 code. If wrong PUK2 code is entered for ten consecutive times, options that need the PIN2 code will be inaccessible permanently.

•Change Password

This option is used to change the phone password:

1. Select “Change Password” in “Security Settings” and press the OK key to confirm setting.
2. Enter the phone password and press the OK key to confirm setting. If wrong phone password is entered, the phone will be showing the “Wrong phone password, please reenter” message until the accurate phone password is put in. (The reset password of the phone is 0000.)
3. Enter new phone password and press the OK key to confirm setting. (The phone password contains 4-8 digits).
4. Reenter new phone password and press the OK key to confirm setting. At the conclusion of successful password change, the phone will show “Phone password has changed successfully”.

•Call Divert

“Call Divert” is a network function. If you are not able to be put through or are unwilling to answer

an incoming call, you could divert the incoming call to another number. This option is used in the following conditions:

- Divert Always
- On Busy
- No Reply
- Unreachable
- Cancel All

To set “Call Divert”:

1. Enter “Network Services” in “Settings” and select “Call Divert”.
2. In “Call Divert”, set the desired incoming call diverting mode according to different diverting conditions and press the OK key to confirm setting.
3. Select the type of diverting from Voice Calls, Data Calls or Fax Calls, then press the OK key to select “On” or “Off”.
4. If “On” is selected, the following figure will appear:



全部来电转移: Divert Always

编辑: Edit

电话簿: Phone Book

语音信箱: Voice Mail

确定: OK

返回: Back

5. Select “Edit” to enter the input display and use the keypad to put in the designated number for diversion. Press the OK key to confirm setting.
6. Select “Phone Book” to enter the contact list and press the OK key to select the designated number for diversion.

7. Select “Voice Mail” to divert an incoming call to the voice mail number.

... Divert Always

This option is used for diverting all the incoming calls to a designated phone number unconditionally.

This option has two settings: “On” or “Off”. You could use the navigation key or the side key to select “On” or “Off” and then press the OK key to confirm setting. When this function is on, you could divert all the incoming calls to a designated phone number.

... On Busy

This option is used for diverting an incoming call to a designated phone number when the line is busy.

This option has two settings: “On” or “Off”. You could use the navigation key or the side key to select “On” or “Off” and then press the OK key to confirm setting. You could divert an incoming call to a designated phone number with this function on when the line is busy.

 **Hint:** To effect the “On Busy” function, you should set “Call Waiting” to the deactivated condition. (For detailed operating method, please refer to the “Call Waiting” section in “Network Services”).

... No Reply

This option is used for diverting an incoming call to a designated phone number when there’s no reply on the phone.

This option has two settings: “On” or “Off”. You could use the navigation key or the side key to select “On” or “Off” and then press the OK key to confirm setting. You could divert an incoming call to a designated phone number with this function on when there’s no reply on the phone.

... Unreachable

This option is used for diverting an incoming call to a designated phone number when your

phone is turned off or out of reach of the service area.

This option has two settings: “On” or “Off”. You could use the navigation key or the side key to select “On” or “Off” and then press the OK key to confirm setting. You could divert an incoming call to a designated phone number with this function on when your phone is turned off or out of reach of the service area.

... Cancel All

This option is used for canceling all the set call diverting functions.

·Call Barring

“Call Barring” is a network function that makes the phone to bar incoming and outgoing calls selectively according to different conditions. To use this function, you should provide the barring password obtained from the service supplier.

1. Select “Network Services” in “Phone Settings”, then select the “Call Barring” option.
2. Enter the call barring menu to set a call barring function according to different conditions.
3. Select the type of barring from Voice Calls, Data Calls or Fax Calls, then press the OK key to enter the setting display to set barring function.
4. You should use the keypad to enter the barring password when “On” or “Off” is selected.
 - All Outgoing: This option makes you unable to make any call using this phone.
 - International call: This option prevents you from making an international call using this phone.
 - International Except to Home: This option prevents you from making an international call except to home country and to the country you’re roaming about.
 - All Incoming: This option makes you unable to answer any incoming call.
 - Incoming at Abroad: When you’re roaming about between systems, this option bars any incoming call.
 - Cancel All: This option allows you to make any call and answer any incoming call.
 - Change Barring Password: This option helps you re-set the barring password.

 **Hint:** Since above functions need network support, sometimes the network affects these functions by causing inaccessibility.

 **Note:** If wrong barring password is entered for three consecutive times, the call barring function will get locked with inaccessibility.

 **Note:** Roaming here means, not limited to roaming about geographically, roaming about

between systems, i.e., roaming about between different GSM networks.

•Call Waiting

“Call Waiting” is a network function with two options – “On” or “Off”. When “Off” is selected: The phone will not indicate an incoming call from the third party while you’re being engaged in another phone conversation, and the third party that is calling will hear busy tone or the third party will be diverted to another phone only on condition that your phone is preset to the Busy diverting option. When “On” is selected: If the above happens, the phone will inform you of an incoming call from the third party with a prompt tone.

1. Select “Network Services” in “Settings”, then select the “Call Waiting” option.
2. You could use the navigation key or the side key to select “On” or “Off” and then press the OK key to confirm setting.

•Caller ID

You could set the caller barring option with the help of network support.

- Default: Set “Hide Number” or “Show Number” according to the network default value.
- Hide Number: The phone of the called party will not show the caller ID.
- Send Number: The phone of the called party will show the caller ID.

•Network setup

This menu has four options – Select Mode, Available Network, Preferred Network and Known Network.

Select Mode includes Automatic and Manual selection. Automatic selection is that when the phone is turned on, it will log in the first service network in the network list. If a failure occurs, the phone will try to log in the next network in order. Manual selection is that the phone searches for all the available networks that have login icons, and you could select one of those networks for login. If login fails, the phone will log in another network using the Automatic selection mode.

Preferred Network is a network list that you could operate. Select “Preferred Network” in “Network setup” and select “Add” to choose one from “Available Network” and “Known Network” to add as Preferred network.

Known Network is a network list from which you could select any network.

Language

Set the language type the phone will display. Select “Language” to enter the language selecting display as shown in the figure below. Press the navigation key or the side key to select a language, then press the OK key to confirm the chosen setting as display language.



语言: Language

简体中文: Chinese S

English: English

确定: OK

返回: Back

Firewall

Firewall could block all the undesirable incoming calls successfully. The blacklist could contain 10 contact numbers you refuse to get in touch with. The whitelist could contain 20 contact numbers you're willing to get in touch with.

·Set Blacklist or Whitelist

1. Select “Firewall” in the “Phone Settings” menu.
2. Select “Blacklist” or “Whitelist”. When entering for the first time, the phone will indicate whether or not to add new entry, then press the OK key to enter the input display. Use the keypad to put in the phone number or press the soft key on the left to choose one from the phone book, then press the OK key to confirm setting.
3. In the list display, press the soft key on the left to select “Add” from the menu, then enter the input display to complete entering before pressing the OK key to confirm setting.

·Call firewall

1. Select “Firewall” from the “Setting” menu.
2. Select “call firewall” and press the OK key to confirm setting.
3. Select “Blacklist on”, “Whitelist on” or “Off” and press the OK key to confirm setting.

Black on —— You could refuse to answer an incoming call from one of contacts in the blacklist.

(If the blacklist is empty, this option will get gray with inaccessibility)

White on —— You could answer an incoming call only from one of contacts in the whitelist. (If the whitelist is empty, this option will get gray with inaccessibility)

Off —— You could answer all the incoming calls.

Factory

This option includes two categories as follows:

•Clear all

 **Note:** Use this option with great care!

This option would clear all data and information that you have enter and stored yourself to the phone in addition to restoring all the reset functions. Press the OK key to enter into the “Clear User Data” option, and follow the hint to put in you phone password. If you have put in accurate password, you’ll see the confirmation box and press the OK key to confirm setting.

 **Hint:** After this option is on, the system will start over.

•Reset Setting

Restore all the user settings to return to the reset settings.

 **Note:** Use this option with great care!

Press the OK key to enter the “Restore Reset Settings” option, and follow the hint to put in you phone password. If you have put in accurate password, you’ll see the confirmation box and press the OK key to confirm setting.

 **Hint:** After this option is on, the system will start over.

Chapter 5 Message

In “Message” application program, you can create, send, receive, browse, edit and clean up the messages:

- message
- long message
- multimedia message

Message

“Personal message” means characters message used to specially transfer information among phone users. When receiving short message, phone can do:

1. “X new messages” are displayed on the screen and a message icon  is displayed in the status bar.
2. This message icon will be displayed on the screen until user reads all unreaded messages.
3. If memory space of SIM card is full, this icon  will be displayed until user deletes some short messages saved in inbox of SIM card.
4. If memory space of the phone is full, this icon  will be displayed until user deletes some short messages saved in inbox of the phone.
5. If both memory space of SIM card and the phone are full, this icon  will be displayed until user deletes some short messages saved in inbox.
6. The message icon for SIM card is not different from one for phone.

Create and send message

1. Under the standby state, open the slide, press left navigation key to enter the message submenu. Select "New" -> "SMS", then press OK key. The following picture will be showed:



写短信: Write message

收件人: Recipients

常用短语: Quick text

菜单: Menu

编辑: Edit

返回: Back

2. Enter into the message-compiling window and move the cursor to “Recipients”. Press the ok key to show the contact list in telephone book. Move the cursor to select contact item and press the

ok key to choose the contact. Pressing the left soft key to look up contact is also ok. At the same time, you may edit the blank space below the “Recipients” and input telephone number through keyboard in the window sprung. When inputting multi-addressees, use“; ”to separate them. While inputting number, pressing “#” key for a long time can input semicolon. The message can be synchronously sent to five persons at best at the same time.

3. Move the cursor to “Quick text” and press the ok key to display common phrase list. Move the cursor to select the common phrase needed and press the ok key to add this common phrase in the message content.
4. The message content can be edited in the blank space under screen, refer to "Inputting method" about detailed method for inputting characterss.
5. After create or modify a message, press left soft key to choose in menu:“Send”—if choose this option, the phone will send this message according to the telephone number inputted. “Save”—if choose this option, the message will be saved in the list of“Draft”. “Save as quick text”—if choose this option, the content of message will be saved in the list of “Common phrase”. “Insert contact”—if choose this option, the user could insert the contact information into the content of the message. “Insert signature”—if choose this option, the user could insert the signature into the content of the message after setting the signature in the “message settings” function.

 **Hint:** when you send message through message network service, the “sent successfully” may be displayed on the screen of the phone. This means the phone has sent this message to the message centre number set in the SIM card. But this means that the message has been sent to the specified destination. About mort details of message service, please consult the service supplier. If fail to send, this message will be saved in the outbox.

Read message

1. In the message submenu, choose “Inbox” to display all messages in the inbox on the screen. Different icons show messages with different type. Choose one message and press the ok key, you can read this message.
2. On the interface of message list, press left soft key and choose from the menu:
 - Read message: Read the detailed content of messages.
 - Reply SMS: Reply message to the addresser on present cursor position.
 - Reply MMS: Reply multimedia message to the addresser on present cursor position.
 - Forward: Send the message on the present cursor position to others.
 - Delete: Delete the message on the present cursor position.
 - Delete all:

- a) Delete all SMS: Delete all messages in the inbox.
- b) Delete all MMS: Delete all multimedia messages in the inbox.
- c) Delete all reports: Delete all state report information in the inbox.
- d) Delete all push MSG: Delete all push information in the inbox.
- e) Delete all message: Delete all messages in the inbox.

3. When read the detailed content of message, press left soft key to conduct the following operation:

- Reply SMS: Send the message to the addresser directly.
- Reply MMS: Send the multimedia message to the addresser directly.
- Forward: Send this message to others.
- Delete: Delete this message.
- Pick up detail:
 - a) Obtain number: obtain the number in the message and save it in the phone or SIM card.
 - b) Obtain URL: obtain the URL in the message and link.
- Copy to SIM /phone: Copy the message to the other memorizer (SIM card or phone).
- Save as quick text: Save the characters part of message as common phrase.
- Move to my folder: User may move these messages reserved to “my folder” directory and delete the corresponding records in the inbox.

Quick text

User can add common phrases and edit and delete these user-defined common phrases. The number for user-defined common phrases is twenty. The common phrases set in advance in the phone cannot be deleted.

1. The common phrases are saved in “My folder”. In the message submenu, choose the “Quick text” in “My folder” and display the common phrases list on the screen. You can add the new phrase according to the demand.
2. On the interface of common phrases list, press left soft key and select “Add” from the menu to enter into the interface for adding common phrase. You can input the new common phrases through all sorts of characters inputting methods. After inputting, press the ok key to save them in the common phrases list. Choose “Edit ” from menu and modify the common phrases. After modifying, press the ok key to save it in the common phrases list.

Long message

Long message is a strengthening edition of message and its text capacity is larger than one of message (eight pages most).

⚠ Note: this function can just be used only when your network operator or the service supplier supports. Only those equipments with this function can receive and show this kind of message normally.

💡 Hint: long message has the following differences from message:

- a) Phone can save 40 items long message most (summation of all mailboxes).
- b) Long message cannot be send multi-persons at the same time.
- c) Long message can be only saved in phone, not SIM card.
- d) Long message cannot be saved as common phrase.
- e) When long messages are full of the phone, the phone will remind user timely.
- f) When long messages are full of the phone, the long message waiting to receive will be received with the form of a few items messages.

Push message

The phone can receive the service information viz Push message sent by your service supplier (need the network support). For example, the service information may be the notice relate to news abstract, which include a piece of characters information or a kind of WAP service address. On the interface of information list in the “Inbox”, move the cursor to some Push message and then press left soft key.

The following operations can be conducted:

- 1.Display —— Display the Push message selected presently.
- 2.Delete —— Delete the Push message selected presently.
- 3.Load —— If the Push message contains URL, start up the WAP browser and link to this URL.
- 4.Delete all:
 - a) Delete all SMS: Delete all messages in the inbox.
 - b) Delete all MMS: Delete all multimedia messages in the inbox.
 - c) Delete all reports: Delete all state report information in the inbox.
 - d) Delete all push MSG: Delete all push messages in the inbox.
 - e) Delete all messages: Delete all messages in the inbox.

Multimedia message

⚠ Note: this function can just be used only when your operator or the service supplier supports. Only those equipments with compatible multimedia message or e-mail function can receive and show multimedia message.

Multimedia information can contain characters, picture and sound segment. The limited size is 100K for multimedia message and 30K for single media message.

The multimedia message is a multimedia information business that China Phone introduces. Its greatest characteristic is to support the multimedia function and can transmit the content and information with overall function, which includes such multimedia form information as characters, picture, and sound, etc. The multimedia message business can realize the multimedia information transmission from phone terminal to phone terminal and from phone terminal to Internet or from Internet to phone.

Multimedia information service supports the following formats:

- picture: GIF, JPEG, BMP, WBMP.
- sound: MIDI, MMF, WAV, SMAF.
- text: TXT.

Create and send multimedia message

In order to set up receiving and sending the multimedia message, please refer to “Multimedia settings” in “Settings”. About the usability and application method for the multimedia message service, please consult your network operator or service supplier.

1. Under the standby state, open the slide, press left navigation key to enter into information submenu. Choose “New” —> “MMS”. Shows as follows:



写彩信: Write multimedia message

收件人: Recipients

主题: Subject

幻灯片: Slide

菜单: Menu

编辑: Edit

返回: Back

2. Move the cursor to “Recipients” position on the screen and press the OK key for choosing addressee from the telephone book. At the same time, you can send the multimedia message to e-mail box too. Move the cursor to the blank space below “Recipients” and press the ok key. A window will appear. Input the telephone number and e-mail address through numerical keyboard or other methods.
3. Multimedia message including telephone number and e-mail address is sent to five persons at the same time most.
4. Move the cursor to the bank space below “subject” and edit the subject of multimedia message.
5. Move the cursor to the “Slide 1” position and then press the ok key. Choose “Add picture”, “Add text” and “Add sound”. Shows as follows:



添加图片: Add image

添加文本: Add text

添加声音: Add audio

菜单: Menu

编辑: Edit

返回: Back

6. This phone supports to edit multi-frame multimedia message and add and delete a slide. Add 20 frames slide most. On the interface for editing the multimedia message content, press left soft key and conduct the following functions:
 - New page: Add a frame slide again.

- Delete page: Delete a frame slide.
- Previous page: Browse the content of previous slide.
- Next page: Browse the content of next slide.
- Page Timer: Set up the time for automatically browsing this page.
- Swap text & image: Exchange the position of image and text in this page.

7. After choose “Add image” and press the ok key, the phone will automatically search the picture used to send, which include three types, picture, photograph and big-head paste. Press the ok key for adding the picture to the multimedia message being edited.
8. Choose “Add text” to enter into the interface for editing character. After inputting the characters, press the conformation key for confirming.
9. Choose “Add audio”. The phone will automatically search the sound file used to send. Press the ok key for confirming and add the sound file to the multimedia message being edited.
10. After editing, press right soft key back to the interface for writing multimedia message. Press left soft key and choose “Preview” from menu for previewing the whole MMS information effect. Choose “Detailed information” from menu to look over the addressee, subject, size, slide number and time of MMS. After editing, you may send it at once. If don’t send it at once, you can save it as draft and send it later.
11. It needs longer time to send a piece of multimedia information than a piece of character information. If failing to send, the information is saved in “Outbox” and you can try to send it newly.

Browse multimedia information

1. Choose “Inbox” in the information submenu and all information in the inbox is listed on the screen. Different icons show different information type. Move the cursor and select some multimedia message. Press the ok key for reading this information.
2. On the interface of information list, press left soft key. Choose such function as read message, reply multimedia messae, reply message, transmit, delete and delete all from “menu”.
3. When reading the multimedia message, press left soft key and the operation can be conducted.
 - Play: Play the whole content of this multimedia message.
 - Repaly SMS: Reply short message to addresser directly.
 - Reply MMS: Reply multimedia message to addresser directly.
 - Forward: Transmit this message to others.
 - Delete: Delete this information.
 - Transfer to my folder: Save the information reserved in my folder.
 - Get number: Obtain the addresser’s number and save it in phone or SIM card.
4. When reading the multimedia message, choose stop and then press left soft key. The following

operation for information can be conducted:

- Previous page: Look over the content of previous multimedia message.
- Next page: Look over the content of next multimedia message.
- Rewind: Replay the content of multimedia message.
- Play: Continue to play the content of multimedia message.
- Save image as: Save picture file received in “Picture” of “My favorite” with new file name.
- Save audio as: Save sound file received in “Sound” of “My favorite” with new file name.

Inbox, outbox, Sent and drafts

“**Inbox**” contains messages including SMS, EMS, MMS and push information.

“**Outbox**” contains those messages failing to send.

Under the outbox message lists, press left soft key and you can conduct the following operations:

- Read message: Look over the detailed content of message failing to send. Save sound and picture information at the same time.
- Delete: Delete the specified message failing to send from outbox.
- Delete all:
 - a) Delete all messages: Delete all messages in outbox.
 - b) Delete all multimedia messages: Delete all multimedia messages in outbox.
 - c) Delete all information: Delete all information in outbox.

On the interface of browsing the detailed content of messages in outbox, press left soft key and you can conduct the following operations:

- Send: Send this message directly.
- Edit: Re-edit this message.
- Delete: Delete this message in outbox.
- Obtain the detailed content:
 - a) Obtain number: Obtain the number in the message and save it in phone or SIM card.
 - b) Obtain URL: Obtain the URL in the message and link it.

On the interface of browsing the detailed content of multimedia messages in outbox, press left soft key and you can conduct the following operations:

- Play: Play this multimedia messages directly.
- Edit: Re-edit this multimedia message.
- Send: Re-send this multimedia message failing to send.

- Delete: Delete this multimedia message in outbox.

“Sent” saves those messages sended successfully. If MMS sets up the automatical saving, the messages may be saved in sended-box after sendeing successfully.

Under the message lists, press left soft key and you can conduct the following operations:

- Read message: Look over the detailed content of message sended.
- Delete: Delete the specified message sended from sent.
- Delete all:
 - a) Delete all messages: Delete all messages in sent.
 - b) Delete all multimedia messages: Delete all multimedia messages in sent.
 - c) Delete all information: Delete all information in sent.

On the interface of browsing the detailed content of messages in sent, press left soft key and you can conduct the following operations:

- Transmit: Transmit this message to others directly.
- Delete: Delete this message in sent.

On the interface of browsing the detailed content of multimedia messages in sent, press left soft key and you can conduct the following operations:

- Transmit: Re-send this message sended to others.
- Delete: Delete this multimedia message in sent.

“Drafts” saves thos messages waiting for sending later. While editing the messae, if switching on the phone, this message will be saved in Drafts automatically (not saved for multimedia messages).

Under the message lists, press left soft key and you can conduct the following operations:

- Edit: After entering into the interface of editing messages, you can look over the detailed content of messages saved in Drafts.
- Delete: Delete the specified messages from Drafts.
- Delete all: Delete all information in Drafts.
 - a) Delete all messages: Delete all messages in Drafts
 - b) Delete all multimedia messages: Delete all multimedia messages in Drafts.
 - c) Delete all information: Delete all information in Drafts.

⚠ Note: In order to utilize the memory space effectively, you should delete the old messages in

“Sent” timely. If the present residual space is less than 150K, user can only play the multimedia message received and not send, save and download it.

My folder

You can save information in “my folder” of information centre so that you can look over or look for the needed information quickly. According to the demand, you can transfer the information from inbox to my folder. In information submenu, choose “inbox” and enter into the interface of message lists of inbox. Select some message and you can look over the detailed content of message. On the interface of message content, press left soft key and choose “move to my folder” from menu. The selected message is moved to my folder. After moving successfully, this message is deleted from inbox.

Settings

·SMS settings

Service centre

Before sending the message, you might use this option to input the number of message service centre provided by service supplier. If user has inputted a number of message service cente, this number will be displayed on the screen. User may use, modify or delete this number according to the demand.

⚠ Note: Setting up the wrong number of message service cente will lead to fail to send and receive messages. About the number, please consult the service supplier.

Expired period

Through this option, you can set up the time limit for messages saved in message service centre. Because of some reasons, messages might not be sended from message service cente. You may choose to save these messages in message service centre until the time limit for saving is overstepped.

1. Under the ready and waiting state, press the left navigation key to enter into information submenu. Choose “Settings” from menu and then select “Message settings”. Press the ok key for entering.
2. Choose “Expired period”. Select the period of validity through phone’s side key or up and down navigation key and press the ok key for choosing.

Status report

There are two sub-options, “open” and “close” for this option. While choosing “open”, you may

require the network to send the status report on message sended to you so that the other side can gain the prompt after receiving your message. While choosing “close”, the network cannot send the status report.

Storage type

Through this option, you can select the saving type for messages including SIM card and phone. While selecting SIM card memorizer, the phone will save the received message in the SIM card automatically. If the messages are full of the SIM card, the messages received will be saved in the phone automatically. If the phone is filled with messages, the messages received will be saved in the SIM card automatically until the numbers of messages in SIM card and phone arrive at the maximum limit.

Signature

You can set up the signature through this option so that you may choose to insert signature when you are editing the content of message.

·Multimedia message settings

Sendting

- Valid period: If the message cannot be sended to the addressee within the appointed period of validity, it will be deleted from the service centre. This function needs the network support. The default is the longest time permitted by the network.
- Read report: when sending a multimedia message, whether you may require the other side to send a reversion to yourself after reading it or not.
- Delivery report: two options: “on” and “off”, mean that whether you require the gateway to send a service message to yourself after servicing or not.
- Priority: low, normal and high
- Auto save: while choose “on” for this function, the multimedia message sended will be saved in sended-information automatically. Otherwise, it will not be saved.

Auto receive:

- Two options: “on” and “off”, means downloadding immediately or postponing receipt when receiving the multimedia message.

Multimedia service centre(MMSC):

- URL address of multimedia service centre, default setting is <http://mmsc.monternet.com>

Gateway IP:

- Gateway IP, viz. IP address of multimedia message gateway, default setting is 10.0.0.172

Reply priority

In Replying PRI, you may choose “MMS” or “SMS”. If the Reply priority is set up “MMS”, the item of “Reply MMS” in menu is set up the preferential option ahead of “Reply SMS”.

⚠ Note: Setting of “Replying priority” is only valid when operating the multimedia message.

·Voice mailbox

You may use “Voice mailbox” to save the telephone number of voice mailbox provided by your service supplier. When you cannot switch on the phone, transferring the incoming phone to the voice mailbox service number can allow the other side to leave words for you, which are saved the voice mailbox system of service network. You can listen in these words through calling on the voice mailbox. If you input the wrong number, the voice function will not be used normally.

Modify voice mailbox number

1. Under the standby state, open the slide, press left navigation key to enter into the information submenu. Choose “Settings” —> “Voice mailbox” and press the ok key.
2. Enter into “Voice mailbox”. If you do not set up the voice mailbox number, the “Empty” is displayed on the screen.
3. Press left soft key and choose “Edit” from menu. After inputting the number in the frame for inputting, press the ok key.
4. listen: call out and link the voice mailbox.

·Memory status

Through this option, you can look over the memory space of SIM card and phone for messages, long messages, Push information and multimedia messages. .

·Sort setting

While this option is set up “On”, you can arrange information according to such types as short messages, multimedia messages and Push information.

Chapter 6 My Favorite

There are pictures and tintinnabulations saved in phone, photos and movies shot through mobile phone, saved files of pictures and video downloaded from the Internet or accepted multimedia

messages, files of pictures and video transferred through PC tools, and Java program downloaded and installed by users.

Java Box

The mobile phone supports JAVA functions. The user may download JAVA program to install it into the mobile phone through WAP, and do corresponding games or applications. The option saves the installed Java application program downloaded by user.

Applications —In the application program, you may delete or run the downloaded JAVA application, also view some attribute information on some sizes or versions of application programs. If there is no installed application program in mobile phone, you may select the option and there will be a prompt that there is no installed Java program.

Download—You may download the Java application while browsing WAP pages. The detailed steps are shown as following:

1. Select Java Box —>“Download”, and enter the browser.
2. Press the left soft key in the interface of browser, select “Input address” from the menu, input the corresponding download address of JAVA program, and then confirm by pressing Enter.
3. After receiving correct addresses, the mobile phone will download and install automatically. After successfully installing, there will be some corresponding prompts.

▲Note: Only local operators do open some services such as GPRS or CSD, can JAVA program be downloaded through browsers. Some JAVA program cannot run due that there are some differences in compatibility with mobile phone.

Pictures

Pictures includes that are shot through mobile phone, built in phone, saved through multimedia message, downloaded through browser, and transmitted through PC.

In the list of photos or image display names, press the left soft key, and there are some functions as following:

- View: View photos or image contents.
- Send by: You may send photos or download to save pictures through multimedia messages or IrDA. That images built in phone or saved with copyright cannot be sent.
- Rename: Rename photos or downloaded images. That built in phone cannot be done.
- Sort by: Array photos or images through name, size, or date.
- Delete: Delete photos or pictures downloaded to save. That built in phone cannot be done.
- Delete all: Delete all photos or pictures saved through multimedia message or

downloaded through browser. But that built in phone cannot be done.

——Property: View the attribute of photos or images such as name, size, height, width, format, date, time, whether to send or not, etc.

At the interface of photo or picture, press the left soft key, and there are some menu functions as following:

- Previous: Browse the previous photo or image
- Next: Browse the next photo or image
- Full screen: Browse photos or images with full screen.
- Auto view: The system will play photos or images automatically.
- Set as wallpaper: Set photos or images as waiting pictures. Only can one frame of gif pictures can be set up (Shot pictures with the mode of VGA or SXGA cannot be set as wallpapers)

Ring tone

In the option, there are rings that are built in photo, saved through multimedia message, downloaded into photo through browser, and transmitted through PC.

In the list of sound filename, press the left soft key and there will be some menu functions as following.

- Play: Play sound files.
- Send by: You may send downloaded rings through MMS or IrDA. The ring built in phone or saved with copyright cannot be sent.
- Rename: Rename saved or downloaded rings. That built in phone cannot be done.
- Sort by: Array sound files according to name, size, or date.
- Delete: Delete saved or downloaded rings. That built in phone cannot be done.
- Delete all: Delete all saved or downloaded rings. That built in phone cannot be done.
- Set as ring tone: Select some certain ring to set up as the phone prompt.
- Set as message tone: Select some certain ring to set up as the message prompt.
- Property: View attributes of sound files such as name, size, format, data, time, whether to send or not, etc.

Movies

The phone supports about 15 seconds of shooting movies. You may set up “Shooting Mode” as “movie” in the application program of “Camera”, and then carry out shooting. After shooting, you may edit the name of movie and save it in “My Favorite” or “Photo Album” in the application program of “Camera”.

In the name list of movie, press the left soft key, and there will be some functions as following.

- View: View the content of movie.
- Send by : Movies cannot be sent by multimedia message, and the option is set up with gray color.
- Rename: Rename movies.
- Sort by: Array movies according to name, size, or date.
- Delete: Delete all movies being viewed.
- Delete all: Delete all movies.
- Property: View attributes of movies such as name, size, height, width, format, date, time, whether to set or not, etc.

In the play interface of movies, press the left soft key, and there will be some functions as following:

- Previous: View the previous movie.
- Next: View the next movie.
- Full Screen: You may browse movies with full screen.
- Auto view: Movies cannot be browsed automatically, and the option is set up with gray color.
- Set as wallpaper: Movies cannot be set up as wallpaper, and the option is set up with gray color.

Memory status

View the distribution situation of EMS Memory in mobile phone through the option, including total storage space, existed space, or rest space.

Chapter 7 Phone Book

The Phone book is used to record all kinds of information that communicates with you such as name, telephone, mobile phone, Email, etc. After inputting the contact, you may be convenient to utilize this information to call or sent messages, also store contact in groups and set up different rings for different groups.

Except SIM card, all other categories of contact information are stored in mobile phone. The data of contact saved in SIM card only includes the name and a phone number (This depends on the category and service of SIM card you are using). The data saved in SIM card still can be used, and that stored in mobile phone cannot be brought following with SIM card. They have to leave in the original mobile phone except that you may copy the information data of some certain contact to SIM card, and there will be some messages being lost.

Showing the List of Phone Book

In the main menu, select the icon  in “Phone Book”, and press OK key to enter the functions of phone book including three sections such as Phone Book, Call History, and My Number. Enter the phone book and show the contact list of phone book as the following figure.

 **Note:** In the state of standby, press Right navigation key to enter the list of Phone Book directly.



通信录: Phone Book

电话簿: Phone Book

通话记录: Call History

本机号码: My Number

Group Setup

Classifying the contact will help you control the data of phone book. You may classify so many contact according to the same association attribution. The mobile phone provides the groups such as All, None, Family, Friend, VIP, Colleague, SIM, and others. The different icons can respect different groups respectively. In the list of contact, press the left soft key and select “Group Setting” in the menu. You may set up different call ring or Seven-color-light prompts for different groups.



组设置: Group Setting

所有组: All

未分组: None

家庭: Family

朋友: Friend

贵宾: VIP

同事: Colleague

其他: Others

选择: Select

返回: Back

Adding New Contact

1. In the list of contact in phone book, press the left soft key, select “Add”, and press OK
2. Select storing the message of contact into SIM Card or Phone, press OK
3. If selecting Phone, enter the interface of contact information as in the figure.



话机查看：Phone View

菜单：Menu

确定：OK

返回：Back

4. Press the 4-direction-navigation key or the side key to show more information. Press the left soft key, select Edit in the menu, enter the interface of Input, and input some information in column such as name, number, etc.
5. Press OK to save all input data information. Press the right soft key to return the interface of phone book.

Function Menu on Detailed Information of Contact

Information menu of contact saved in SIM card:



菜单：Menu

呼出：Call

发送：Send

发送内容：Send content

编辑：Edit

删除：Delete

复制：Copy

大头帖：Portrait

确定：OK

返回：Back

Call —— You may call the contact directly.

Send —— You may send short messages or multimedia messages to the contact.

Send content —— You may select the saved information of contact attaching to short messages or

multimedia messages and send to other contact. If selecting multimedia messages, you may make the information of contact as the text content of multimedia messages attaching to multimedia messages. Edit——Edit the names and telephone numbers of contact and the storage position in SIM card again.

Delete——Delete the contact.

Copy——Copy the information of contact to the phone.

Portrait——Do not set up the paste for the contact saved in SIM card. The option is set up as gray color.

Group select——Do not subgroup the contact saved in SIM card. The option is set up as gray color.

The list of contact information saved in phone.



菜单: Menu

呼出: Call

发送: Send

发送内容: Send content

编辑: Edit

删除: Delete

复制: Copy

大头贴: Portrait

确定: OK

返回: Back

Call——You may call the contact directly.

Send——You may send short messages or multimedia messages to the contact.

Send content——You may select the saved information of contact attaching to short messages or multimedia messages and send to other contact. If selecting multimedia messages, you may make the

information of contact as the text content of multimedia messages attaching to multimedia messages.
Edit——Edit the names and telephone numbers of contact and the storage position in SIM card again.

Delete——Delete the contact.

Copy——Copy the information of contact to SIM card.

Portrait——You may set up the paste while being called. When the contact calls, it will display the image of paste.

Group select——You may subgroup the contact saved in phone. Different groups may be indicated with different images.

Copy the Data Information of Contact

You may copy the data information of contact each other between SIM card and mobile phone. In the list of phone book, press the left soft key, and select “Copy all” or “Multi-Copy” in menu.

Copy All:

You may copy all data information in SIM card to mobile phone with one time, and also copy all information in mobile phone to SIM card (There should be enough saving space for mobile phone and SIM card)

1. In the interface of contact list on phone book, press the left soft key, and select “Copy all” in menu. It is shown as following.



全部复制: Copy All

话机到 SIM 卡: Phone to SIM card

SIM 卡到话机: SIM card to Phone

确定: OK

返回: Back

2. After selecting “Phone to SIM card” or “SIM card to Phone”, press Enter and begin to copy.

After finishing the copy, it will show a prompt such as “Success”.

Multi-Copy Options:

You may copy multiple records from Phone to SIM card, or from SIM card to Phone with one time.

1. In the list of contact in phone book, press the left soft key, and select “Multi-Copy” in menu.
2. After selecting “From phone to SIM card” or “From SIM card to Phone”, press Enter. There will show the list of phone number about contact to provide for selecting in the interface.
3. Press the left soft key, select the copied contact, and press Enter to begin copying.
4. After finishing to copy, there will show “Success”.
5. For Multi-Copy, there are max. 30 records with one time.

△Note: That how much information of contact can be copied to SIM card depends on the capacity of SIM card. That what information of contact can be copied to SIM card depends on the function of SIM card.

Delete Contact

Delete all:

1. In the interface of contact in phone book, press the left soft key, select “Delete all” in menu showing as following.



删除所有: Delete all

SIM 卡: SIM card

话机: Phone

SIM 卡和话机: SIM card and Phone

确定: OK

返回: Back

2. Respectively select “SIM card”, “Phone”, or “SIM card & Phone”, and press Enter.
3. Give a prompt of “Delete”, press Enter to delete, and press the right soft key to exit.

Multi-Delete

1. In the list of contact in phone book, press the left soft key and select “Multi-Delete” in menu. There will show the list of telephone number about contact that are offered to select in the interface.
2. Press the left soft key to select the item of contact that will be deleted, and press Enter to delete.



多项删除: Multi-Delete

[无姓名] : No name

[无姓名] : No name

China Star

Linuxxwdo

Usala fant

珠江: Zhujiang

珠江瑞: Zhujiangrui

选择: Select

确定: OK

返回: Back

3. Give a prompt of “Delete”, press Enter to delete, and press the right soft key to exit.

4. For Multi-Delete, there will be max. 30 records to select every time.

Find Contact

1. In the interface of contact, press the left soft key and select “Find by” in menu. The interface will show as following.



查找: Find by

按姓名: Name

按号码: Number

按备注: Memo

按 SIM 卡位置: SIM Location

按话机位置: Phone Location

确定: OK

返回: Back

2. If selecting “Name” to look for, press Enter after inputting the name of contact. If there is the contact in phone book, the screen will display the information of contact. If there is no, it will display “Nothing”.
3. If selecting “Number” to look for, press Enter after inputting the phone number of contact at the desired position. If there is the contact in phone book, the screen will display the information of contact. If there is no, it will display “Nothing”. Viewing with phone number should accord with the matching rule of last 11 digits.
4. If selecting “Memo” to look for, press Enter after inputting the content of remark to look for the contact saved in mobile phone through the mode of remark. If there is the contact in mobile phone, the screen will display the information of contact. If there is no, it will display “Nothing”.
5. If selecting “SIM Location” to look for, press Enter after directly inputting the position saving the contact in SIM card. If there is the contact, the screen will display the information of contact. If there is no, it will display “Nothing”.
6. If selecting “Phone Location” to look for, press Enter after directly inputting the position saving the contact in phone. If there is the contact, the screen will display the information of contact. If there is no, it will display “Nothing”.

Memory Status

You may view the saving state of SIM card or phone so as to utilize the saving space effectively.

1. In the list of contact, press the left soft key to select “Memory Status” in menu.
2. After pressing Enter, the using state of SIM card or phone will be displayed on screen.

Set up the Portrait

You may set up the calling paste for the contact saved in phone. When setting up the Portrait, you must select the shooting mode as “Portrait” in the application program of “Camera”. Thus, the shot photo will be saved in photo album as the attribute of portrait.

1. Select the contact being associated in the list of phone book, and press Enter to view the detail information of contact.
2. In the interface of detail information, press the left soft key to select “Portrait”, and then “Set up”. The mobile phone will automatically search for the list of paste photo qualifying the format.
3. Press Enter to finish the association between the contact of phone and the portrait. When the contact of phone calls in or you call him or her, there will be a portrait image displaying in the main screen.

Call history

The mobile phone may record the phone numbers that are been dialed, accepted, or not accepted. It also may record the approximate time of every communication or all communications. In the list of three kinds of communication records, if phone numbers have been saved in phone book, it will display corresponding names saved in the list of record, or phone number.

·Dialed Call

The function may allow you view the list (network service) of 20 pieces of phone numbers that you recently dialed, including that have been put through or tried to dial up. Using the function of “Dialed call” may view detail information such as name, phone number, time, and length of communication time about every dialed phone. In the interface of detail information, press the left soft key to perform the functions as following.

- Save: Directly save the phone number in SIM card or phone.
- Call out: Directly call out the phone number.
- Send: Directly send short or multimedia messages to the phone number.
- Delete: Delete communication records.

·Answered call

The function may allow you view the list (network service) of 20 pieces of phone numbers that you recently answered. Using the function of “Answered call” may view detail information of answered calls such as name, phone number, time, and length of communication time. In the interface of detail information, press the left soft key to perform the functions such as save, call-out, send and delete.

·Missed call

The function may allow you view the list (network service) of 20 pieces of phone numbers that you recently did not accept. Using the function of “Missed call” may view detail information of the missed calls such as name, phone number, time, and length of communication time. In the interface of detail information, press the left soft key to perform the functions such as save, call-out, send and delete.

About the menu (The list of Dialed phone, Accepted Phone, and Not-accepted Phone):

1. Press the left soft key in the list of telephone number.
2. Select “Save”, “Call out”, “Send”, “Delete”, or “Delete All”:
 - Save: Directly save the number at the position of cursor into SIM card or phone.
 - Call out: Directly call out the number at the position of cursor.
 - Send: Directly send short or multimedia messages to the number at the position of cursor.
 - Delete: Delete the communication record at the position of cursor.
 - Delete all: Delete all communication records.

 **Note:** In the state of standby, press the key of send to display the list of dialed phones. Then, press the right soft key to switch among Dialed call, Missed call, and Answered call.

·Call Time

Using the function may view the time length of last communication, total calling-out, and total calling-in (with the format of hour, minute, and second). Press the left soft key to clear the time of last communication, total calling-out, and total calling-in. all records will begin from 00:00:00.

⚠ Note: If there are some differences between real communications and service time in the list of service provider, this depends on some factors such as network functions, zero-suppression & round number in account, and tax revenues.

My Number

Using the function may view the phone number, and you must save the phone number in SIM card. To save the phone number, you should do as following:

1. Enter the option of My Number, and select Line 1 or Line 2.

2. Press the left soft key to edit the name of phone user (referring to the introduction of Input Method), and press Enter after finishing the input.
3. Press the navigation key to move the cursor at the position of Phone Number, press the left soft key to edit the number, and press Enter after finishing the input.

Chapter 8 China Mobile Service

China Mobile Service provide the function including What's New, news & weather, pictures & ringtone, games, chat, finance on line, movie and TV, and Monternet. In the state of standby, click the icon  shown on the screen or select the icon  of China Mobile Services to enter the interface of China Mobile Service function as the following figure.



中国移动服务：China Mobile Service

精品推荐：What's new

新闻天气：News and Weather

图片铃声：Picture and Ringtone

游戏乐园：Game

聊天交友：Chat

在线理财：Finance Online

确定：OK

返回：Back

You may view service options, select some certain service option, press Enter to next level content to browse the information with navigation keys to move the cursor like using other lists (Seen the chapter of Monternet about detail operations while browsing web pages).

 **Hint** Under the standby state, open the slide, you can enter into the “ChinaMobileService” by pressing the right soft key.

Chapter 9 Monternet

Using the browser to make your phone connecting with the Internet depends on application programs of the Internet. The phone does not only support normal data call mode to connect the internet, but also perform browsing the internet basing on the support of GPRS functions in GSM network so as to give full scope of stronger functions and make you keep more close connections with the world.

 **Note:** Visiting the Internet depends on the network operators have provided the service and the functions that you have applied. Please consult with your network service provider.

When using WAP to visit the Internet, you should do as following.

1. Apply and order the services of data business or GPRS to Internet service operators.
2. Provide applying services to visit the Internet for Internet service operators.
3. Correctly perform setting up the browser in your phone
4. Use WAP browser to visit the Internet and perform corresponding operations.
5. Include Internet functions such as setting up bookmark, address, and browser (needing the network to support). The browser includes the states of offline and online.

Starting the Browser

1. In the state of standby, press the left soft key to enter the main menu, select the icon  of Monternet, and press Enter to enter the browser.
2. The interface displays the menu of Internet service.
3. Selecting web homepage or inputting addresses may directly connect with some certain web page.
4. After logging successfully, you may view the service option using the navigation key to scroll like using other list screen. After selecting some certain service option, press Enter to next level and browse the information.

 **Note:** To different web addresses, there may be some differences between displaying contents and logging process. Some web address may require you input the username and password to log in the web address.

Browsing Information and Using the Function of Visit

·Input Characters

The input column provided for inputting information in some web pages is used to interconnect information with the network. The method inputting characters is the same as other functions in

mobile phone.

·Finishing the visit

In browser, press the left soft key to select “Exit” from the menu, and finish visiting the Internet.

⚠Note Only selecting “Exit” can disconnect with the data of network. If adapting the mode of GPRS to connect with the Internet, you may accept the call without disconnecting.

List of Offline State on Browser

·Homepage

The homepage makes users directly or simply enter the position of Internet information.

·Enter Address

Users may input the address of Internet directly.

·Bookmark

The bookmark may be used to save custom bookmark, preset bookmark, and offline web page for users. You may browse the web address saved in bookmark and press Enter to browse directly.

1. In the main menu, select the icon  of “Monernet”, and press Enter to browse.
2. Select “Bookmark”. Press Enter to select the options such as Preset Bookmark, Custom Bookmark, and Offline Bookmark.
 - Persistent Bookmarks: The name of bookmark built in mobile phone will display on screen.
 - Customized Bookmarks: It is used to save the web address that users are interested. Press the left soft key, and the contents will display as following:
 - a) Add: You may add new bookmarks through inputting topics and addresses.
 - b) Edit: Edit bookmark topics and addresses again.
 - c) Delete: Delete bookmarks saved in the list of bookmark.
 - d) Delete all: Delete all bookmarks.
 - Offline page: It is used to save offline web pages that users save and support users to browse the web page at the offline state.

·History

Select History in menu, press Enter, and there will be recently visited web pages on screen. The maximum number of records can be up 10 saved in History.

·Setting

The setting includes profile, cache, cookies, and GPRS data count.

Profile

Users may select profile, and also edit profile in Setting of browser.

1. In homepage, select the icon  of Monernet, and press Enter to the browser
2. Select profile in Setting, and enter the interface of edit.
3. Select the profile from Internet GPRS/China Mobile GPRS/China Mobile CSD/ profile 4/ profile 5.

On the menu under Edit:

Gateway Information——Including Proxy address, Proxy port, and connection type.

Bearer type——Select the connection mode of data in GSMCSD and GSMGPRS.

Data setting——If the connection mode is “GSMCSD”, it should include Dial number/Username/Passport.

If the connection mode is “GSMGPRS”, it should include APN/User name/Passport.

Rename——Change the name of current profile.

⚠ Note: Do not change related options of “Internet GPRS” in uniform profiles.

Cache

The information or service that you have visited will be saved in the Cache of mobile phone. Users may directly read the page saved in cache and do not need to load through network. The capacity of cache may be up to 100K and save tens of WAP web pages.

1. In the main menu, select the icon  of Monernet, and press Enter into the browser.
2. Select Cache in Setting and enter the interface of cache.
3. Select Cache Mode, press Enter into the interface of cache mode. Select “On”, and open the cache mode. Select “Off” and close the cache mode.
4. Select “Clear Cache”, and press Enter to clear the cache.

Cookies

Cookies are some trivial information that the server sends to you so as to save the information that you have visited WAP stations. If you agree to receive Cookies, the server will know about the situation that you use WAP stations, the contents that you are interested in and want to read.

1. In the main menu, select the icon  of Monernet, and press Enter into the browser.
2. Select “Cookies” in Setup and enter the interface of Cookies

3. Select “Enable Cookies”, press Enter into the interface of Cookies. Select “On”, and start Cookies. Select “Off” and close Cookies.
4. Select “Clear Cookies”, and press Enter to clear Cookies.

GPRS data count

Using the function makes you can view the data capacity sent or received from the connection of GPRS Grouping Data. You may pay according to the data capacity sent or received from the connection of GPRS Grouping Data.

·Security

Security certificates are used to verify the origin of WAP page and installed software. You will need Security certificates under the following situations.

- Want to connect with network bank, other web stations or long-distance server. Perform operations relate to transmit secret information.
- Want to reduce risks of infection virus or other vicious servers. Ensure it is real and credible while downloading and installing software.

Certificates——In certificates, you may view the name list of certificates saved in mobile phone. If selecting some certain certificate, select “View” and show the information related to the certificate.

Session information——It may display the information such as connecting types of current certificate, length of encryption key, encryption arithmetic, and exchange arithmetic of encryption key.

Current Certificate——View relative information to current certification.

⚠Note: Although using certificates will greatly reduce risks in the process of long-distance connection and software installation, correctly using certificates can improve the safety to benefit you. The existence of certificates themselves cannot provide any protection. Only there are correct and reliable certificates in Safety Certificate to improve the safety.

Menu of Browser Online State

“Homepage”——The homepage make users simply and directly enter the information position in internet.

“Back”——Selecting the option of “Back” can enter into the web page of last web address in history. If the web page of last address is blank, it is valid to select the list of “Back”.

“Forward”——Selecting the option of “Forward” can enter into the web page of next address in history. If the web page of next address is blank, it is valid to select the list of “Forward”. This option may be used to return the next web page when you select the menu of Return in the first time.

“History”——List the web page recently visited. You may select and enter any web page.

“Refresh”——Selecting the option of Refresh can renew the current web page.

“Bookmarks”——“Bookmarks” is used to save the web address that users are interested, and set up a personal name randomly so as to remember easily. Users may enter the web page directly and easily through menu. You may edit or delete the option of bookmark.

“Saved as Bookmark”——Users may save the interesting web address as Bookmark so as to visit in the future.

“Enter Address”——Users may directly input the web address of other web pages to link in the browsing process through the option.

“Display URL”——Display the web address

“Send URL”——Send the web address

“Save Offline Web Page”——Save the browsing web page to browse with offline.

“Security”——View relative information to safety certificates

“Exit”——Exit out of the browser directly.

Remark:

- (1) When browsing the web page with offline, there will be an option of “Online Web Page” added in the list.
- (2) When browsing the web page, there will be an option of “Saved as” added in the list when moving the focus to the photo.

 **Hint:** 0~3 options of dynamic menus such as log, select, and return may be added to the furthest front of online menu according to the situation of current web pages. The detailed options of dynamic menus and their number will depend on the detailed contents of web page.

Downloading Picture

You may download pictures from WAP through the mobile phone. The picture downloaded in the phone may be set as not only the ready picture but also for you to insert while writing multimedia messages. The format supporting pictures includes BMP, GIF, WBMP, and JPG. The pictures that cannot support the format or are too big in size will display as “X”.

1. In homepage, select the icon  of Monternet, and press Enter to the browser.
2. You may input the address of web page that you want to visit.
3. After entering, you may browse the web page according to the prompt, select some certain type of picture that you like in the download area, and download it to save in the list of My Favorite.
4. You may delete the picture downloaded in mobile phone or set up the ready picture. Setting as

the ready background picture has some certain requirements. That out of some limit cannot be set as the ready background either.

5. The picture having no copyright to protect can be sent through the mode of multimedia message.

Downloading Ring

You may download rings to the list of sound in My Favorite through the mobile phone. The formats of supported rings are MIDI, MMF, and WAV.

1. In the main menu, select the icon  of Monternet, and press Enter to the browser.
2. You may input the address of web page that you want to visit.
3. After entering, you may browse the web page according to the prompt, select some certain type of rings that you like in the download area, and download it to save in the list of ring.
4. The ring having no copyright to protect can be sent through the mode of multimedia message.

Chapter 10 Games

There are 4 built-in classic games in the option to enrich your daily life.

Cargador

Game Rule: You only need the possible least effort to push the box to the destination. The box can only be pushed once without any pull. You may select “Continue” and return to the final pass, also optically select any pass to begin the game. There are total 80 passes to select in the game. In the process of game, you may use the touch pen or the four-direction-navigation-key to control the movement of homunculi, and press the OK key to back the last step.

Game Method:

1. Enter “Game” to select “Cargador”;
2. Select “Select pass/Continue/help”, and press Enter
 - Select pass: Input the number of selected pass, and press Enter
 - Continue the last pass: Begin again from the pass ended last time.
 - Help: Explain the rule of game in detail.

 **Hint:** In the interface of Cargador, press the left soft key to replay the game after the game begins.

Colorful bubble

Game Rule: During this game, three bubbles will fall down each time, you should move the same

color bubbles to one line. When five or more bubbles are at one line, the bubbles will disappear. When the screen is full of the bubbles, the game is over.

Game Method:

3. Enter “Game” to select “Colorful bubble”;
4. Select “Start a game”, and press OK key to start the game
 - Start a game: Start a new game.
 - Help: Explain the rule of game in detail.
 - Highscore: the Highscore list will save the records of five people that get the highscore.

 **Hint:** In the interface of Colorful bubble, press the left soft key to replay the game after the game begins.

Light up

Game Rule: Each pane on screen respects a light. At the beginning, all lights go out. Switch on some certain light by clicking it with the touch pen. All lights located at the position of up, down, left, and right can switch on/off the states. The purpose of game is to switch on all lights.

Game Method:

1. Enter “Game” to select “Light up”
2. Select “Warm-up/3*3/4*4/5*5/Help/Hero List”, and press Enter.
 - Warm-up, 3*3, 4*4, 5*5 are 4 kinds of lineups.
 - Help: Explain the game rules in detail.
 - Hero List: The five people that get the highest score in every lineup will enter the hero list.

 **Hint:** In the interface of light up, press the left soft key to play the game again after the game begins.

Tasty fruit

Game rule: In this game, the two adjacent fruits will exchange positions of each other after clicking them with the touch pen. With the touch pen click twice will cancel the key -press mark. While there are three or more same fruits who border upon in a line, they are vanished and rearranged. If such fruits cannot be found, the two fruits will come back to original state. During the limited time, if a way cannot be given out, a hint will be given out and score will reduce 50 with it. The game will end up when there are no answer on the screen, the value of original clearance-time (The hint icon appears when it is reduced to zero; it decreases as the difficulty increase.) is less than 4 or the score goes beyond the limit. If an operation result in much elimination, score=the square of the number of

the eliminated fruits.

Game Method:

1. Enter “Game” to select “Tasty fruit”
2. Use the touch pen to exchange the positions of the fruit.

Game audio

The option may set up the game sound effect, and there are two options of Switch On or Switch Off. When the setup of game audio is on, press the side key to adjust the size of volume in the interface of specific game.

Chapter 11 Accessories

Accessories include all kinds of tools in daily using.

Radio

1. Select “Radio” in the “Accessories” or click the icon  on the idle screen to enter the Radio function. The phone will display the name and frequency of broadcast channel (if channels have been stored in the phone), and press upward or downward navigation key to switch between channels stored in “My station”, as shown in the following picture:



 **Hint:** For using radio to receive the broadcast, please plug the joint line of the earphone into the Earphone slot at the bottom of the phone. Press the control button of the earphone for a long time to turn on/off “Radio”.

2. Press left soft key to select “Menu” in the interface of radio and perform following instructions:

•My radio

If broadcast channels have been searched and stored in the phone, list of all storing and saving channels will be displayed in the phone after entering into “My radio”, and then select favorite

broadcast channels and press Yes key to switch current channel; if the channel is not searched before, phone will display “Empty Channel” in the screen, and here you should enter “Auto Searching” or “Manual Searching” to search broadcast channels at first.

Press left soft key to perform following instructions in the list of “My radio”:

Deleting selected channels——To delete channels in the list where cursor stops.

Deleting all channels——To delete all channels in the list.

·Auto Searching

Phone will auto search channels by selecting “Auto Searching”. Phone will stop searching and remind user of “Complete Searching” after getting channels. Searching channels will be stored in the list of “Myradio”. Press right soft key to cancel the operation in the process of searching.

·Manual Searching

Select “Manual Searching” to press side key or upward or downward navigation key to search favorite channels, or press left soft key to select “Entry”, and then enter the favorite frequency (87.5 MHZ to 108.0 MHZ) in the pop-up frame. After entry, please press Yes key and this channel will auto be saved in the list of “My radio”.

⚠ Note: Phone allows a total of 20 broadcast channels in saving.

·Shut Down Radio

Use this option to shut down the wireless when the radio is on.

💡 Hint: When the wireless starts, press side key to adjust volume of the radio in standby status or in the displaying interface of the radio; press remote key of the earphone to switch into the channel stored in “Myradio” for a short time in standby status. You may also dial or answer calls normally in standby status. During calls, broadcasting will be temporarily shut down and continue to work at the end of calls.

⚠ Note: If any application software is using connections of (E) GPRS or HSCSD to send or receive data, this software may interfere the working of radio.

Schedule

Scheduler arranges and records events that you need to do. Your phone will send alarm sounds to remind you of an event that you need to accomplish whenever the time of an event that you make before occurs on time. To select the “Schedule” in the “Accessory” menu and then enter into the

interface of the Schedule. The blue diamond in the interface will show the current date, and the blue rim will show the arrangement that you need to finish in that day.

·Adding/Editing a new event

1. You can press all-in-round buttons or side button to select date or browse calendar by paging forward or backward; press button of “*” or “#” to browse calendar for different months.



日程表: Schedule

菜单: Menu

确定: OK

年: Year

月: Month

返回: Back

2. Click the date pane of that day to view the schedule of that day; if there is a schedule, it will show the event list; if not, it will enter into the interface of adding an event. As shown in the following image:



标题: Title

时间: Time

下午: PM

时: Hour

分: Minute

提醒: Hint

关: Off

铃声: Tune Rings

吉他蓝草乐: Blue Grass of Guitar

编辑: Edit

存储: Save

返回: Back

3. Click the input field of “Title”, then enter the title name.
4. Click the “Time” field (if current time format is 12 hours, you need to select am or pm by click and), and press numeric keypad to enter time.
5. Click and to select reminding mode of an event by “Alarm” option. If prompt is unnecessary, you may select “Off”, by which system will not remind you when time of an event occurs on time. If reminder is necessary, you may select on time or how longer time beforehand to remind you.
6. You can select reminder bell by click the “Bell” field to change tunes.
7. When setting is finished you can press OK key to “Save” the event. Screen will display the interface of events list.
8. In interface of events list, you may press left soft key to select “Adding” from “Menu”, and continue to add events.

·Viewing events

1. Accessing the “Scheduler” and then press left soft key to select “Menu”, from which you may select “View”.
2. Remove the cursor into the entry field of viewing date, and then enter the desired date by keypad, and press OK key.
3. If an event has been set in the viewing date, screen will show events list, otherwise screen will show “No Savings”.

·Deleting Events

1. Enter into the “Scheduler” and then press navigation key or side key to select date listed by blue pane, then press OK key to enter into the events list.
2. In interface of events list, you may press left soft key to select “Delete” from the Menu. After “Delete” displays, press OK key to confirm delete and then return events list.
3. You may also select “All Delete” to delete all events of that day.

 Hint: If you select “All Delete” from the Menu that is in the calendar interface of scheduler, all records of events will be totally deleted.

·Savings

Events list allows a total of 20 events. Enter the scheduler and then press left soft key to select “Savings” for viewing the storing situation of events, including used or unused information.

Calendar

You may view Chinese or Gregorian calendar in function list of Calendar.

1. Select “Calendar” in “Accessories”, as shown in the following image:



日历: Calendar

年: Year

月: Month

日: Date

农历: Lunar

返回: Back

2. Press navigation key or side key to browse calendar; press “*” or “#” to select months upward or downward.
3. Press left soft key to view corresponding date of Lunar.

World Time



北京: Beijing

确定: OK

返回: Back

Press navigation keys or side key to adjust longitude and latitude for displaying time and date of main cities in the world.

Anniversary

1. Select “Anniversary” in “Accessories”, as shown in the following image:



纪念日: Anniversary

名称: Name

时间: Time

公历: Solar

年: Year 月: Month 日: Date

类型: Type

提醒: Alarm

编辑: Edit 存储: Save 返回: Back

2. Click the “Name” field to edit name of the title.
3. At the time field, click and to select Solar or Lunar. Click the entry field to enter date by keypad.
4. At the “Type” field, click and to select different type of anniversary date.
5. At the “Alarm” field, click and to select reminder mode of an event, including reminder or not. If reminder is unnecessary, system will not remind you when time of an event occurs on time. If reminder is necessary, you may select on time or longer beforehand to remind you.
6. Press OK key and save the anniversary date after setting is finished. All reminders of anniversary date occur at 9 am of system time of phone.

Calculator

Phone can perform simple arithmetic, such as addition, subtraction, multiplication, and division.

1. Enter the “Calculator” of “Accessories” to display interface of a simulated calculator.



计算器: Calculator

确定: Yes

返回: Back

2. Click the number and characters in the simulated calculator, you can perform simple arithmetic, such as addition, subtraction, multiplication, and division.
3. Number key displaying on the screen as well as your phone keypad; press the “*” key can input a minus and press the “#” key can input a radix point.
4. Press right soft key or click “Return” to back to the interface of “Accessories” menu.

Alarm 阔钟

1. Select “Alarm” in the “Accessories” to display interface of clock’s settings.
2. Press OK key to enter “Alarm1” and then display setting interface of Alarm1



闹钟: Alarm

设置: Set

关: Off

时间: Time

上午: AM

时: Hour

分: Minute

模式: Duty

仅闹一次: One time

铃声: Bell

帝王之钟: Aptpan

存储: Save

返回: Back

3. You must select “On” option in the “Set” for using alarm function of clock. Click the “Time” field (if current time format is the mode of 12 hours, you need to select am or pm by click  and 

 **Hint:** Settings of alarm clock are not in the viewing list of daily events in the schedule, and also not synchronized with settings of schedule.

PowerWord

PowerWord in your phone supports intertranslation between Chinese and English, that is, it may translate English words entered into Chinese, and vice versa.

1. Select “PowerWord” in the “Accessories” menu to enter into the PowerWord function.
2. Click the input field, enter into the editing interface.
3. Press “*” or side key to select input mode and then enter the content by keypad, Press OK.
4. Click the “Exp” to display meanings of Chinese or English.

 **Hint:** Press left soft key or OK key to view upward or downward meanings in the interface of meanings.

Unit Conversion

By this function, you can finish unit conversions, such as units of acreage, energy, length, quality, power, pressure, velocity, temperature, time and cubage.

1. Select “Unit Conversion” of “Accessories”, as shown in the following image:



单位换算: Unit Conversion

类型: Type

面积: Acreage

单位: Unit

平方英里: sq.mi

数量: Quantity

返回: Back

2. Press left or right navigation key in “Types” to select two units that need to be converted; enter numbers by keypad and phone will auto convert the result.

Currency Exchange

You may exchange a certain quantity of money into equivalent money of different countries or areas by this function.

1. Select “Currency Exchange” in the “Accessories” to display interface of exchange:



兑换: Currency Exchange

兑换币种: Exchange Currency

人民币: RMB

目标币种: Target Currency

美国美元: US Dollars

汇率: Exchange Rate

兑换金额: Exchange Money

计算结果: Calculating Result

返回: Back

2. Press left or right navigation key to select type of currency that need to be exchanged.
3. Press left or right navigation key to select target currency.
4. Enter the content of exchange rate and money that need to be exchanged by keypad.
5. Screen displays the result of calculation.
6. User may define 8 types of currency. In fields of “Exchange Currency” and “Target Currency”, you may press left or right navigation to switch to “User-Definition” and edit type of currency by keypad.

PC Tools

This type of phone may permit user to download favorite tune rings, movies or images by connection with PC machine through a data line (special accessory). During the process of using a data line, this type of phone supports operating systems of Windows98, WindowsNT, Windows2000 and WindowsXP. If the phone you bought does not include the data line and set up software, please buy from the local dealer. Synchro software must be installed in the PC machine prior to using the function of transmitting files.

·Install synchro software

1. Start the PC machine;
2. Insert the disc of software into the driver of CD-ROM in the PC machine;
3. Operate according to the installation advices in the screen;
4. Use it after finishing the installation.

·PC synchro function

When using data line to transmit data, please plug one end of the data line into the jack at the base of the phone, with the other end connecting the USB interface. Beyond that, you need to install the drivers of USB serial interface into the PC machine. Then execute following instructions after installation.



Hint: see user manual of software of “NEC tool box of the phone” for using methods.

By this function, user may download tune rings or images stored in the PC machine into the phone

through data line and synchro software, and make it possible for synchro transmitting and editing between the phone book of the phone and that of PC machine. Meanwhile, you may store the images and tune rings stored in the phone into the PC machine, hereof realizing the synchro function of data of tune rings and images.

1. Start the PC machine to install and run synchro software;
2. Open the “Accessories” of the phone to access to the “PC Tools” and select “Data Synchro” function;
3. When synchro software is installed, please run the application of “NEC tool box of the phone”.

Phone Book Editor

- 1、When accessing to the phone book editor, PC machine will auto read records in the phone book of the phone into the phone list.
- 2、User may transmit records in the list of the phone into the Address Book of Outlook Express or Outlook, or transmit records in the list of the Address Book of Outlook Express or Outlook into the list of the phone.
- 3、Following functions will display in the interface of the editor:
Adding——To create a new record of contact;
Editing——To edit a record;
Deleting——To delete a record;
All Selecting——To select all records in the phone list;
- 4、Press “Output” button to transmit renewed records in the phone list into the phone.

Image and Tune Rings Editor

Images

- 1、When user selecting the catalog of storing images, image files will display in the file list of images by preview mode.
- 2、Images stored in the phone and downloading images will auto display in the file list of phone images. (Images brought by system will not be listed)
- 3、User may edit and preview the images in the file list of images, and then add these images into the file list of phone images for inputting into the phone.
- 4、Press the button of “Outputting Images to Phone” to finish the transmission of images from PC machine to the phone.
- 5、Select images in the file list of the phone images and then press the button of “Reading Images from Phone” to name a saving content prior to transmitting selected phone images into the PC machine.

- 6、Select images in the file list of the phone images, and then press the button of “Deleting Images” to delete selected phone images.
- 7、To cut and edit images, including: add a framework, adjust brightness, gray level and reverse color etc.

Tune Rings

- 1、When user selecting the catalog of storing tune rings, files of tune rings will display in the file list of tune rings.
- 2、Downloading tune rings stored in the phone will auto display in the file list of phone tune rings. (Images brought by system will not be listed)
- 3、User may edit the playing length of time, name or type of tune rings and then add tune rings into the list of the phone tune rings for outputting into the phone.
- 4、Press the button of “Outputting files of tune rings into the phone” to finish the transmission of turn rings from PC machine to the phone.
- 5、Select the tune rings in the file list of tune rings and press the button of “Reading Tune Rings from the Phone” to name a saving content, and then transmit the selected tune rings of the phone into PC machine.
- 6、Select tune rings in the file list of tune rings of the phone, and then press the button of “Deleting Tune Rings” to delete selected tune rings of the phone.
- 7、To cut and edit tune rings, and each file of tune rings must not exceed the size of 300K.

Movie

- 1、When user selecting the catalog of storing movies, files of movies will display in the file list of movies.
- 2、Movies stored in the phone will auto display in the file list of movies.
- 3、User may select movies in the file list of movies to preview.
- 4、Double click the file of movies in the file list of movies to add it into the file list of movies of the phone for outputting into the phone.
- 5、Press the button of “Outputting Movies to Phone” to finish the transmission of movies from PC machine to the phone.
- 6、Select movies in the file list of movies of the phone and then press the button of “Reading Movies from Phone” to name a saving catalog prior to transmitting selected movies of the phone into the PC machine.
- 7、Select movies in the file list of movies of the phone, and then press the button of “Deleting Movie” to delete selected movies of the phone.

 **Hint:** if facing problems of coming calls, low power, troubles of PC or network, the process of files transmission will be cut off.

·Modem

1. Accessing via USB

When selecting “By USB”, user may use data line to build a connection between the phone and PC machine, and use network dialing of GPRS to connect into the internet through the GPRS dialer. At that time, synchro function of data will be forbidden.

2. Accessing via IrDA

When selecting “By IrDA”, point the IrDAs of phone and PC machine directly with no subtle between them. If it is successful, user may connect into the internet by dialing of PC machine.

IR receiving

By using Infrared Ray, you can send and receive contacts information, pictures, audio and shchedule between phone and other compatible handset devices.

 **Note:** Please do not shoot infrared ray to others'eyes directly.

Sending and Receiving data through IR

1. Point the IrDAs of sending and receiving devices directly with no subtle between them. The ideal distance is less then 50cm. For the location of IrDA, please refer “summary of phone” at chapter “Introductions”.
2. The receiving device should start IrDA. For starting IrDA and receiving data, please click “IR receive” at “Accessory” menu.
3. When the sending device selects send data By IrDA. The data starts transferring.

 **Hine:** The size of file should less then 100K, otherwise phone can not receive it.

Chapter 12 Camera

Attentions for using Camera

Operating the Camera

·The Camera in your phone is produced and installed by highly precise and top techniques, though there maybe still remain solid, light or dark dots or lines in the Screen. Meanwhile, you must remind that quantity of impurities (such as white lines etc) will significantly increase whenever you use the Camera in dark place.

·Fingerprints or greases in the Camera lense may attribute to problems of difficult focusing or black images. Therefore, use must clean the lense with a soft cloth before using the Camera.

- Quality of image may also get lowering when user place phone in a field with high temperature for long time.
- Exposure under the direct sunshine for long time will change colors of color filter inside the Camera, and cause color changing of images.
- In Shooting preview interface, if user do not press keys for 3 minutes or longer, system will auto exist the mode of Camera function.

Attentions for shooting images

- You shouldn't close the sound of camera shutter. Though setting of phone is the mode of conference, system will also occur shooting sound during shooting images.
- Try to avoid shaking the phone. Moving phone during shooting images will lead to faintness of images. During shooting images, you must enclasp the camera to remain it in status of sleepiness, or use autotimer to shoot.
- note: If you attempt to directly aim at the strong light source, such as sunshine or other strong light source, images will become dark, or affected.

Copyright Information

- Images shot in your phone can not be used for other purposes, and act against related stipulations of copyright law without approval from copyright owners. Pay attention that some stipulations are suitable for shootings on stage performing, amusement or exhibition, even though shootings are finely used for yourself.
- User also remind that images protected by copyright law should only be exchanged between specific circles stipulated by copyright law.
- User should protect other's privacy during the period of using phone camera, and must not deliver images to others.

Camera Function

Using “Camera” application, you may shoot images for surrounding persons or things at any time. Images are stored in the “Images list” of the “Camera” application. You may rename the images in “Images Album”, but also deliver images to friends by Multimedia messages. All images created by camera are the JPEG format, with MJPG format of movie created by camera.

 Hint: JPEG is a standard compressed format of images, and you may view these files of JPEG format by common images viewers, editors and webpage explores. Extended name of these files is JPG.

Shooting Images

⚠ Note: Please comply with local laws and regulations about shooting images. Do not use this function for illegal behaviors.

⚠ Note: User must start the phone at first to use this function. Do not start the phone when using is forbidden or using phone will cause dangers.

1. In standby status, press shooting key or select “Camera” in the “Accessory” menu, then “Camera” application will get started and screen will show the sceneries that need to be shot. There is a viewfinding frames around the screen, inside of which it is image field that needs to be shot. If camera lens is nearing the object, definition of images may be affected.
2. Press OK key or Shooting key to take images.
3. Select “Saving”, “Sending” or “Returning” option in the imaging interface after taking images.
 - Saving: To store images in the image list.
 - Sending: To send images through multimedia messages.
 - Returning: To return the camera preview window.

Shooting movie

This phone allows 15 seconds of kinescoping. If using this function, press left soft key in the preview window. Select “Movie” from “Shoot Mode” to press OK key to confirm and then return to the preview window to take images. Store movies in the “Movies” of “Image list” after taking images.

Saving Images

- Click “saving” in the imaging interface after taking images.
- Press OK key to save images after input the name and then return to the preview window to take new images.

Image list

Using Image list to store images or movies after shooting.

1. Press left soft key to select “Image list” from the menu in the “Camera” application.
2. Including two files of “Movie” and “Photos” respectively.
3. Select “Movie” or “Photos” to display the name of a movie or image. Press left soft key to perform following functions:
 - View: To view movies or images.
 - Send by: You may send images through multimedia messages or IrDA. (This option will become grayed and be forbidden when displaying name of movies.)

- Rename: To rename the movie or images.
- Sort by: To arrange movies or images by their names, size or date.
- Delete: To delete movies or images in viewing.
- Delete all: To delete all movies or images.
- Property: To view attributes of movies or images, including name, size, height, width, format, date, time and characteristic of sending or not.

4. Press left soft key during playing movies or in the interface of imaging, and with following functions:

- Previous: To browse previous movie or image.
- Next: To browse next movie or images.
- Full Screen: You may browse movies or images with full screen.
- Auto view: System is able to play images in image list auto. (This option will become grayed and be forbidden when displaying movies.)
- Set as Wallpaper: To set images as wallpapers of standby status. (This option will become grayed and be forbidden when displaying movies.)

Shoot Mode

You may get different effect of images in different shooting modes. This phone allows for functions of consecutive shooting and movie shooting.

- Normal——a standard shooting mode.
- Consecutive——This phone allows for consecutive shooting.
- Movie——This phone allows movie shooting for about 15 seconds.

Zoom

When phone is in the preview window, press side key or enter into the menu to select different zoom multiples to adjust zoom for best effect of photos. This phone provides three multiples of zoom to select.

light

You may start or shut down the flashlight for best effect of shooting. Flashlight will not work during the mode of movies or continuous shooting.

 **Hint** The flash light may emit light continuously and may serve as “electric torch” by continuously pressing the shoot key when the slide is closed.

Self shoot switch

Set the “Self shoot switch” of “On”, and then aim the lense at the scenery that needs to be shot and press OK key or Shoot key. Phone will auto take images by settings of self timers.

Self shoot timer

User may set the auto delaying time as 5, 10 or 15 seconds in “Self shoot timer”. Select delaying time to press OK key for confirmation.

Setup

In the options of “Setup” in the “Camera” application, you may set the image size, adjust image quality, set shooting context, select image effectiveness and shooting sounds, adjust brightness of images, or confirm shoot several images continuously.

1. Enter into the “Setup” of “Camera”.
2. Select settings that need to be adjusted:

- Size——to select images as wallpaper, Portrait or VGA.
 - Wallpaper——Selecting this mode, user may take an image of 176X220.
 - VGA——Selecting this mode, user may take an image of 640X480.
 - Portrait——Selecting this mode, user may take an image of 80X80. Save the image in the “Image list” after shooting and set a corresponding Portrait for a contact listed in the Phone Book. (See the chapter of “Phone Book” for specific operations.)
- Quality——Normal, Fine or Super Fine. Better the image quality is, more space images occupy.
- Environment——It is classified with standard and night view. Using night view may create high quality of images in poor light or longer time for exposure of camera. Pay attention that any slight movement will lead blurred images in conditions of poor light.
- Filtering——You may select effectiveness of normal, Monochrome, and Sepia.
- Shoot Sound——There are three types of shooting sounds to select.
- Brightness——You may select brightness in shooting , and it is classifies with 5 levels.
- Consecutive count——It refers to the quantity of images when mode of shooting is set as “Consecutive”.

Sending Images

There is several modes to sent images, or you may directly select “Sending” images from imaging position or select images needing to be sent from image list. If selecting to send images from “Image list”:

1. Press left soft key to select “Sending” in the files list of images.
2. If images can be sent by MMS, editing interface of multimedia messages will display the screen. You may select recipient, or directly enter the phone number or mail address of the recipient. Just send the multimedia message after editing.

Chapter 13 STK Application

⚠ Note: Using SIM Card or not lies on your network operator provides such service or not, and you have bought such service or not. If you insert a SIM Card with increasing value service as well as calling function has been opened and system is not busy, in this context, you may select “STK Application” from the menu and press OK key to enter into the STK function.

Select “STK Application” from the menu and press OK key to confirm and then enter into function interface of SIM Card, which will display the title list of available functions. To view by navigation key or side key. Select the service title and press OK key to enter into the specific function interface of every service. Press right soft key to return to the menu. Service inquiry for selected service will be sent to service provider and you should pay for this service, cost standard can be consulted from relevant providers. During the process of using these services, you may be required to enter some information, and please refer to relevant illuminations of “Input Modes” for specific input modes.

Hint: Different SIM Card may show different contents in the application of SIM Card.

Chapter 14 Common problems and solutions

If you feel something abnormal while using your phone, please refer to the following problems and solutions. If problems still happen, please call the dealer or service operator.

Common problems	Causes	Solutions
Fail to connect the network normally while using explorer	Network operator offers no such service or you haven't applied for such service.	Please contact network operator and ask for information of applying and using about such service.
	Settings are not correctly set.	Please refer to the specific introductions about the browser.
Errors of SIM card	SIM card is mangled	Please contact your network operator.
	SIM card is not fixed	Check the SIM card.
	Metal face of SIM card retains dirty.	To clean the card with a cleaning cloth.

Poor signals	Using phone in areas of poor signals, such as surroundings of high buildings or a basement, where wireless electric waves can't reach.	Receiving calls at a position with well signals.
	Using phone during the period of busy communications, which causes routes jammed and unable to communicate.	Try to avoid such situation.
Fail to start the machine	Battery power is running out.	Charge the battery or replace a new one.
Fail to make a call	Use the function of forbidding calls	Cancel the setting of forbidding calls
Fail to connect the network	SIM card is invalid	Please contact your network operator.
	Out of service area of GSM	Please move into the service area of network operator.
	Poor signals	Please move to a place with strong signals and try again.
Fail to charge	Voltage is not in compliance with the extension listed in charger.	Please use voltage in compliance with the standard listed by the charger.
	Not using a standard charger	Please use a charger designed for this type of phone.
	Abnormal connection	Check the plug is well connected or not.

Chapter 15 Technical Parameters

Support systems	GSM900/DCS1800/PCS1900
	GSM900: 890.2~914.8MHz
Extension of working frequencies	935.2~959.8MHz DCS1800: 1710.2~1784.8MHz 1805.2~1879.8MHz PCS1900: 1850.2~1909.8MHz 1930.2~1989.8MHz
Maximization of transferring power	GSM900: 33dBm Nominal DCS1800: 30dBm Nominal PCS1900: 30dBm Nominal
Working temperature	-10°C~+55°C
Size	100*47*23mm
Weight	95g
Type of battery	700mAH
Talk times	About 120 minutes
Standby times	About 110 hours
Polyphonic ring tunes	64-layer polyphonic ring tunes, dimensional sound
LCD	65K TFT 176*220

Chapter 16 Maintenance Manual

Welcome to use the mobile phone produced by NEC Company, and if you have some problems in using this phone, please contact the dealer or refer to the Repair Center of NEC Company. If your phone needs to be repaired, you may send it to the local maintenance spot (see the certificate of three guarantees equipped with the phone for specific repair network); if the local has no maintenance spot, please deliver the phone and copy of purchasing invoice to the dealer for mailing of EMS.

If you want to inquire the latest repair network and data of changing centre, please call 800—820—7007, or access to the Internet to inquire: <http://www.necmobile.com.cn>

Your phone is a product of superior design and craftsmanship and should be treated with care.

Following guidelines may help you follow the warranty obligations in terms of Maintenance Clauses, if practiced, can extend the life of your mobile.

- Keep the mobile and all its parts and accessories away from small children.
- Keep the phone dry. Precipitation, humidity and liquids containing possible minerals will corrode the electronic circuits.
- Do not use or store the phone in dusty areas as knock-down components may be damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries and warp or melt certain plastics.
- Do not store the phone in cold areas, otherwise moisture can form inside the phone when temperature of the phone arise (to normal temperature), which may damage the electronic circuits.
- Do not attempt to open the phone's casing. Non-expert handling of the phone may image the phone.
- Do not drop, knock or shake the phone. Otherwise, rough handling will damage the internal circuits.
- Do not use strong chemical products, cleaning agents or strong scours to clean the phone.
- Do not use paints to lay on the phone, which may block sundries inside the know-down components and affect the normal operation.
- Only use necessary or authorized antennas to change the antenna. Any unauthorized antennas or refitting accessories may damage the phone and violate relevant regulations for wireless equipments.

Above-mentioned guidelines are comparably suitable for your phone, battery, charger, or all components. If those parts can not work normally, please send it to the closest and eligible repair institution.