

OPERATING INSTRUCTIONS

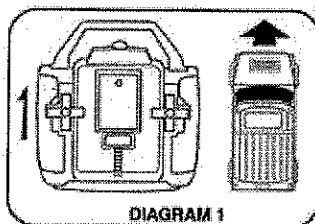


DIAGRAM 1


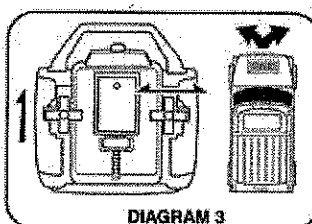


DIAGRAM 3

Choice of 2 frequencies*
 *Toy comes with either 27MHz or 48MHz frequencies. You can race two vehicles of different frequencies at the same time.

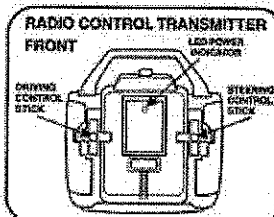

RADIO CONTROL TRANSMITTER FRONT

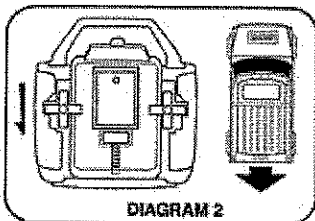


DIAGRAM 2


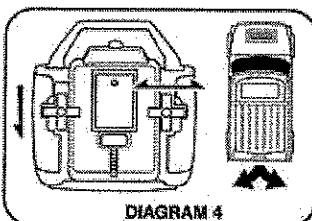


DIAGRAM 4

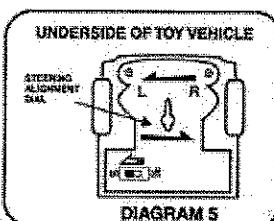

UNDERSIDE OF TOY VEHICLE

DIAGRAM 5

DRIVING FORWARD

1. Push the DRIVING CONTROL STICK forward (away from you.) See Diagram 1.

DRIVING IN REVERSE

2. Pull the DRIVING CONTROL STICK back (towards you.) See Diagram 2.




STEERING OPERATION

3. To make left or right turns while driving forward, turn the STEERING CONTROL STICK to left or right while pulling the DRIVING CONTROL STICK forward at the same time. See Diagram 3.

4. To make left or right turns while driving reverse, turn the STEERING CONTROL STICK to left or right while pulling the DRIVING CONTROL STICK backward at the same time. See Diagram 4.

STEERING ALIGNMENT

5. If the vehicle does not run straight forward, adjust the STEERING ALIGNMENT DIAL for satisfactory alignment on the underside of the vehicle. If the vehicle runs towards the left, turn STEERING ALIGNMENT DIAL towards the right. If the vehicle runs towards the right, turn STEERING ALIGNMENT DIAL towards the left. See Diagram 5.

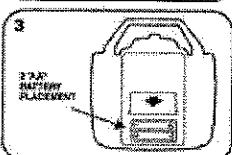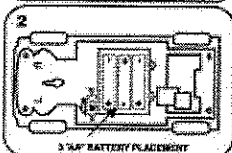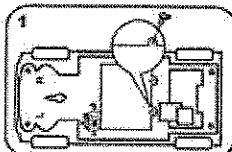

BATTERY INFORMATION

BATTERY INSTALLATION: TOY VEHICLE

1. Make sure the ON/OFF switch is in the "OFF" position on toy. Remove the screws on the battery lid. Remove lid to access the battery compartment.

2. Insert 3 (AA) batteries into battery compartment. Close the battery lid, reattach screw to battery lid to lock. Turn the ON/OFF switch to "ON" position.

RADIO CONTROL TRANSMITTER

3. Slide battery lid open, and insert 2 (AA) batteries into battery compartment. Place back the battery lid.

BATTERIES NOT INCLUDED
 3 AA BATTERIES FOR TOY VEHICLE
 2 AA BATTERIES FOR RADIO TRANSMITTER

CAUTION:

- USE ONLY RECOMMENDED BATTERIES ("AA" ALKALINE BATTERIES).
- INSERT/REPLACE BATTERIES UNDER ADULT SUPERVISION.
- NEVER SHORT-CIRCUIT THE BATTERY TERMINALS.
- DO NOT USE RECHARGEABLE BATTERIES.
- DO NOT MIX NEW & OLD AND DIFFERENT BATTERY TYPES.
- INSERT BATTERIES WITH THE CORRECT POLARITIES.
- REMOVE BATTERIES WHEN TOY IS NOT IN USE.
- DO NOT DISPOSE OF BATTERIES IN FIRE. BATTERIES MAY EXPLODE OR LEAK.



Tested To Comply With FCC Standards

FOR HOME OR OFFICE USE

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

FCC Rules also prohibit unauthorized changes or modifications to the transmitter by users.

NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.



Toll Free Customer Service: 1-888-999-9168

Visit us online at WWW.MEGATOYS.COM

MEGAMOTORS® IS A TRADEMARK OF MEGATOYS®

MEGATOYS® LOS ANGELES, CA 90012

MADE IN CHINA

KEEP THIS PAPER AS IT CONTAINS IMPORTANT INFORMATION.

208x185mm 1200/1201/1203