

Description of EUT Operation:

Sample Description : R/C Car 49mhz

FCC ID (if applicable) : S5Z120049

Operation Instructions

When push the driving control stick forward for driving forward, and when pull the driving control stick back for driving in reverse.

Steering Operation

To make left or right turns while driving forward, turn the steering control stick to left or right while pushing the driving control stick forward at the same time.

To make left or right turns while driving reverse, turn the steering control stick to left or right while pulling the driving control stick backward at the same time.

Steering Alignment

If the vehicle does not run straight forward, adjust the steering alignment dial for satisfactory alignment on the underside of the vehicle. If the vehicle runs towards the left, turn steering alignment dial towards the right. If the vehicle runs towards the right, turn steering alignment dial towards the lefts

Batteries not included

3AA Batteries for toy vehicle

2AA Batteries for radio transmitter