

Rev. 1

Issued: 19-Feb-2013

RF Test User Manual



Disclaimer and copyright notice

Information in this document, including URL references, is subject to change without notice.

THIS DOCUMENT IS PROVIDED "AS IS" WITH NO WARRANTIES WHATSOEVER, INCLUDING ANY WARRANTY OF MERCHANTABILITY, NONINFRINGEMENT, FITNESS FOR ANY PARTICULAR PURPOSE, OR ANY WARRANTY OTHERWISE ARISING OUT OF ANY PROPOSAL, SPECIFICATION OR SAMPLE.

All liability, including liability for infringement of any proprietary rights, relating to use of information in this document is disclaimed.

No licenses express or implied, by estoppels or otherwise, to any intellectual property rights are granted herein.

WiSmart™ and WiCReal™ are trademarks owned by eConais

Wi-Fi™ is a trademark owned by Wi-Fi Alliance, U.S.A.

All other trade names, trademarks and registered trademarks are property of their respective owners

Copyright ©2012 eConais

Table of Contents

Disclaimer and copyright notice	2
Table of Contents	3
1 Introduction	4
2 Test Setup	4
3 Equipment.....	5
4 User Interface	6
5 Contact Information	8
APPENDIX A - Federal Communication Commission Interference Statement	9
APPENDIX B – Industry Canada Statement	11


1 Introduction

This document describes the RF test. This test is intended to run in a test lab where the appropriate equipment will have been placed in such a way that will be able to measure the rf performance of the module. The user sends the commands to the module using a Microsoft Windows Application. The communication is done over the serial port.

2 Test Setup

The test is performed using eConais' evaluation board. The board is supplied through the usb cable from a power source able to supply at least 300mA.

The evaluation board is communicating with the host (PC) through a serial cable connected to the 9-pin dsub connector that is mounted on the EVB.

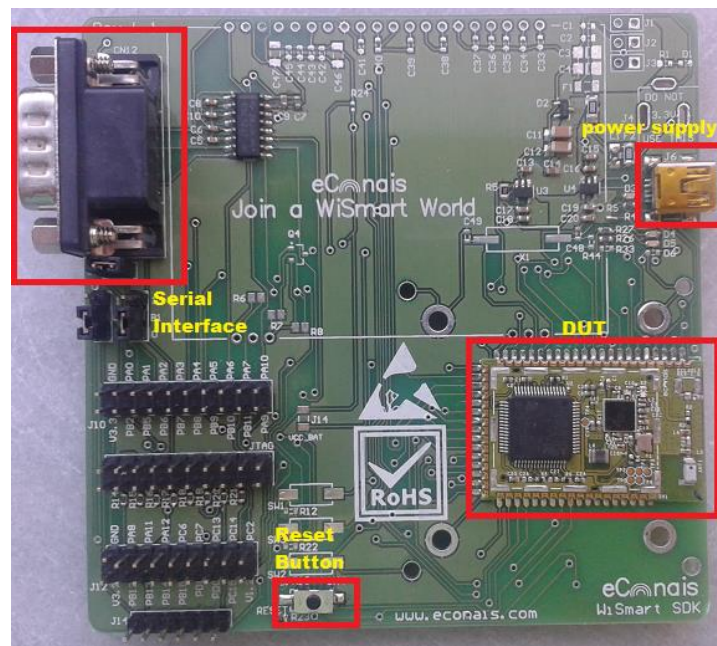

3 Equipment



Laptop:

The laptop will have Windows 7. It will run an application called RF test tool that will handle the communication between the UI and the module.



Usb to Serial cable:


The PC and the test board will be connected through an Usb to Serial cable, unless the PC has a serial port present on board.



Usb Cable:

The evaluation board will be power through this cable that will be connected either on a PC or an external power source.

4 User Interface

 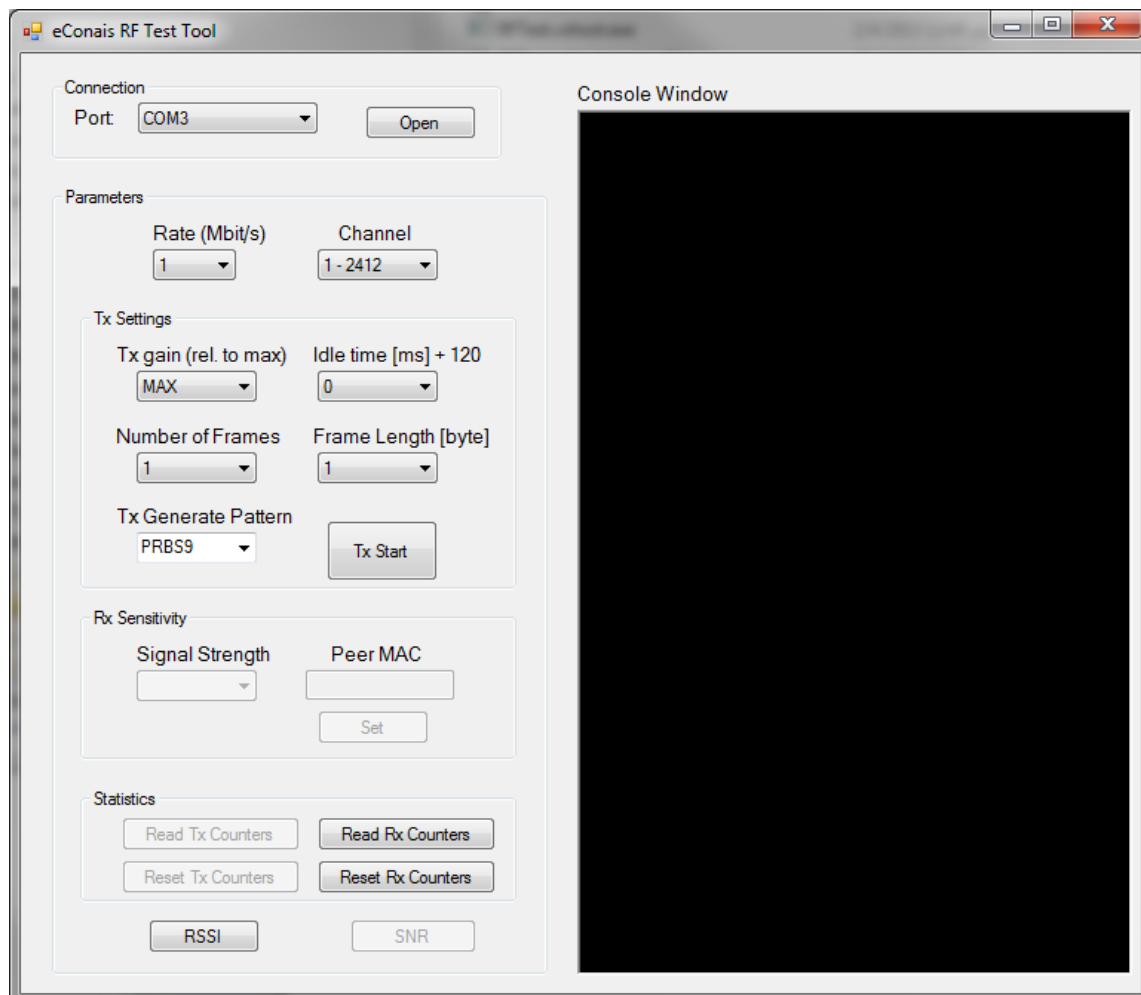


1) Serial Interface Configuration:

 
The user should select the serial port through which the PC is connected to the evaluation board. This can be done by selecting the appropriate port from the combo box and press the “Open” button. The combo box will display all the available com ports.



2) Test Parameters:

**Rate:**

Select any of the available rates (Mbit/s) at which the test will be performed.

**Channel:**

Select any of the available channels (1-14) at which the test will be performed.

The user can also configure the following parameters:

Tx Gain: By selecting the MAX value, the module will transmit at its maximum output power. If the user wants to reduce the output power, he must select one of the other available options.

Idle Time: This is the idle time between consecutive transmissions, in milliseconds. There is an initial inter-transmission delay of 120ms .

Number of Frames: The number of frames that are going to be transmitted. In case "INF" (infinite) is selected, the board will transmit continuously, until the "Tx Stop" button is pressed

Frame Length: Length of each transmitted frame in bytes. In case "CONT" is selected, the module is transmitting continuously. In this case the "Idle time" is not taken into account.

Tx Generate Pattern: Pattern of the packet contents.

After all the configuration parameters have been defined, the user can press the "Tx Start" button. After pressing the "Tx Start" button, its caption is altered to "Tx Stop". The module will start to transmit according to the parameters that have been selected. In order to stop the transmission the user should press the "Tx Stop" button.

5 Contact Information

eConais R & D

Patras Science Park
26504 Patra, Greece
tel: +302610911561
fax: +302610911561
email: sales@econais.com
Internet: www.econais.com

eConais United States Global Sales Office

510 N. First st. #210
San Jose, CA, 95112, USA
tel: +1-408-884-7914
email: us.sales@econais.com
Internet: www.econais.com

Japan Office

Contact: Hitoshi Yagi
203, 1-36-9, Momoi Sugunami-ku
Tokyo 167-0034
tel: 080-5172-7449
email: japan.sales@econais.com
Internet: www.econais.com

APPENDIX A - Federal Communication Commission Interference Statement

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

IMPORTANT NOTE:

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

This device is intended only for OEM integrators under the following conditions:

- 1) The antenna must be installed such that 20 cm is maintained between the antenna and users, and
- 2) The transmitter module may not be co-located with any other transmitter or antenna,
- 3) For all products market in US, OEM has to limit the operation channels in CH1 to CH11 for 2.4G band by supplied firmware programming tool. OEM shall not supply any tool or info to the end-user regarding to Regulatory Domain change.

As long as 3 conditions above are met, further transmitter test will not be required. However, the OEM integrator is still responsible for testing their end-product for any additional compliance requirements required with this module installed

IMPORTANT NOTE: In the event that these conditions can not be met (for example certain laptop configurations or co-location with another transmitter), then the FCC authorization is no longer considered valid and the FCC ID can not be used on the final product. In these circumstances, the OEM integrator will be responsible for re-evaluating the end product (including the transmitter) and obtaining a separate FCC authorization.

End Product Labeling

This transmitter module is authorized only for use in device where the antenna may be installed such that 20 cm may be maintained between the antenna and users. The final end product must be labeled in a visible area with the following: "Contains FCC ID: **S67WSDE-670GN**".

Manual Information To the End User

The OEM integrator has to be aware not to provide information to the end user regarding how to install or remove this RF module in the user's manual of the end product which integrates this module.

The end user manual shall include all required regulatory information/warning as show in this manual.

APPENDIX B - Industry Canada Statement

Industry Canada Statement:

This device complies with RSS-210 of the Industry Canada Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Ce dispositif est conforme à la norme CNR-210 d'Industrie Canada applicable aux appareils radio exempts de licence. Son fonctionnement est sujet aux deux conditions suivantes: (1) le dispositif ne doit pas produire de brouillage préjudiciable, et (2) ce dispositif doit accepter tout brouillage reçu, y compris un brouillage susceptible de provoquer un fonctionnement indésirable.

Radiation Exposure Statement:

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Déclaration d'exposition aux radiations:

Cet équipement est conforme aux limites d'exposition aux rayonnements IC établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 20 cm de distance entre la source de rayonnement et votre corps.

This device is intended only for OEM integrators under the following conditions: (For module device use)

- 1) The antenna must be installed such that 20 cm is maintained between the antenna and users, and
- 2) The transmitter module may not be co-located with any other transmitter or antenna.

As long as 2 conditions above are met, further transmitter test will not be required. However, the OEM integrator is still responsible for testing their end-product for any additional compliance requirements required with this module installed.

**Cet appareil est conçu uniquement pour les intégrateurs OEM dans les conditions suivantes:
(Pour utilisation de dispositif module)**

- 1) L'antenne doit être installée de telle sorte qu'une distance de 20 cm est respectée entre l'antenne et les utilisateurs, et
- 2) Le module émetteur peut ne pas être coïmplanté avec un autre émetteur ou antenne.

Tant que les 2 conditions ci-dessus sont remplies, des essais supplémentaires sur l'émetteur ne seront pas nécessaires. Toutefois, l'intégrateur OEM est toujours responsable des essais sur son produit final pour toutes exigences de conformité supplémentaires requis pour ce module installé.

IMPORTANT NOTE:

In the event that these conditions can not be met (for example certain laptop configurations or co-location with another transmitter), then the Canada authorization is no longer considered valid and the IC ID can not be used on the final product. In these circumstances, the OEM integrator will be responsible for re-evaluating the end product (including the transmitter) and obtaining a separate Canada authorization.

NOTE IMPORTANTE:

Dans le cas où ces conditions ne peuvent être satisfaites (par exemple pour certaines configurations d'ordinateur portable ou de certaines co-localisation avec un autre émetteur), l'autorisation du Canada n'est plus considéré comme valide et l'ID IC ne peut pas être utilisé sur le produit final. Dans ces circonstances, l'intégrateur OEM sera chargé de réévaluer le produit final (y compris l'émetteur) et l'obtention d'une autorisation distincte au Canada.

End Product Labeling

This transmitter module is authorized only for use in device where the antenna may be installed such that 20 cm may be maintained between the antenna and users. The final end product must be labeled in a visible area with the following: "Contains IC: **11069A-WSDE670GN**".

Plaque signalétique du produit final

Ce module émetteur est autorisé uniquement pour une utilisation dans un dispositif où l'antenne peut être installée de telle sorte qu'une distance de 20cm peut être maintenue entre l'antenne et les utilisateurs. Le produit final doit être étiqueté dans un endroit visible avec l'inscription suivante: "Contient des IC: **11069A-WSDE670GN**".

Manual Information To the End User

The OEM integrator has to be aware not to provide information to the end user regarding how to install or remove this RF module in the user's manual of the end product which integrates this module.

The end user manual shall include all required regulatory information/warning as show in this manual.

Manuel d'information à l'utilisateur final

L'intégrateur OEM doit être conscient de ne pas fournir des informations à l'utilisateur final quant à la façon d'installer ou de supprimer ce module RF dans le manuel de l'utilisateur du produit final qui intègre ce module.

Le manuel de l'utilisateur final doit inclure toutes les informations réglementaires requises et avertissements comme indiqué dans ce manuel.