

# Brookstone®

## Outdoor Wireless Speaker WITH TRANSMITTER



Before operating the unit, please read this manual thoroughly and retain it for future reference.

656744/656736\_INS\_Outdoor Wireless Speaker with Transmitter  
Size:5" Wx4.75" H\_Output:100%\_Prints:1/1,Blk

## TABLE OF CONTENTS

**THE TABLE OF CONTENTS WILL BE COMPLETED  
DURING FINAL NAME CHECK .**

### CAUTION

- TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER. THERE ARE NO SERVICEABLE PARTS INSIDE.
- TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.



The lightning flash with arrow-head symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the unit's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the unit.

### IMPORTANT SAFETY INSTRUCTIONS

All of the safety and operating instructions should be read, adhered to and followed before the unit is operated.

### SAVE THESE INSTRUCTIONS

## IMPORTANT SAFETY INSTRUCTIONS

All the safety and operating instructions should be read, adhered to and followed before the unit is operated.

1. Read these Instructions.
2. Keep these Instructions.
3. Heed all Warnings.
4. Follow all Instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry or slightly damp cloth when first disconnected from power.
7. Do not block any ventilation openings. Use in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding – type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wider blade or the third prong is provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.

12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

## OTHER SAFETY INSTRUCTIONS

1. This unit is connected to power with the AC/DC adaptor. To completely disconnect the power input, pull out the AC/DC adaptor from the power.
2. The unit and the AC/DC adaptor should not be obstructed or should be easily accessible during intended use.
3. An appliance with a protective ground terminal should be connected to a mains outlet with a protective ground connection.
4. Avoid using or storing the unit at extreme temperatures. Only use the unit in moderate climates.
5. Avoid placing on top of stereo equipment that radiates heat.
6. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, tablecloths, curtains etc.

## BATTERY PRECAUTIONS

- Dispose of the old batteries properly. Do not dispose of the old batteries in a fire.
- Do not leave the batteries where a child or pet could play with or swallow them. If the batteries are swallowed, contact a physician immediately.
- The batteries may explode if mistreated. Do not attempt to recharge or disassemble the batteries.
- Use only fresh batteries of the required size and type. Do not mix old and new batteries, different types of batteries, or rechargeable batteries of different capacities.

## FCC INFORMATION

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This equipment may not cause harmful interference.
2. This equipment must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate this device. Shielded cables must be used with this unit to ensure compliance with the Class B FCC limits.

## LOCATION OF PARTS AND CONTROLS

### TRANSMITTER DOCK

1. Transmitter Power Indicator
2. Channel Off, 1, 2, 3
3. DC 9V
4. RCA R/L Line In 1
5. Battery Compartment
6. Dock Area
7. Power on LED
8. Low battery LED
9. 3.5mm Line in 2




Transmitter



### SPEAKER


1. Volume
2. Power
3. Speaker Power Indicator
4. Bass
5. Bass Indicator
6. Lights

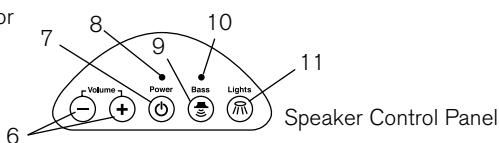

Speaker Control Panel


## LOCATION OF PARTS AND CONTROLS

1. Channel 1, 2, 3
2. MP3 Player Aux In
3. Screws
4. DC 9V
5. Battery Compartment Cover

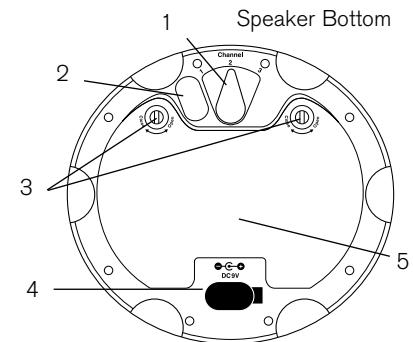

### POWER ADAPTERS/CABLES

1. Transmitter Dock Power Adapter
2. Speaker Power Adapter
3. Dual RCA Cable
4. Y Adapter 3.5mm Cable
5. 3.5mm Right Angle Cable

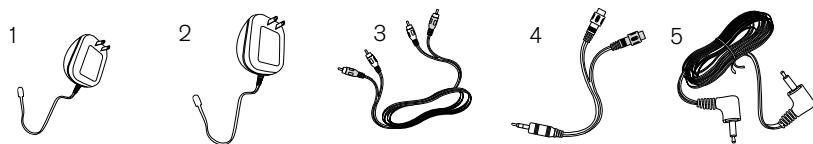

## TRANSMITTER DOCK OPERATION

### INSTALLING THE TRANSMITTER DOCK BATTERIES

You may insert batteries into the transmitter as backup or if you prefer not to use the TRANSMITTER DOCK POWER ADAPTER.

1. Open the BATTERY COMPARTMENT DOOR on the bottom of the transmitter by sliding the down (see compartment at right).
2. Insert 6 AA batteries (not included) according to the polarity indicators inside the compartment.
3. Close the BATTERY COMPARTMENT COVER securely.



Note: The LOW BATTERY LED illuminates when the battery level is low.

### CONNECTING THE TRANSMITTER DOCK TO AN AUDIO SOURCE

The TRANSMITTER DOCK may be connected two ways depending on your audio source.

- If your audio source has left and right RCA output jacks, you will only use the DUAL RCA CABLE.
- If your audio source does not have left and right RCA output jacks, but rather a stereo headphone jack, you will use the 3.5MM RIGHT ANGLE CABLE.

### LEFT AND RIGHT RCA OUTPUT JACKS

1. If you are not using battery power, insert one end of the TRANSMITTER DOCK POWER ADAPTER into DC 9V on the transmitter, and the other end into an electrical outlet.
2. Insert one end of the DUAL RCA CABLE into the appropriately colored R/L LINE IN 1 jacks on the transmitter, and the other end into your audio source's left and right audio output jacks.

Note: Do not connect the DUAL RCA CABLE to speaker terminals on your TV or audio source. This may damage the transmitter, your TV or audio source.

### HEADPHONE JACK

1. If you are not using battery power, insert one end of the TRANSMITTER DOCK POWER ADAPTER into DC 9V on the transmitter and the other end into an electrical outlet.
2. Insert one end of the 3.5MM RIGHT ANGLE CABLE into the 3.5MM LINE IN 2 jack on the TRANSMITTER DOCK and the other end into your audio source headphone jack.

Note: Inserting a plug into the 3.5MM LINE IN jack automatically mutes the R/L LINE input source.

Note: If your audio source requires a 1/4" headphone plug, you will need a 1/4" adapter (not included).

## SPEAKER OPERATION

### INSTALLING THE SPEAKER BATTERIES

1. You may insert batteries into the speaker as backup or if you prefer not to use the SPEAKER POWER ADAPTER.
2. Turn the SCREWS located on the bottom of the speaker counterclockwise and remove the BATTERY COMPARTMENT COVER.
3. Insert 8 D batteries (not included) according to polarity indicators inside the compartment.
4. Replace the BATTERY COMPARTMENT COVER and tighten the SCREWS.

### USING THE SPEAKERS WITH THE TRANSMITTER DOCK

1. If you are not using battery power, insert one end of the SPEAKER POWER ADAPTER into DC 9V on the speaker, and the other end into an electrical outlet.
2. Turn on the power to your audio source.

**Note:** If the TRANSMITTER DOCK is connected to your audio source's variable-level output jacks, you may adjust the volume on your audio source. If the TRANSMITTER DOCK is connected to your audio source's fixed-level output jacks, no volume adjustment is needed.

3. Slide CHANNEL SELECTOR on the transmitter from OFF to channel 1, 2 or 3. The TRANSMITTER DOCK POWER INDICATOR illuminates.
4. Press POWER on the speaker. The SPEAKER POWER INDICATOR illuminates.
5. Turn the CHANNEL to 1, 2 or 3 on the speaker to the same channel selected on the TRANSMITTER DOCK.

6. Press VOLUME – or + to adjust the speaker volume to your desired listening level and press BASS to turn on the bass. The BASS INDICATOR illuminates.

**Note:** If signal interference occurs, adjust the channel on both the speaker and the TRANSMITTER DOCK.

7. When not in use, press POWER on the speaker to turn the power off and remove the batteries to prevent leakage in the compartment. Slide CHANNEL 1, 2, 3 on the TRANSMITTER DOCK to the OFF position.

### USING THE SPEAKERS WITH ANOTHER AUDIO SOURCE

1. If you are not using battery power, insert one end of the SPEAKER POWER ADAPTER into DC 9V on the speaker and the other end into an electrical outlet.
2. Insert one end of the 3.5MM RIGHT ANGLE CABLE into your audio source's 3.5MM jack and the other end into MP3 PLAYER AUX IN.
3. Press POWER on the speaker and the SPEAKER POWER INDICATOR illuminates.
4. Turn on the power to your audio source.
5. Press VOLUME + or – to adjust the speaker volume to your desired listening level and press BASS to turn on the bass. The BASS INDICATOR illuminates.

### USING THE SPEAKER LIGHTS

Use the speaker lights for additional ambience at night.

Press the LIGHTS button once to turn the lights on and again to turn the lights off.

## CARE AND MAINTENANCE

- Wipe the TRANSMITTER DOCK and SPEAKER with a soft, damp cloth.
- Do not use abrasive chemicals.

## SPECIFICATIONS

### TRANSMITTER DOCK

Power Supply AC/DC Adaptor ..... Input: AC 120V, 60Hz  
Output: DC 9V, 200mA

Batteries: ..... 6 x AA batteries

Range: ..... 150 feet

Number of Channels: ..... 3

Dimension: ..... 1.6" x 5.48" x 4.84"

### SPEAKER

Power Supply AC/DC Adaptor: ..... Input: AC 100 – 240V,  
50/60Hz  
Output: DC 9V, 2000mA

Batteries: ..... 8 x D batteries

Number of Channels: ..... 3

Frequency Level: ..... 50Hz – 20kHz

Speaker Unit: ..... 5" Woofer & 1" Tweeter

Dimension: ..... 9.2" x 8.4" x 16.8"

## TROUBLESHOOTING

### PROBLEM

Poor reception.

### SOLUTION

Make sure transmitter and speakers are on the same channel.  
Make sure transmitter is in an upright position.  
Move transmitter to a new location.  
Move transmitter and speakers closer together.

### NO POWER

A soft thumping noise can be heard through the speaker when using an iPhone device or iPad tablet with the transmitter.

## NOTES

Make sure all components are plugged in and connections are secure.

Interference may occur when using an iPhone device or iPad tablet that is not in airplane mode. Reorient your device on the transmitter (place vertically or horizontally), or put your device in airplane mode.

## ONE (1) YEAR LIMITED WARRANTY

Brookstone® warrants this product against defects in materials and/or workmanship under normal use for a period of ONE (1) YEAR from the date of purchase by the original purchaser ("Warranty Period"). If a defect arises and a valid claim is received within the Warranty Period, at its option, Brookstone will either 1) repair the defect at no charge, using new or refurbished replacement parts, or 2) replace the product with a new product that is at least functionally equivalent to the original product, or 3) provide a store credit in the amount of the purchase price of the original product. A replacement product or part, including a user-installable part installed in accordance with instructions provided by Brookstone, assumes the remaining warranty of the original product. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes Brookstone's property. When a store credit is given, the original product must be returned to Brookstone and becomes Brookstone's property.

**Obtaining Service:** To obtain warranty service, call Brookstone Limited Warranty Service at 1-800-292-9819. Please be prepared to describe the product that needs service and the nature of the problem. A purchase receipt is required. All repairs and replacements must be authorized in advance. Service options, parts availability and response times will vary. You are responsible for delivery and the cost of delivery of the product or any parts to the authorized service center for replacement, per our instructions.

**Limits and Exclusions:** Coverage under this Limited Warranty is limited to the United States of America, including the District of Columbia and the U.S. Territories of Guam, Puerto Rico, and the U.S. Virgin Islands. This Limited Warranty applies only to products manufactured for Brookstone that can be identified by the "Brookstone" trademark, trade name, or logo affixed to them or their packaging. The Limited Warranty does not apply to any non-Brookstone products. Manufacturers or suppliers other than Brookstone may provide their own warranties to the purchaser,

but Brookstone, in so far as permitted by law, provides these products "as is." This warranty does not apply to: a) damage caused by failure to follow instructions relating to product's use or the installation of components; b) damage caused by accident, abuse, misuse, fire, floods, earthquake or other external causes; c) damage caused by service performed by anyone who is not a representative of Brookstone; d) accessories used in conjunction with a covered product; e) a product or part that has been modified to alter functionality or capability; f) items intended to be periodically replaced by the purchaser during the normal life of the product including, without limitation, batteries or light bulbs; g) any product sold "as is" including, without limitation, floor demonstration models and refurbished items; or h) a product that is used commercially or for a commercial purpose.

**BROOKSTONE SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. TO THE EXTENT PERMITTED BY APPLICABLE LAW, BROOKSTONE DISCLAIMS ANY AND ALL STATUTORY OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND WARRANTIES AGAINST HIDDEN OR LATENT DEFECTS. IF BROOKSTONE CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES, THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED IN DURATION TO THE DURATION OF THIS EXPRESS WARRANTY.**

Some states disallow the exclusion or limitation of incidental or consequential damages or how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

# Brookstone®

A WORLD OF INNOVATION

Since 1965, people have come to Brookstone to see what's new, discover smart solutions to everyday problems—and have some fun. At Brookstone, we believe there's always a better way to do things. And we created a world of innovation to prove it.

Merrimack, New Hampshire USA 03054 • 800-846-3000 • [www.Brookstone.com](http://www.Brookstone.com)

656736, 656744