


Google TV Dongle

User Manual

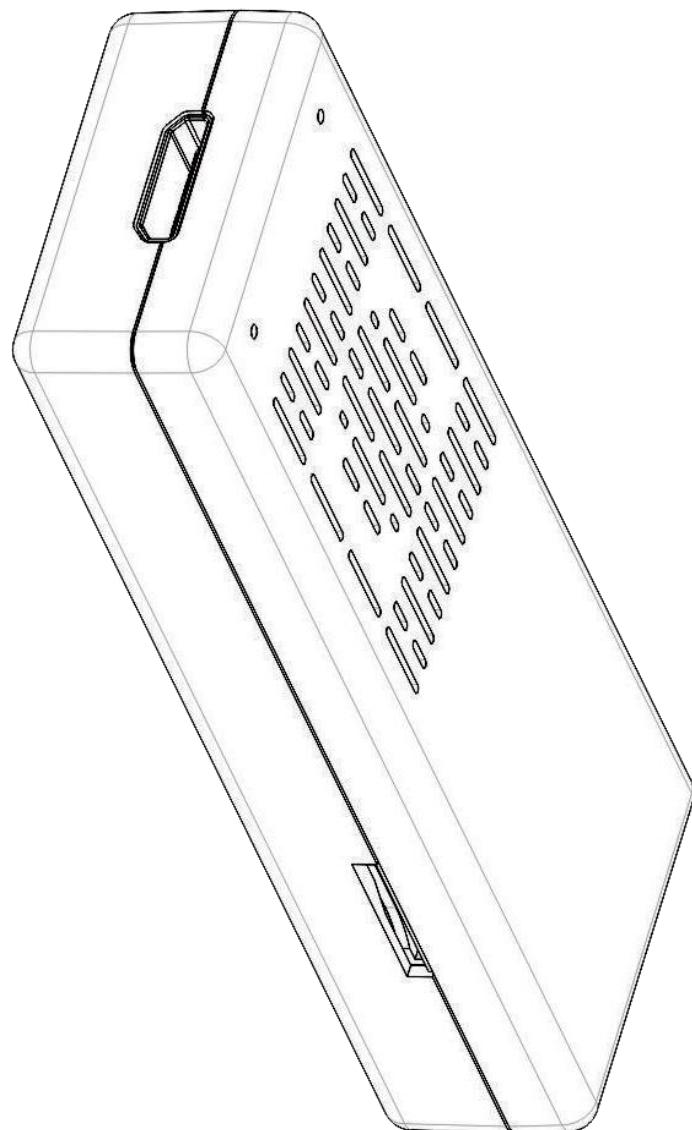

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following

measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

The antennas used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must be co-located for operating in conjunction with any other antenna or transmitter.

SAFETY WARNING

PLACEMENT

- Do not place the unit on an unstable cart, stand, tripod, bracket, table, or shelf.
- Do not expose the unit to direct sun-light and other sources of heat.
- Do not handle liquids near or on the unit.
- Never spill liquid of any kind into the unit.
- Do not put the unit near appliances that create magnetic fields.
- Do not put heavy objects on top of the unit

POWER SUPPLY

- Make sure use a 5V/1A output AC adapter instead.
- Please unplug power supply and aerial plug when the weather is thunder-storm or lightning.
- Please unplug power supply, when there is nobody at home or didn't use over a long period of time
- Please keep power cord from physical or mechanical damage.
- Please use exclusive power cord, don't modify or lengthen it.
- Please check an ensure AC source is connected with the ground.

TEMPERATURE

- Do not place the unit near or over a radiator or a heater register.
- If your unit is suddenly moved from a cold to a warm place, unplug the power cord for at least two hours until moisture removed.

HUMIDITY

- Do not expose machine in rain, damp or place near water.
- Ensure the indoor is dry and cool.

VENTILATION

- Keep the ventilation openings clear.
- Ensure that the unit has enough space for ventilation around.

FEATURES

Google TV Dongle is based on Android OS. You can use it:

- Surf the Internet via Wi-Fi
- Communicate with your friends via SNS applications
- Enjoy movies, music and photos

PRODUCT & ACCESSORIES

Google TV Dongle


HDMI extention Wire

USB Power Supply Wire

Adapter

User Manual

INTERFACE

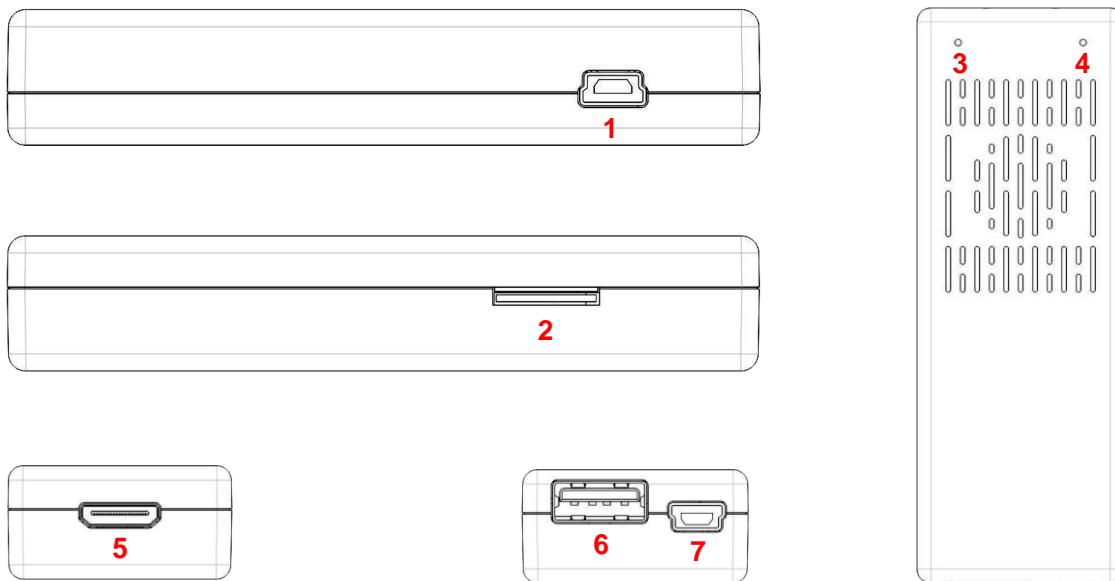


Number	Features
1	Mini USB support OTG/HOST
2	TF card slot
3	Physical button
4	LED
5	Mini HDMI port
6	Standard USB support USB mouse & keyboard
7	Mini USB for charging

QUICK INSTALL GUIDE


- Normal Condition

Insert Google TV Dongle into TV's HDMI input interface.

Connect Dongle mini USB port to adapter via USB power supply wire for power supply.

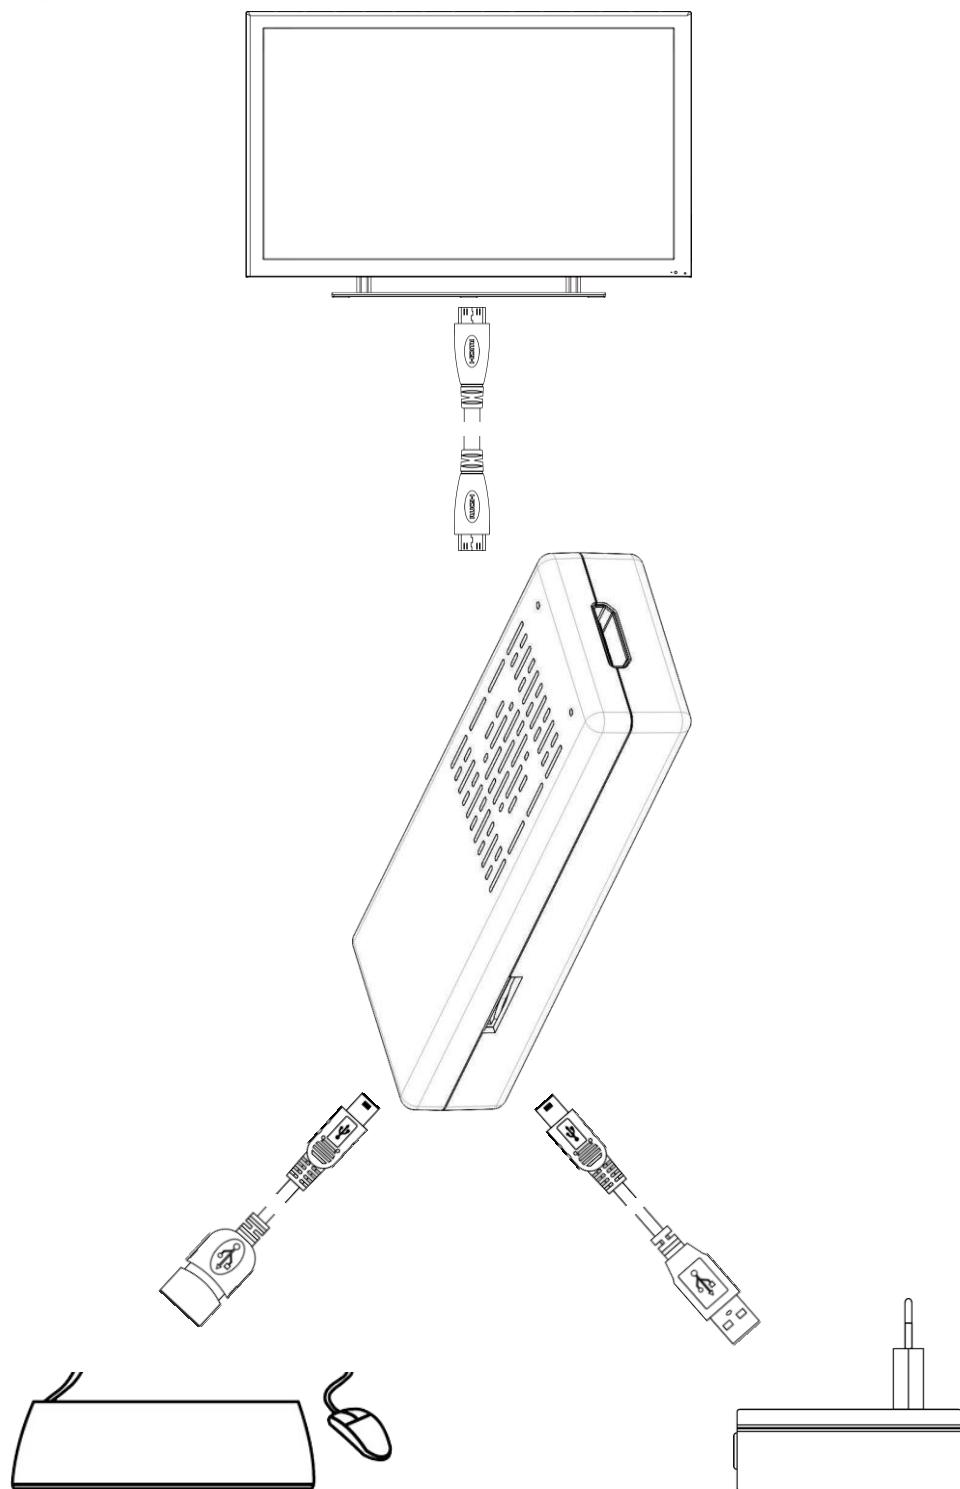

MAIN LAUNCHER

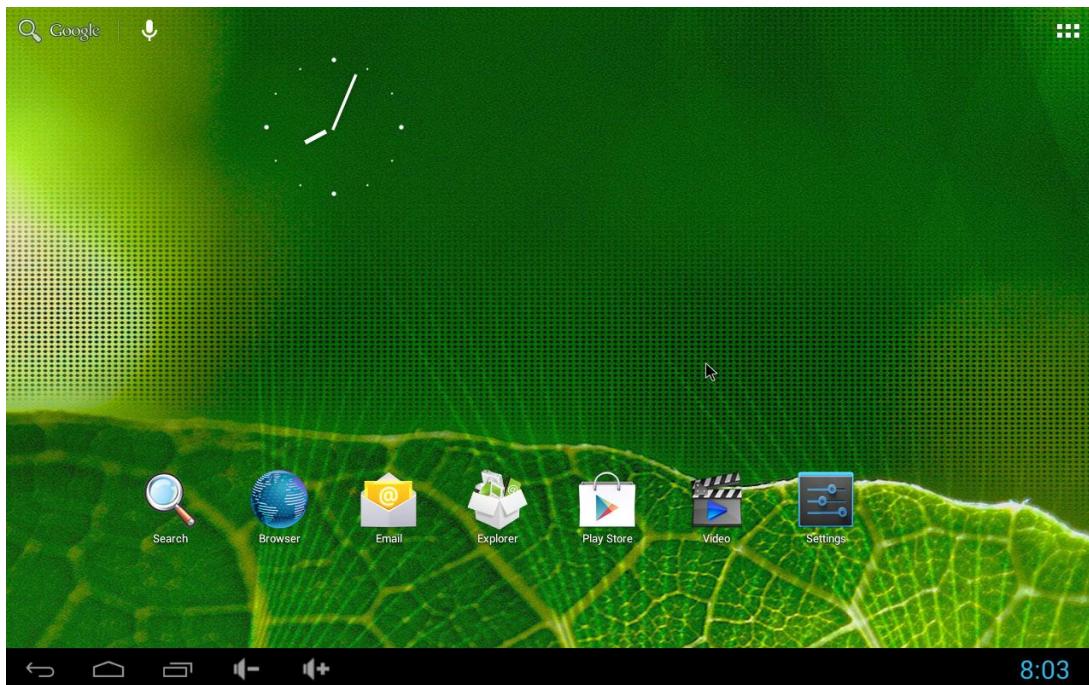

By using the App Manager, you can view and launch application, such as Weather, Calendar, News



Browser contains bookmarks and search bar. It allows you enjoy your time on surfing Internet. You can search for information and watch online TV ect.




Settings contains most of the customizing and configuration options, such as language, aspect ratio and network settings.



The Video tabs contain: Video / Music / Picture

SETTINGS

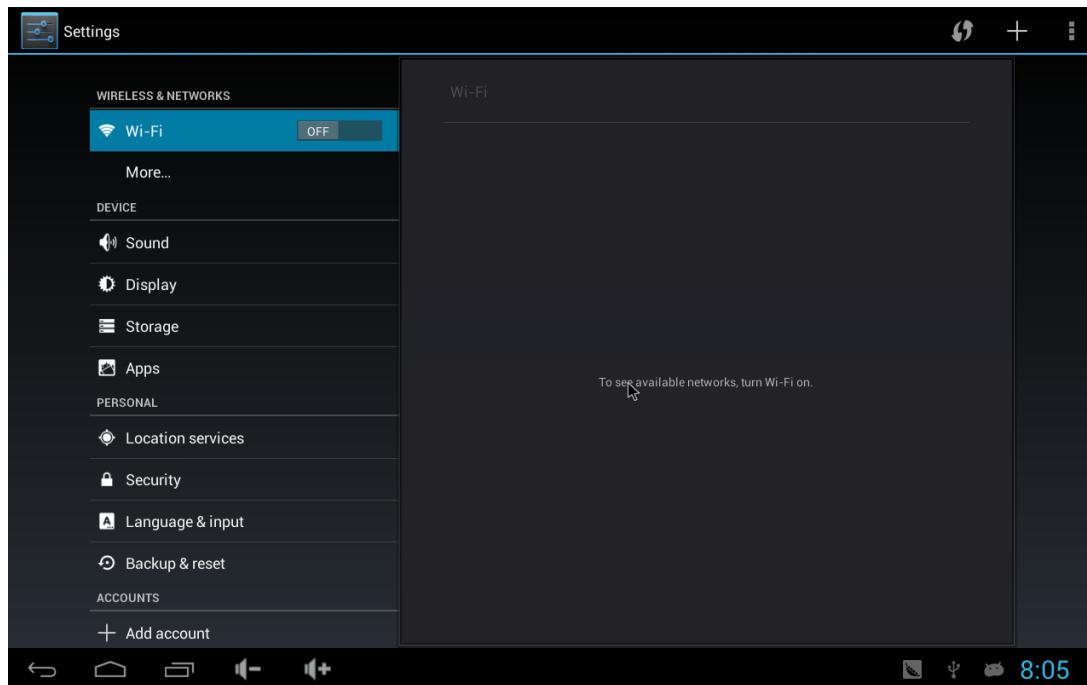

Wi-Fi settings

Check to turn on Wi-Fi so you can connect to Wi-Fi networks

Check to receive an alert when an open Wi-Fi network becomes available

Opens a dialog where you can add a Wi-Fi network by entering its SSID and security type

Display

Wallpaper

Font Size

HDMI Resolution

Screen Zoom

Date & time

Automatic date & time (Need network)

Set date

Set time

Select time zone

Choose hour format

Choose date format

Apps

Downloaded

On SD card

Running

All

Storage

INTERNAL STORAGE

Total space

Apps space

NAND FLASH

SD CARD

USB STORAGE

Language & input

Select language

KEYBOARD & INPUT METHODS

PHYSICAL KEYBOARD

MOUSE/TRACKPAD

About device

Status

Legal information

Model number

Android version

Kernel version

Build number

APPLICATIONS

Install from USB Flash Drive / TF card

1. Open the “File manager”
2. Choose your USB flash drive or any other mass storage’s folder
3. Find you application, and press it
4. Press the install button
5. You can find the application in tab

Download & install from Browser

1. Open the Browser.
2. Press search key and input your website address.
3. Download the APK file which you like if there is a link for download (If you have problems with downloading, please try to put your TF card in the card slot).
4. You will find the file in your SD card folder.

Install from ApkInstaller

1. Open the ApkInstaller.
2. Find the icon of the application, and enter it.
3. Press the install button.
4. You can find the application in tab “Apps” after installation.

Remove Applications

1. Enter SETTINGS
2. Enter Apps
3. Find the application you want to remove in tab “All”
4. Enter the icon and press “Disable”
5. Press “OK” to confirm uninstall