 
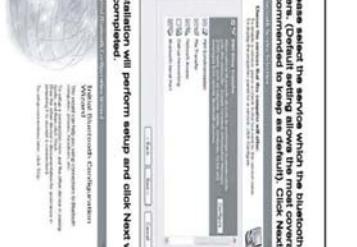
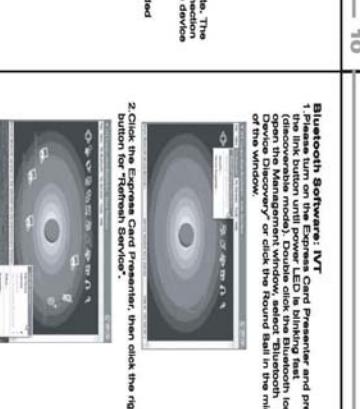
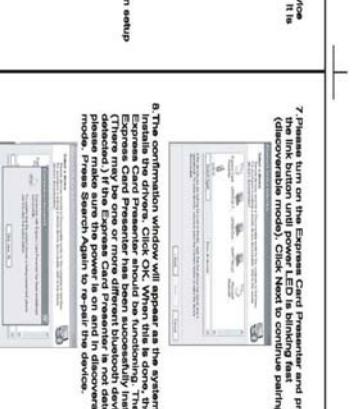
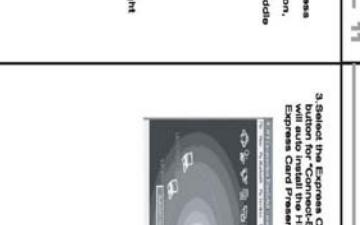
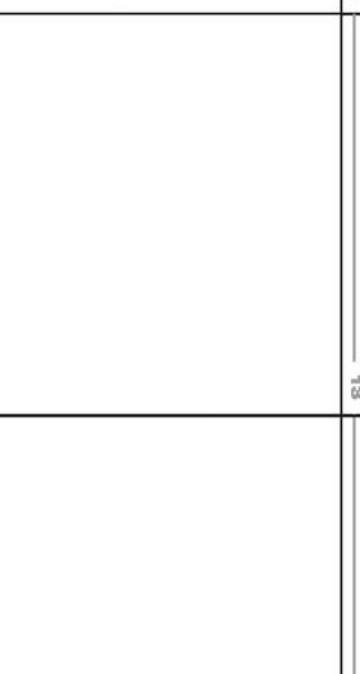


<p>5. Please select the service which the bluetooth device offers. (Default setting allows the most coverage. It is recommended to keep as default). Click Next.</p>  <p>6. Installation will perform setup and click Next when setup is completed.</p> 	<p>7. Please turn on the Express Card Presenter and press the link button until power LED is blinking fast (discoverable mode). Click Next to continue pairing.</p> <p>8. The confirmation window will appear as the system installs the drivers. Click OK. When this is done, the Express Card Presenter should be functioning. The test (Three red dots or moving dots) will automatically detect. If the Express Card Presenter is not detected, please make sure the power is on and in discoverable mode. Please Search again to re-pair the device.</p> 
<p>9. Once the pairing search is complete, the Express Card Presenter icon should appear on the screen as shown. Setup is complete.</p> 	<p>10. The confirmation window will appear as the system installs the drivers. Click OK. When this is done, the Express Card Presenter should be functioning. The test (Three red dots or moving dots) will automatically detect. If the Express Card Presenter is not detected, please make sure the power is on and in discoverable mode. Please Search again to re-pair the device.</p> 
<p>11. Bluetooth Software: 1. Please turn on the Express Card Presenter and press the link button until power LED is blinking fast (discoverable mode). Double click the Bluetooth icon, open the Management window, select 'Bluetooth' and click the 'Search' button in the middle of the window.</p>  <p>12. Bluetooth Software: 1. Double click on the Bluetooth Manager icon in the system tray. 2. When following window appears, click 'New Connection' to begin setup.</p> 	<p>13. Bluetooth Software: 1. The computer will now search for the Express Card Presenter and other bluetooth devices. Please wait until the search is completed. 2. When following window appears, click 'New Connection' to begin setup.</p> 
<p>14. Bluetooth Software: 1. Select the Express Card Presenter again, click the right mouse button and click 'Pair' (the icon with a person). The computer will ask for the HID. Then type your own HID and click 'OK'. 2. The computer will begin connecting with the Express Card Presenter. The connection will be established when the connection bar is green. 3. The connection is established and setup is complete. The Express Card Presenter is ready to use. If the connection is not established, please click 'Re-search' and search the device again in the Bluetooth Manager and setup.</p>  <p>15. The following screen should show the newly added Express Card Presenter connection.</p> 	<p>16. Select Express Card Presenter and click Next to continue. If the Express Card Presenter is not detected, please make sure the Express Card Presenter is in discoverable mode and click Next.</p> <p>17. The computer will begin connecting with the Express Card Presenter. The connection will be established when the connection bar is green.</p> <p>18. The connection is established and setup is complete. The Express Card Presenter is ready to use. If the connection is not established, please click 'Re-search' and search the device again in the Bluetooth Manager and setup.</p>

75mm x 110mm