



Mybible
4888 One Chip EQ2 22 + 56.8 MP3

User's Manual & Product Warranty

Please read the user's manual without fail, and put it at a convenient place after reading.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ◎ Reorient or relocate the receiving antenna.
- ◎ Increase the separation between the equipment and receiver.
- ◎ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ◎ Consult the dealer or an experienced radio/TV technician for help.

Modifications not expressly approved by the manufacturer could void the user's authority to operated the equipment under FCC rules.

GnB
God and Bible

463-808 경기도 성남시 분당구 구미동 24-1 현대벤처빌 707호
Tel. 031-711-2863 FAX. 031-711-2864

* It is possible to change its design or requirements without previous notice in order to improve quality of this product. Please read the user's manual, and then, use this product correctly. If there are any problems or if you cannot understand something in this user's manual, please contact with us.

Made in Korea



GnB
God and Bible

Functions

Bible file replay	10
Music file replay	12
Recording	14
User setting	
Lighting time	16
Contrast	17
Automatic turn-off time	17
Power selection	18
Visual effect setting	18
MP3 Program	19
Bible Program	20
Recording quality setting	21
Setting initialization	21



Functions

Bible file replay

MyBible

Ver 1.00

Please turn on. If you press PLAY/PAUSE button, it turns on and an initial menu display will appear.



Bible/ MP3/ Recording/ Setting
Please place the cursor on the position of Bible.
Press either PREVIOUS (or +) button or
NEXT (or -) button to move onto the position of Bible

창세기

1장 1절

Genesis 1:1
Click PLAY/PAUSE or SELECT/STOP button to
enter the Bible mode

창세기

1장 1절



Genesis 1:1
Click PLAY/PAUSE or SELECT/STOP button to
replay from the point currently selected

창세기

1장 1절

Genesis 1:1
Move between volumes, chapters, and paragraphs
Click +, - button to freely move along chapters,
volumes and paragraphs to select the part you want
to listen to

출애굽기

1장 1절

Exodus 1:1
Move between items
Press PREVIOUS, NEXT button to move along the
items and to select a part you want to listen to. Press
PREVIOUS, NEXT button longer for directly transferring
to New Testament and Old Testament. The position
transferred to is a part where you have listened before.

창세기

1장 1절



Genesis 1:1 Vol 21
Volume adjustment
If you press +, - button while the bible is playing,
the volume is either increased or decreased.

창세기

1장 1절



Genesis 1:1 Vocal
Equalizer selection
If you repeatedly press mode button while the
bible is playing, you can choose the mode of
equalizer. It changes in the following order :
Flat->Jazz->Rock->Classic-> Vocal.

창세기

1장 1절

1:1:1-1:50:26

Genesis 1:1 1:1:1-1:50:26
Repeat mode selection
To select the repeat mode, just press
A-B(recording) button longer
It changes in the following order: Normal->A-B
section selection -> program selection.

창세기

1장 1절

1:1:1-1:50:26

Genesis 1:1 1:1:1-1:50:26
Repeat section selection
You can only use the mode of the repeat section
selection while it is not playing. While the repeat
section selection mode is on, if you press the A-B
button once, it will set the starting point. If you
press the button once more, it will set the end point
of the repeat section and the selected section will
be displayed on the bottom of the LCD window.
If you set a section by pressing the A-B button
while the current cursor is on a volume, it will
automatically select from the beginning to the end
of the volume. Likewise, if you set a section while
the current cursor is on a chapter, it will
automatically select from the beginning to the end
of the chapter. If you want to set the section
regardless of volumes and chapters, place the
cursor on the paragraph before setting the section.

창세기

1장 1절

Genesis 1:1

Program setting

If you press the A-B button while the mode is set as program selection, it will select whatever are on the LCD window and consequently store them in the list, then shows a sign that you have made a selection.

Note

When the lock switch is on, no button will function. While replaying, press PLAY/PAUSE or SELECT/STOP to stop replaying. (There is no pause function)

If you do not make any action while it is on the stop mode, it will automatically turn off according to the previously arranged power setting. If you repeatedly press A-B button in the same location of a volume (or chapter, paragraph) while setting a program, it will record the same volume (or chapter, paragraph) for several times.

To check out the state of recording, see the program setting display.

Music file replay

MyBible

Ver 1.00


My bible

Please turn on. If you press PLAY/PAUSE button, it turns on and an initial menu display will appear.



Bible/ MP3/ Recording/ Setting


Place the cursor on the position of MP3. Press either PREVIOUS (or +) button or NEXT (or -) button to move onto the position of MP3.

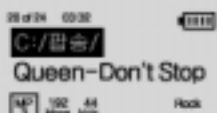

C:/pop song/

Queen-Don't Stop


Click PLAY/PAUSE or SELECT/STOP button to enter the Music mode

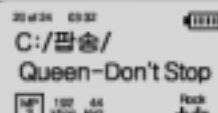

C:/pop song/

Queen-Don't Stop

Click PLAY/PAUSE or SELECT/STOP button to replay from the point currently selected

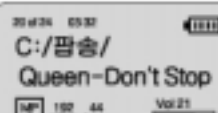


C:/pop song/

Queen-Don't Stop

Volume adjustment

If you press +, - button while the music is playing, the volume is either increased or decreased.

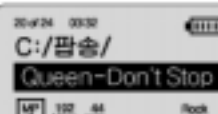


C:/pop song/

Queen-Don't Stop

Music selection

While it is not playing, press +, - button to place the cursor on the title of the music. Then press PREVIOUS button to play to previous music or press NEXT button to select the next music. While on playing, the cursor is disappeared. Press PREVIOUS button to select the previous music or to press NEXT button to play the next music.

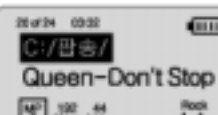

C:/pop song/

Queen-Don't Stop

Move between folders

While it is not playing, press +, - button to place the cursor on the location of selected folder then press either PREVIOUS or NEXT button to move previous or next folders, respectively.




C:/pop song/

Queen-Don't Stop

Fast-forwarding or rewinding

To speed up forwarding or rewinding of a music played, press either PREVIOUS or NEXT button longer than usual.

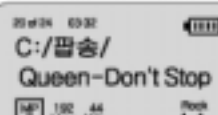


C:/pop song/

Queen-Don't Stop

Equalizer selection

If you repeatedly press mode button for a short time while selected music is playing, you can choose a mode of equalizer. It changes in the following order: Flat->Jazz->Rock->Classic-> Vocal.

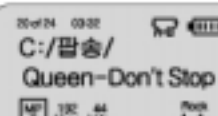

C:/pop song/


Queen-Don't Stop

Repeat mode selection

To select the repeat mode, just press A-B (recording) button longer than usual. It changes in the following order: Normal->A-B section selection -> program selection.



C:/pop song/ Queen-Don't Stop
Repeat section setting
While the mode is set as a repeat section, press the A-B button once to set the starting point and press once more to set the end of the repeat section, which will be displayed on the left side of the music title on the LCD window. If you press the A-B button to set up a section while the current position of cursor is above a title of the folder, it will automatically select from the beginning to the end of the folder. If you want to set up the section regardless of the scope of a folder, place the cursor on the position of a music title before setting the section. You can only set up a repeat section while it is not playing.

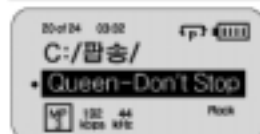


C:/pop song/ Queen-Don't Stop
Program setting
If you press the A-B button while the mode is set as program selection, it will select current music and consequently store it in the list, then shows a sign on the left side of a music title that you have made a selection. Note
When the lock switch is ON, no button will function. If you do not make any action while it is on the stop mode, it will automatically turn off according to the previously arranged power setting. If you repeatedly press A-B button in the same location of a volume (or chapter, paragraph) while setting a program, it will record the same volume (or chapter, paragraph) for several times. To check out the state of recording, see the program setting display.


Recording




Bible/ MP3/ Recording/ Setting
Place the cursor on the position of MP3. Press either PREVIOUS (or +) button or NEXT (or -) button to move onto the position of Recording.

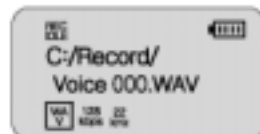


C:/Record/ Voice 0 WAV
Click PLAY/PAUSE or SELECT/STOP button to enter the Recording mode

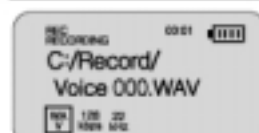


C:/Record/ Voice 0 WAV
To start recording
Press A-B (recording) button. It will display the title of a file to be recorded on the LCD window and begin recording process.

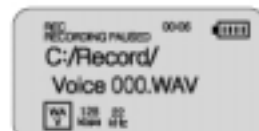

C:/Record/ Voice 0 WAV
To pause recording
To pause recording, press A-B (recording) button. If you want to continue recording, press A-B (recording) button once more.

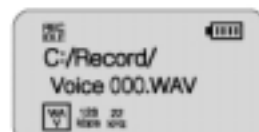


C:/Record/ Voice 0 WAV
Music selection
Press SELECT/STOP button.

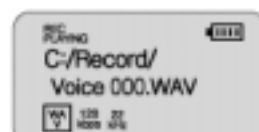

C:/Record/ Voice 0 WAV
To listen to recorded files
If there is a recorded file name on the LCD window, press PLAY/PAUSE or SELECT/STOP button to listen to the recorded contents. If there is file appeared other than the recorded file, press PREVIOUS or NEXT button to change the file. When the targeted file is appeared on the window, press PLAY/PAUSE or SELECT/STOP button to listen to the recorded files.



C:/Record/ Voice 0 WAV
To remove recorded files
To remove recorded file, press PREVIOUS or NEXT button until targeted record files appear on the LCD window. When a targeted file is found, press SELECT/STOP button longer than usual to remove the file. After deleting the file the display shows the name of other files recorded or returns to the preceding menu.

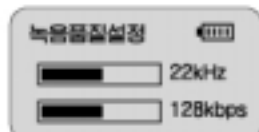

Record quality setting
Reference
If you want to adjust the quality of file to be recorded, go to setting. If the memory becomes full while recording, it will automatically stop recording process, followed by a message: no memory. If you want to continue recording, please delete unnecessary record files.

User setting




Bible/ MP3/ Recording/ Setting

Place the cursor on the position of Setting. Press either PREVIOUS (or +) button or NEXT (or -) button to move onto the position of Setting. Click PLAY/PAUSE or SELECT/STOP button to enter the setting mode.

Reference

The setting is divided into three different types such as display setting, program setting, and time setting. The display setting includes contrast and lighting time. The program setting includes MP3 program and the Bible program. And the time setting includes automatic turn-off setting. In addition, you can set up power and recording quality.

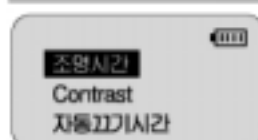


Lighting time

Contrast

Automatic turn-off time

Lighting time

Set up time to keep the back light on when a user makes no further action. The initial setting is 10 seconds.

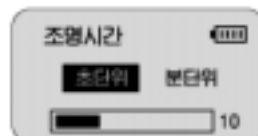


Lighting time

Seconds

minutes

Function selection

Enter the setting and set the lighting time. Then press PLAY/PAUSE or SELECT/STOP button to enter the lighting time setting.

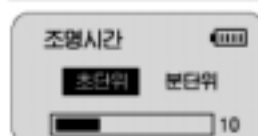


Lighting time

Seconds

minutes

Item selection

Press +/- button to select the time unit between seconds and minutes. Press PREVIOUS/NEXT button to either decrease or increase lighting time.

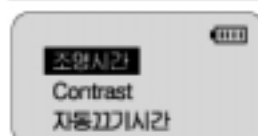


Lighting time

Contrast

Automatic turn-off time

Exit to menu

Press Mode button longer to go to the top menu, or press it shorter to move on to the setting function display.

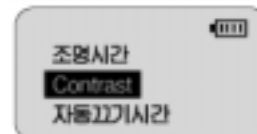


Lighting time

Contrast

Automatic turn-off time

Contrast

Able to adjust the brightness of the display. Press either PREVIOUS (or +) or NEXT (or -) button to adjust the degree.

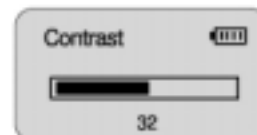

Contrast

Function selection


Enter the setting and select Contrast. Then press PLAY/PAUSE button or SELECT/STOP button to enter the Contrast setting.



Contrast

Item selection

Press +/- button to adjust the brightness.

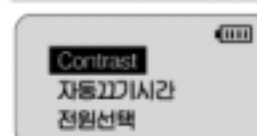


Contrast

Automatic turn-off time power selection

Exit to menu

Press Mode button longer to go to the top menu, or press it shorter to move on to the setting function display.

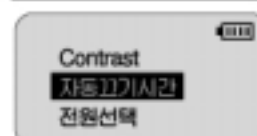


Contrast

Automatic turn-off time power selection

Automatic Turn-off time

Set up automatic turn-off time while a user makes no further action. The initial setting is 3 minutes.

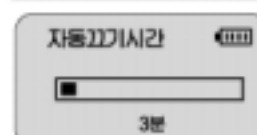

Automatic turn-off time

Function selection

Enter the setting to select automatic set-off time. Then press PLAY/PAUSE or SELECT/STOP button to enter the automatic turn-off time setting.

자동끄기시간



Automatic turn-off time 3 minutes



3분

Item selection
Press +/- button to either decrease or increase time.

자동끄기시간

전원선택
시각화설정Automatic turn-off time power selection
Visual effect setting
Exit to menu
Press Mode button longer to go to the top menu, or press it shorter to move on to the setting function display.

자동끄기시간

전원선택
시각화설정Automatic turn-off time power selection
Visual effect setting
Power selection
Able to select the type of power used.
As there are different characteristics for each power used, you can select the type of power to be used.
As the measured power varies according to its characteristics, it will affect an appearance of icon indicating remaining power.

전원선택



충전지

Alkaline

Power selection Rechargeable battery
Function selection
Enter the setting to select power selection.
Then press PLAY/PAUSE or SELECT/STOP button to enter the power selection.

전원선택



충전지

Alkaline

Power selection Rechargeable battery
Item selection
Press PREVIOUS (or +) or NEXT (or -) button to select the battery type between Alkaline battery or N-Cd Battery.

자동끄기시간

전원선택
시각화설정Automatic turn-off time power selection visual effect
Exit to menu
Press Mode button longer to go to the top menu, or press it shorter to move on to the setting function display.

시각화설정

MP3 Program
성경 ProgramVisual effect setting MP3 Program Bible Program
Visual Effect Setting

시각화설정



ON

OFF

Visual effect setting
Function selection
Enter the setting to select Visual Effect Setting.
Then press PLAY/PAUSE or SELECT/STOP button to enter.

시각화설정



ON

OFF

Visual effect setting
Item selection
Press PREVIOUS (or +) or NEXT (or -) button to move between ON and OFF items. If it is on, it will show Spectrum Analyzer while playing MP3 music.

시각화설정

MP3 Program
성경 ProgramVisual effect setting MP3 Program
Bible Program
Exit to menu
Press Mode button longer to go to the top menu, or press it shorter to move on to the setting function display.

시각화설정

MP3 Program
성경 ProgramVisual effect setting MP3 Program Bible Program
MP3 Program
Among different repeat modes, you can control the selected items in Program mode.

전체삭제

001 Queen-Don't Stop
002 변진섭-출로된다는것은Delete all
001 Queen-Don't Stop
002 Byeon, Jin-sub — What is being alone

전체삭제

001 Queen-Don't Stop
002 변진섭-출로된다는것은Function selection
Enter the setting to select MP3 Program. Then press PLAY/PAUSE or SELECT/STOP button to enter the MP3 Program function

전체삭제

001 Queen-Don't Stop
002 변진섭-출로된다는것은Delete all
001 Queen-Don't Stop
002 Byeon, Jin-sub — What is being alone
Display arrangement
Show no file sign when there is no content selected. If there is a selected item delete all sign will appear on the upper part of the display and a list of selected files below.

전체삭제



001 Queen-Don't Stop
002 변진섭-올로윈드는것은

001 Queen-Don't Stop
002 Byeon, Jin-sub — What is being alone
Item selection
Press either PREVIOUS or NEXT button to move the cursor along select all and the first file of the file list.

시각화설정



MP3 Program
성경 Program

Visual effect setting MP3 Program Bible Program
Exit to menu
Press Mode button longer to go to the top menu, or press it shorter to move on to the setting function display.

MP3 Program
성경 Program
녹음품질설정



MP3 Program Bible Program Recording quality setting
Bible Program

전체삭제



001 창 1장 4절
002 출 3장 1절
003 출 6장 1절

Delete all
001 Genesis 1:4 002 Exodus 3:1 003 Exodus 6:1
Function Selection
Enter the setting to select Bible Program. Then press PLAY/PAUSE or SELECT/STOP button to enter the Bible Program function

전체삭제



001 창 1장 4절
002 출 3장 1절
003 출 6장 1절

Delete all
001 Genesis 1:4 002 Exodus 3:1 003 Exodus 6:1
Display arrangement
Show no file sign when there is no content selected. If there is a selected item delete all sign will appear on the upper part of the display and a list of selected files below.

전체삭제



001 창 1장 4절
002 출 3장 1절
003 출 6장 1절

Delete all
001 Genesis 1:4 002 Exodus 3:1 003 Exodus 6:1
Deletion
While the cursor is on the delete all, press PLAY/PAUSE or SELECT/STOP to remove all the registered contents. If the cursor is on one item of the file list, press PLAY/PAUSE or SELECT/STOP to remove the item from the registered list.

성경 Program
녹음품질설정
설정초기화



Bible Program Recording quality setting
Setting initialization
Exit to menu
Press Mode button longer to go to the top menu, or press it shorter to move on to the setting function display.

성경 Program



녹음품질설정
설정초기화

Bible Program Recording quality setting
Setting initialization
Recording quality setting

녹음품질설정



22kHz
128kbps

Recording quality setting 22kHz 128kbps
Function Selection
Enter the setting to select Recording quality setting. Then press PLAY/PAUSE or SELECT/STOP button to enter

녹음품질설정



22kHz
128kbps

Recording quality setting 22kHz 128kbps
Item selection
Press either + or - button to move around the items. Press PREVIOUS or NEXT button to select desired SAMPLING RATE and Bit RATE. You can choose SAMPLING RATE from 8 to 44 KHz Bit RATE from 32Kbps to 320 kbps.

성경 Program



녹음품질설정
설정초기화

Recording quality setting 22kHz 128kbps
Exit to menu
Press Mode button longer to go to the top menu, or press it shorter to move on to the setting function display.

성경 Program



녹음품질설정
설정초기화

Bible Program Recording quality setting
Setting initialization
Setting initialization

설정초기화



YES NO

Setting initialization
Function Selection
Enter the setting to select Setting initialization. Then press PLAY/PAUSE or SELECT/STOP button to enter.

설정초기화



YES NO

Setting initialization
Item selection
Press PREVIOUS (or +) or NEXT (or -) button to move between YES and NO items. If you select YES, it will initialize all the settings on the menu just like the state that it was first released from the factory.

성경 Program
녹음품질설정
설정초기화

Bible Program Recording quality setting
Setting initialization
Exit to menu
Press Mode button longer to go to the top menu, or press
it shorter to move on to the setting function display.

USB Connection



USB connection
First connection to a computer
Connect a cable between a PC's USB port and
the player's USB terminal.
After a short while, a sign that confirms the USB
connection appears on the LCD window.
If USB connection state is normal, it will
automatically start with the function of new
hardware search and proceed to set up
appropriate operation software.
If operation software is set up without problem, it
will be recognized as USB large capacity storage
device/ removable disk. There is no need for
Windows 2000/XP operation system to run a
separate device driver installation process.

Separation from a computer
Click USB icon on the taskbar of the desktop
with the left button of the mouse. Then a
message of 'USB large capacity storage device
— drive stop' appears.
Click stop message
Press confirm to stop the device. If there is no
problem occurred the removable disk disappear
from the window searcher.
Remove the USB cable from the player.

Others

Q&A

Q&A

- Checkout for breakdown
Is there any problem with the player?
Q. Power is not on
A. Please check out battery position
(+ and — direction)
Check out if player's HOLD switch is on the
HOLD position
Check out the battery longevity
Q. Display is on but no sound at all
A. Please check if the volume has not been set 0

Accessories

Player, earphone, battery, manual, USB cable, LCD cleaner, case

Product Specification

Size	33 X 78.5 X 19.7 mm	
Weight		
Memory	Bible Contents source (Korean version edited) MP3	Equivalent to 40 Audio CDs (Old/New Testaments) 128MB (256MB, 512MB optional)
Decoding	MP3 (MEPG1, MPEG2, MPEG2.5)	
Encoding	WAV (ADPCM)	
Display	LCD Back Light	64X128 Dot (Korean 4 lines) Blue LED
Audio	Maximum Output 18mW+18mW Rated output Impedance	16Ω + 16Ω or 32Ω + 32Ω
Battery	Type Maximum consecutive playing time	AAA X 1 MP3, around 12 hours 심장난수 : 약 10시간
PC interface	USB	Removable disk function

Note) Condition for the consecutive playing time

- based on Alkaline battery(AAA) 1250mA
- 32Ω + 32Ω earphones
- volume level 16
- 128 kbps 44kHz MP3 file replay
- Flat

If the above conditions are met, the specified consecutive playing time can be
attained.