 


Sena WiFi Adapter for 50 Series Quick Start Guide

ENGLISH

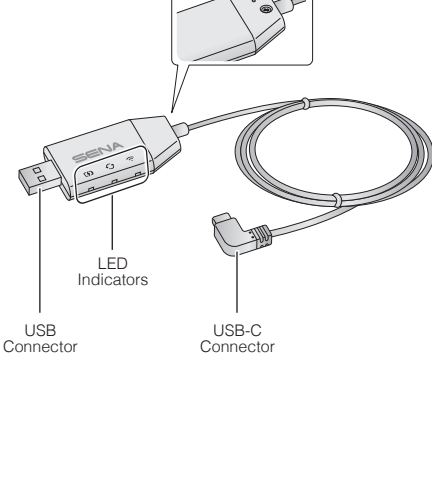

1

2.0.0

Sena 50 Utility App

- Download the **Sena 50 Utility App** to set up the **WiFi Adapter** to automatically upgrade your main unit.
Android: Google Play Store > ‘**Sena 50 Utility**’
iOS: App Store > ‘**Sena 50 Utility**’
- Save time updating the firmware on the main unit with the **Sena 50 Utility App** and enjoy your adventure even more!

Connection Setup

1. Open the **Sena 50 Utility App**.
2. Click the top left Menu button  and select the “**WiFi Adapter**” menu.
3. Follow the instructions on the **Sena 50 Utility App** to connect the **WiFi Adapter** to a WiFi access point.

Note:

To change the WiFi access point, perform the **Factory Reset** then repeat the steps above.

2

 
Upgrading the Firmware of the Main Unit

The firmware will be upgraded automatically while your main unit is charging. If you want to manually upgrade the firmware, change the setting on the **Sena 50 Utility App**.

Note:

Do not disconnect the **WiFi Adapter** while upgrading the firmware. The product may be damaged.

LED Description

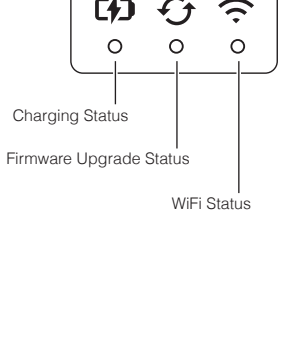

3

Charging Status

-  Disconnected
-  Charging (The main unit is powered off.)
-  Fully charged

Note:

-  Charging (The main unit is powered on.)

To upgrade the firmware, power off the main unit.

Firmware Upgrade Status

-  Disconnected or no firmware upgrade available
-  Upgrading firmware
-  Firmware upgrade completed

WiFi Status

-  Disconnected from an WiFi access point
-  Searching for WiFi access point
-  Connected to an access point

4

Powering On

Insert the USB Connector into a USB charger port that is connected to a power source.

 


Note:

1. Any 3rd party USB charger (5 V/1 A) can be used with **WiFi Adapter** if the charger is approved by either the FCC, CE, IC or other locally approved.
2. Do not connect the **WiFi Adapter** to a USB port on your PC.

Connecting to the Main Unit

Insert the USB-C Connector into the main unit’s USB-C port.

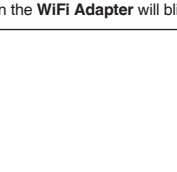

Note:

 
If you leave the main unit on when connecting it, the charging LED on the **WiFi Adapter** will blink red slowly.

5

Factory Reset

If you want to restore the **WiFi Adapter** to the factory default settings, you can easily reset the unit:

1. Gently insert a paperclip into the pinhole on the back of the unit and lightly press the **Factory Reset Button**.
2. The **WiFi Adapter** will automatically restart with the three LEDs on.

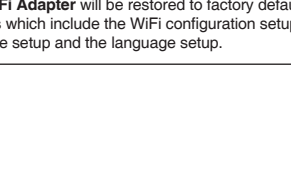

Note:

The **WiFi Adapter** will be restored to factory default settings which include the WiFi configuration setup, the firmware setup and the language setup.

FCC WARNING

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.

FCC ID: S7A-SP163

IC WARNING

English:

This device contains licence-exempt transmitter(s)/ receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s).

Operation is subject to the following two conditions:

- 1.This device may not cause interference.
- 2.This device must accept any interference, including interference that may cause undesired operation of the device This equipment should be installed and operated with minimum distance between 20cm the radiator your body

French:

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- 1.L'appareil ne doit pas produire de brouillage;
- 2.L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Cet équipement doit être installé et utilisé avec une distance minimale de 20 cm entre le radiateur et votre corps

The device has been evaluated to meet general RF exposure requirement.

L'appareil a été évalué pour répondre aux exigences générales en matière d'exposition aux RF.

IC ID:8154A-SP163