



## SC2 Standard Remote Control Manual


### SC2 Standard

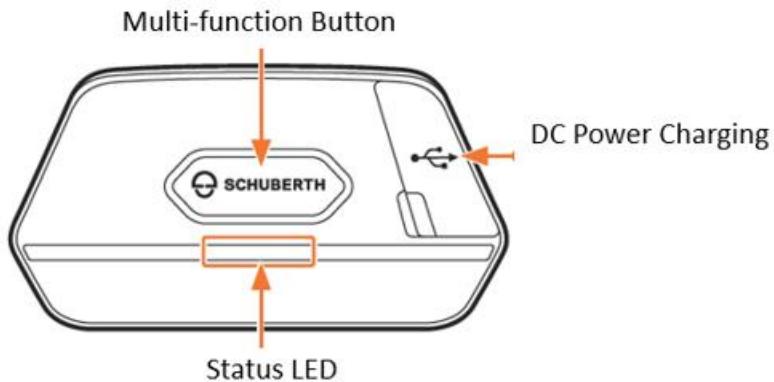

### SC2 Standard Remote Control

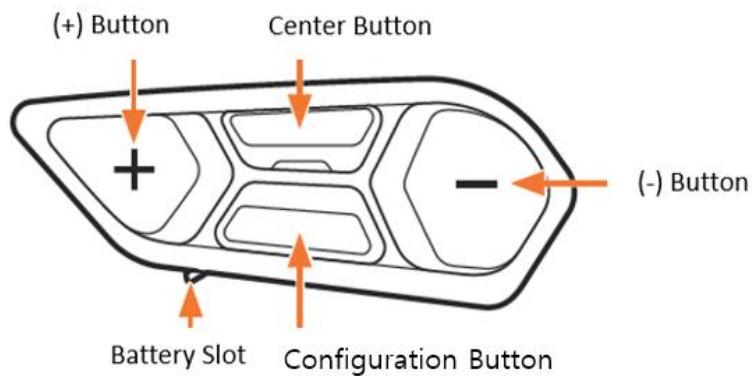

SC2 Standard will be equipped like below.

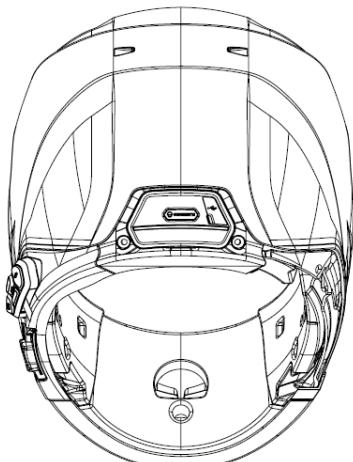

## **Charging**

### **SC2 Standard**

Red LED: Charging

Blue LED: Fully charged

## **Power On/Off**

### **SC2 Standard**

Press and hold the Multi-function Button for 1 second

### **SC2 Standard Remote Control**

Tap the Center Button

## **Volume Adjustment**

(+) Button - Increase the volume

(-) Button - Decrease the volume

## **Phone Pairing**

1. Press the Configuration Button for 5 seconds.
2. Press the (+) Button to enter into Phone Pairing
3. Search for Bluetooth devices on your mobile phone. Select the **SC2** in the list of the devices detected on the mobile phone.
4. Enter 0000 for the PIN. Some mobile phones may not ask for the PIN.

## **Music Operation**

Play or pause music: Press the Center Button for 1 second.

Track back: Press the (-) Button for 1 second.

Track forward: Press the (+) Button for 1 second.

## **Mobile Phone Call Making and Answering**

Answering a call: Tap the Center Button

Ending a call: Press the Center Button for 2 seconds.

Voice dial: Press the Center Button for 3 seconds.

Speed dial: Press the (+) Button for 3 seconds.

Rejecting a call: Press the (+) Button for 2 seconds.

## **Intercom**

Intercom Pairing

1. Press and hold the Center Button of two headsets for 5 seconds until red LEDs of both units start to flash rapidly.
2. The SC2 Standard will automatically pair with a Sena headset

Intercom Start/End : Tap the Center Button

## **Radio On/Off**

Turn on the FM radio: Press the (-) Button for 1 second.

Turn off the FM radio: Press the (-) Button for 1 second.

## **Radio Scan Up FM Band**

Start scanning: Press (+) Button for 1 second.

Stop scanning: Press (+) Button for 1 second.

## **Radio Seek Stations**

Seek up stations: Double tap the (+) Button.

Seek down stations: Double tap the (-) Button.

## **Setting**

**Configuration Menu:** Press the Configuration Button for 5 seconds.

## **Troubleshooting**

### **SC2 Standard Factory Reset**

If you want to restore the SC2 to factory default settings, press and hold the Multi-function Button for 12 seconds. The SC2 automatically restores the default settings and turns off.

### **SC2 Standard Remote Control Factory Reset**

If you want to restore the SC2 Standard Remote Control to factory default settings, press and hold the (+) Button and (-) Button and Center Button for 1 second. The SC2 Standard Remote Control automatically restores the default settings and turns off.

### Certification and Safety Approvals FCC Compliance Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment on and off, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antennae
- Increase the separation between the equipment and the receiver

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. - Consult the dealer or an experienced radio/TV technician for help.

#### FCC RF Exposure Statement

This equipment complies with FCC/IC radiation exposure limits set forth for an uncontrolled environment.

End users must follow the specific operating instructions for satisfying RF exposure compliance.

When equipped, the distance between antenna and one's head surface is 40.9mm.

#### FCC Caution

Any changes or modifications to the equipment not expressly approved by the party responsible for compliance could void user's authority to operate the equipment.

#### Industry Canada(IC) Statement

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

#### IC RF Exposure Statement

Cet équipement est conforme aux limites d'exposition aux radiations de la FCC/IC définies pour un environnement non contrôlé. Les utilisateurs finaux doivent suivre les instructions d'utilisation spécifiques pour satisfaire à la conformité d'exposition RF.

Lorsque équipé, la distance entre l'antenne et la surface de la tête est de 40.9mm.