

User Manual

Model: SS-RT

Brand: Silent Safaris

FCC ID: S7FSS-RT

OPERATING GUIDE

Connect your media devices to the transmitter by using the cable with 3.5mm audio plug. And sounds will send to the transmitter through the audio cable. Then press the key of transmitter at a short time for switching channel, keep your wireless headset and FM transmitter at the same frequency. The wireless headset will receive the music. You can enjoy your digital music with all sound and convenience.

Specification:

Operation Voltage: 3.7V

Operation Current: 42mA

Transmitting Power: 8dBm

Operation Frequency: 915, 917MHZ

Modulation: FM

Charge Voltage: 5.0V

Charge Voltage: 200mA

Charge Time: 1-2 hours/(200mA)

I. Press Key:

- ①Power on by press the Power SW for a second, Power off by press key for a second
- ②After startup, press the key at a short time for switching channel , and the device acquiesce in 1 channel (915MHz) with green indicator.
- ③Press the key at a short time for changing to 2 channel (917MHz) with red indicator
- ④If there is no input signal, after 5 seconds the device will auto power off , you should power on the device own.
- ⑤Only the input signal larger than 60mVp-p, the transmitter can identify the signal. Otherwise the recognition is no signal.

II. Charge

The USB plug is used for charging

- ①When no starting charging, red light flashing.
- ②After startup charging, the light is blinking; When the battery is full ,it will return to its original state of work instructions

IMPORTANT REGULATORY INFORMATION

This device complies with Part 15 of the FCC Rules: Operation is subject to the following two conditions:

1. This device may not cause harmful interference and
2. This device must accept any interference that is received, including any interference that may cause undesired operation.

WARNING:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.