

# Wireless Door Chime

DB-1132

## Manual of Wireless Doorbell

### Replacing battery:

- Please follow the diagram (1) on the right to insert batteries.

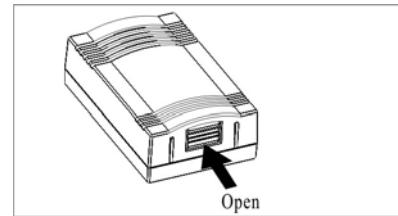


DIAGRAM 1

### Tone Setting

- The switch (MUSIC SEL) can be used to set up to 4 musical modes such as Ding-Dong ;Ding-Ding; Song of Alice and Song of Westminster. If you like to switch the modes, you only need to hold the button (MUSIC SEL) for 2 seconds after the previous one finished. To adjust the volume, please tune the button(VOL) by a flat blade screwdriver.<Ref to the diagram (2) for reference>

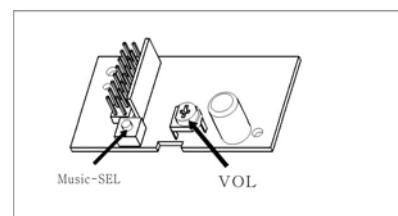


DIAGRAM 2

### Code Setting

- The code is set by the manufacturer, and there are combinations of codes up to 256. In order to avoid the interference, you can set the code by adding or removing jumpers of the doorbell. Please make sure that the code setting of the transmitter must match with that of the receiver.Eg. If the code of the receiver is 6,7,8 ;the code of the transmitter must also be 6,7,8. If the interference continues, please re-set the code and do the same procedure for both transmitter and receiver.<ref to diagram(3)>.


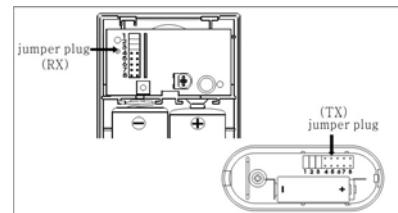


DIAGRAM 3

### Mounting on the wall

- Please remove the back of the case by pushing in the tab on the bottom by screwdrivers. Mount the back of the case on the wall and snap the front case back on. In case of using double side tapes, please ensure the wall is dry and clean.<ref to diagram(4)>

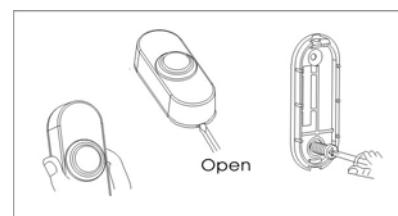

Warning: Changes or modifications not expressly approved by the party responsible for compliance would void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and , if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encourage to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.**
- Increase the separation between the equipment and receiver.**
- Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.**
- Consult the dealer or an experienced radio/TV technician for help.**