

# LMX9820A

## Bluetooth® Serial Port Module

### 1.0 General Description

The National Semiconductor LMX9820A Bluetooth Serial Port module is a highly integrated radio, baseband controller, and memory device implemented on an FR4 substrate. All hardware and firmware is included to provide a complete solution from antenna from the complete lower and upper layers of the Bluetooth stack, up to the application support layers including the Generic Access Profile (GAP), the Service Discovery Application Profile (SDAP), and the Serial Port Profile (SPP). The module includes a configurable service database to fulfill service requests for additional profiles on the host. The LMX9820A features a small form factor (10.1 x 14.1 x 2.0 mm) design, which solves many of the challenges associated with compact system integration. Moreover, the LMX9820A is pre-qualified as a Bluetooth Integrated Component. Conformance testing through the Bluetooth qualification program enables a fast time to market after system integration by ensuring a high degree of compliance and interoperability.


Based on National's CompactRISC™ 16-bit processor architecture and Digital Smart Radio technology, the LMX9820A is optimized to handle the data and link management processing requirements of a Bluetooth node.

The firmware supplied with this device offers a complete Bluetooth (v1.1) stack including profiles and command interface. This firmware features point-to-point and point-to-multipoint link management supporting data rates up to the theoretical maximum over RFComm of 704 kbps. The internal memory supports up to three active Bluetooth data links and one active SCO link.

### 1.1 APPLICATIONS

- Personal Digital Assistants
- POS Terminals
- Data Logging Systems
- Audio Gateway applications

### 2.0 Functional Block Diagram

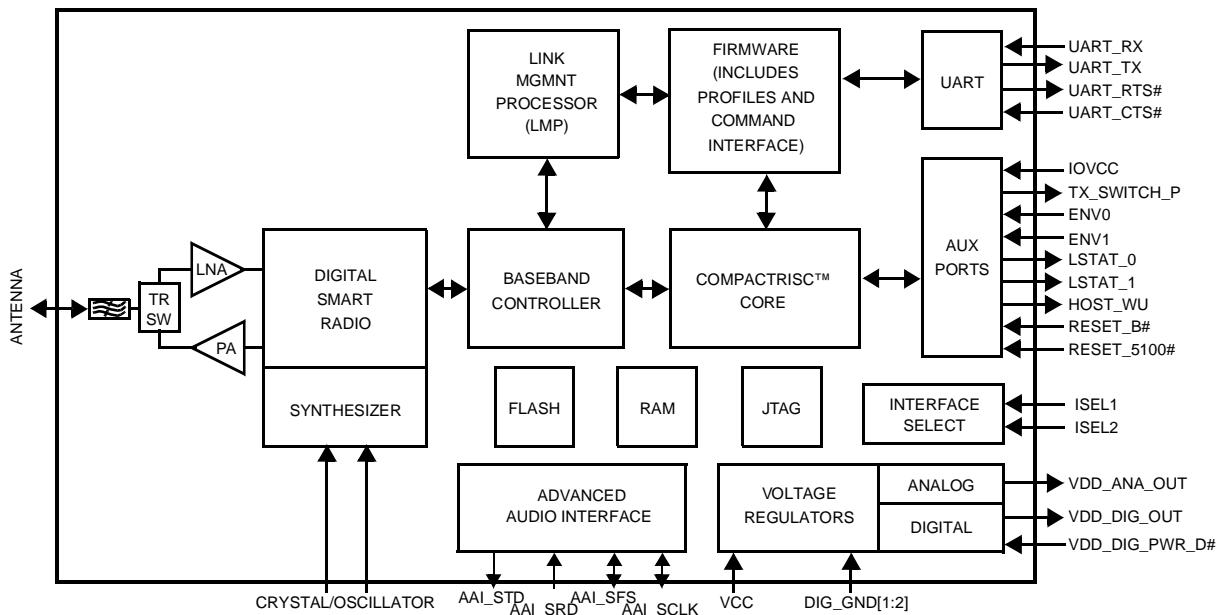

### 3.0 Features

- Bluetooth version 1.1 qualified
- Implemented in CMOS technology on FR4 substrate
- Temperature Range: -40°C to +85°C
- FCC certified on LMX9820ADONGLE, FCC ID ED9LMX9820ASM.

#### 3.1 DIGITAL HARDWARE

- Baseband and Link Management processors
- CompactRISC Core
- Integrated Memory:
  - Flash
  - RAM
- UART Command/Data Port:
  - Support for up to 921.6k baud rate
- Auxiliary Host Interface Ports:
  - Link Status
  - Transceiver Status (Tx or Rx)
  - Operating Environment Control:
    - Default Bluetooth mode
    - In System Programming (ISP) mode
- Advanced Power Management (APM) features
- Advanced Audio Interface for external PCM codec

#### 3.2 FIRMWARE

- Complete Bluetooth Stack including:
  - Baseband and Link Manager
  - L2CAP, RFCOMM, SDP
  - Profiles:
    - GAP
    - SDAP
    - SPP
- Additional Profile support on host for any SPP based profile, like
  - Dial Up Networking (DUN)
  - Facsimile Profile (FAX)

- File Transfer Protocol (FTP)

- Object Push Profile (OPP)

- Headset (HSP)

- Handsfree Profile (HFP)

- On-chip application support including:

- Command Interface:
  - Link setup and configuration (also Multipoint)
  - Configuration of the module
  - In-System Programming (ISP)
  - Service database modifications
  - Default connections
- UART Transparent mode
- Different Operation modes:
  - Automatic mode
  - Command mode

#### 3.3 DIGITAL SMART RADIO

- Accepts external clock or crystal input:
  - 12 MHz
  - 20 ppm cumulative clock error required for Bluetooth
- Synthesizer:
  - Integrated VCO and loop filter
  - Provides all clocking for radio and baseband functions
- Antenna Port (50 ohms nominal impedance):
  - Embedded front-end filter for enhanced out of band performance
- Integrated transmit/receive switch (full-duplex operation via antenna port)
- Better than -77 dBm input sensitivity
- 0 dBm typical output power

#### 3.4 PHYSICAL DIMENSIONS

- Compact size: 10.1mm x 14.1mm x 2.0mm
- Complete system interface provided in Land Grid Array on underside for surface-mount assembly
- Metal shield included


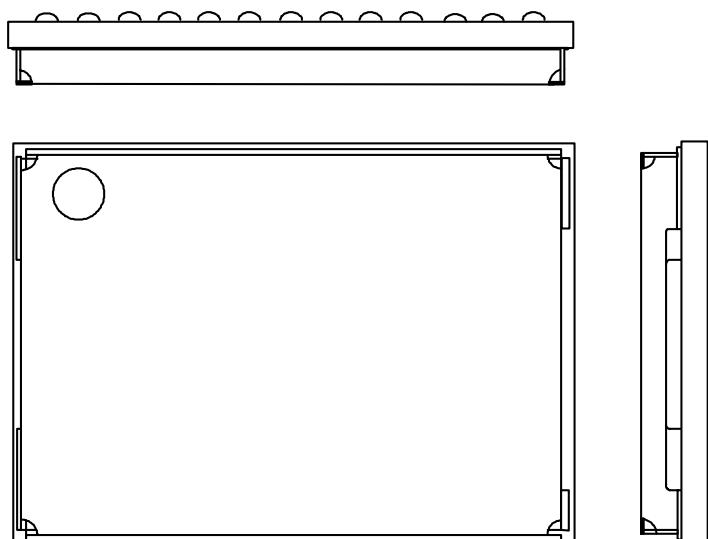


Figure 1. Physical Illustration

## Table of Contents

|            |  |           |             |   |           |
|------------|--|-----------|-------------|---|-----------|
| <b>1.0</b> | <b>General Description</b>                 | <b>1</b>  | <b>10.0</b> | <b>Integrated Firmware</b>                  | <b>24</b> |
| 1.1        | APPLICATIONS                               | 1         | 10.1        | FEATURES                                    | 24        |
| <b>2.0</b> | <b>Functional Block Diagram</b>            | <b>1</b>  | 10.1.1      | Operation Modes                             | 24        |
| <b>3.0</b> | <b>Features</b>                            | <b>2</b>  | 10.1.2      | Default Connections                         | 24        |
| 3.1        | DIGITAL HARDWARE                           | 2         | 10.1.3      | Event Filter                                | 24        |
| 3.2        | FIRMWARE                                   | 2         | 10.1.4      | Default Link Policy                         | 24        |
| 3.3        | DIGITAL SMART RADIO                        | 2         | 10.1.5      | Audio Support                               | 24        |
| 3.4        | PHYSICAL DIMENSIONS                        | 2         | <b>11.0</b> | <b>Power Reduction</b>                      | <b>26</b> |
| <b>4.0</b> | <b>Connection Diagram</b>                  | <b>4</b>  | 11.1        | LOW POWER MODES                             | 26        |
| <b>5.0</b> | <b>Pad Descriptions</b>                    | <b>5</b>  | 11.2        | UART TRANSPORT LAYER CONTROL                | 26        |
| <b>6.0</b> | <b>Electrical Specifications</b>           | <b>8</b>  | 11.2.1      | Hardware Wake-Up Functionality              | 26        |
| 6.1        | GENERAL SPECIFICATIONS                     | 8         | 11.2.2      | Disabling the UART Transport Layer          | 26        |
| 6.2        | DC CHARACTERISTICS                         | 9         | 11.2.3      | LMX9820A Enabling the UART Interface        | 26        |
| 6.3        | RF PERFORMANCE CHARACTERISTICS             | 10        | 11.2.4      | Enabling the UART Transport Layer from Host | 26        |
| 6.4        | PERFORMANCE DATA (TYPICAL)                 | 12        | <b>12.0</b> | <b>Command Interface</b>                    | <b>27</b> |
| <b>7.0</b> | <b>Functional Description</b>              | <b>14</b> | 12.1        | FRAMING                                     | 27        |
| 7.1        | BASEBAND AND LINK MANAGEMENT               | 14        | 12.1.1      | Start and End Delimiters                    | 27        |
| 7.1.1      | Bluetooth Lower Link Controller            | 14        | 12.1.2      | Packet Type ID                              | 27        |
| 7.1.2      | Bluetooth Upper Layer Stack                | 14        | 12.1.3      | Opcode                                      | 27        |
| 7.1.3      | Profile Support                            | 14        | 12.1.4      | Data Length                                 | 27        |
| 7.1.4      | Application with Command Interface         | 14        | 12.1.5      | Checksum                                    | 27        |
| 7.2        | MEMORY                                     | 15        | 12.2        | COMMAND SET OVERVIEW                        | 28        |
| 7.3        | CONTROL AND TRANSPORT PORT                 | 15        | <b>13.0</b> | <b>Usage Scenarios</b>                      | <b>32</b> |
| 7.4        | AUXILIARY PORTS                            | 15        | 13.1        | POINT-TO-POINT CONNECTION                   | 32        |
| 7.4.1      | Reset_5100 and Reset_b                     | 15        | 13.2        | AUTOMATIC POINT-TO-POINT CONNECTION         | 33        |
| 7.4.2      | Operating Environment Pads (Env0 and Env1) | 15        | 13.3        | POINT-TO-MULTIPOINT CONNECTION              | 34        |
| 7.4.3      | Interface Select Inputs (ISEL1, ISEL2)     | 15        | <b>14.0</b> | <b>Application Information</b>              | <b>35</b> |
| 7.4.4      | Module and LInk Status Outputs             | 15        | 14.1        | MATCHING NETWORK                            | 35        |
| 7.5        | AUDIO PORT                                 | 16        | 14.2        | FILTERED POWER SUPPLY                       | 35        |
| <b>8.0</b> | <b>Digital Smart Radio</b>                 | <b>17</b> | 14.3        | HOST INTERFACE                              | 35        |
| 8.1        | FUNCTIONAL DESCRIPTION                     | 17        | 14.4        | CLOCK INPUT                                 | 35        |
| 8.2        | RECEIVER FRONT END                         | 17        | 14.5        | SCHEMATIC AND LAYOUT EXAMPLES               | 35        |
| 8.2.1      | Poly-Phase Bandpass Filter                 | 17        | <b>15.0</b> | <b>Soldering</b>                            | <b>39</b> |
| 8.2.2      | Hard Limiter and RSSI                      | 17        | <b>16.0</b> | <b>Physical Dimensions</b>                  | <b>41</b> |
| 8.3        | RECEIVER BACK END                          | 17        | <b>17.0</b> | <b>Datasheet Revision History</b>           | <b>42</b> |
| 8.3.1      | Frequency Discriminator                    | 17        |             |   |           |
| 8.3.2      | Post-Detection Filter and Equalizer        | 17        |             |   |           |
| 8.4        | AUTOTUNING CIRCUITRY                       | 17        |             |   |           |
| 8.5        | SYNTHESIZER                                | 17        |             |   |           |
| 8.5.1      | Phase-Frequency Detector                   | 17        |             |   |           |
| 8.6        | TRANSMITTER CIRCUITRY                      | 18        |             |   |           |
| 8.6.1      | IQ-DA Converters and TX Mixers             | 18        |             |   |           |
| 8.7        | CRYSTAL REQUIREMENTS                       | 18        |             |   |           |
| 8.7.1      | Crystal                                    | 18        |             |   |           |
| 8.7.2      | TCXO                                       | 21        |             |   |           |
| 8.7.3      | ESR (Equivalent Series Resistance)         | 22        |             |   |           |
| <b>9.0</b> | <b>System Power-Up Sequence</b>            | <b>23</b> |             |   |           |

## 4.0 Connection Diagram

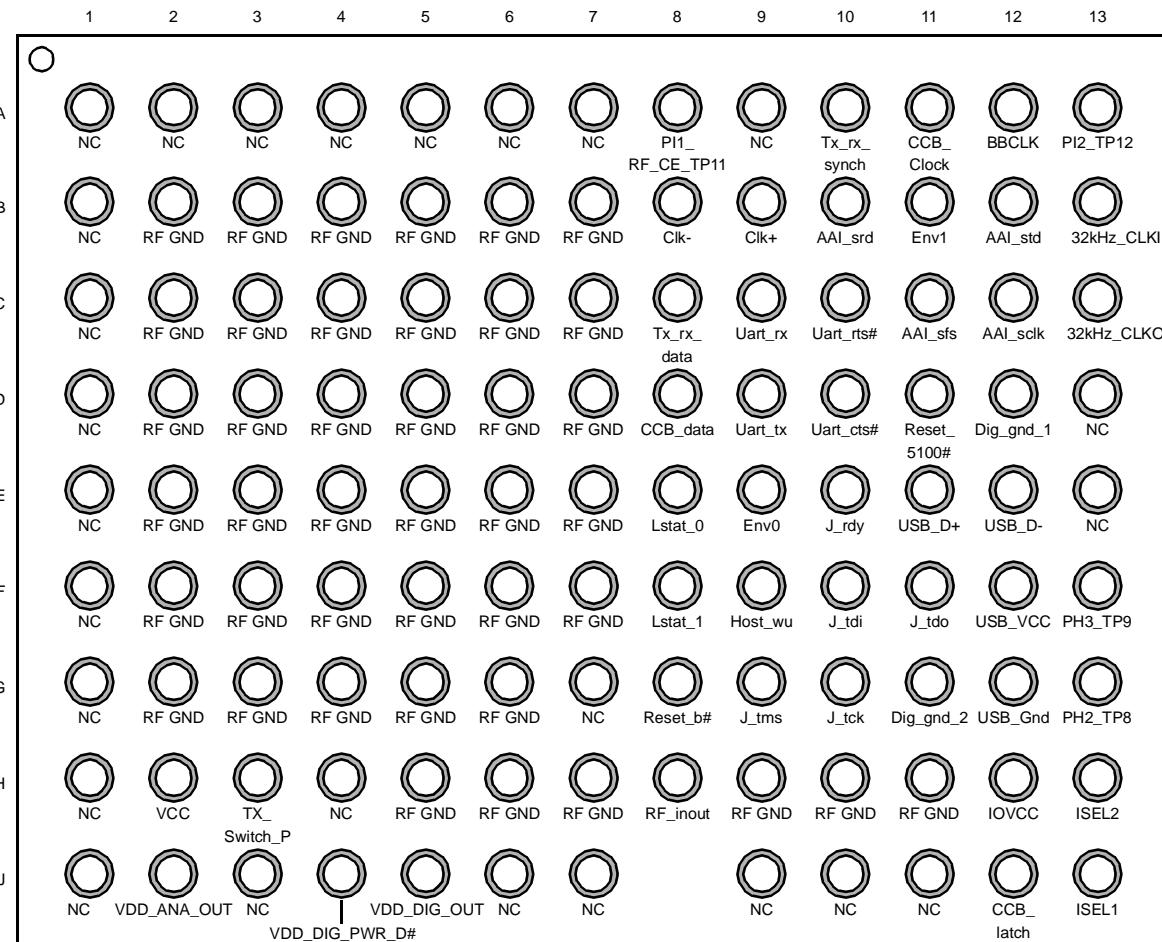

X-Ray (Top View)

Figure 2. Connection Diagram

Table 1. Ordering Information

| Order Number | Shipment Method      |
|--------------|----------------------|
| LMX9820ASM   | Tape & Reel 250 pcs  |
| LMX9820ASMX  | Tape & Reel 2000 pcs |

## 5.0 Pad Descriptions

Table 2. System Interface Signals

| Pad Name   | Pad Location | Direction    | Description   |
|------------|--------------|--------------|---|
| Clk-       | B8           | Input        | <b>Xtal g or Negative Clock Input.</b> Typically connected along with XTAL_D to an external surface-mount AT-cut crystal. Leave not connected in case Clk+ is connected to external crystal oscillator.   |
| Clk+       | B9           | Input        | <b>Xtal d or Positive Clock Input.</b> Typically connected along with XTAL_G to an external surface-mount AT-cut crystal. Can also be configured as a frequency input when using an external crystal oscillator. When configured as a frequency input, typically connected to an external Temperature Compensated Crystal Oscillator (TCXO) through an Alternating Current (AC) coupling capacitor. |
| 32kHz_CLKI | B13          | Input        | <b>32 kHz Clock input.</b> Not supported by LMX9820A. Connect to ground. Pad required for mechanical stability.   |
| 32kHz_CLKO | C13          | Output       | <b>32 kHz Clock Output.</b> Not supported by LMX9820A. Treat as no connect. Pad required for mechanical stability.  |
| RF_inout   | H8           | Input/Output | <b>RF Antenna Port.</b> 50Ω nominal impedance. Typically connected to an antenna through a 6.8 pF capacitor.  |
| ISEL2      | H13          | Input        | <b>Module Interface Select Input Bit 1</b>  |
| ISEL1      | J13          | Input        | <b>Module Interface Select Input Bit 0</b>  |

Table 3. USB Interface Signals (not supported by LMX9820A firmware)

| Pad Name | Pad Location | Direction    | Description  |
|----------|--------------|--------------|--|
| USB_VCC  | F12          | Input        | <b>USB Transceiver Power Supply +</b> <sup>1</sup> |
| USB_D+   | E11          | Input/Output | <b>USB Data Positive</b> <sup>1</sup>              |
| USB_D-   | E12          | Input/Output | <b>USB Data Negative</b> <sup>1</sup>              |
| USB_Gnd  | G12          | Input        | <b>USB Transceiver Ground.</b> Connect to GND.     |

1. Treat as no connect. Pad required for mechanical stability.

Table 4. UART Interface Signals

| Pad Name  | Pad Location | Direction | Description  |
|-----------|--------------|-----------|--|
| Uart_tx   | D9           | Output    | <b>UART Host Control Interface Transport, Transmit Data</b>                |
| Uart_rx   | C9           | Input     | <b>UART Host Control Interface Transport, Receive Data</b>                 |
| Uart_rts# | C10          | Output    | <b>UART Host Control Interface Transport, Request to Send</b> <sup>1</sup> |
| Uart_cts# | D10          | Input     | <b>UART Host Control Interface Transport, Clear to Send</b> <sup>2</sup>   |

1. Treat as no connect if not used. Pad required for mechanical stability.
2. Connect GND if not used.

## 5.0 Pad Descriptions (Continued)

Table 5. Auxiliary Ports Interface Signals

| Pad Name    | Pad Location | Direction | Description  |
|-------------|--------------|-----------|--|
| IOVCC       | H12          | Input     | <b>2.85V to 3.6V Logic Threshold Program Input.</b>  |
| Reset_b#    | G8           | Input     | <b>Reset for Smart Radio.</b> Connect to Reset_5100.   |
| Reset_5100# | D11          | Input     | <b>Reset for Baseband processor.</b> Low active, either connect to host or use pull-up with max. 1KΩ resistor. |
| Lstat_0     | E8           | Output    | <b>Link Status Bit 0</b>   |
| Lstat_1     | F8           | Output    | <b>Link Status Bit 1</b>   |
| Host_wu     | F9           | Output    | <b>Host Wakeup</b>   |
| Env0        | E9           | Input     | <b>Module Operating Environment Bit 0</b>  |
| Env1        | B11          | Input     | <b>Module Operating Environment Bit 1</b>  |
| TX_Switch_P | H3           | Output    | <b>Transceiver Status.</b> 0 = Receive; 1 = Transmit.  |

Table 6. Audio Port Interface Signals

| Pad Name | Pad Location | Direction    | Description  |
|----------|--------------|--------------|--|
| AAI_srd  | B10          | Input        | <b>Advanced Audio Interface Receive Data Input</b> <sup>1</sup>    |
| AAI_std  | B12          | Output       | <b>Advanced Audio Interface Transmit Data Output</b> <sup>1</sup>  |
| AAI_sfs  | C11          | Input/Output | <b>Advanced Audio Interface Frame Synchronization</b> <sup>1</sup> |
| AAI_sclk | C12          | Input/Output | <b>Advanced Audio Interface Clock</b> <sup>1</sup>                 |

1. Treat as no connect if not used. Pad required for mechanical stability.

Table 7. Test Interface Signals

| Pad Name      | Pad Location | Direction    | Description                               |
|---------------|--------------|--------------|---|
| J_rdy         | E10          | Output       | <b>JTAG Ready</b> <sup>1</sup>            |
| J_tdi         | F10          | Input        | <b>JTAG Test Data</b> <sup>1</sup>        |
| J_tdo         | F11          | Input/Output | <b>JTAG Test Data</b> <sup>1</sup>        |
| J_tms         | G9           | Input/Output | <b>JTAG Test Mode Select</b> <sup>1</sup> |
| J_tck         | G10          | Input        | <b>JTAG Test Clock</b> <sup>1</sup>       |
| PI1_RFCE_TP11 | A8           | Test Pin     | <b>Module Test Point</b> <sup>1</sup>     |
| PI2_TP12      | A13          | Test Pin     | <b>Module Test Point</b> <sup>1</sup>     |
| Tx_rx_data    | C8           | Test Pin     | <b>Module Test Point</b> <sup>1</sup>     |
| Tx_rx_synch   | A10          | Test Pin     | <b>Module Test Point</b> <sup>1</sup>     |
| CCB_Clock     | A11          | Test Pin     | <b>Module Test Point</b> <sup>1</sup>     |
| CCB_data      | D8           | Test Pin     | <b>Module Test Point</b> <sup>1</sup>     |
| CCB_latch     | J12          | Test Pin     | <b>Module Test Point</b> <sup>1</sup>     |
| BBCLK         | A12          | Test Pin     | <b>Module Test Point</b> <sup>1</sup>     |
| PH3_TP9       | F13          | Test Pin     | <b>Module Test Point</b> <sup>1</sup>     |
| PH2_TP8       | G13          | Test Pin     | <b>Module Test Point</b> <sup>1</sup>     |

## 5.0 Pad Descriptions (Continued)

1. Treat as no connect. Pad required for mechanical stability.

**Table 8. Power, Ground, and No Connect Signals**

| Pad Name               | Pad Location   | Direction  | Description   |
|------------------------|--|------------|---|
| NC                     | A1, A2, A3, A4, A5, A6, A7, A9, B1, C1, D1, D13, E1, E13, F1, G1, G7, H1, H4, J1, J3, J6, J7, J9, J10, J11   | No Connect | <b>No Connect.</b> Pad required for mechanical stability.   |
| RF GND <sup>1</sup>    | B2, B3, B4, B5, B6, B7, C2, C3, C4, C5, C6, C7, D2, D3, D4, D5, D6, D7, E2, E3, E4, E5, E6, E7, F2, F3, F4, F5, F6, F7, G2, G3, G4, G5, G6, H5, H6, H7, H9, H10, H11 | Input      | <b>Radio System Ground.</b> Must be connected to RF Ground plane. Thermal relief required for proper soldering.                     |
| Dig_gnd_1 <sup>1</sup> | D12  | Input      | <b>Digital Ground</b>   |
| Dig_gnd_2 <sup>1</sup> | G11  | Input      | <b>Digital Ground</b>   |
| VCC                    | H2   | Input      | <b>2.85V to 3.6V Input for Internal Power Supply Regulators</b>   |
| VDD_ANA_OUT            | J2   | Output     | <b>Voltage Regulator Output/Power Supply for Analog Circuitry.</b> If not used, place pad and do not connect to VCC or Ground.      |
| VDD_DIG_OUT            | J5   | Output     | <b>Voltage Regulator Output/Power Supply for Digital Circuitry.</b> If not used, place pad and do not connect to VCC or Ground.     |
| VDD_DIG_PWR_D#         | J4   | Input      | <b>Power Down for the Internal Power Supply Regulator for the Digital Circuitry.</b> Place pad and do not connect to VCC or Ground. |

1. Connect RF GND, Dig\_gnd\_1, and Dig\_gnd\_2 to a single ground plane.

## 6.0 Electrical Specifications

### 6.1 GENERAL SPECIFICATIONS

Absolute Maximum Ratings (see Table 9) indicate limits beyond which damage to the device may occur. Operating Ratings (see Table 10) indicate conditions for which the device is intended to be functional.

This device is a high performance RF integrated circuit and is ESD sensitive. Handling and assembly of this device should be performed at ESD free workstations.

The following conditions apply unless otherwise stated in the tables below:

- $T_A = -40^\circ\text{C}$  to  $+85^\circ\text{C}$
- $\text{VCC} = 3.3\text{V}$ ,  $\text{IOVCC} = 3.3\text{V}$
- RF system performance specifications are guaranteed on National Semiconductor Austin Board rev1.0b reference design platform.

**Table 9. Absolute Maximum Ratings**

| Symbol               | Parameter                        | Min  | Max               | Unit |
|----------------------|----------------------------------|------|-------------------|------|
| VCC                  | Core Logic Power Supply Voltage  | -0.3 | 4.0               | V    |
| IOVCC                | I/O Power Supply Voltage         | -0.3 | 4.0               | V    |
| USB_VCC <sup>1</sup> | USB Power Supply Voltage         | -0.5 | 3.63              | V    |
| V <sub>I</sub>       | Voltage on any pad with GND = 0V | -0.5 | 3.6               | V    |
| PinRF                | RF Input Power                   |      | +15               | dBm  |
| T <sub>S</sub>       | Storage Temperature Range        | -65  | +125              | °C   |
| T <sub>L</sub>       | Lead Temperature (solder 4 sec)  |      | +235              | °C   |
| ESD-HBM              | ESD, Human Body Model            |      | 2000 <sup>2</sup> | V    |
| ESD-MM               | ESD, Machine Model               |      | 200               | V    |

1. USB Interface not supported by LMX9820A firmware. Treat as no connect. Pad required for mechanical stability.
2. Antenna pin passes 1500V HBM.

**Table 10. Recommended Operating Conditions<sup>1</sup>**

| Symbol               | Parameter  | Min  | Typ <sup>2</sup> | Max | Unit |
|----------------------|--|------|------------------|-----|------|
| VCC <sup>3</sup>     | Module Power Supply Voltage                              | 2.85 | 3.3              | 3.6 | V    |
| IOVCC <sup>4</sup>   | I/O Power Supply Voltage                                 | 2.85 | 3.3              | 3.6 | V    |
| t <sub>R</sub>       | Module Power Supply Rise Time                            |      |                  | 50  | ms   |
| T <sub>O</sub>       | Operating Temperature Range                              | -40  |                  | +85 | °C   |
| HUM <sub>OP</sub>    | Humidity (operating, across operating temperature range) | 10   |                  | 90  | %    |
| HUM <sub>NONOP</sub> | Humidity (non-operating, 38.7°C web bulb temperature)    | 5    |                  | 95  | %    |

1. Maximum voltage difference allowed between VCC and IOVCC is 500 mV.
2. Typical operating conditions are  $\text{VCC} = 3.3\text{V}$ ,  $\text{IOVCC} = 3.3\text{V}$  operating voltage and  $25^\circ\text{C}$  ambient temperature.
3. VCC internally regulated to VDD\_ANA (see Table 11)
4. IOVCC internally regulated to VDD\_DIG (see Table 11)

**Table 11. Power Supply Electrical Specifications (Analog and Digital LDOs)**

| Symbol                   | Parameter                    | Min | Typ <sup>1</sup> | Max | Unit |
|--------------------------|------------------------------|-----|------------------|-----|------|
| VDD_ANA_OUT <sup>2</sup> | Analog Voltage Output Range  |     | 2.8              |     | V    |
| VDD_DIG_OUT <sup>3</sup> | Digital Voltage Output Range |     | 2.5              |     | V    |

1. Typical operating conditions are  $\text{VCC} = 3.3\text{V}$ ,  $\text{IOVCC} = 3.3\text{V}$  operating voltage and  $25^\circ\text{C}$  ambient temperature. Values reflect voltages of internally generated, regulated voltages VDD\_ANA and VDD\_DIG
2. Output of internally generated regulated voltage VDD\_ANA
3. Output of internally generated regulated voltage VDD\_DIG

## 6.0 Electrical Specifications (Continued)

**Note:** The voltage regulators are optimized for the internal operation of the LMX9820A. Because any noise coupled into these supplies can have influence on the radio perfor-

mance, it is highly recommended to have no additional load on their outputs.

**Table 12. Power Supply Requirements<sup>1</sup>**

| Symbol                | Parameter  | Min | Typ <sup>2</sup> | Max | Unit |
|-----------------------|--|-----|------------------|-----|------|
| I <sub>CC-TX</sub>    | Power supply current for continuous transmit         |     |                  | 68  | mA   |
| I <sub>CC-RX</sub>    | Power supply current for continuous receive          |     |                  | 62  | mA   |
| I <sub>CC-Inq</sub>   | Inquiry  |     | 31               |     | mA   |
| I <sub>RXSL</sub>     | Receive Data in SPP Link, slave <sup>3,4</sup>       |     | 23               |     | mA   |
| I <sub>RXM</sub>      | Receive Data in SPP Link, master <sup>3,4</sup>      |     | 18               |     | mA   |
| I <sub>HV3</sub>      | Active HV3 SCO Audio Link                            |     | 22               |     | mA   |
| I <sub>SnM</sub>      | Sniff Mode, sniff interval 1 second <sup>3</sup>     |     | 8                |     | mA   |
| I <sub>SC-TLDIS</sub> | Scanning, no active link, TL disabled <sup>3,5</sup> |     | 2.5              |     | mA   |
| I <sub>Idle</sub>     | Idle, scanning disabled, TL disabled <sup>3,5</sup>  |     | 0.15             |     | mA   |


1. Power supply requirements based on Class II output power.
2. V<sub>CC</sub> = 3.3V, IOVCC = 3.3V, Ambient Temperature = +25°C.
3. Average values.
4. Based on UART Baudrate 115.2kbit/s.
5. TL: Transport Layer

## 6.2 DC CHARACTERISTICS

**Table 13. Digital DC Characteristics**

| Symbol                       | Parameter                                       | Condition                        | Min           | Max           | Units |
|------------------------------|---|----------------------------------|---------------|---------------|-------|
| V <sub>CC</sub> <sup>1</sup> | Core Logic Supply Voltage                       |                                  | 2.85          | 3.6           | V     |
| IOVCC <sup>2</sup>           | IO Supply Voltage                               |                                  | 2.85          | 3.6           | V     |
| V <sub>IH</sub>              | Logical 1 Input Voltage                         |                                  | 0.7 x VDD_ANA | VDD_ANA + 0.5 | V     |
| V <sub>IL</sub>              | Logical 0 Input Voltage                         |                                  | -0.5          | 0.2 x VDD_ANA | V     |
| V <sub>HYS</sub>             | Hysteresis Loop Width <sup>3</sup>              |                                  | 0.1 x VDD_ANA |               | V     |
| I <sub>OH</sub>              | Logical 1 Output Current                        | VDD_ANA = 2.8V                   | -1.6          |               | mA    |
| I <sub>OL</sub>              | Logical 0 Output Current                        | VDD_ANA = 2.8V                   | 1.6           |               | mA    |
| I <sub>OHW</sub>             | Weak Pull-up Current                            | VDD_ANA = 2.8V                   | -10           |               | µA    |
| I <sub>IH</sub>              | High-level Input Current                        | V <sub>IH</sub> = VDD_ANA = 2.8V | -10           | 10            | µA    |
| I <sub>IL</sub>              | Low-level Input Current                         | V <sub>IL</sub> = 0              | -10           | 10            | µA    |
| I <sub>L</sub>               | High Impedance Input Leakage Current            | 0V ≤ V <sub>IN</sub> ≤ VDD_ANA   | -2.0          | 2.0           | µA    |
| I <sub>O(off)</sub>          | Output Leakage Current (I/O pins in input mode) | 0V ≤ V <sub>OUT</sub> ≤ VDD_DIG  | -2.0          | 2.0           | µA    |

 1. V<sub>CC</sub> internally regulated to VDD\_ANA (see Table 11)
2. IOVCC internally regulated to VDD\_DIG (see Table 11)
3. Guaranteed by design.



## 6.0 Electrical Specifications (Continued)

### 6.3 RF PERFORMANCE CHARACTERISTICS

In the performance characteristics tables the following applies:

- All tests performed are based on Bluetooth Test Specification rev 0.92.
- All tests are measured at antenna port unless otherwise specified

- $T_A = -40^\circ\text{C}$  to  $+85^\circ\text{C}$
- $\text{VCC} = 3.3\text{V}$ ,  $\text{IOVCC} = 3.3\text{V}$  unless otherwise specified

RF system performance specifications are guaranteed on National Semiconductor Austin Board rev1.0b reference design platform.

**Table 14. Receiver Performance Characteristics**

| Symbol                                  | Parameter  | Condition   | Min       | Typ <sup>1</sup> | Max | Unit     |
|---|--|---|-----------|------------------|-----|----------|
| $\text{RX}_{\text{sense}}^2$            | Receive Sensitivity  | BER < 0.001   | 2.402 GHz | -81              | -77 | dBm      |
|   |  |   | 2.441 GHz | -81              | -77 | dBm      |
|   |  |   | 2.480 GHz | -81              | -77 | dBm      |
| PinRF                                   | Maximum Input Level  |   | -10       | 0                |     | dBm      |
| $\text{C/I}_{\text{ACI}}^3$             | Carrier to Interferer Ratio in the Presence of Adjacent Channel Interferer | $\Delta F_{\text{ACI}} = \pm 1 \text{ MHz}$ ,<br>$P_{\text{inRF}} = -60 \text{ dBm}$ ,<br>BER < 0.001             |           | -1               |     | dB       |
|   |  | $\Delta F_{\text{ACI}} = \pm 2 \text{ MHz}$ .<br>$P_{\text{inRF}} = -60 \text{ dBm}$ ,<br>BER < 0.001             |           | -37              |     | dB       |
|   |  | $\Delta F_{\text{ACI}} = +3 \text{ MHz}$ ,<br>$P_{\text{inRF}} = -67 \text{ dBm}$ ,<br>BER < 0.001                |           | -47              |     | dB       |
| $\text{C/I}_{\text{IMAGE}-1\text{MHz}}$ | Carrier to Interferer Ratio in the Presence of Image-1MHz Interferer       | $\Delta f = -3 \text{ MHz}$ ,<br>$\text{PinRF} = -67 \text{ dBm}$ ,<br>BER < 0.001                                |           | -32              |     | dB       |
| IMP <sup>3,4</sup>                      | Intermodulation Performance  | $F_1 = +3 \text{ MHz}$ ,<br>$F_2 = +6 \text{ MHz}$ ,<br>$P_{\text{inRF}} = -64 \text{ dBm}$                       | -38       | -36              |     | dBm      |
| RSSI                                    | RSSI Dynamic Range at LNA Input  |   | -72       |                  | -52 | dBm      |
| $Z_{\text{RFIN}}$                       | Input Impedance of RF Port (RF_inout)                                      | Single input impedance<br>$F_{\text{in}} = 2.45 \text{ GHz}$  |           | 50               |     | $\Omega$ |
| Return Loss <sup>3</sup>                | Return Loss  |   |           |                  | -8  | dB       |
| OOB <sup>3</sup>                        | Out Of Band Blocking Performance   | $P_{\text{inRF}} = -10 \text{ dBm}$ ,<br>$30 \text{ MHz} < F_{\text{CWI}} < 2 \text{ GHz}$ ,<br>BER < 0.001       | -10       |                  |     | dBm      |
|   |  | $P_{\text{inRF}} = -27 \text{ dBm}$ ,<br>$2000 \text{ MHz} < F_{\text{CWI}} < 2399 \text{ MHz}$ ,<br>BER < 0.001  | -27       |                  |     | dBm      |
|   |  | $P_{\text{inRF}} = -27 \text{ dBm}$ ,<br>$2498 \text{ MHz} < F_{\text{CWI}} < 3000 \text{ MHz}$ ,<br>BER < 0.001  | -27       |                  |     | dBm      |
|   |  | $P_{\text{inRF}} = -10 \text{ dBm}$ ,<br>$3000 \text{ MHz} < F_{\text{CWI}} < 12.75 \text{ GHz}$ ,<br>BER < 0.001 | -10       |                  |     | dBm      |

1. Typical operating conditions are at 2.85V operating voltage and 25°C ambient temperature.
2. The receiver sensitivity is measured at the device interface.
3. Not tested in production.

## 6.0 Electrical Specifications (Continued)

4. The  $f_0 = -64$  dBm Bluetooth modulated signal,  $f_1 = -39$  dBm sine wave,  $f_2 = -39$  dBm Bluetooth modulated signal,  $f_0 = 2f_1 - f_2$ , and  $|f_2 - f_1| = n \times 1$  MHz, in which  $n$  is 3, 4, or 5. For the typical case,  $n = 3$ .

Table 15. Transmitter Performance Characteristics

| Symbol  | Parameter   | Condition  | Min | Typ <sup>1</sup> | Max  | Unit |
|---|---|--|-----|------------------|------|------|
| P <sub>OUTRF</sub> <sup>2</sup>                     | Transmit Output Power                                     | 2.402 GHz  | -3  | +1               | +4   | dBm  |
|   |   | 2.441 GHz  | -3  | +1               | +4   | dBm  |
|   |   | 2.480 GHz  | -3  | +1               | +4   | dBm  |
| Power Density <sup>5</sup>                          | Power Density   |  | -4  | 1                | 2    | dBm  |
| MOD ΔF1 <sub>AVG</sub>                              | Modulation Characteristics                                | Data = 00001111  | 140 | 165              | 175  | kHz  |
| MOD ΔF2 <sub>MAX</sub> <sup>3</sup>                 | Modulation Characteristics                                | Data = 10101010  | 115 | 125              |      | kHz  |
| ΔF2 <sub>AVG</sub> /ΔF1 <sub>AVG</sub> <sup>4</sup> | Modulation Characteristics                                |  | 0.8 |                  |      |      |
| 20 dB Bandwidth                                     |   |  |     |                  | 1000 | kHz  |
| ACP <sup>5</sup>                                    | Adjacent Channel Power (In-band Spurious)                 | M - N   = 2  |     | -48              | -20  | dBm  |
|   |   | M - N   ≥ 3  |     | -51              | -40  | dBm  |
| P <sub>OUT</sub> 2*f <sub>0</sub> <sup>6</sup>      | PA 2 <sup>nd</sup> Harmonic Suppression                   | Maximum gain setting:<br>f <sub>0</sub> = 2402 MHz,<br>P <sub>out</sub> = 4804 MHz |     |                  | -30  | dBm  |
| P <sub>OUT</sub> 3*f <sub>0</sub> <sup>5</sup>      | PA 3 <sup>rd</sup> Harmonic Suppression                   | Maximum gain setting:<br>f <sub>0</sub> = 2402 MHz,<br>P <sub>out</sub> = 7206 MHz |     |                  | -32  | dBm  |
| Z <sub>RFOUT</sub>                                  | RF Output Impedance/Input Impedance of RF Port (RF_inout) | P <sub>out</sub> @ 2.5 GHz   | 50  |                  |      | Ω    |
| Return Loss <sup>5</sup>                            | Return Loss   |  |     |                  | -14  | dB   |

1. Typical operating conditions are at VCC = 3.3V, IOVCC = 3.3V operating voltage and 25°C ambient temperature.
2. The output power is measure at the device interface.
3. ΔF2max > 115 kHz for at least 99.9% of all Δf2max.
4. Modulation index set between 0.28 and 0.35.
5. Not tested in production.
6. Out-of-Band spurs only exist at 2nd and 3rd harmonics of the CW frequency for each channel.

Table 16. Synthesizer Performance Characteristics

| Symbol                                | Parameter                           | Condition               | Min | Typ  | Max | Unit     |
|---------------------------------------|-------------------------------------|-------------------------|-----|------|-----|----------|
| f <sub>VCO</sub>                      | VCO Frequency Range                 |                         |     | 5000 |     | MHz      |
| t <sub>LOCK</sub>                     | Lock Time                           | f <sub>0</sub> ± 20 kHz |     | 120  |     | μs       |
| Δf <sub>0</sub> offset <sup>1,2</sup> | Initial Carrier Frequency Tolerance | During preamble         | -75 | 0    | 75  | kHz      |
| Δf <sub>0</sub> drift <sup>2,3</sup>  | Initial Carrier Frequency Drift     | DH1 data packet         | -25 | 0    | 25  | kHz      |
|                                       |                                     | DH3 data packet         | -40 | 0    | 40  | kHz      |
|                                       |                                     | DH5 data packet         | -40 | 0    | 40  | kHz      |
|                                       |                                     | Drift Rate              | -20 | 0    | 20  | kHz/50μs |
| t <sub>D-Tx</sub>                     | Transmitter Delay Time              | From Tx data to antenna |     | 4    |     | μs       |

## 6.0 Electrical Specifications (Continued)

1. Frequency accuracy is dependent on crystal oscillator chosen. The crystal must have a cumulative accuracy of <20 ppm to meet Bluetooth specifications.
2. Not tested in production.
3. Frequency accuracy is dependent on crystal oscillator chosen. The crystal must have a cumulative accuracy of <20 ppm to meet Bluetooth specifications.

### 6.4 PERFORMANCE DATA (TYPICAL)

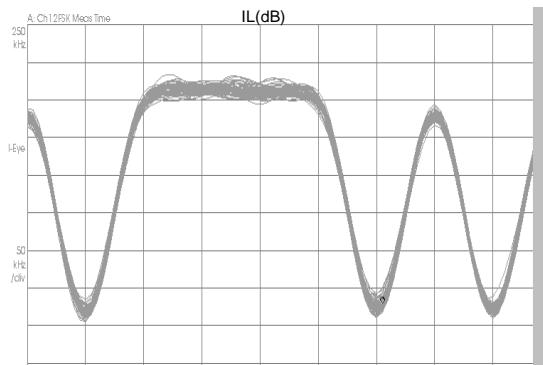


Figure 3. Modulation

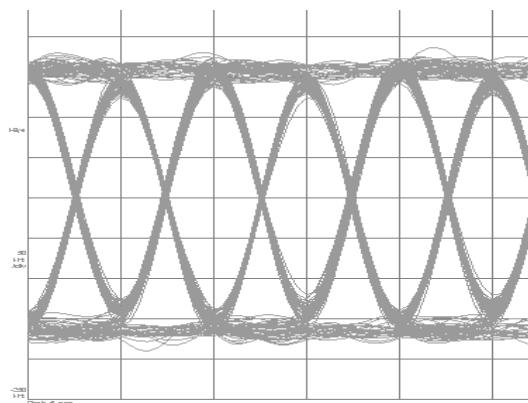


Figure 5. Corresponding Eye Diagram

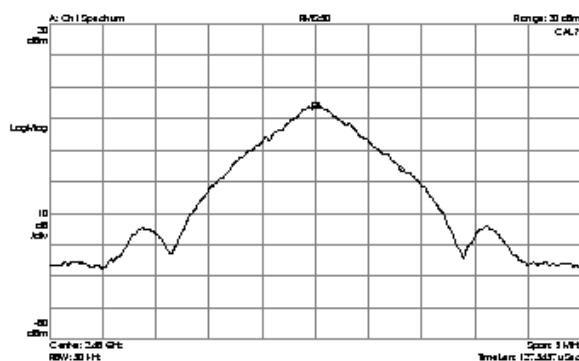


Figure 4. Transmit Spectrum

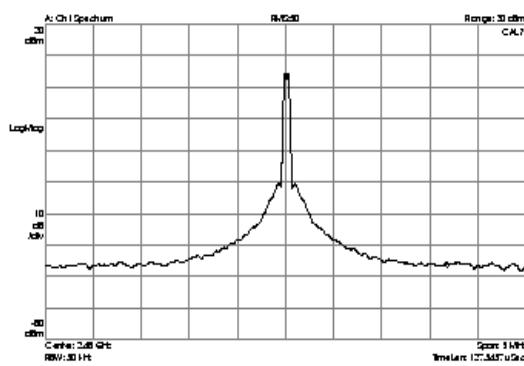


Figure 6. Synthesizer Phase Noise


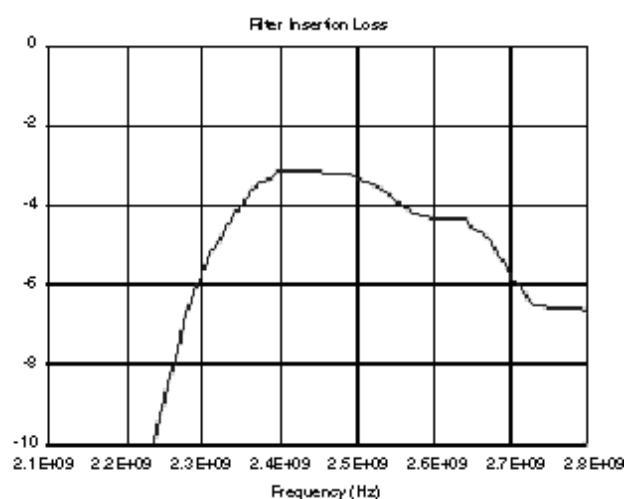


Figure 7. Front-End Bandpass Filter Response

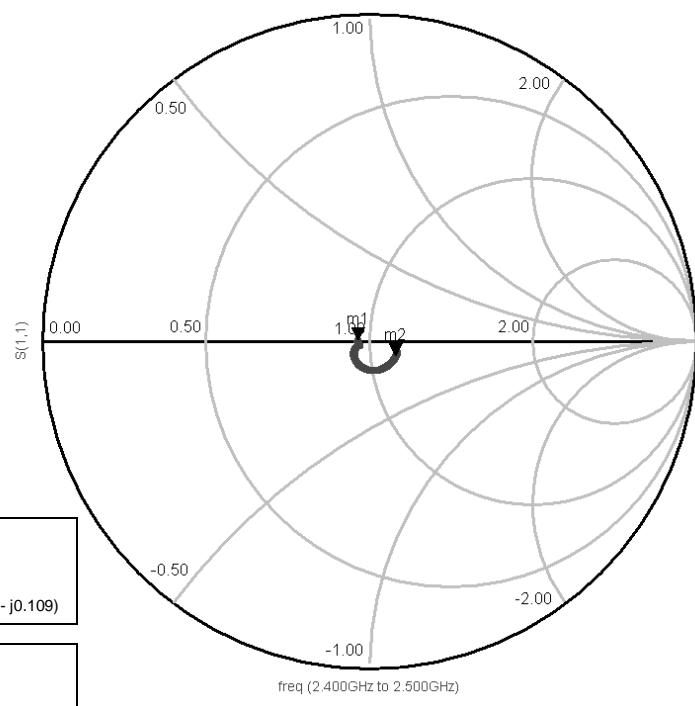

**Figure 8. TX and RX Pin 50Ω Impedance Characteristics**

## 7.0 Functional Description (Continued)

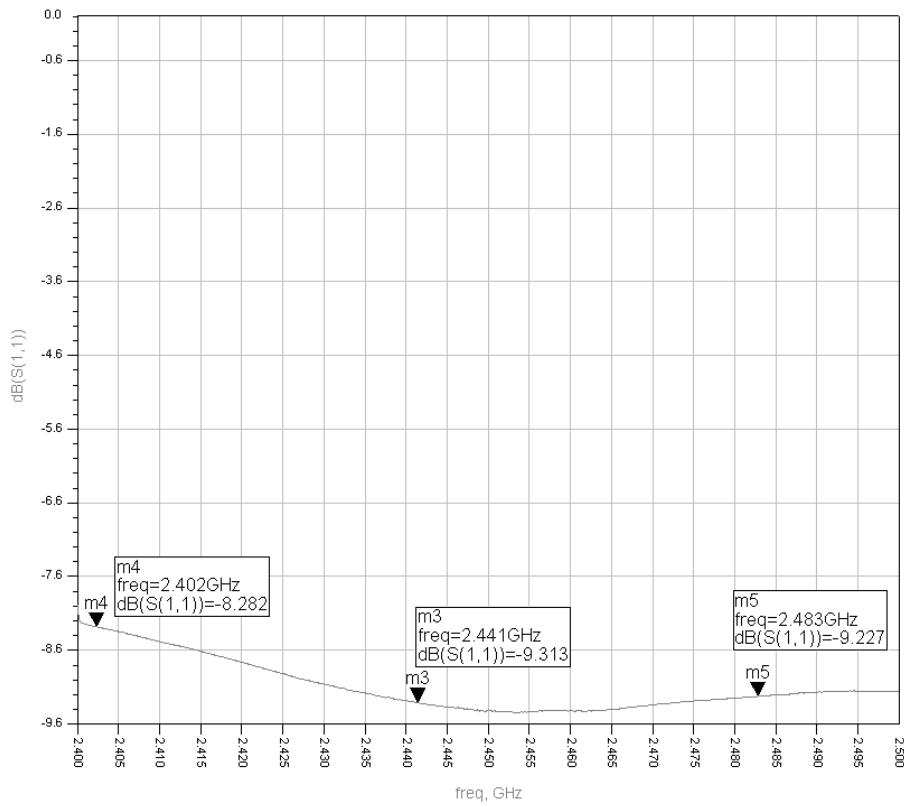


Figure 9. Transceiver Return Loss

## 7.0 Functional Description

### 7.1 BASEBAND AND LINK MANAGEMENT PROCESSORS

Baseband and Lower Link control functions are implemented using a combination of National Semiconductor's CompactRISC 16-bit processor and the Bluetooth Lower Link Controller. These processors operate from integrated Flash memory and RAM and execute on-board firmware implementing all Bluetooth functions.

#### 7.1.1 Bluetooth Lower Link Controller

The integrated Bluetooth Lower Link Controller (LLC) complies with the Bluetooth Specification version 1.1 and implements the following functions:

- Support for 1, 3, and 5 slot packet types
- 79-channel hop frequency generation circuitry
- Fast frequency hopping at 1600 hops per second
- Power management control
- Access code correlation and slot timing recovery

#### 7.1.2 Bluetooth Upper Layer Stack

The integrated upper layer stack is prequalified and includes the following protocol layers:

- L2CAP

- RFCOMM
- SDP

#### 7.1.3 Profile Support

The on-chip application of the LMX9820A allows full stand-alone operation, without any Bluetooth protocol layer necessary outside the module. It supports the Generic Access Profile (GAP), the Service Discovery Application Profile (SDAP), and the Serial Port Profile (SPP).

The on-chip profiles can be used as interfaces to additional profiles executed on the host. The LMX9820A includes a configurable service database to answer requests with the profiles supported.

#### 7.1.4 Application with Command Interface

The module supports automatic slave operation eliminating the need for an external control unit. The implemented transparent option enables the chip to handle incoming data raw, without the need for packaging in a special format. The device uses a fixed pin to block unallowed connections.

Acting as master, the application offers a simple but versatile command interface for standard Bluetooth operations such as inquiry, service discovery, and serial port connection. The firmware supports up to three slaves. Default Link Policy settings and a specific master mode allow optimized configuration for the application specific requirements. See also Section "Integrated Firmware" on page 25.

## 7.0 Functional Description (Continued)

### 7.2 MEMORY

The LMX9820A includes 256KB of programmable Flash memory that can be used for code and constant data. It allows single-cycle read access from the CPU. In addition to storing all algorithms and firmware, the on-board Flash also contains the IEEE 802 compliant Media Access Controller (MAC) address (BDADDR). The firmware and the BDADDR are programmed by National Semiconductor or can be programmed by the customer either before assembly into the host system or in-system. Module firmware can also be updated during manufacturing or in-system using the ISP capabilities of the LMX9820A. The LMX9820A firmware uses the internal RAM for buffers and program variables.

### 7.3 CONTROL AND TRANSPORT PORT

The LMX9820A provides one Universal Asynchronous Receiver Transmitter (UART). It supports 8-bit data formats with or without parity and one or two stop bits. The baud rate is generated by hardware that is programmed at boot time. Alternatively, the speed and configuration settings can be read out of internal memory settings. The UART can operate at baud rates of 2.4k, 4.8k, 7.2k, 9.6k, 19.2k, 38.4k, 57.6k, 115.2k, 230.4k, 460.8k and 921.6k. It implements flow control logic (RTS, CTS) to provide hardware handshaking capability. The UART offers wakeup from the low-power modes through the multi-input wakeup module. UART logic thresholds are set via the IOVCC pin.

### 7.4 AUXILIARY PORTS

#### 7.4.1 Reset\_5100 and Reset\_b#

Reset\_5100 and Reset\_b# are active low reset inputs for the baseband controller and digital smart radio portions of the LMX9820A, respectively. These pins are normally tied together and are connected to the host system so that the host can initialize the LMX9820A by asserting the reset inputs. Upon de-assertion, the status of the module operating environment (Env) pads are sampled and the LMX9820A enters the corresponding operational mode.

#### 7.4.2 Operating Environment Pads (Env0 and Env1)

The module provides two operating environments (see Table 17) selected by the states on the Env inputs sampled at reset.

The ISP mode allows end-of-line or field programming of the LMX9820A Flash memory by starting the baseband controller from the boot block of memory.

Table 17. Operating Environments

| Operating Environment       | Env1<br>(Pad B11) | Env0<br>(Pad E9) |
|-----------------------------|-------------------|------------------|
| ISP Mode                    | 1                 | 0                |
| Run (Normal) Mode (Default) | 1                 | 1                |

#### 7.4.3 Interface Select Inputs (ISEL1, ISEL2)

The interface selection pads are used for setting the UART speed and settings. If ISEL1 and ISEL2 are unconnected, they are pulled high by weak internal pullups, which select a default baudrate of 921.6k baud. The settings for Stop-bits, Startbit, and Parity are stored as internal non-volatile storage (NVS) parameters. If a baud rate different from the values listed in Table 18 is needed, ISEL1 and ISEL2 must be pulled low. This forces the device to read the UART speed from the parameter table in NVS. The default baud rate value programmed in NVS is 9.6k baud, however the device firmware can be modified to support other values. The default configuration in NVS is 1 Stopbit, 1 Startbit, and No parity. Table 18 shows the ISEL1 and ISEL2 selection settings.

Table 18. UART Speed Selection

| ISEL1<br>(Pad J13) | ISEL2<br>(Pad H13) | Interface<br>Speed (baud) | UART<br>Settings            |
|--------------------|--------------------|---------------------------|-----------------------------|
| 1                  | 1                  | 921.6k                    | From NVS                    |
| 0                  | 1                  | 115.2k                    | From NVS                    |
| 1                  | 0                  | 9.6k                      | 1Stop, 1Start,<br>No Parity |
| 0                  | 0                  | Check NVS                 | From NVS                    |

#### 7.4.4 Module and Link Status Outputs

The LMX9820A provides signals that the host can use to determine the real-time status of the radio link. The TX\_Switch\_P signal (pad H3) is a real-time indication of the current configuration (direction) of the transceiver. The link status lines (Lstat\_0 and Lstat\_1, pads E8 and F8, respectively) are GPIO lines controlled by the LMX9820A firmware. The Host Wakeup line (Host\_wu, pad F9) is implemented using GPIO and firmware. It is used to bring the host processor out of Sleep mode when link activity calls for host processing. Host\_wu can also be used by the host to check if link activity is present. If Host\_wu is active, then link activity is present and the host loses network awareness if the operating system continues to allow the host processor to enter Sleep mode. Table 19 presents the definitions of the various module and link status outputs.

Table 19. Module/Link Status Definitions

| Lstat_0<br>(Pad E8) | Lstat_1<br>(Pad F8) | TX_Switch_P<br>(Pad H3) | Host_wu<br>(Pad F9) | Mode                              |
|---------------------|---------------------|-------------------------|---------------------|-----------------------------------|
| x                   | 1                   | x                       | x                   | At least 1 SPP link established   |
| x                   | 0                   | x                       | x                   | No active SPP link                |
| x                   | x                   | 1                       | x                   | Transceiver = Transmit            |
| x                   | x                   | 0                       | x                   | Transceiver = Receive             |
| x                   | x                   | x                       | 0                   | Host can Sleep                    |
| x                   | x                   | x                       | 1                   | Wakeup host/host should not Sleep |

## 7.5 AUDIO PORT

### Advanced Audio Interface

The Advanced Audio Interface (AAI) is an advanced version of the Synchronous Serial Interface (SSI) that provides a full-duplex communications port to a variety of industry-standard 13/14/15/16-bit linear or 8-bit log PCM codecs, DSPs, and other serial audio devices.

The LMX9820A allows the support for one codec. The firmware selects the desired audio path and interface configuration by a parameter stored in NVS. The audio path options include the Motorola MC145483 codec, the OKI MSM7717 codec through the AAI, or no audio.

Table 20 summarizes the audio path selection and the configuration of the audio interface at the specific mode.

**Table 20. Audio Path Configuration**

| Audio Path                           | Format                        | AAI Bit Clock | AAI Frame Clock | AAI Frame Sync Pulse Length |
|--------------------------------------|-------------------------------|---------------|-----------------|-----------------------------|
| <b>Motorola MC145483<sup>1</sup></b> | 13-bit linear                 | 480 kHz       | 8 kHz           | 13 bits                     |
| <b>OKI MSM7717</b>                   | 8-bit log PCM<br>(A-law only) | 120 kHz       | 8 kHz           | 14 bits                     |

1. Due to internal clock divider limitations, the optimum of 512 kHz, 8 kHz cannot be reached. The values are set to the best possible values. The clock mismatch does not result in any discernible loss in audio quality.

## 8.0 Digital Smart Radio (Continued)

### 8.0 Digital Smart Radio

#### 8.1 FUNCTIONAL DESCRIPTION

The integrated Digital Smart Radio uses a heterodyne receiver architecture with a low intermediate frequency (2 MHz), such that the intermediate frequency filters can be integrated on-chip. The receiver consists of a low-noise amplifier (LNA) followed by two mixers. The intermediate frequency signal processing blocks consist of a poly-phase bandpass filter (BPF), two hard limiters (LIM), a frequency discriminator (DET), and a post-detection filter (PDF). The received signal level is detected by a received signal strength indicator (RSSI).

The received frequency equals the local oscillator frequency (fLO) plus the intermediate frequency (fIF):

$$fRF = fLO + fIF \text{ (supradyne).}$$

The radio includes a synthesizer consisting of a phase detector, a charge pump, an (off-chip) loop filter, an RF frequency divider, and a voltage-controlled oscillator (VCO).

The transmitter uses IQ-modulation with bit-stream data that is gaussian filtered. Other blocks included in the transmitter are a VCO buffer and a power amplifier (PA).

#### 8.2 RECEIVER FRONT END

The receiver front end consists of a low-noise amplifier (LNA) followed by two mixers and two low-pass filters for the I- and Q-channels.

The intermediate frequency (IF) part of the receiver front end consists of two IF amplifiers that receive input signals from the mixers, delivering balanced I- and Q-signals to the poly-phase bandpass filter. The poly-phase bandpass filter is directly followed by two hard limiters that together generate an AD-converted RSSI signal.

##### 8.2.1 Poly-Phase Bandpass Filter

The purpose of the IF bandpass filter is to reject noise and spurious (mainly adjacent channel) interference that would otherwise enter the hard-limiting stage. In addition, it handles image rejection.

The bandpass filter uses both the I- and Q-signals from the mixers. The out-of-band suppression should be higher than 40 dB ( $f < 1$  MHz,  $f > 3$  MHz). The bandpass filter is tuned over process spread and temperature variations by the autotuner circuitry. A 5th-order Butterworth filter is used.

##### 8.2.2 Hard Limiter and RSSI

The I- and Q-outputs of the bandpass filter are each followed by a hard-limiter. The hard-limiter has its own reference current. The RSSI (Received Signal Strength Indicator) reports the level of the RF input signal.

The RSSI is generated by piece-wise linear approximation of the level of the RF signal. The RSSI has a mV/dB scale, and an analog-to-digital converter for processing by the baseband circuit. The input RF power is converted to a 5-bit value. The RSSI value is then proportional to the input power (in dBm).

The digital output from the ADC is sampled on the BPK-TCTL signal low-to-high transition.

#### 8.3 RECEIVER BACK END

The hard limiters are followed by two frequency discriminators. The I-frequency discriminator uses the 90° phase-shifted signal from the Q-path, while the Q-discriminator uses the 90° phase-shifted signal from the I-path. A poly-phase bandpass filter performs the required phase shifting. The output signals of the I- and Q-discriminator are subtracted and filtered by a low-pass filter. An equalizer is added to improve the eye-pattern for 101010 patterns.

After equalization, a dynamic AFC (automatic frequency offset compensation) circuit and slicer extract the RX\_DATA from the analog data pattern. The Eb/No of the demodulator is approximately 17 dB.

##### 8.3.1 Frequency Discriminator

The frequency discriminator gets its input signals from the limiter. A defined signal level (independent of the power supply voltage) is needed to obtain the input signal. Both inputs of the frequency discriminator have limiting circuits to optimize performance. The bandpass filter in the frequency discriminator is tuned by the autotuning circuitry.

##### 8.3.2 Post-Detection Filter and Equalizer

The output signals of the FM discriminator go through a post-detection filter followed by an equalizer. Both the post-detection filter and equalizer are tuned to the proper frequency by the autotuning circuitry. The post-detection filter is a low-pass filter intended to suppress all remaining spurious signals, such as the second harmonic (4 MHz) from the FM detector and noise generated after the limiter.

The post-detection filter also helps for attenuating the first adjacent channel signal. The equalizer improves the eye-opening for 101010 patterns. The post-detection filter is a third-order Butterworth filter.

#### 8.4 AUTOTUNING CIRCUITRY

The autotuning circuitry is used for tuning the bandpass filter, detector, post-detection filter, equalizer, and transmit filters for process and temperature variations. The circuitry includes offset compensation for the FM detector.

#### 8.5 SYNTHESIZER

The synthesizer consists of a phase-frequency detector, a charge pump, a low-pass loop filter, a programmable frequency divider, a voltage-controlled oscillator (VCO), a delta-sigma modulator, and a lookup table.

The frequency divider consists of a divide-by-2 circuit (divides the 5 GHz signal from the VCO down to 2.5 GHz), a divide-by-8-or-9 divider, and a digital modulus control. The delta-sigma modulator controls the division ratio and also generates an input channel value to the lookup table.

##### 8.5.1 Phase-Frequency Detector

The phase-frequency detector is a 5-state phase-detector. It responds only to transitions, hence phase-error is inde-

## 8.0 Digital Smart Radio (Continued)

pendent of input waveform duty cycle or amplitude variations. Loop lockup occurs when all the negative transitions on the inputs, F\_REF and F\_MOD, coincide. Both outputs (i.e., Up and Down) then remain high. This is equal to the zero error mode. The phase-frequency detector input frequency range operates at 12 MHz.

### 8.6 TRANSMITTER CIRCUITRY

The transmitter consists of ROM tables, two Digital to Analog (DA) converters, two low-pass filters, IQ mixers, and a power amplifier (PA).

The ROM tables generate a digital IQ signal based on the transmit data. The output of the ROM tables is inserted into IQ-DA converters and filtered through two low-pass filters. The two signal components are mixed up to 2.5 GHz by the TX mixers and added together before being inserted into the transmit PA.

#### 8.6.1 IQ-DA Converters and TX Mixers

The ROM output signals drive an I- and Q-DA converter. Two Butterworth low-pass filters filter the DA output signals. The 6 MHz clock for the DA converters and the logic circuitry around the ROM tables are derived from the autotuner.

The TX mixers mix the balanced I- and Q-signals up to 2.4-2.5 GHz. The output signals of the I- and Q-mixers are summed.

### 8.7 CRYSTAL REQUIREMENTS

The LMX9820A includes a crystal driver circuit. This circuit operates with an external crystal and capacitors to form an oscillator. Figure 10 shows the recommended crystal circuit. Table 24 on page 23 specifies system clock requirements.

The RF local oscillator and internal digital clocks for the LMX9820A are derived from the reference clock at the CLK+ input. This reference may either come from an external clock or a dedicated crystal oscillator. The crystal oscillator connections require a crystal and two grounded capacitors.

It is important to consider board- and design-dependent capacitance in tuning the crystal circuit. The following equations allow a close approximation of the required crystal tuning capacitance, but the actual values will vary with the capacitive properties of the board. As a result, there is some fine tuning of the crystal circuit which cannot be calculated, but must be determined experimentally by testing different values of load capacitance.

Many different crystals can be used with the LMX9820A. A key requirement from the Bluetooth specification is 20 ppm. Additionally, ESR (Equivalent Series Resistance) must be carefully considered. LMX9820A can support a maximum of 230Ω ESR, but it is recommended to stay < 100Ω ESR for best performance over voltage and temperature. See Figure 14 on page 23 for ESR as part of the crystal circuit for more information.

#### 8.7.1 Crystal

The crystal appears inductive near its resonant frequency. It forms a resonant circuit with its load capacitors. The res-

onant frequency may be trimmed with the crystal load capacitance.

#### 1. Load Capacitance

For resonance at the correct frequency, the crystal should be loaded with its specified load capacitance, which is the value of capacitance used in conjunction with the crystal unit. Load capacitance is a parameter specified by the crystal, typically expressed in pF. The crystal circuit shown in Figure 11 on page 20 is composed of:

- C1 (motional capacitance)
- R1 (motional resistance)
- L1 (motional inductance)
- C0 (static or shunt capacitance)

The LMX9820A provides some of the load with internal capacitors  $C_{int}$ . The remainder must come from the external capacitors and tuning capacitors labeled  $Ct1$  and  $Ct2$  as shown in Figure 10.  $Ct1$  and  $Ct2$  should have the same value for best noise performance.

The LMX9820A has an additional internal capacitance  $C_{TUNE}$  of 2.6 pF. Crystal load capacitance ( $C_L$ ) is calculated as:

$$C_L = C_{int} + C_{TUNE} + Ct1/Ct2$$

The  $C_L$  above does not include the crystal internal self-capacitance  $C_0$  as shown in Figure 11 on page 20, so the total capacitance is:

$$C_{total} = C_L + C_0$$

Based on the crystal specification and equation:

$$C_L = C_{int} + C_{TUNE} + Ct1//Ct2$$

$$C_L = 8pF + 2.6pF + 6pF = 16.6pF$$

16.6 pF is very close to the TEW crystal requirement of 16 pF load capacitance. With the internal shunt capacitance  $C_{total}$ :

$$C_{total} = 16.6pF + 5pF = 21.6pF$$

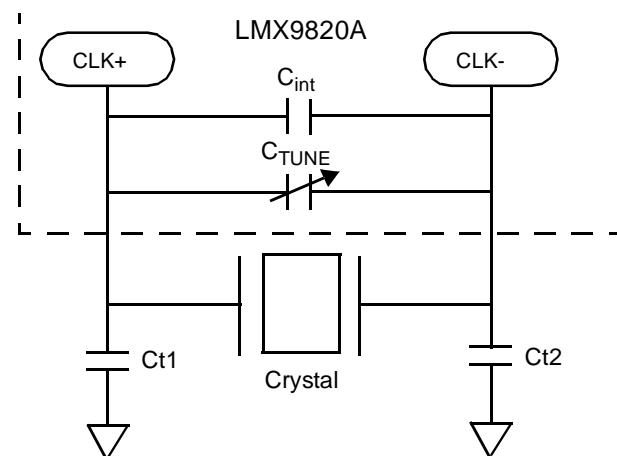


Figure 10. LMX9820A Crystal Recommended Circuit

## 8.0 Digital Smart Radio (Continued)

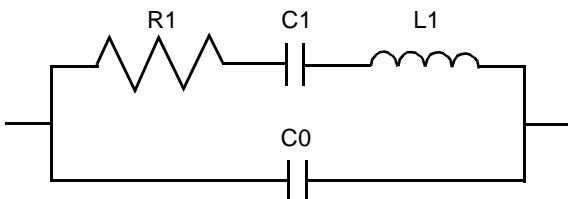


Figure 11. Crystal Equivalent Circuit

### 2. Crystal Pullability

Pullability is another important parameter for a crystal, which is the change in frequency of a crystal with units of ppm/pF, either from the natural resonant frequency to a load resonant frequency or from one load resonant frequency to another. The frequency can be pulled in a parallel resonant circuit by changing the value of load capacitance. A decrease in load capacitance causes an increase in frequency, and an increase in load capacitance causes a decrease in frequency.

### 3. Frequency Tuning

Frequency tuning is achieved by adjusting the crystal load capacitance with external capacitors. It is a Bluetooth requirement that the frequency is always within 20 ppm. The crystal network or oscillator must have cumulative accuracy specifications of **15 ppm** to provide margin for frequency drift with aging and temperature.

## 8.0 Digital Smart Radio (Continued)

### TEW Crystal

The LMX9820A has been tested with the TEW TAS-4025A crystal, see Table 21 on page 21 for specification. Because the internal capacitance of the crystal circuit is 8 pF and the load capacitance is 16 pF, 12 pF is a good starting point for both Ct1 and Ct2. The 2480 MHz RF frequency offset is then tested. Figure 12 on page 22 shows the RF frequency offset test results.

Figure 12 on page 22 shows the results are -20 kHz off the center frequency, which is -1 ppm. The pullability of the crystal is 2 ppm/pF, so the load capacitance must be decreased by about 1.0 pF. By changing Ct1 or Ct2 to 10 pF, the total load capacitance is decreased by 1.0 pF. Figure 13 on page 22 shows the frequency offset test results. The frequency offset is now zero with Ct1 = 10 pF, Ct2 = 10 pF.


Reference Table 22 on page 21 for crystal tuning values used on Austin Development Board with TEW crystal.

Table 21. TEW TAS-4025A

| Specification                    | Value                        |
|----------------------------------|------------------------------|
| Package                          | 4.0 x 2.5 x 0.65 mm (4 pads) |
| Frequency                        | 12.000 MHz                   |
| Mode                             | Fundamental                  |
| Stability                        | >15 ppm @ -40 to +85°C       |
| C <sub>L</sub> Load Capacitance  | 16 pF                        |
| ESR                              | 80Ω max.                     |
| C <sub>0</sub> Shunt Capacitance | 5 pF                         |
| Drive Level                      | 50 ±10uV                     |
| Pullability                      | 2 ppm/pF min                 |
| Storage Temperature              | -40 to +85°C                 |

Table 22. TEW on Arizona Board

| Reference | LMX9820A |
|-----------|----------|
| Ct1       | 10 pF    |
| Ct2       | 10 pF    |

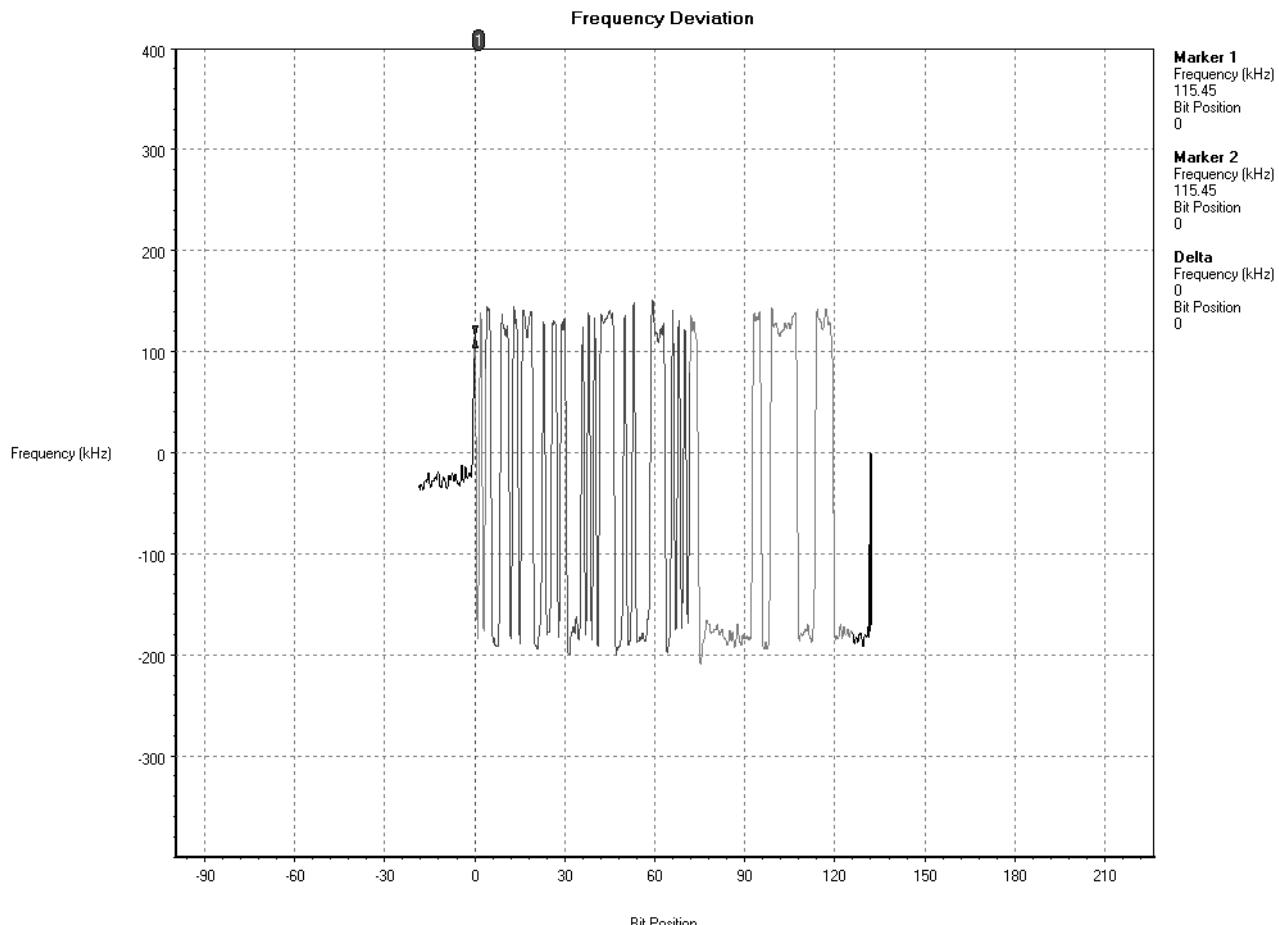

## 8.0 Digital Smart Radio (Continued)

Figure 12. Frequency Offset with 12 pF/12 pF Capacitors

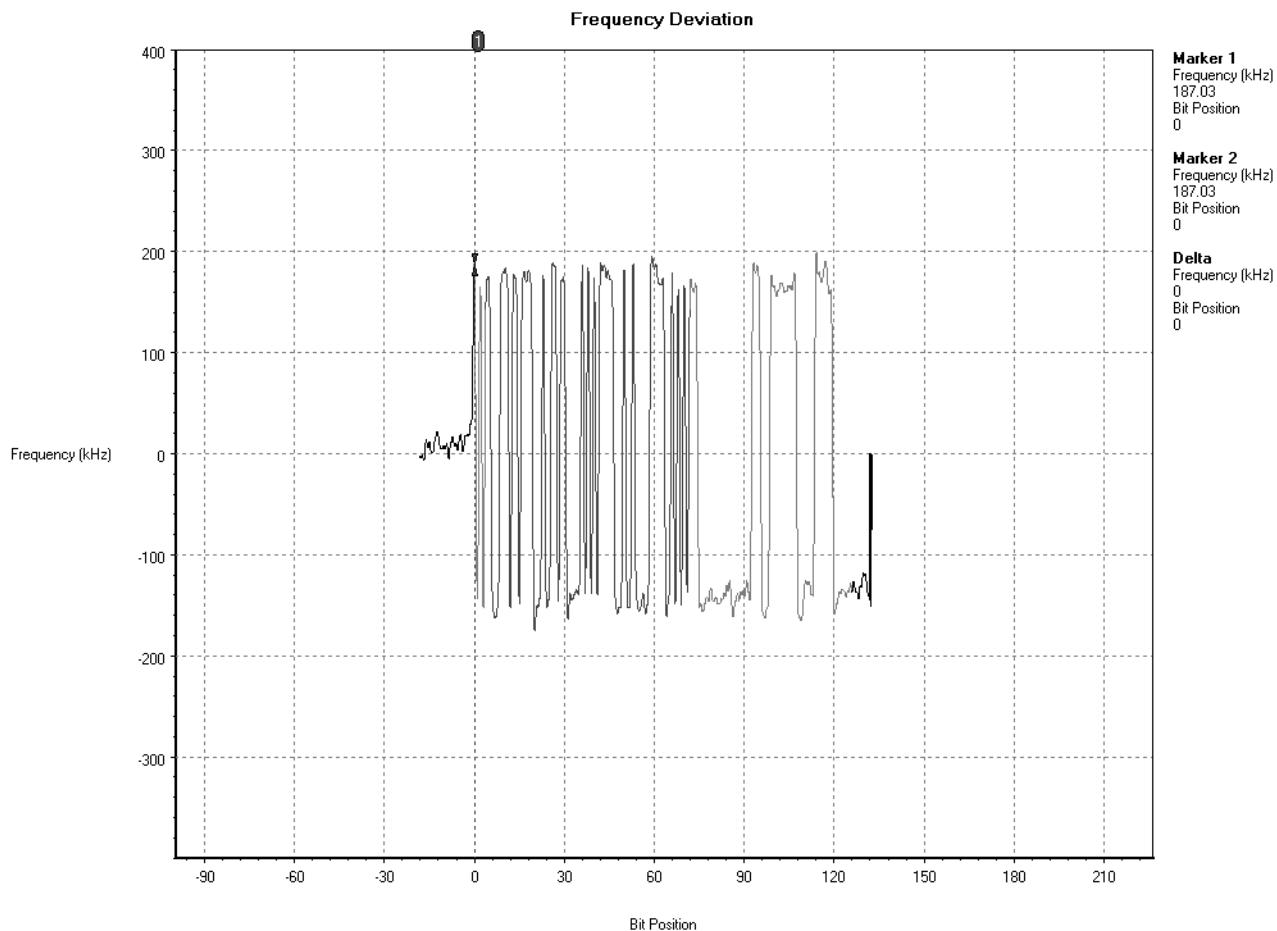


Figure 13. Frequency Offset with 10 pF/10 pF Capacitors

### 8.7.2 TCXO (Temperature Compensated Crystal Oscillator)

The LMX9820A also can operate with an external TCXO (Temperature Compensated Crystal Oscillator). The TCXO signal is directly connected to the CLK+, shown in Table 23 on page 22.

#### 1. Input Impedance

The LMX9820A CLK+ pin has an input impedance of 2 pF capacitance in parallel with  $>400\text{k}\Omega$  resistance.

#### 2. NKG3184A TCXO

The LMX9820A has also been tested with the NKG3184A TCXO. See Table 23 on page 22.

Table 23. TCXO NKG3184A

| Specification       | Value  |
|---------------------|--|
| Package             | 5.0 x 3.2 x 1.4 mm (4 pads)                          |
| Frequency           | 12.000 MHz   |
| Stability           | 18 ppm at -30 to +85°C (inclusive of all conditions) |
| Output Load         | 10kΩ/13 pF   |
| Current Consumption | 2.0 mA   |
| Output Level        | 0.3Vp-p to 2.0Vp-p                                   |
| Storage Temperature | -40 to +85°C   |
| DC Cut Capacitor    | Included in VC-TCXO                                  |

### 8.7.3 ESR (Equivalent Series Resistance)

LMX9820A can operate with a wide range of crystals with different ESR ratings. Reference Table 24 on page 23 and Figure 14 on page 23 for more details.

Table 24. System Clock Requirements

| Parameter   | Min | Typ    | Max | Unit         |
|---|-----|--------|-----|--------------|
| External Reference Clock Frequency                              |     | 12 MHz |     | MHz          |
| Frequency Tolerance (over full operating temperature and aging) |     | 15     | 20  | ppm          |
| Crystal Serial Resistance                                       |     |        | 230 | $\Omega$     |
| External Reference Clock Power Swing, pk to pk                  | 100 | 200    | 400 | mV           |
| Aging   |     |        | 1   | ppm per year |

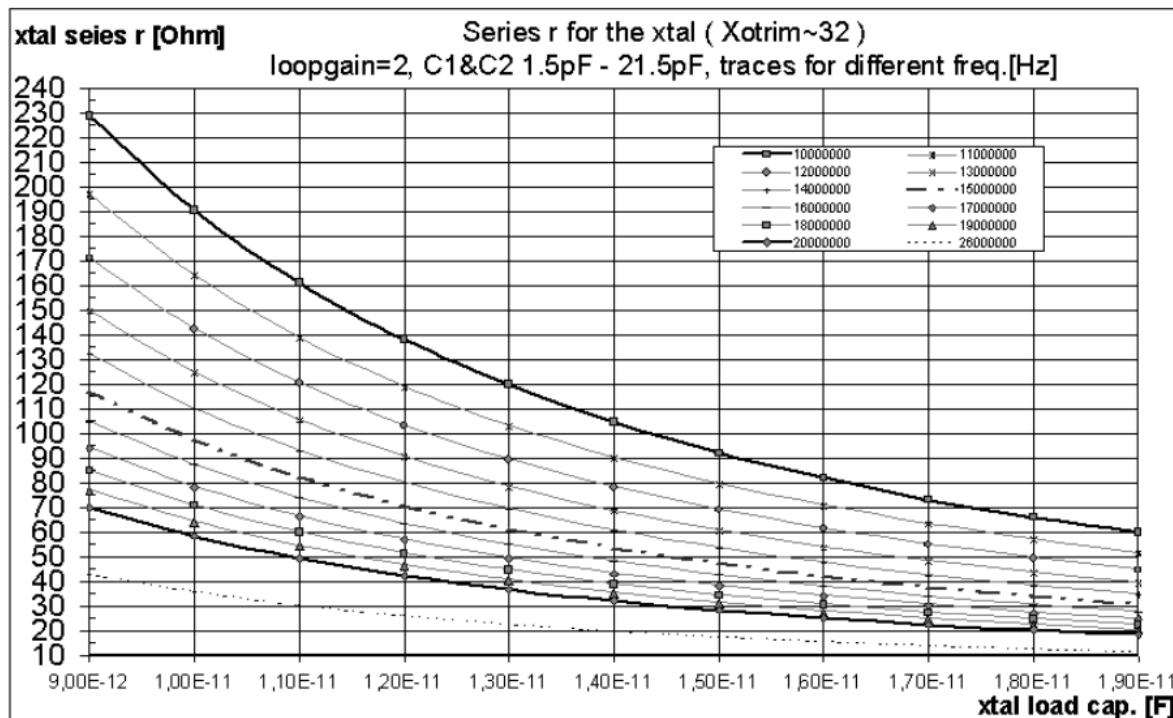


Figure 14. ESR vs. Load Capacitance for the Crystal

## 9.0 System Power-Up Sequence

The following sequence must be performed to correctly power-up the LMX9820A:

1. Apply IOVCC and VCC to the LMX9820A.

2. Reset\_b# and Reset\_5100# of the LMX9820A are driven high a minimum of 2 ms after the LMX9820A voltage rails are high. The LMX9820A is then properly reset. See Table 25 on page 24.

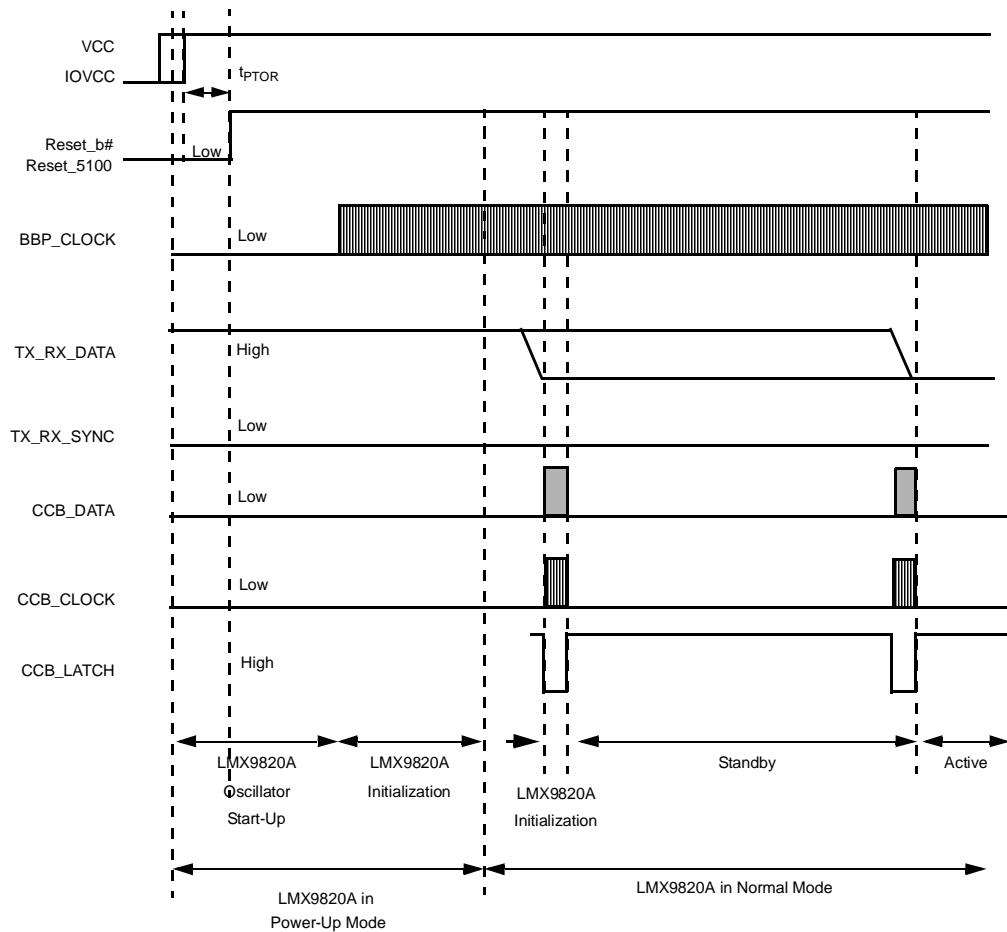


Figure 15. LMX9820A System Power-Up Sequence Timing

Table 25. LMX9820A System Power-up Sequence Timing

| Symbol     | Parameter      | Condition   | Min | Typ | Max | Unit |
|------------|----------------|---|-----|-----|-----|------|
| $t_{PTOR}$ | Power to Reset | $V_{CC}$ and $IO_{VCC}$ at operating voltage level to valid reset | 2   |     |     | ms   |

## 10.0 Integrated Firmware

The LMX9820A includes the full Bluetooth protocol stack up to RFComm to support the following profiles:

- GAP (Generic Access Profile)
- SDAP (Service Discovery Application Profile)
- SPP (Serial Port Profile)

Figure 16 shows the Bluetooth protocol stack with command interpreter interface. The command interpreter offers a number of different commands to support the functionality given by the different profiles. Execution and interface timing is handled by the control application.

The chip has an internal data area in Flash that includes the parameters shown in Table 26 on page 26.

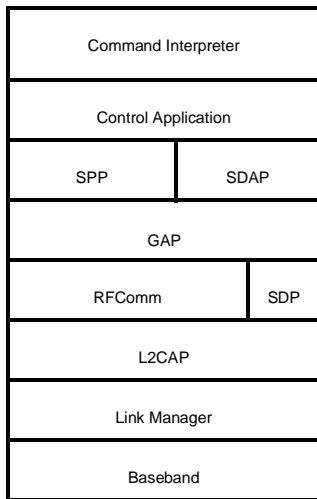


Figure 16. LMX9820A Software Implementation

### 10.1 FEATURES

#### 10.1.1 Operation Modes

On boot-up, the application configures the module following the parameters in the data area.

##### Automatic Mode

###### No Default Connections Stored

In Automatic mode the module is connectable and discoverable and automatically answers to service requests. The command interpreter listens to commands and links can be set up. The full command list is supported.

If connected by another device, the module sends an event back to the host, where the RFComm port has been connected, and switches to transparent mode.

###### Default Connections Stored

If default connections were stored on a previous session, after the LMX9820A is reset, it will attempt to reconnect to each device stored within the data Flash three times. The host will be notified about the success of the link setup via a link status event.

###### Command Mode

In Command mode, the LMX9820A does not check the default connections section within the Data Flash. If connected by another device, it will *not* switch to transparent mode and continue to interpret data sent on the UART.

#### Transparent Mode

The LMX9820A supports transparent data communication from the UART interface to a Bluetooth link.

If activated, the module does not interpret the commands on the UART which normally are used to configure and control the module. In this case, the packets do not need to be formatted as described in Table 28 on page 28. Instead, all data are directly passed through the firmware to the active Bluetooth link and the remote device.

Transparent mode can only be supported on a point-to-point connection. To leave Transparent mode, the host must send a UART\_BREAK signal to the module

#### Force Master Mode

In Force Master mode, the LMX9820A tries to act like an Access point for multiple connections. In this mode, it will only accept a link if a master/slave role switch is accepted by the connecting device. After successful link establishment, the LMX9820A will be master and available for additional incoming links. On the first incoming link the LMX9820A may switch to transparent mode, depending on the setting for automatic or command mode. Additional links will only be possible if the device is not in transparent mode.

#### 10.1.2 Default Connections

The LMX9820A supports the storage of up to 3 default connections within its NVS. Those connections can either be connected after reset or on demand using a specific command.

#### 10.1.3 Event Filter

The LMX9820A uses events or indicators to notify the host about successful commands or changes on the Bluetooth interface. Depending on the application, the LMX9820A can be configured. The following levels are defined:

- *No Events*—the LMX9820A is not reporting any events. Optimized for passive cable replacement solutions.
- *Standard LMX9820A Events*—only necessary events will be reported.
- *All Events*—additional to the standard all changes at the physical layer will be reported.

#### 10.1.4 Default Link Policy

Each Bluetooth link can be configured to support master/slave role switch, Hold mode, Sniff mode, and Park mode. The default link policy defines the standard setting for incoming and outgoing connections.

#### 10.1.5 Audio Support

The LMX9820A offers commands to establish and release synchronous connections (SCO) to support Headset or Handsfree applications. The firmware supports one active link with all available package types (HV1, HV2, HV3), for routing audio data between the Bluetooth link and the advanced audio interface. To provide the analog data interface, an external audio codec is required. The LMX9820A includes a list of codecs which can be used.

Table 26. Operation Parameters Stored in LMX9820A

| Parameter              | Default Value   | Description  |
|------------------------|---|--|
| BDADDR                 | (Hardcoded into device)   | Bluetooth device address   |
| Local Name             | Serial port device  |  |
| PinCode                | 0000  | Bluetooth PinCode  |
| Operation Mode         | Automatic   | Command or Automatic mode  |
| Default Connections    | 0   | Up to three default devices to connect on default  |
| SDP Database           | 1 SPP entry:<br>Name: COM1<br>Authentication and encryption enabled | Service discovery database, control for supported profiles   |
| UART Speed             | 9600  | Sets the speed of the physical UART interface to the host  |
| UART Settings          | 1 Stop bit, parity disabled   | Parity and stop bits on the hardware UART interface  |
| Ports to Open          | 0000 0001   | Defines the RFCOMM ports to open   |
| Link Keys              | No link keys  | Link keys for paired devices   |
| Security Mode          | 2   | Security mode  |
| Page Scan Mode         | Connectable   | Connectable/Not connectable for other devices  |
| Inquiry Scan Mode      | Discoverable  | Discoverable/Not Discoverable/Limited Discoverable for other devices   |
| Default Link Policy    | All modes allowed   | Configures modes allowed for incoming or outgoing connections (master/slave role switch, Hold mode, Sniff mode, Park mode)   |
| Default Link Timeout   | 20 seconds  | The Default Link Timeout configures the timeout, after which the link is assumed lost, if no packages have been received from the remote device.   |
| Event Filter           | Standard LMX9820A events reported                                   | Defines the level of reporting on the UART<br>- No events<br>- Standard events<br>- Standard including ACL link events   |
| Default Audio Settings | None  | Configures the settings for the external codec and the air interface format. <ul style="list-style-type: none"><li>• Codecs:<ul style="list-style-type: none"><li>— Motorola MC145483</li><li>— OKI MSM7717</li></ul></li><li>• Air format:<ul style="list-style-type: none"><li>— CVSD</li><li>— <math>\mu</math>-Law</li><li>— A-Law</li></ul></li></ul> |

## 11.0 Power Reduction

The LMX9820A supports several low-power modes to reduce power in different operating situations. The modular structure of the LMX9820A allows the firmware to power down unused modules.

The low-power modes have influence on:

- *UART transport layer*—enables or disables the interface.
- *Bluetooth Baseband activity*—firmware disables LLC and radio, if possible.

### 11.1 LOW POWER MODES

The following LMX9820A power modes, which depend on the activity level of the UART transport layer and the radio activity, are defined:

The activity of the Bluetooth radio mainly depends on application requirements and is controlled by standard Bluetooth operations such as inquiry/page scanning or an active link. A remote device establishing or disconnecting a link may also indirectly change the activity level of the radio.

The UART transport layer by default is enabled on device power up. The “Disable Transport Layer” command is used to disable the transport layer. Therefore, only the host-side command interface can disable the transport layer. Enabling the transport layer is controlled by the hardware wake-up signalling. This can be initiated from either the host or an LMX9820A input. See also “LMX9820A Software Users Guide” for detailed information on timing and implementation requirements.

Table 27. Power Mode Activity

| Power Mode | UART | Bluetooth Radio | Reference Clock |
|------------|------|-----------------|-----------------|
| PM0        | Off  | Off             | None            |
| PM1        | On   | Off             | 12 MHz          |
| PM2        | Off  | Scanning        | 12 MHz          |
| PM3        | On   | Scanning        | 12 MHz          |
| PM4        | Off  | SPP Link        | 12 MHz          |
| PM5        | On   | SPP Link        | 12 MHz          |

## 11.2 UART TRANSPORT LAYER CONTROL

### 11.2.1 Hardware Wake-Up Functionality

In some circumstances, the host may switch off the transport layer of the LMX9820A to reduce power consumption. The host and LMX9820A then may shut down their UART interfaces.

To simplify the system design, the UART interface is configured for hardware wake-up functionality. For a detailed timing and command functionality, see the “LMX9820A Software Users Guide”.

The interface between the host and LMX9820A is shown in Figure 17.

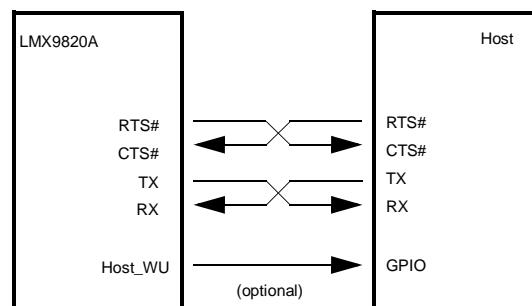


Figure 17. UART Null Modem Connections

### 11.2.2 Disabling the UART Transport Layer

The host can disable the UART transport layer by sending the “Disable Transport Layer” Command. The LMX9820A will empty its buffers, send the confirmation event, and disable its UART interface. The UART interface will then be reconfigured to wake up the LMX9820A on a falling edge of the CTS pin.

### 11.2.3 LMX9820A Enabling the UART Interface

Because the transport layer can be disabled in any situation, the LMX9820A must verify that the transport layer is enabled before sending data to the host. Possible situations in which the LMX9820A will need to re-enable the interface include incoming data or incoming link indicators. If the UART is not enabled, the LMX9820A must assume that the host is in a low-power mode and initiate a wake-up event by asserting RTS and setting HOST\_WU to 1. To be able to respond to the wake-up event, the host must monitor its CTS input (i.e. the LMX9820A RTS output).

As soon as the host activates its RTS output (i.e. the LMX9820A CTS input), the LMX9820A will first send a confirmation event and then start to transmit the events.

### 11.2.4 Enabling the UART Transport Layer from Host

If the host needs to send data or commands to the LMX9820A while the UART transport layer is disabled, it must first assume that the LMX9820A is sleeping and wake it up by asserting the host RTS output (i.e. the LMX9820A CTS input).

When the LMX9820A detects the wake-up signal, it enables the UART and acknowledges the wake-up signal by asserting its RTS output and HOST\_WU signal. Additionally, the wake-up event will be acknowledged by sending a confirmation event. When the host has received this “Transport Layer Enabled” event, it knows the LMX9820A is ready to receive commands.

## 12.0 Command Interface

The LMX9820A offers Bluetooth functionality through either a self-contained slave functionality or a simple command interface. The interface is carried over the UART interface.

The following sections describe the protocol on the UART interface between the LMX9820A and the host in command mode (see Figure 18). In Transparent mode, no data framing is necessary and the device does not interpret data carried over the interface as commands.

### 12.1 FRAMING

The connection is considered "Error free". But for packet recognition and synchronization, some framing is used.

All packets sent in both directions are constructed following the model shown in Table 28.

#### 12.1.1 Start and End Delimiters

The "STX" character is used as the start delimiter: STX = 0x02. ETX = 0x03 is used as the end delimiter.

#### 12.1.2 Packet Type ID

This byte identifies the type of packet. See Table 29 for details.

#### 12.1.3 Opcode

The opcode identifies the command to execute. The opcode values can be found within the "LMX9820A Software User's Guide" included with the LMX9820A Evaluation Board.

#### 12.1.4 Data Length

Number of bytes in the Packet Data field. The maximum size is 333 data bytes per packet.

#### 12.1.5 Checksum

This is a simple Block Check Character (BCC) checksum of the bytes "Packet type", "Opcode", and "Data Length". The BCC checksum is calculated as low byte of the sum of all bytes (e.g., if the sum of all bytes is 0x3724, the checksum is 0x24).

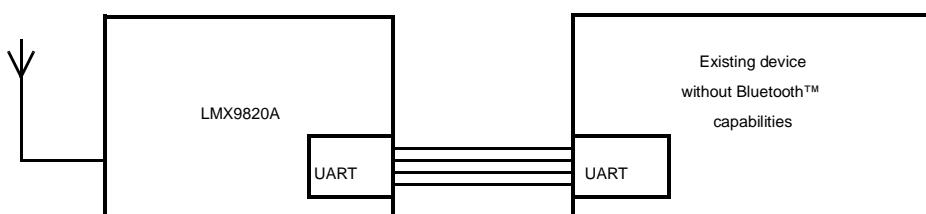


Figure 18. Bluetooth Functionality

Table 28. Packet Framing

| Start Delimiter    | Packet Type ID | Opcode | Data Length | Checksum | Packet Data         | End Delimiter |
|--------------------|----------------|--------|-------------|----------|---------------------|---------------|
| 1 Byte             | 1 Byte         | 1 Byte | 2 Bytes     | 1 Byte   | <Data Length> Bytes | 1 Byte        |
| -----Checksum----- |                |        |             |          |                     |               |

Table 29. Packet Type Identification

| ID          | Direction           | Description  |
|-------------|---------------------|--|
| 0x52<br>'R' | REQUEST<br>(REQ)    | A request sent to the Bluetooth module.<br>All requests are answered by exactly one confirm.   |
| 0x43<br>'C' | Confirm<br>(CFM)    | The Bluetooth modules confirm to a request.<br>All requests are answered by exactly one confirm.   |
| 0x69<br>'i' | Indication<br>(IND) | Information sent from the Bluetooth module that is not a direct confirm to a request.<br>Indicating status changes, incoming links, or unrequested events. |
| 0x72<br>'r' | Response<br>(RES)   | An optional response to an indication.<br>This is used to respond to some type of indication message.  |

## 12.0 Command Interface (Continued)

### 12.2 COMMAND SET OVERVIEW

The LMX9820A has a well-defined command set to:

- Configure the device:
  - Hardware settings
  - Local Bluetooth parameters
  - Service database
- Set up and handle links

Tables 30 through 40 show the actual command set and the events coming back from the device. A fully documented description of the commands can be found in the "LMX9820A Software Users Guide".

**Note:** For standard Bluetooth operation, only commands from Table 30 through Table 32 are used. Most of the remaining commands are only for configuration purposes.

**Table 30. Device Discovery Commands**

| Command            | Event                      | Description                      |
|--------------------|----------------------------|----------------------------------|
| Inquiry            | Inquiry Complete           | Search for devices               |
|                    | Device Found               | Lists BDADDR and class of device |
| Remote Device Name | Remote Device Name Confirm | Get name of remote device        |

**Table 31. SDAP Client Commands**

| Command                | Event                          | Description                                    |
|------------------------|--------------------------------|--|
| SDAP Connect           | SDAP Connect Confirm           | Create an SDP connection to remote device      |
| SDAP Disconnect        | SDAP Disconnect Confirm        | Disconnect an active SDAP link                 |
|                        | Connection Lost                | Notification for lost SDAP link                |
| SDAP Service Browse    | Service Browse Confirm         | Get the services of the remote device          |
| SDAP Service Search    | SDAP Service Search Confirm    | Search a specific service on a remote device   |
| SDAP Attribute Request | SDAP Attribute Request Confirm | Searches for services with specific attributes |

**Table 32. SPP Link Commands**

| Command            | Event                         | Description  |
|--------------------|-------------------------------|--|
| Establish SPP Link | Establishing SPP Link Confirm | Initiates link establishment to a remote device        |
|                    | Link Established              | Link successfully established                          |
|                    | Incoming Link                 | A remote device established a link to the local device |
| Set Link Timeout   | Set Link Timeout Confirm      | Confirms the supervision timeout for the existing link |
| Get Link Timeout   | Get Link Timeout Confirm      | Get the supervision timeout for the existing link      |
| Release SPP Link   | Release SPP Link Confirm      | Initiate release of SPP link                           |
| SPP Send Data      | SPP Send Data Confirm         | Send data to specific SPP port                         |
|                    | Incoming Data                 | Incoming data from remote device                       |
| Transparent Mode   | Transparent Mode Confirm      | Switch to transparent mode on the UART                 |

**Table 33. Default Connection Commands**

| Command                         | Event                              | Description  |
|---------------------------------|------------------------------------|--|
| Connect Default Connection      | Connect Default Connection Confirm | Connects to either one or all stored default connections |
| Store Default Connection        | Store Default Connection Confirm   | Store device as default connection                       |
| Get List of Default Connections | List of Default Devices            |  |
| Delete Default Connections      | Delete Default Connections Confirm |  |

## 12.0 Command Interface (Continued)

**Table 34. Power Mode Commands**

| Command                 | Event                           | Description   |
|-------------------------|---------------------------------|---|
| Set Default Link Policy | Set Default Link Policy Confirm | Defines the link policy used for any incoming or outgoing link. |
| Get Default Link Policy | Get Default Link Policy Confirm | Returns the stored default link policy                          |
| Set Link Policy         | Set Link Policy Confirm         | Defines the modes allowed for a specific link                   |
| Get Link Policy         | Get Link Policy Confirm         | Returns the actual link policy for the link                     |
| Enter Sniff Mode        | Enter Sniff Mode Confirm        |   |
| Exit Sniff Mode         | Exit Sniff Mode Confirm         |   |
| Enter Park Mode         | Enter Park Mode Confirm         |   |
| Enter Hold Mode         | Enter Hold Mode Confirm         |   |
|                         | Power Save Mode Changed         | Remote device changed the power save mode on the link           |

**Table 35. Audio Control Commands**

| Command                | Event                             | Description  |
|------------------------|-----------------------------------|--|
| Establish SCO Link     | Establish SCO Link Confirm        | Establish SCO link on existing RFComm link                     |
| Release SCO Link       | Release SCO Link Confirm          | Release SCO link   |
|                        | SCO Link Established Indicator    | A remote device has established a SCO link to the local device |
|                        | SCO Link Released Indicator       | SCO link has been released                                     |
| Change SCO Packet Type | Change SCO Packet Type Confirm    | Changes packet type for existing SCO link                      |
|                        | SCO Packet Type changed indicator | SCO packet type has been changed                               |
| Set Audio Settings     | Set Audio Settings Confirm        | Set audio settings for existing link                           |
| Get Audio Settings     | Get Audio Settings Confirm        | Get audio settings for existing link                           |
| Set Volume             | Set Volume Confirm                | Configure the volume   |
| Get Volume             | Get Volume Confirm                | Get current volume setting                                     |
| Mute                   | Mute Confirm                      | Mutes the microphone input                                     |

**Table 36. Wake Up Function Commands**

| Command                 | Event                   | Description  |
|-------------------------|-------------------------|--|
| Disable Transport Layer | Transport Layer Enabled | Disabling the UART transport layer and activates the hardware wake-up function |

## 12.0 Command Interface (Continued)

**Table 37. SPP Port Configuration and Status Commands**

| Command                | Event                          | Description  |
|------------------------|--------------------------------|--|
| Set Port Config        | Set Port Config Confirm        | Set port setting for the “virtual” serial port link over the air     |
| Get Port Config        | Get Port Config Confirm        | Read the actual port settings for a “virtual” serial port            |
|                        | Port Config Changed            | Notification if port settings were changed from remote device        |
| SPP Get Port Status    | SPP Get Port Status Confirm    | Returns status of DTR and RTS (for the active RFComm link)           |
| SPP Port Set DTR       | SPP Port Set DTR Confirm       | Sets the DTR bit on the specified link                               |
| SPP Port Set RTS       | SPP Port Set RTS Confirm       | Sets the RTS bit on the specified link                               |
| SPP Port BREAK         | SPP Port BREAK                 | Indicates that the host has detected a break                         |
| SPP Port Overrun Error | SPP Port Overrun Error Confirm | Used to indicate that the host has detected an overrun error         |
| SPP Port Parity Error  | SPP Port Parity Error Confirm  | Host has detected a parity error                                     |
| SPP Port Framing Error | SPP Port Framing Error Confirm | Host has detected a framing error                                    |
|                        | SPP Port Status Changed        | Indicates that remote device has changed one of the port status bits |

**Table 38. Local Settings Commands**

| Command                  | Event                            | Description  |
|--------------------------|----------------------------------|--|
| Read Local Name          | Read Local Name Confirm          | Read user-friendly name of the device                                |
| Write Local Name         | Write Local Name Confirm         | Set the user-friendly name of the device                             |
| Read Local BDADDR        | Read Local BDADDR Confirm        |  |
| Change Local BDADDR      | Change Local BDADDR Confirm      | <b>Note:</b> Only use if you have your own BDADDR pool               |
| Store Class of Device    | Store Class of Device Confirm    |  |
| Set Scan Mode            | Set Scan Mode Confirm            | Change mode for discoverability and connectability                   |
|                          | Set Scan Mode Indication         | Reports end of automatic limited discoverable mode                   |
| Get Fixed Pin            | Get Fixed Pin Confirm            | Reads current PinCode stored within the device                       |
| Set Fixed Pin            | Set Fixed Pin Confirm            | Set the local PinCode  |
| Get Security Mode        | Get Security Mode Confirm        | Get actual Security mode   |
| Set Security Mode        | Set Security Mode Confirm        | Configure Security mode for local device (default 2)                 |
| Remove Pairing           | Remove Pairing Confirm           | Remove pairing with a remote device                                  |
| List Paired Devices      | List of Paired Devices           | Get list of paired devices stored in the LMX9820A data memory        |
| Set Default Link Timeout | Set Default Link Timeout Confirm | Store default link supervision timeout                               |
| Get Default Link Timeout | Get Default Link Timeout Confirm | Get stored default link supervision timeout                          |
| Force Master Role        | Force Master Role Confirm        | Enables/Disables the request for master role at incoming connections |

**Table 39. Local Service Database Configuration Commands**

| Command                | Event                          | Description  |
|------------------------|--------------------------------|--|
| Store SPP Record       | Store SPP Record Confirm       | Create a new SPP record within the service database      |
| Store DUN Record       | Store DUN Record Confirm       | Create a new DUN record within the service database      |
| Store FAX Record       | Store FAX Record Confirm       | Create a new FAX record within the service database      |
| Store OPP Record       | Store OPP Record Confirm       | Create a new OPP record within the service database      |
| Store FTP Record       | Store FTP Record Confirm       | Create a new FTP record within the service database      |
| Store IrMCSync Record  | Store IrMCSync Record Confirm  | Create a new IrMCSync record within the service database |
| Enable SDP Record      | Enable SDP Record Confirm      | Enable or disable SDP records                            |
| Delete All SDP Records | Delete All SDP Records Confirm |  |
| Ports to Open          | Ports to Open Confirmed        | Specify the RFCOMM Ports to open on startup              |

**Table 40. Local Hardware Commands**

| Command                    | Event                              | Description  |
|----------------------------|------------------------------------|--|
| Set Default Audio Settings | Set Default Audio Settings Confirm | Configure default settings for audio codec and air format, stored in NVS |
| Get Default Audio Settings | Get Default Audio Settings Confirm | Get stored default audio settings  |
| Set Event Filter           | Set Event Filter Confirm           | Configures the reporting level of the command interface                  |
| Get Event Filter           | Get Event Filter Confirm           | Get the status of the reporting level                                    |
| Read RSSI                  | Read RSSI Confirm                  | Returns an indicator for the incoming signal strength                    |
| Change UART Speed          | Change UART Speed Confirm          | Set specific UART speed; needs proper ISEL pin setting                   |
| Change UART Settings       | Change UART Settings Confirm       | Change configuration for parity and stop bits                            |
| Test Mode                  | Test Mode Confirm                  | Enable Bluetooth, EMI test, or local loopback                            |
| Restore Factory Settings   | Restore Factory Settings Confirm   |  |
| Reset                      | Dongle Ready                       | Soft reset   |
| Firmware Upgrade           |                                    | Stops the Bluetooth firmware and executes the in-system programming code |

## 13.0 Usage Scenarios

### 13.1 SCENARIO 1: POINT-TO-POINT CONNECTION


LMX9820A acts only as slave, no further configuration is required.

**Example:** Sensor with LMX9820A; hand-held device with standard Bluetooth option.

The SPP conformance of the LMX9820A allows any device using the SPP to connect to the LMX9820A.

By switching to transparent mode automatically, the controller has no need for an additional protocol layer; data is sent raw to the other Bluetooth device.

On default, a PinCode is requested to block unallowed targeting.

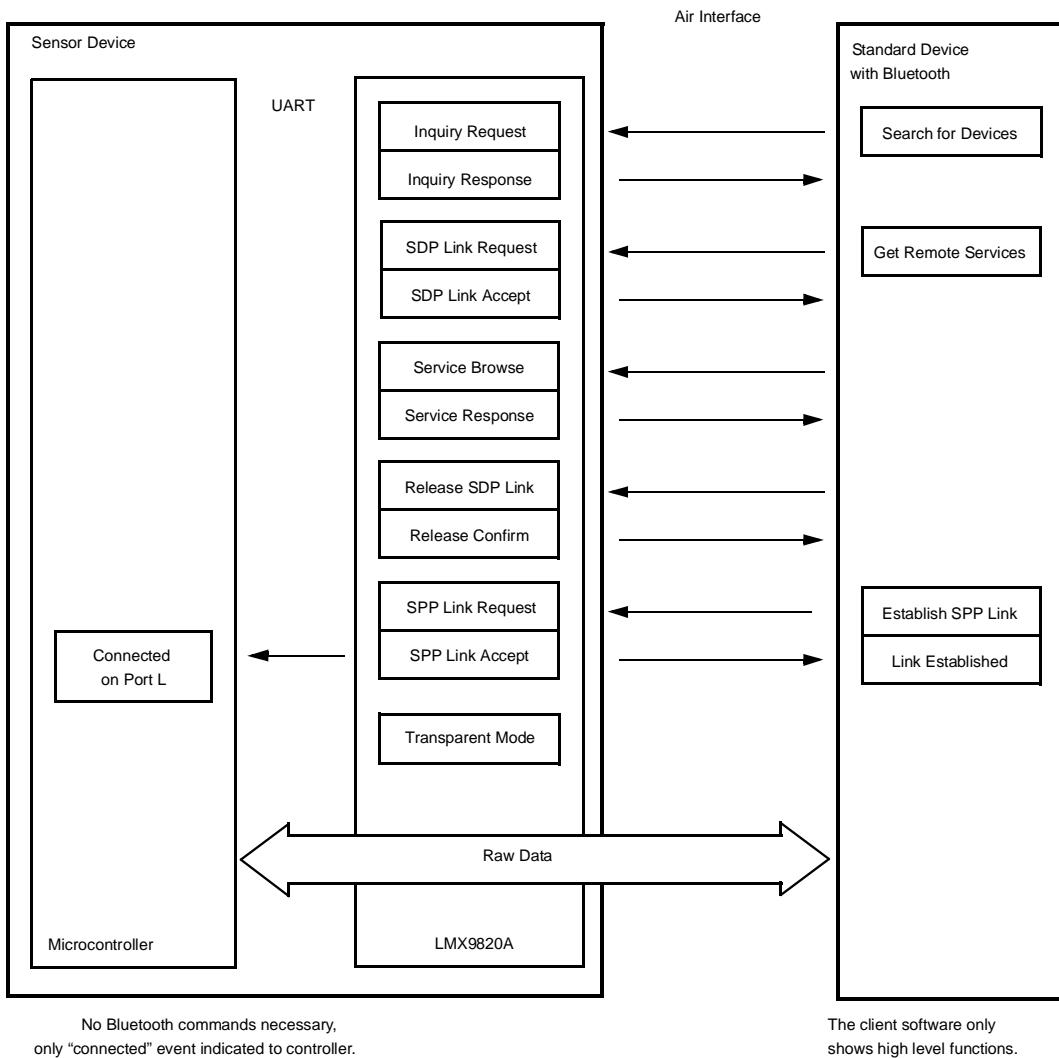

**Figure 19. Point-to-Point Connection**

## 13.0 Usage Scenarios (Continued)

### 13.2 SCENARIO 2: AUTOMATIC POINT-TO-POINT CONNECTION


LMX9820A at both sides.

**Example:** Serial Cable Replacement.

Device #1 controls the link setup with a few commands as described.

If step 5 is executed, the stored default device is connected (step 4) after reset (in automatic mode only) or by sending the “Connect to Default Device” command. The command can be sent to the device at any time.

If step 6 is left out, the microcontroller has to use the “Send Data” command, instead of sending data directly to the module.

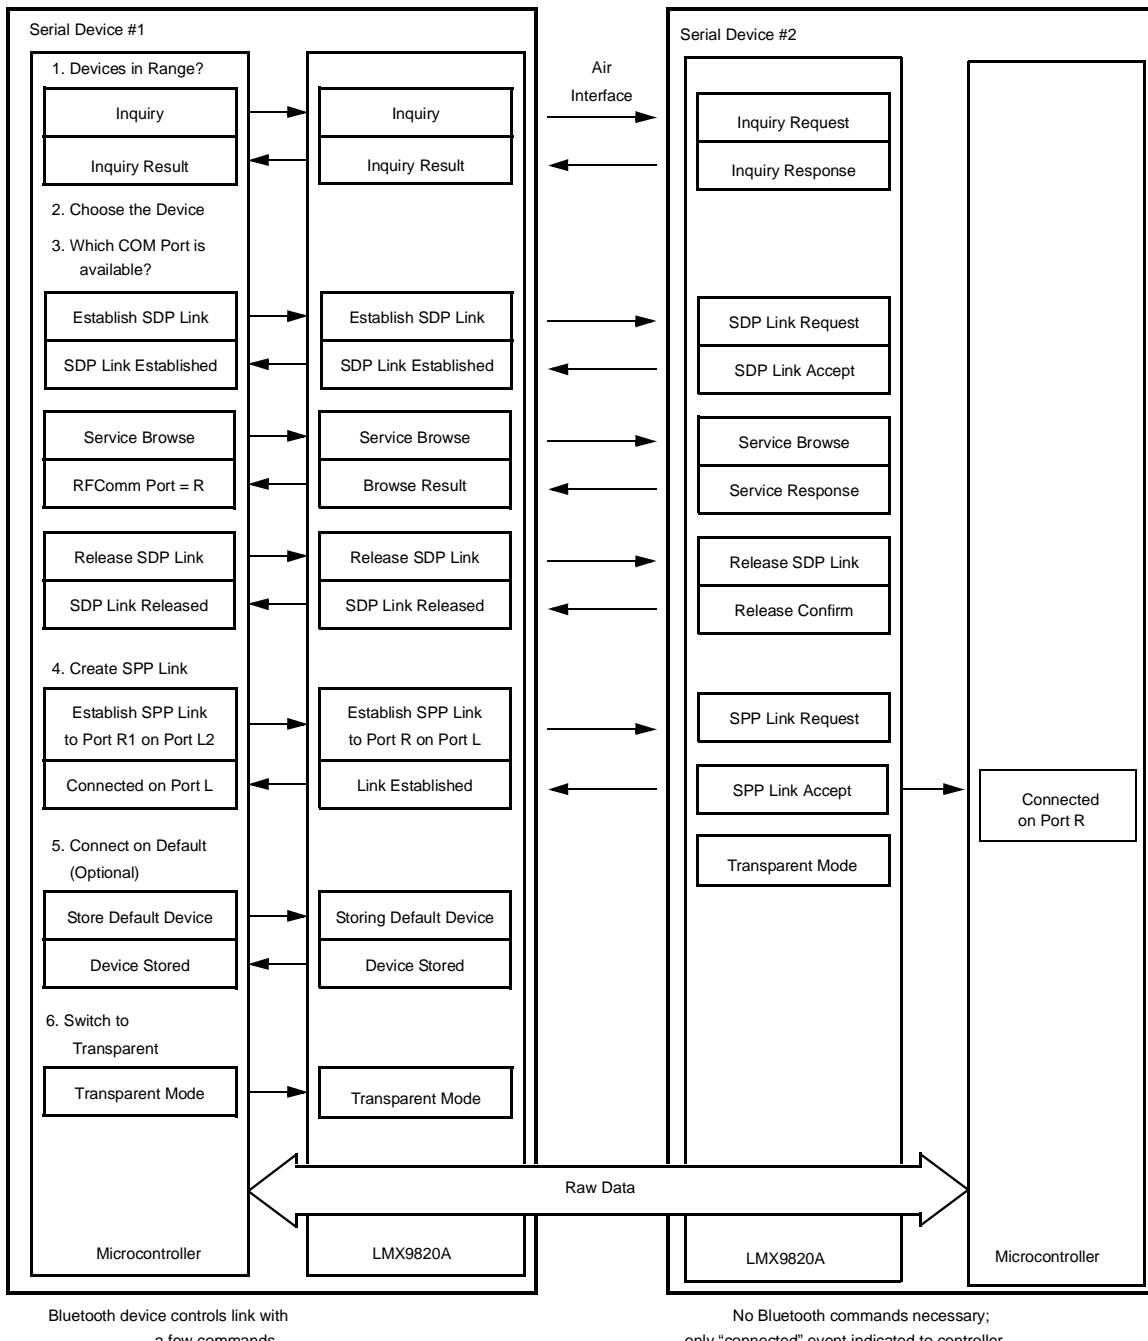

1. Port R indicates the remote RFCOMM channel to connect to. Usually the result of the SDP request.
2. Port L indicates the Local RFCOMM channel used for that connection.

**Figure 20. Automatic Point-to-Point Connection**

### 13.3 SCENARIO 3: POINT-TO-MULTIPOINT CONNECTION

LMX9820A acts as master for several slaves.

**Example:** Two sensors with LMX9820A; one hand-held master device with LMX9820A.

Serial Devices #2 and #3 establish the link automatically as soon as they are contacted by another device. No controller interaction is necessary for setting up the Bluetooth link. Both switch automatically into transparent mode. The host sends raw data over the UART.

Serial Device #1 is acting as master for both devices. The host controls which device is sending data, using the “Send data” command. If the device receives data from the other devices, it is packaged into an “Incoming data” event. The event includes the device related port number.

If necessary, a link configuration can be stored as default in the master Serial Device #1 to enable the automatic reconnect after reset, power-up, or by sending the “connect default connection” command.

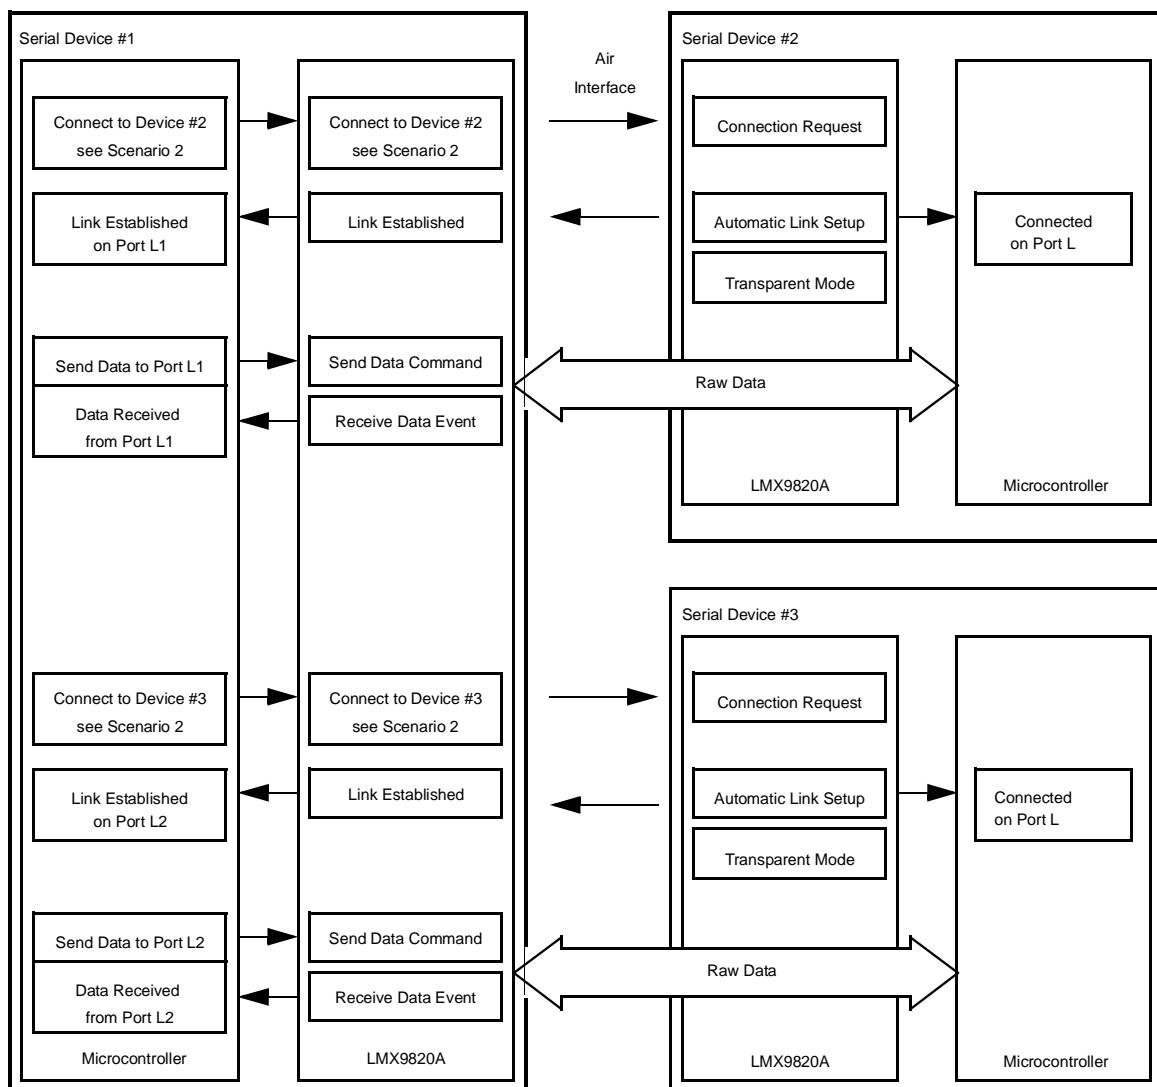


Figure 21. Point-to-Multipoint Connection

## 14.0 Application Information

Figure 22 on page 36 represents a typical system schematic for the LMX9820A.

## 14.1 MATCHING NETWORK

The antenna matching network may or may not be required, depending upon the impedance of the antenna chosen. A 6.8 pF blocking capacitor is recommended.

## 14.2 FILTERED POWER SUPPLY

It is important to provide the LMX9820A with adequate ground planes and a filtered power supply. It is highly recommended that a 0.1  $\mu$ F and a 10 pF bypass capacitor be placed as close as possible to VCC (pad H2) on the LMX9820A.

### 14.3 HOST INTERFACE

To set the logic thresholds of the LMX9820A to match the host system, IOVCC (pad H12) must be connected to the logic power supply of the host system. It is highly recommended that a 10 pF bypass capacitor be placed as close as possible to the IOVCC pad on the LMX9820A.


ISEL2 (pad H13) and ISEL1 (pad J13) can be strapped to the host logic 0 and 1 levels to set the host interface boot-up configuration. Alternatively both ISEL2 and ISEL1 can be hardwired over  $10\text{k}\Omega$  pullup/pulldown resistors.

Env0 (pad E9) and Env1 (pad B11) can be left unconnected (both are pulled high), if no ISP capability is required. If the ISP environment mode is needed, then Env0 must be driven to logic low and Reset needs to be asserted. After de-assertion of Reset, the LMX9820A boots into the mode corresponding to the values present on Env0 and Env1. Alternatively, a firmware upgrade command can be used.

## 14.4 CLOCK INPUT

The clock source must be placed as close as possible to the LMX9820A. The quality of the radio performance is directly related to the quality of the clock source connected to the oscillator port on the LMX9820A. Careful attention must be paid to the crystal/oscillator parameters or radio performance could be drastically reduced.

## 14.5 SCHEMATIC AND LAYOUT EXAMPLES

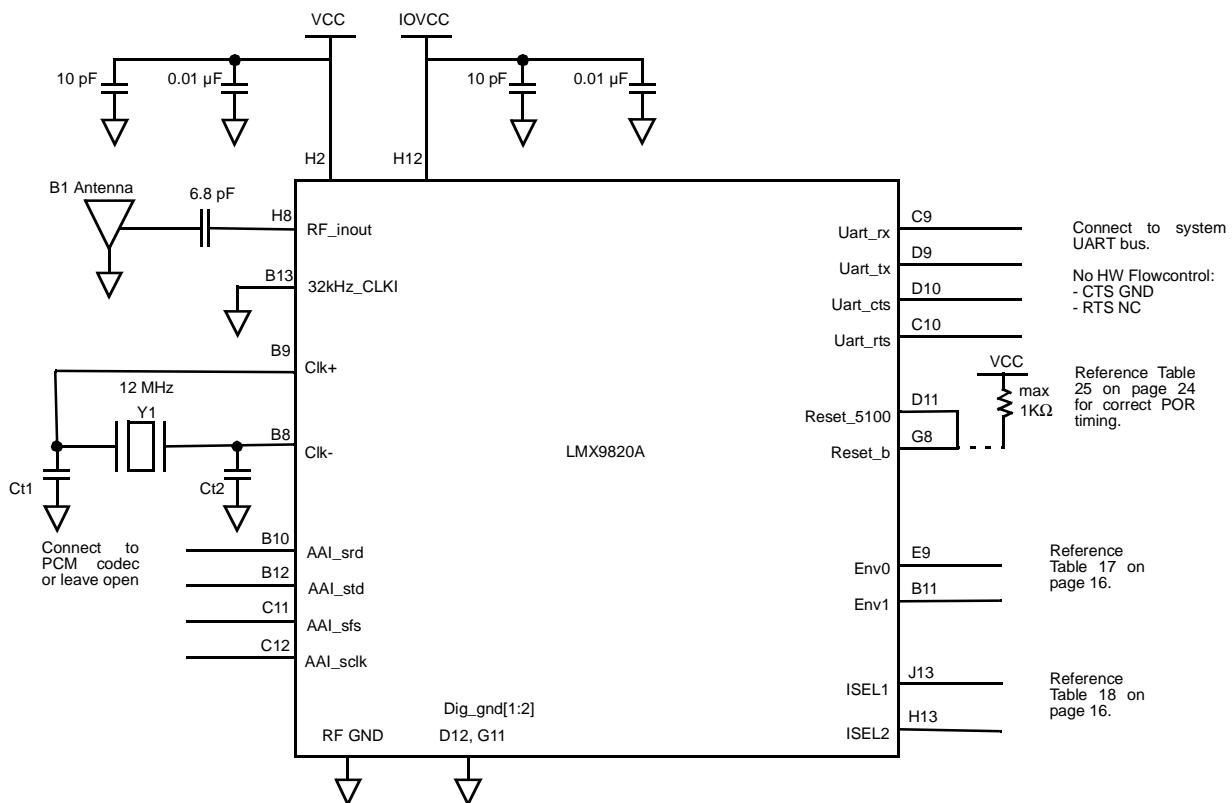

## Notes:

Capacitor values, Ct1 and Ct2 may vary depending on board design crystal manufacturer specification. Single ground plane is used for both RF and digital grounds.

**Figure 22. Example System Schematic**

## 14.0 Application Information (Continued)

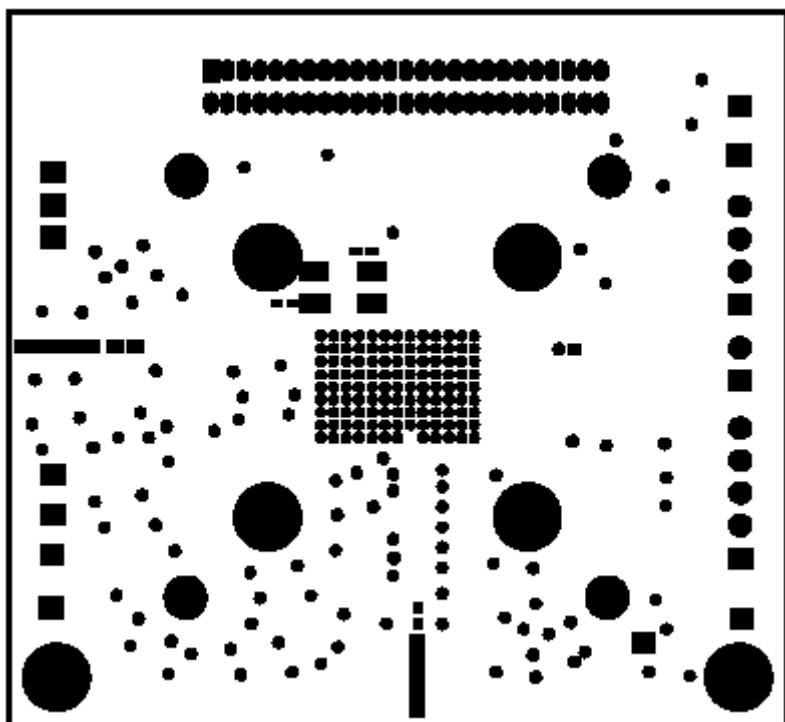
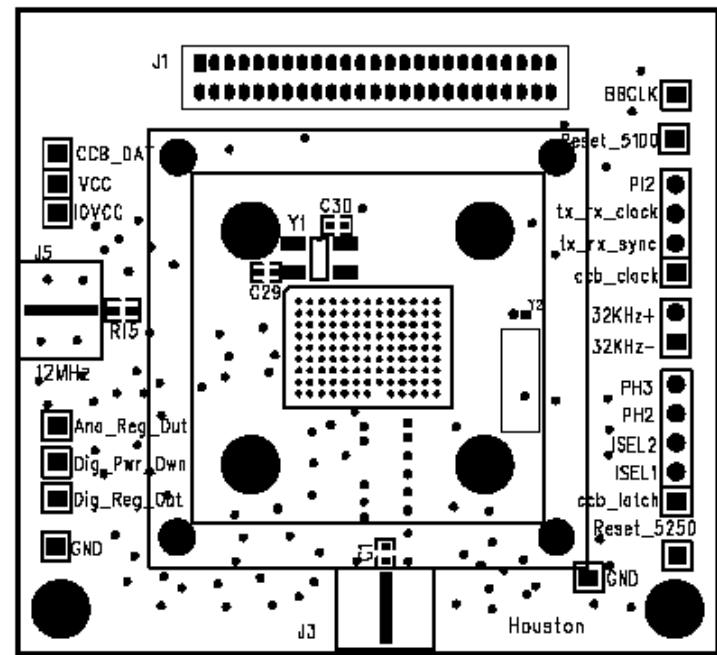


Figure 23. Component Placement (Layer 1)

## 14.0 Application Information (Continued)

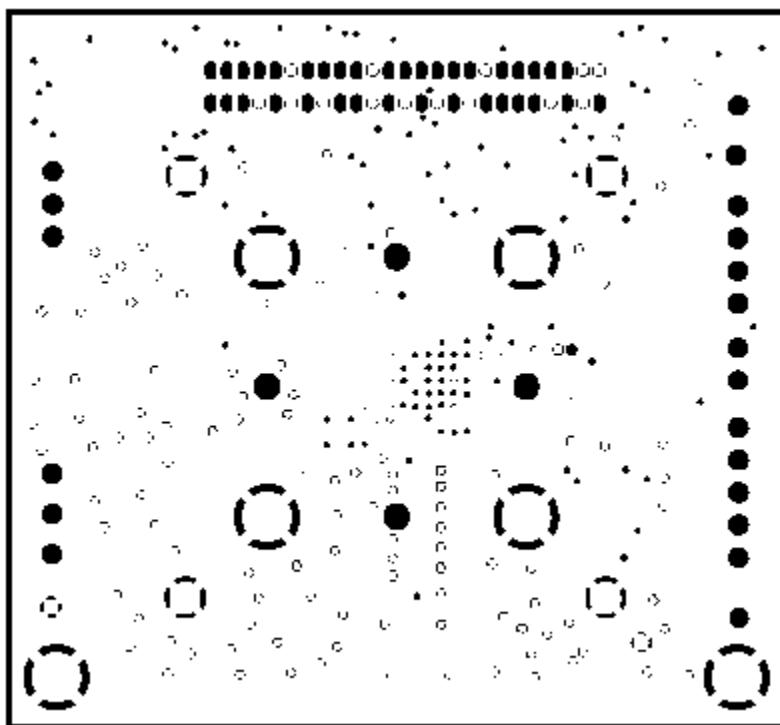


Figure 24. Solid Ground Plane (Layer 2)

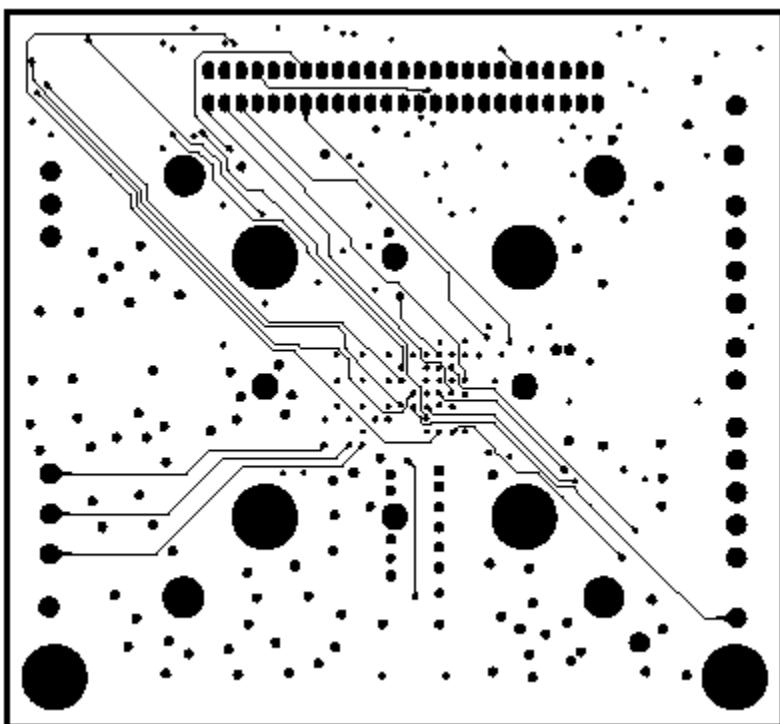


Figure 25. Signal Plane (Layer 3)

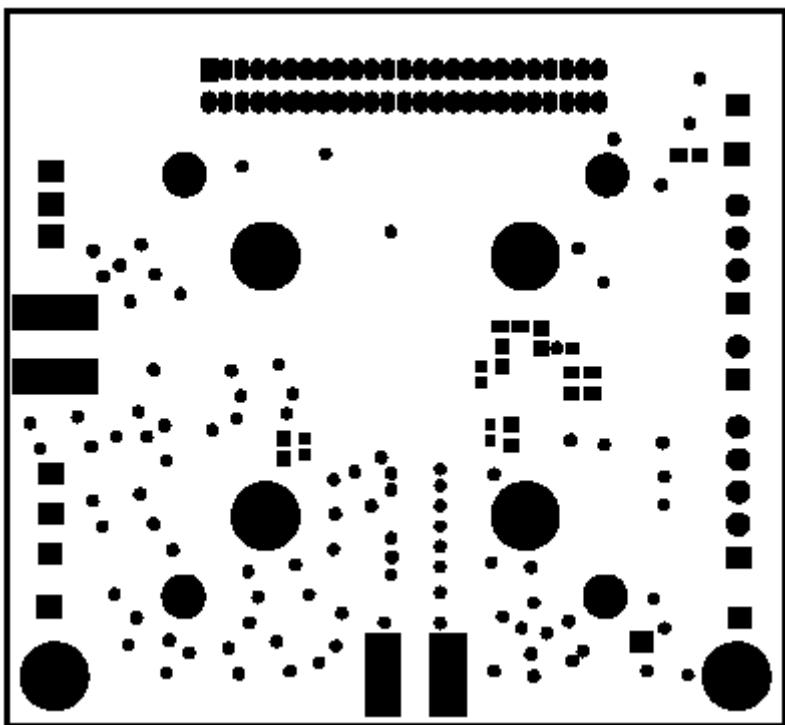


Figure 26. Component Layout Bottom (Layer 4)

## 15.0 Soldering

The LMX9820A bumps are designed to melt as part of the Surface Mount Assembly (SMA) process. The LMX9820A is assembled with a high-temperature solder alloy to ensure there are no re-reflow conditions imposed upon the module when reflowed to a PCB with these typical low temperature 60/40 (S = 183°C, L = 188°C), 62/36/2 (E = 179°C), or 63/37 (E = 183°C) solder alloys.

Where:

- S: Solidus
  - Denotes the points in a phase diagram representing the temperature at which the solder composition begins to melt during heating, or complete freezing during cooling.
- L: Liquidus
  - Denotes the points in a phase diagram representing

the temperature at which the solder has molten components. The temperature that melting starts at.

- E: Eutectic

– Denotes solid to liquid without a plastic phase.

The low-temperature solder alloy will reflow with the solder bump and provide the maximum allowable solder-joint reliability.


Reflow at a peak of 215 → 220°C (approximately 30 seconds at peak). Do not exceed 220°C, measured in close proximity of the modules, to avoid any potential re-reflow conditions.

Table 41 and Figure 27 on page 41 provide the soldering details required to properly solder the LMX9820A to standard PCBs. The illustration serves only as a guide and National is not liable if a selected profile does not work.

**Table 41. Soldering Details**

| Parameter                 | Value  |
|---------------------------|--|
| PCB Land Pad Diameter     | 24 mil   |
| PCB Solder Mask Opening   | 30 mil   |
| PCB Finish (HASL details) | 63/37 (difference in thickness < 28 micron)  |
| Stencil Aperture          | 28 mil   |
| Stencil Thickness         | 5 mil  |
| Solder Paste Used         | Low temperature 60/40 (S = 183°C, L = 188°C),<br>62/36/2 (E = 179°C),<br>or 63/37 (E = 183°C) solder alloys <sup>1</sup> |
| Flux Cleaning Process     | No Clean Flux System <sup>1</sup>  |
| Reflow Profiles           | See Figure 27 on page 41   |


1. Typically defined by customer.

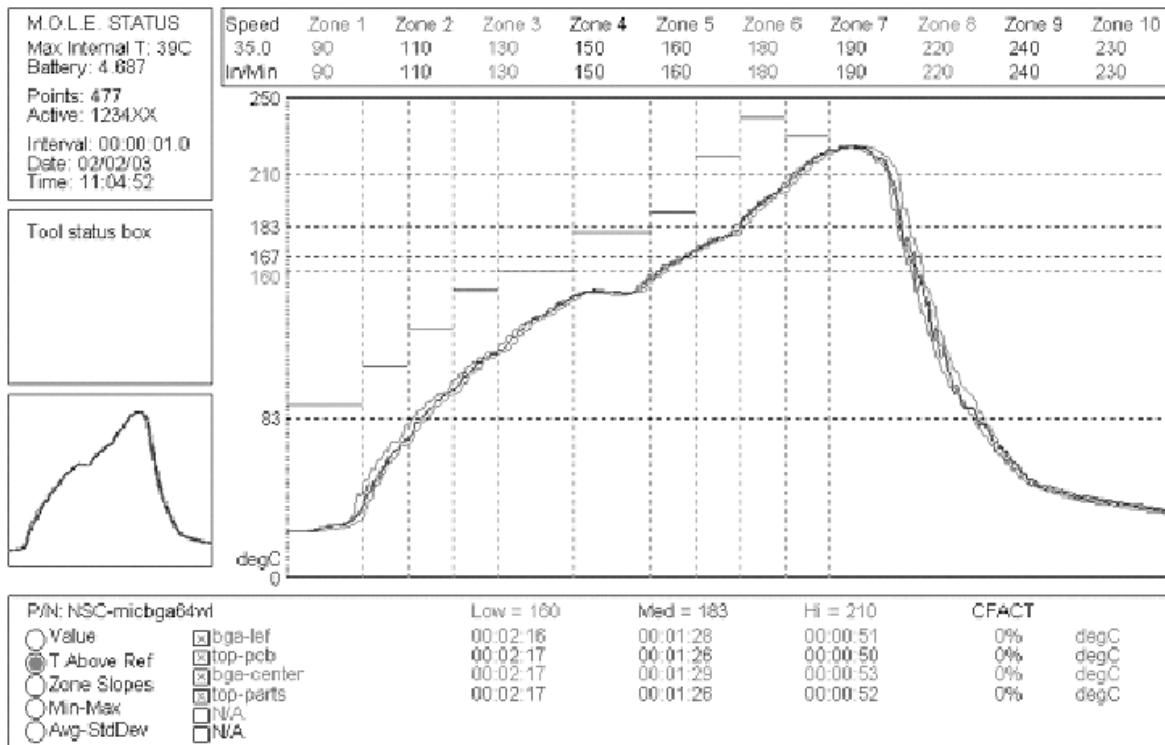

| Profile # | Peak (°C) | Min. (°C) | Max. Rising Slope (°C/s) | Max. Falling Slope (°C/s) | Rising Time 130°C (s) | Time Between 130°C/160°C (s) | Rising Time 160°C (s) | Time Between 160°C/183°C (s) | Total Time Above 183°C (s) |
|-----------|-----------|-----------|--------------------------|---------------------------|-----------------------|------------------------------|-----------------------|------------------------------|----------------------------|
| 1         | 213.9     | 32.8      | 2.50                     | -1.60                     | 208.01                | 109.00                       | 99.01                 | 57.00                        | 75.00                      |
| 2         | 206.7     | 31.1      | 2.41                     | -1.73                     | 213.01                | 121.01                       | 92.00                 | 53.00                        | 64.00                      |

Figure 27. Typical Reflow Profiles

## 16.0 Physical Dimensions

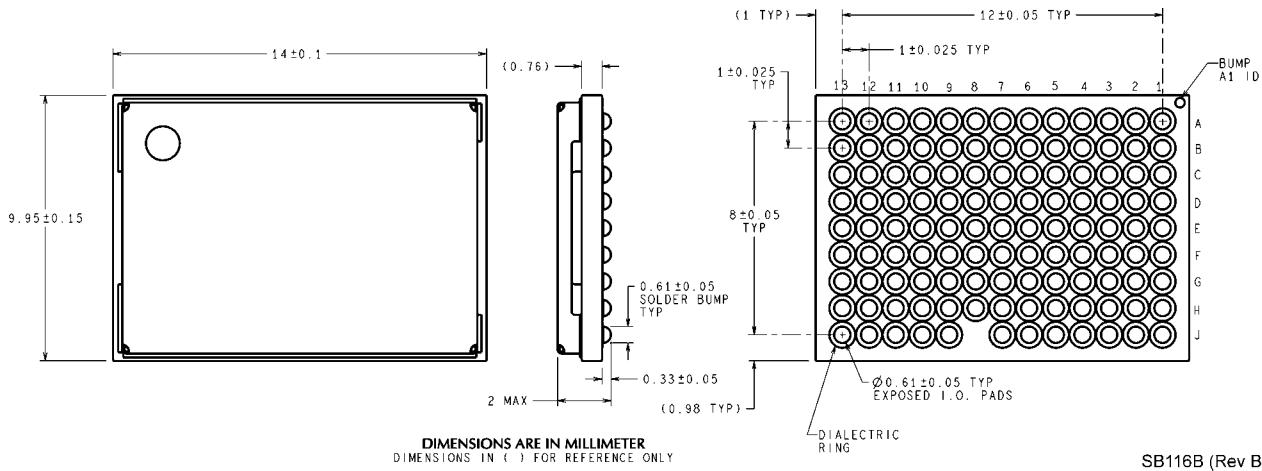

### NOTES:

PAD PITCH IS 1.00 MILLIMETER (.0394") NON-ACCUMULATIVE.  
UNLESS OTHERWISE SPECIFIED, ALL DIMENSIONS ARE IN MILLIMETER.  
TOLERANCE, UNLESS OTHERWISE SPECIFIED:  
TWO PLACE (.00):  $\pm .01$   
THREE PLACE (.000):  $\pm .002$   
ANGULAR:  $\pm 1^\circ$

Figure 28. FR4 Package

## 17.0 Datasheet Revision History

This section is a report of the revision/creation process of the datasheet for the LMX9820A. Table 42 provides the

stages/definitions of the datasheet. Table 43 lists the revision history and Table 44 lists the specific edits to create the current revision.

**Table 42. Documentation Status Definitions**

| Datasheet Status        | Product Status         | Definition  |
|-------------------------|------------------------|---|
| Advance Information     | Formative or in Design | This datasheet contains the design specifications for product development. Specifications may change in any manner without notice.  |
| Preliminary             | First Production       | This datasheet contains preliminary data. Supplementary data will be published at a later date. National Semiconductor Corporation reserves the right to make changes at any time without notice in order to improve design and supply the best possible product. |
| No Identification Noted | Full production        | This datasheet contains final specifications. National Semiconductor Corporation reserves the right to make changes at any time without notice in order to improve design and supply the best possible product.   |
| Obsolete                | Not in Production      | This datasheet contains specifications on a product that has been discontinued by National Semiconductor Corporation. The datasheet is printed for reference information only.  |

**Table 43. Revision History**

| Revision #<br>(PDF Date) | Revisions/Comments   |
|--------------------------|--|
| 0.4 (April 2003)         | Initial Datasheet revised to include new radio and additional functionality. Several edits have been made to functional, performance, and electrical details.          |
| 0.6 (February 2004)      | Updated RF performance values<br>Added 32 kHz frequency support.   |
| 0.7 (August 2004)        | Updated General Description and Features with Audio<br>Updated Pinout Information<br>Added Audio Section<br>Updated Command Section with audio commands                |
| 0.71 (August 2004)       | Reviewed Crystal Support Section<br>Added Audio block to application diagram   |
| 0.72 (October 2004)      | Updated package size<br>Table 9 to Table 15 updated<br>Optional 32.768 kHz crystal support removed<br>Package outline drawing updated to 14.1mm width and 2.0mm height |
| 0.73 (December 2004)     | In Table 15, maximum output power range updated to +4dBm.  |
| 0.80 (March 2005)        | Minor edits for clarity, language, units, formatting, etc. No functional changes.  |
| 0.81 (March 2005)        | Minor changes in feature list<br>Table 2 updated<br>Added footnote to Table 10<br>Added description in chapter 6.2<br>Table 20 updated                                 |
| 0.82 ( March 2005)       | Added footnote to Table 13<br>Figure 22 updated  |
| 1.0 draft 1 (March 2005) | Updated Power consumption Table 12   |

Table 44. Edits to Current Revision

| Section                   | Revisions/Comments                                       |
|---------------------------|--|
| General Description       | •  |
| Connection Diagram        | •  |
| Pad Description           | •  |
| Electrical Specifications | • Updated Table 12 "Power Supply Requirements" on page 9 |
| Functional Description    | •  |
| Digital Smart Radio       | •  |
| System Power Up Sequence  | •  |
| Integrated Firmware       | •  |
| Low Power Modes           | •  |
| Command Interface         | •  |
| Application Information   | •  |
| Soldering                 | •  |

National does not assume any responsibility for use of any circuitry described, no circuit patent licenses are implied and National reserves the right at any time without notice to change said circuitry and specifications.

For the most current product information visit us at [www.national.com](http://www.national.com).

#### LIFE SUPPORT POLICY

NATIONAL'S PRODUCTS ARE NOT AUTHORIZED FOR USE AS CRITICAL COMPONENTS IN LIFE SUPPORT DEVICES OR SYSTEMS WITHOUT THE EXPRESS WRITTEN APPROVAL OF THE PRESIDENT AND GENERAL COUNSEL OF NATIONAL SEMICONDUCTOR CORPORATION. As used herein:

1. Life support devices or systems are devices or systems which, (a) are intended for surgical implant into the body, or (b) support or sustain life, and whose failure to perform, when properly used in accordance with instructions for use provided in the labeling, can be reasonably expected to result in a significant injury to the user.
2. A critical component is any component of a life support device or system whose failure to perform can be reasonably expected to cause the failure of the life support device or system, or to affect its safety or effectiveness.

#### BANNED SUBSTANCE COMPLIANCE

National Semiconductor certifies that the products and packing materials meet the provisions of the Customer Products Stewardship Specification (CSP-9-111C2) and the Banned Substances and Materials of Interest Specification (CSP-9-111S2) and contain no "Banned Substances" as defined in CSP-9-111S2.



**National Semiconductor**  
**Americas Customer**  
**Support Center**  
Email: [new.feedback@nsc.com](mailto:new.feedback@nsc.com)  
Tel: 1-800-272-9959

[www.national.com](http://www.national.com)

**National Semiconductor**  
**Europe Customer Support Center**  
Fax: +49 (0) 180-530 85 86  
Email: [europe.support@nsc.com](mailto:europe.support@nsc.com)  
Deutsch Tel: +49 (0) 69 9508 6208  
English Tel: +44 (0) 870 24 0 2171  
Francais Tel: +33 (0) 1 41 91 8790

**National Semiconductor**  
**Asia Pacific Customer**  
**Support Center**  
Email: [ap.support@nsc.com](mailto:ap.support@nsc.com)

**National Semiconductor**  
**Japan Customer Support Center**  
Fax: 81-3-5639-7507  
Email: [jpn.feedback@nsc.com](mailto:jpn.feedback@nsc.com)  
Tel: 81-3-5639-7560