


Operating FM Transmitter of UMTVH-2100

The Audio signal of TV, AV1, AV2, AV3, which is input through pin no. 1(R-Audio) and pin no. 22(L-Audio) of FM IC (BH1414F), is controlled through Control Bus Line connected to U-COM.

And, FM Trans On/Off and FM Frequency could be set on Menu and the frequency ranges from 89.5MHz to 90.2MHz by 100 KHz step.

The setting process is as follows. Please refer to the below attached picture.

- Press MENU button to show FUNCTION menu on the screen.
- And, you could select FM TRANS or FREQ by pressing Search Up/Down button. And you could set FM Trans On/Off or a frequency by pressing Volume Up/Down button.

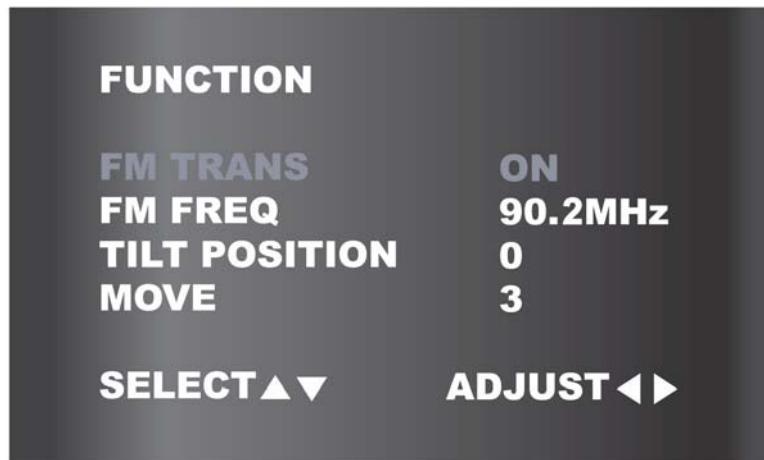

The FM signal is supplied to Radio through ANTENNA Wire (Pin no.11).