

GUARANTEED NEVER TO HURT OR FALL OUT



- 1 Insert sound tunnel.
- 2 Twist into place.



For a Getting Started video featuring TwistLock® in action, scan the QR code or visit yurbuds.com/inspire-twistlock

Our earbuds fit differently than other brands in that they are designed to fill the bowl of your ear with the sound tunnel extending down into your ear canal. They are not meant to be pushed down into the ear canal. The back of the bud should brace lightly against the back of the bowl of your ear.

FIT ENHANCERS TO EARPHONE



- 1 Wrap left enhancer around left earphone. Repeat for right side.



- 2 Start with the left bud and rotate sound tunnel between 3-4 o'clock position. Adjust for comfort.



- 3 Repeat with the right bud and rotate sound tunnel between 8-9 o'clock position. Adjust for comfort.

TO CLEAN ENHANCERS: Remove & wash with warm soapy water

NEED ANOTHER SIZE?



If the earbuds are not perfect, send us your picture for a FREE personalized fit. Take a photo of your current earbuds in your ear and email it to orders@yurbuds.com. yurbuds will send you the correct size for free, or exchange your model for a better-fitting option.

CONTACT US:
900 Spruce St. Suite 550
St. Louis, MO 63102, USA
www.yurbuds.com/contact

CALL US TOLL FREE:
(888)YUR-BUDI or
(888)987-2831

PRODUCT RETURNS: Please contact yurbuds for customer support before returning to store.

LIMITED YURBUDS WARRANTY
yurbuds™ purchased from authorized retailers are warranted against defects in materials and workmanship for a period of ONE year from the date of purchase of the product. If a defect exists, yurbuds™, at its discretion and to the extent permitted by law will (1) repair the product at no charge, or (2) replace the product if it is irreparable. This warranty excludes damage resulting from abuse, accident, modifications or other causes that are not defects in materials and workmanship. THIS WARRANTY DOES NOT AFFECT YOUR STATUTORY RIGHTS. Visit yurbuds.com for our complete product warranty policy.
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.
If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: (1) Relocate the receiving antenna. (2) Increase the separation between equipment and receiver. (3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. (4) Consult the dealer or an experienced radio/TV technician for help. CAUTION: Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the device.
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled Environment.
This device complies with Industry Canada licence-exempt RSS standard(s): Operation is subject to the following Two conditions:
(1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.
CAN ICES (B)/NMB-3(B)
Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:
(1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.
CAN ICES (B)/NMB-3(B)
Verto Medical Solutions, LLC hereby declares that this Liberty Wireless is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. This statement has to be accompanied by info@yurbuds.com where a copy of the original declaration of conformity may be found or obtained.

DID: D023544



CONNECT WITH US.



POWER & PAIR

POWERING ON/OFF

1 Briefly press and hold the Center button on the 3-Button Control.

- GREEN FLASH WITH AUDIBLE ALERT: Power on, Not Paired
- EXTENDED BLUE FLASH WITH AUDIBLE ALERT: Powered Off

PAIRING

2 FIRST TIME USE: LEAP Wireless will automatically be set to pairing mode. Skip to step 4 to complete set-up.

CONSECUTIVE USES: Begin with LEAP Wireless powered off and your Bluetooth device powered on and in search mode.

3 Press and hold the Center button on the 3-Button Control for an extended period of time, until the light is alternately flashing green and blue indicating it is pairing mode.

4 Select "yurbuds LEAP Wireless" on your device.

- BLUE & GREEN FLASH: Pairing Mode
- BLUE FLASH: Power on, Paired

*Green light flashes rapidly when pairing in low power mode

MUSIC & CALLS

- VOLUME

Volume Up: 1 Click

CALLS

Answer/End Calls: 1 Click

Voice Activation*: 2 Clicks

VOLUME

Volume Down: 1 Click
- TRACK

Next Track: Long Press

Pause/Play: 1 Click

Previous Track: Long Press

*Compatible with iOS only

CHARGE

- 1 Locate the charging port at the top of the right earphone.
- 2 Lift cover for USB charging port.
- 3 Plug in device with the provided charging cable.




- GREEN: Device Charging
- NO LIGHTS: Device Fully Charged

CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS. DO NOT disassemble or replace the battery. If you suspect there are something wrong with the battery, please carry the unit to the service center for help.

CHARGE STATUS

On-Screen Indicator* shows level of charge.

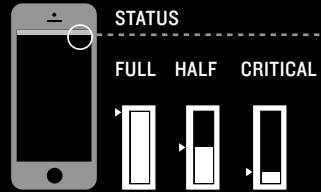

AUDIBLE ALERTS

Status provided once when battery is low.

FOR MORE INSTRUCTIONAL DETAILS FOR YURBUDS LEAP WIRELESS, PLEASE VISIT YURBUDS.COM



THANK YOU
and welcome to yurbuds