

S55



Overview



S55 unlocks the full power of Sonos sound, delivering powerful bass to immerse you even deeper in every scene and song.

- **Pulse-pounding bass.** Dual Sonos-engineered drivers generate deep, dynamic low frequencies. The ported enclosure enhances the bass response so you feel every beat, roar, and rumble in your chest.
- **Transform your home theater experience.** Pair S55 with Sonos Arc, or Beam for dramatically deeper bass and clearer highs that draw you deeper into movies, shows, and games.
- **Bring your music to life.** Hear the nuance in every note and enjoy a greater sense of spaciousness when you pair S55 with Sonos Five, Era 300, or Era 100.
- **Iconic design.** With its elegant sculptural shape and updated matte finish, S55 is designed to look great in your home and to match your Sonos speakers.
- **Place it where and how you want.** S55 reliably connects to your Sonos soundbar or speaker over WiFi so you can place it anywhere in the room—even on its side and under your sofa.

Controls and buttons



1

Acoustic slot

You can use the acoustic slot as a handle to lift S55.

2

Status light

Displays the product's connection to WiFi, indicates when the volume is muted, and signals errors. [Learn more](#)

If the light is distracting, you can turn it off in your room's settings.

3

Join button

Press to connect during setup.

4

Ethernet port

Use an Ethernet cable if you want to connect to a router (optional).

Use only the supplied power cord to connect to a power outlet (using a third party power cord will void your warranty). Be sure to use the proper power adapter for your country. Push the power cord firmly into S55 until it is flush with the surface.

Select a location

Choose a location—S55 is designed to provide optimal sound wherever you place it.

- Use the acoustic slot as a handle to lift S55 out of the box. You should always bend your knees when lifting heavy objects to avoid undue stress on your back.
- Make sure at least one side of the slot is free from obstruction. If you place it vertically against a wall, don't block the front opening.
- If you place S55 horizontally on the floor, don't put anything on top of it. Leave at least 1" clearance along the top of S55 if placing under furniture.
- S55 is designed to sit on the floor. You can place it in a corner, against the wall, behind, under, or next to any piece of furniture on any kind of floor surface.
- Position S55 either vertically or horizontally. If you're going to use it horizontally, you can attach permanent felt feet. See [Attach feet](#) (optional) for more information.

Connect the cables

1. Attach the power cord and plug in S55. Be sure to push the power cord firmly into S55 until it is flush with the surface
2. Download the Sonos app from the app store if you don't already have it. You'll use it to set up and control your Sonos system. See Setup for more information.

Note: Make sure you set up at least one compatible speaker before adding S55.

Note: After S55 is paired with a Sonos speaker, you won't see it displayed separately in your system. Any changes you make to the speaker it's paired with, like volume, mute, or music selection, will also affect S55.

Product settings

To adjust S55 settings, go to  > System and select your S55.

S55

Toggle **On** or **Off** to turn the sound from S55 on and off.

S55 level

Use the slider to increase or decrease volume. (You can use this setting to match the S55 level to the level of your main speakers.)

Phase control

Choose 0° or 180° to set the phase control for your Sonos S55 or third-party subwoofer (flip if you don't hear enough bass in your usual listening position).

When a room with a Sonos S55 is tuned using Trueplay, phase control is set and can't be changed unless you disable Trueplay.

Reset

Resets all S55 audio settings to their default values (0).

Change speaker pairing

You can easily change the Sonos speaker your S55 is paired with.

If you're moving it to a new room, wait for the status light to stop flashing after you plug the S55 back in.

1. Go to  > **System** and choose the speaker your S55 is paired with. It appears as [speaker name (+S55)] in your list of rooms.

2. Tap **Remove Sub**.

You can pair the S55 with a different Sonos product or choose not to use it right now. It will appear as "unused" in your list of products until you pair it with another Sonos speaker.

Connect a second S55

You can easily connect a second S55 to your Sonos system.

Note: At least one sub must be a S55. If the button on the side is round instead of square, it's a Sub (Gen 3). You cannot pair a Sub Mini with a S55.

1. Go to  > **System** and choose the speaker S55 is paired with. It appears as room (+S55) in your list of rooms.

2. Tap **Connect Second S55** to get started.

Specifications

Audio

Amplifiers

Dual Class-D digital amplifiers perfectly tuned to the subwoofer's unique acoustic architecture.

Woofers

Dual 5" x 8" elliptical woofers face inward for a force-canceling effect that virtually eliminates distortion.

Architecture

Ported cabinet enhances bass response.

Frequency response

As low as 25 Hz

EQ

Audio settings automatically equalize to balance S55 and the paired Sonos speaker(s). Use the Sonos app to adjust bass, treble, and loudness.

Trueplay

This software measures the acoustics of the room then fine-tunes your Sonos system.

Details & Dimensions

Dimensions	Height: 15.31 in (389 mm)
	Width: 15.83 in (402 mm)
	Depth: 6.22 in (158 mm)
Weight	26 lb (11.79 kg)
Colors	Black, White
Finish	Matte
Join button	Press once to add S55 to your system during setup.
Power & Connectivity	
WiFi	Connect to WiFi with any 802.11 a/b/g/n/ac/ax 2.4 or 5 GHz broadcast-capable router.
Ethernet	10/100 port for hardwiring to your router
Voltage	100-240V 50/60Hz internal power supply
CPU	Quad Core 4xA55 1.9GHz
Memory	512 MB DDR4 4GB eMMC

Operating temperature

32° F to 104° F(0° C to 40° C)

What's in the box?

Sonos S55

Product

Power cable

Length: 6 ft (2 m)

Documentation

Quickstart Guide and legal/warranty
information

Requirements

WiFi

Internet connection

Power source

Nearby electrical outlet

Sonos app

The latest generation of the Sonos app
running on a compatible device

Sonos products

An amplified non-portable product, such
as Arc or Era 300

Important safety information

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry soft cloth. Household cleaners or solvents can damage the finish on your Sonos products.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.
9. Protect the power cable from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
10. Only use attachments/accessories specified by the manufacturer.
11. Unplug this apparatus during lightning storms or when unused for long periods of time.
12. This product does not have any user-serviceable parts. Do not open or disassemble or attempt to repair it or replace any components. Refer all servicing to Sonos qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cable or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
13. The Mains plug should be readily available to disconnect the equipment.
14. **Warning:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
15. Do not expose apparatus to dripping or splashing and do not place objects filled with liquids, such as vases, on the apparatus.