



Our sincere thanks for buying our VK mobile phone.

The product is designed and manufactured in strict accordance with both our in-house and international standards, and it is subject to severe quality tests including temperature, humidity, shockproof, dust, vibration and drop test. The product that has passed such a series of tests would surely bring you a great satisfaction.

The contents of manual and the functions of mobile phone are subject to partial modification, if needed.
To ensure the advanced manner and culture desirable for using a mobile phone, please set your mobile phone in vibration mode in a public place.

Instructions for users

- Please do not let others use your mobile phone if it is possible.
- Please contact designated service center only for A/S
- Please immediately contact mobile phone service provider in the event the mobile phone is missing or stolen

* Additional device or accessory that will lead to any modification in originally designed function shall not be attached to the product



Tip for safe and efficient use

Mobile phone, when a power is on, is designed to transmit or receive high frequency energy. International associations made public the standards and recommendations on physical influence on human body that might be caused by high frequency energy. For further details, please refer to detailed information for safe and efficient use of mobile phone (see page 128).

Antenna

Use approved products only. Using others not recommended or unauthorized modification might cause damage to mobile phone, thereby leading to being unacceptable for free maintenance services.

Contact damaged antenna may cause a slight burn on skin.

Normal position

Hold it in such a way doing with normal phone, with an antenna standing upright over the shoulder.

3

Effective use of mobile phone

Pull out the antenna at full length.

Hold it in such a way doing with normal phone, with an antenna standing upright over the shoulder. Do not touch antenna while talking over the phone. It may lead to deterioration in sensitivity and unnecessary power consumption.

Mobile phone and electronic device

Though most electronic devices are designed to be free from high frequency energy, some products may cause trouble in using mobile phone.

Airplane

Please turn off the mobile phone when boarding. On-board electronic device may be affected by mobile phone.

Hearing aid

Some hearing aid can be interrupted by mobile phone.

4



Pace Maker

Medical Instrument Manufacturer Association didn't recommended mobile phone while wearing Pace Maker since it can be affected by mobile phone within a distance of 15cm. In case of using mobile phone inevitably, please ensure to keep distance 15cm at least on the other side.

Other medical instrument

When using other medical instrument personally, please consult manufacturer to ensure it is safe from high frequency energy. Since medical instrument in hospital tends to be sensitive to high frequency energy, please ensure your mobile phone is in turn-off mode in hospital.

Use mobile phone while driving

Please get yourself acquainted with relevant laws and regulations.

- Please be concentrated on driving
- Please avoid talking over the phone while driving for sale. If inevitable, make use of hands-free device
- Please stop your car while talking over the phone, if it is possible.

Caution

Battery terminal may cause damage to conductor as well as a burn in human body, if contacted. The battery recharged shall be handled carefully and not to be carried in a bag with other metal goods.

· 5 ·

Explosion area

In a place didn't designated to use mobile phone or radio because of potential danger from explosion, please ensure to turn your mobile phone off to prevent any possible interference with explosion operation, and follow the instruction or signs.

Use of battery

Within an explosion area designated, do not unload, load or recharge the battery, but to follow the instructions or signs. In construction site, high frequency device is often used for the purpose of remote-controlled operations. In the area where potential gas leakage danger exists or chemicals storage or on deck of vessel, please refrain from loading mobile phone accessories or using mobile phone. Please ensure not to leave flammable material in the car where mobile phone accessories are equipped. The spark generated in dangerous area might cause a fire or explosion.

· 6 ·



Contents

CONTENTS

Before Use

Check Components	12
Name and Function of Each Part	13
Display	15
How to Use the Battery	16
How to Charge the Battery	17

Basic Operations

Switching the Phone On/Off	19
Making a Call	20
Answering a Call	21
Making a Call from Recent Numbers	22
In-call Menu	23
Shortcut in Standby Screen	24
Executing/Selecting Menu	25
Selecting Bell/Melody	28
Setting Bell, Vibration, Lamp	29
Setting Ring Volume	30
Selecting Key Sound	31
Using Time Sound	31
Setting Events	32
Etiquette Function	33

Advanced Operations

Entering Letters	35
How to Select Text Mode	36
What is the Manage Message Function?	37
Sending a Message	38
Message Box	41
Message Box Setup	46
To Set Message Alarm	46
Setting Priority (Transmission Speed)	47
Checking Message Log	47
Selecting Background	49
Selecting Menu Style	50
Entering Phone Name	51
Setting Backlight	52

Phonebook

To Store Number	56
Finding Stored Phone Number	59
Using Recent Outgoing Numbers	63
Using Recent Incoming Numbers	64
Using Missed Incoming Numbers	65

Making a Call using Speed Dial	66
Editing Group Name	67
Deleting All Numbers from Phonebook	69
Checking My Number	70
Electronic Dial Function	71

Camera

Taking and Saving Photos	73
Taking Continuous Shots	74
Taking Sticker Shots	75
Taking a Movie Shot	76
Managing Photo and Movie	77
Locking Photographs	78

Remocon/Game

Using Remote Controller	81
Using Remote Controller Setting	82
Playing Puzzle Games	83

PIMS

Using the Scheduler Function	85
------------------------------------	----

CONTENTS

Using Memo	89
Using Morning Call	91
Using Alarm	92
Using Memorial Day	93
Using Voice Memo	95
Using Calculator	97
Checking World Time	98
Using Unit Converter	99
Setting Current Time	100
Setting	
Changing Password	103
Selecting Language	104
Setting the Lock	105
Setting International Auto Roaming	106
Setting Privacy	107
Reset Phone	108
Manage Memory	109
Internet Setup	110

Call Setup

Introduction to Menu and How to Execute	
Entering and Setting Auto Dial	113
Using Voice Answer	114
Selecting Answering Method	118
Restriction of Various Functions	119

RECORD

About battery	121
Menu Map	123
Specifications and Properties	127
Information for safety and for the efficient use of cellular phone(Details)	128
TROUBLESHOOTING	130
About Electrical frequency	131


Before Use

This Users' Manual provides useful information about the various functions of the mobile phone. Read this manual carefully before use to familiarize yourself with the functions of this mobile phone.



- 1 Check Components
- 2 Name and Function of Each Part
- 3 Display
- 4 How to Use the Battery
- 5 How to Charge the Battery

1. Check Components

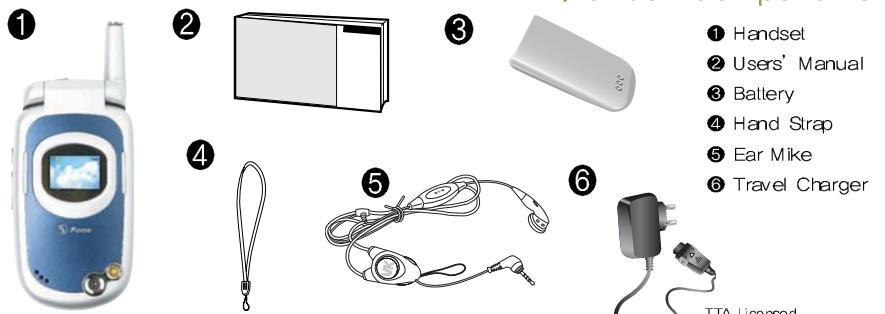

※ The figures in this Users' Manual are included to help understanding, and are for illustrative purposes only.

TTA Licensed
Standard Charger (Sold separately)

2. Name and Function of Each Part



Description of Function Buttons

To search for phone numbers or functions in consecutive order



- TV Remote Controller
- Message
- Phonebook
- Sound

To open menu/To open the connected menu in menu status
To use the camera function

To select function/To open a shortcut in standby display
(See page 24)

To make or receive a call / To check recent call records

To delete letters or displays / To go to the previous menu


To switch on or off / To end a call / To return to standby status from menu status

SWAP Shortcut Button (SWAP, Download folder, Setup) / Press and hold to connect to SWAP

To set/cancel etiquette function

To lock the phone

3. Display

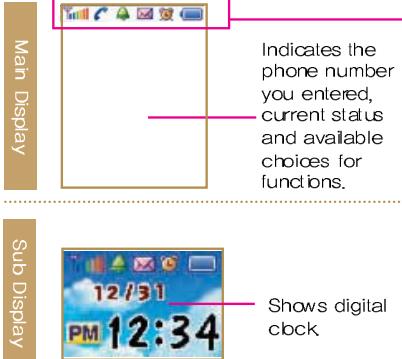


Indicates the phone number you entered, current status and available choices for functions.

Signal strength in calling areas: Weak signal Strong signal
 Appears when you try to make a call or the call is connected
 Service unavailable area
 Appears when a new text message is received
 Appears when morning call or alarm is set up
 International roaming service
 Ring after vibration, Vibration after ring, Mute (Lamp), Bell, Vibration, Etiquette Mode
Shows your battery level


Icon appears when you receive an incoming call or text message, or at the alarm time. Since the sub display shows only basic information, it may differ from the information shown in the main display.
Press and hold the Volume button while the flip is closed to turn on the sub display backlight.
Sub display does not show lock even if lock function is set

4. How to Use Battery

① Inserting the Battery

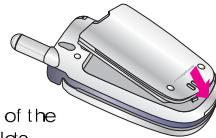


Insert the bottom of the battery into the slot.

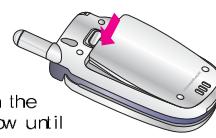


Push the battery in the direction of the arrow until it clicks into place.

② Removing the Battery

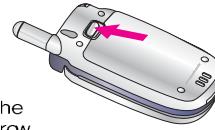

Pull the catch in the direction of the arrow.

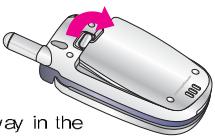

Lift the battery away in the direction of the arrow.



5. How to Charge the Battery

If you charge the battery while it is attached to your phone.



 TTA licensed standard charger

- Make sure to charge the battery fully before using the phone for the first time after purchase, because it is not fully charged at purchase.
- Make sure to charge and keep the battery at room temperature.
- Install the charger where it is convenient for you to use.
- Separate the battery from the charger or unplug the charger if you have finished using it after the charging lamp turns green(charging completed).

What's TTA?

TTA (Telecommunications Technology Association) is a IT standards organization in South Korea. It develops new standards and provides one-stop services for the establishment of IT standards as well as providing testing and certification for IT products.

Basic Operations

Explains the basic functions of the mobile phone.

Switching the Phone On/Off

1 To Switch the Phone On



- The following screen will appear after the animation when the phone is in service.

- 

Press the End button.

 - The following screen will appear after the animation when the phone is in service.



② To Switch the Phone Off



Press and hold the End button.

※ Screen colors and images included in this Users' Manual may differ from actual ones.



Answering a Call

① To Answer an Incoming Call



- ① When you hear a ring
- ② Open the flip and start to talk. When you finish, close the flip or press .

Caller ID Identification Service Function

Your service provider should be contacted if you want to use the Caller ID Identification Service. Caller ID Identification Services may differ or may not be provided depending on the caller's call service status. Contact your local service provider for more details.

② To not answer an Incoming Call

Press and hold .

- If you fail to answer a call within a period of time, it will switch to the voice message system.
- Switches to Mute (Mamp) even if your phone is set to ring, vibration or etiquette function
- Open the flip if you want to answer a call. Press any key if the flip is already open. (Except the End key)

③ If Voice Answer function is set (see pages 114~117)


Switches to Voice Answer mode after a given time when the caller makes a call to you.

- Press the ear mike Call button once if you answer a call using the ear mike.



Making a Call from Recent Numbers

① Press in standby status

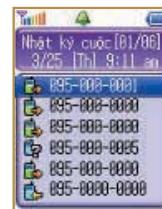

- Name and icon will be displayed for the phone numbers stored in the phonebook.

 Outgoing numbers
  Incoming numbers
  Missed calls
 In-call incoming numbers
  In-call missed calls

② Press to search for the number to call.



To make a call, press .

To check and store or delete, press  press 



Press  and select Store/Delete



Press the number key corresponding to the menu you want



In-call Menu

① Function

* Some functions may not work during a call.

Phonebook and Messages (See pages 37 ~ 47, pages 55~71)

- You can check and send messages or register and check the phone number after moving to the main menu of each function.

Call Recording Function (See page 96)

- This function is for recording the conversation with the other party during a call.



Mike Mute Function

- This function is to prevent the other party from hearing sound on your side.

Keystone Mute Function

 
- This function is to mute the keytone generated when you press a button during a call.

Send Phone Number


- This function is to transmit your own phone number automatically.
- You cannot execute this function when the KeyTone Mute function is enabled. Execute this function after releasing the KeyTone Mute function.

② Set or Cancel Function

Press and select the function to use or .



To cancel the function, .

 

To cancel the function, .

To enter the phone number to contact .



Press in the standby screen

Shortcut in Standby Screen

All Schedule: move to the schedule menu and check all schedules.

Today Schedule: move to the schedule menu and check the today schedule.

Memo: move to the New Memo.

Voice Memo: move to the Review voice memo menu.

Days to Remember(Memorial day): move to the Set M-Day menu.

Answering Msg: move to the Answering Msg inbox menu.



Executing/Selecting

① To Execute Basic Menu

Press  in standby status to execute the basic menu.



- ② Select the menu to execute in basic menu status and press  or enter the corresponding number to execute.



③ To Use Main Menu Shortcut Buttons

Press the shortcut button in standby status to execute the Phonebook, Message, Sound, Remote and Camera menus immediately.



Execute Phonebook Menu

Press 

Execute Message Menu

Press 

Execute Remote Controller

Press 

Execute Sound Menu

Press 

Execute Camera Menu

Press 

④ To Open Connected Menu

If you see a blinking menu icon on the lower left part of display

Press  to display available related functions as menus in the lower right part of the display.



Press 



Connected menus are opened.

⑤ Various Selection Methods

How to select menu list



Press to select the menu, and press to execute or enter the menu number

How to set/cancel



Press to select the menu, and press to execute

How to select item



Press to select the menu and press to execute

"Select the relevant menu or item" in this Users' Manual means "press to select the menu or item you want and then press ."

You can select either Music Bell, My Bell in addition to the bell sound and melody provided by default. (Downloading capacity: 2Mbytes)



Select Bell



Select the bell sound you want



- Music Bell: Melody downloaded from SWAP
- Charac Bell: Charac Bell downloaded from SWAP(Melody + Image)

* The priority for applying bell sounds is set as Charac Bell – Group Bell – Basic Bell.

* Refer to Manage Melody if you want to delete the melody. (See page 109)

Selecting Bell/Melody



Setting Bell, Vibration, Lamp


You can select Bell, Vibration or Lamp to indicate that there is an incoming call.



Press and then press number key or and press in the Sound menu.



Select Bell/Vibrate from the sound menu. Press or and then press in the Sound menu.

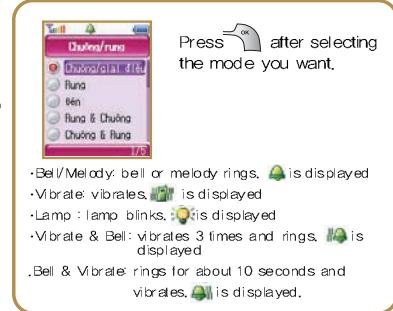

1 To Set Ring Volume



Select Ring Volume from Sound and press



Setting Ring Volume

2 To Set Key Tone and Call Volume



During Standby



During a Call

Press repeatedly to set as you want.



Selecting Key Sound

You can select the tone that the keypad generates when you press a key.

Select Key Sound from Sound. Press  2 SEC  To select the sound you want and then press 

Press  To finish, press  or 




Using Time Sound

Your phone sounds an alarm tone every hour if you set Time Sound.

Select Time Sound from Sound and press  2 SEC  To select the sound you want and then press 

Select Set or Cancel and press  To finish, press  or 

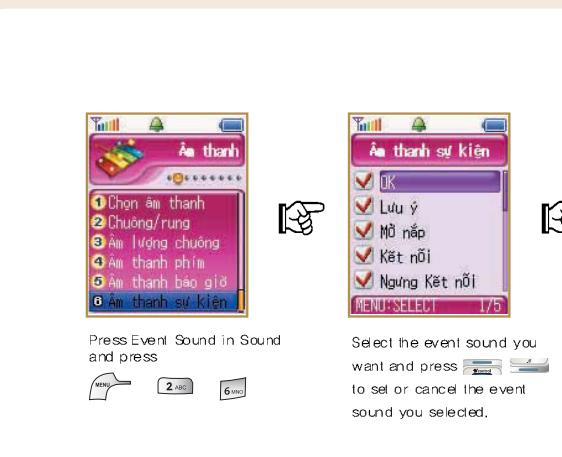

Setting Events

- The condition where the Event Sound is set
- The condition where the Event Sound is canceled

Select the event sound you want and press  2 SEC  to set or cancel the event sound you selected.

Etiquette Function

① Set



Press and hold



When Etiquette function is set, appears.

② Cancel

Press and hold again to return to the previous status.

※ Morning call operates normally when you set the Etiquette function. If Alarm is set, the ring sound you set does not ring, but the lamp blinks after vibration.

Advanced Operations



Entering Letters

Press the corresponding button several times to enter Alphabet characters


- A Press **2 ABC** key once.
- B Press **2 ABC** key twice.
- C Press **2 ABC** key three times.

Example Enter 'Good'. * Pradice as follows.

Press to toggle between upper case/lower case letters and press the corresponding key.

Good

4 menu) 6 6 6 > 6 6 6 > 3

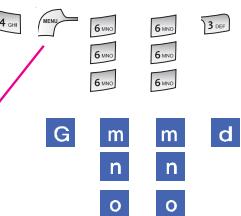

How to Select Text Mode

When in text input mode, the text mode change box automatically appears at the lower left.



Press several times to seled the text mode you want.

- : English Upper-case Mode
- : English Lower-case Mode
- : Number Mode
- : Special Character Mode

How to Enter Spaces

Press to enter a space. If you want to enter a space between the letters already entered, press to move to the location you want. Press the menu to enter special character and English mode and press once.

Press to delete the text. Press it briefly to delete the preceding letter one by one. Press and hold it to delete all the letters preceding the cursor.





What is the Manage Message Function?

You can use functions such as text message, voice message, phone page, and message box setup with your phone.

Send a Message – You can send a message by creating a new text message or opening a message stored in the message box.
– You can send to page a phone.

Message Box – You can check incoming text and voice messages.
– Stores the message created in the New Message menu, or messages that couldn't be sent.

Sending a Message

① To Send a Message using New Message



Select Send a Message from the Message menu and select New Message



Enter a message and press (See page 35)

※ Priority (transmission speed) is set to normal.
You can change the default setting from Message Box Setup Priority (See page 47)
※ You can set the Priority to when entering the phone number of the recipient Normal/Fast/Urgent



Select whether to store the sent message in Message Box and press



Enter your phone number and press



Press the phone number of the other party and press



Select whether to store the message in Sent Message and press

② To Enter Phone Number by Search



Press and press the relevant number key and .

- ① Search by Name (See page 59)
- ② Search by Group (See page 62)

- If your phone failed to send, you will be asked whether you want to store the message in Hold Message.
- To send the message stored in Hold Message, see page 45.
- To use the message stored in Sent Message, see page 44.

③ To Send a Message using Stored Message

Select Send Message from the Message menu and select Stored Message



Select a message and press .



* After this, the procedure is the same as for sending a message. (See page 38)

④ To Page a Phone



Select Send Message from the Message menu and select Phone Page



Enter the phone number of the recipient and press .



Enter your phone number and press .



* Up to 20 recipient phone numbers can be entered.

Message Box

1 To Check and Use Incoming Message

Select Message Box from the Message menu  



* Up to 100 incoming messages can be stored.

Select Received Message 

To make a call to the received number, press  To execute Delete/Delete All/Protect Mode, press  to select the relevant menu and press 

To check the message, press  or enter the message number you want to check and press 

If the message is long, press  to scroll down.

To execute Reply/Deliver/Delete/Save Number/Rock Mode for the message selected, press 

Press  : send a reply to the received number

Press  : deliver a message to the phone number

Press  : delete the message

Press  : save the number

Press  : rock the message

2 To Check and Use Incoming Voice Message (Number of messages/date/time)



Select Message Box from the Message menu  



Select Voice Message (Date and time received are displayed) 



To make a call to the received number, press 

To listen to the voice message, press 

• When connected to the voice message center, follow the recorded message instructions.

• You can check, store or delete the voice message.

To delete the voice message, press 



③ To Use Message Box



Select Message Box from the Message menu
Select Message Box.



Select the message you want and press

* You can select messages that you stored in Message Box when sending a message or the messages automatically saved when you receive an incoming call while creating a message. (Up to 80 messages are stored.)

To execute New Message/Delete, press

- Press : write a new message
- Press : delete a message
- Press : delete all messages



To check or edit message, press

- Press : resend the message
- Press : edit the message
- Press : delete the message



④ To Check and Use the Sent Message



Select Message Box from the Message menu and select Sent Message.



* Up to 20 can be stored in Sent Message



Select the message to check and press

* You can check, edit and resend messages from among those stored (but you cannot edit them)



To execute Resend/Delete/Delete All, press

- Press : resend the selected message
- Press : delete the selected message
- Press : delete all the messages



To check the message, press

To resend/delete the selected message, press

- Press : resend the selected message
- Press : delete the selected message



- 5 To Check and Use the Message in Hold Message (failed to send)




Select Message Box from the Message menu and select Hold Message



* Up to 14 messages can be saved in Hold Message



- You can check/delete/re-send the messages stored in Hold Message (but you cannot edit them)

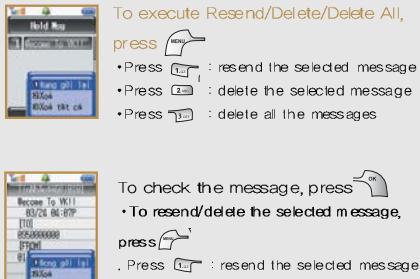

Message Box Setup


To Set Message Alarm



Select Msgbox Setup from the Message menu and select Alert Setup



If a message is received during a call
If a message is received during a call,
the alert ring is "Alert Type 1" regardless
of the alert type you set for convenience
* Except for mute (lamp) and vibration

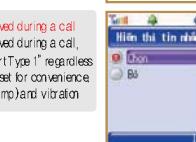

To Set Alert Frequency

Select [1.1] and press [button].

- Once: alert once when a message arrives.
- Every 2 Mins: alert every two minutes until you check the message.
- Off: no alert even if a message arrives

To Set Alert Type

Select [2.2] and press [button].

- Lamp : lamp blinks at the alert time interval set
- Alert Type 1, 2, 3 : alert rings at the alert time interval set

To Set Message Display

Select [3.3] and press [button].

- If set, an incoming message will be displayed in the Sub LCD.
- If canceled, only message arrival notification will be displayed in the Sub LCD. The main LCD displays the date and time of the message received, and the page phone number of the sender.

Setting Priority (Transmission Speed)



- ① Select Message Box from the Message menu and select Priority



- ② Select the Priority you want and press 

- ③ To finish, press 

Checking Message Log

* You can check how many messages you have sent and how many you have received. You can also delete these messages.



- Select Message Box from the Message menu and select Message Log



- To delete after checking, press 

- . press  : delete the number of outgoing messages

- . press  : delete the number of incoming messages

- To finish, press 



Selecting Background

To Set Your Favorite Image



Select Image Select from the Display menu



Select the image you want and press



Select the image

and press to change

- Select a small animation image or an animation image with few movements, since the animation image may not be displayed properly if there are too many movements.

• You may take a photo and set it as the idle image.

• See page 77 for more details.



Selecting Menu Style



Select Display or press



Select Menu Style from the Display menu, and press or



Select the menu style you want and press



Menu style in spring mode

Entering Phone Name



Select Display
→ 1.02



Select Phone Name from the Display Menu, and press → 3.02 or → 4.02.



Enter the phone name you want.
Press → 3.02 or → 4.02.



Press → 4.02.

Setting Backlight

1 To Set Time



Select Set Time from the Backlight menu.

→ 1.02 → 4.02



Press → 1.02 to select the time and press → 4.02.

* Set time is applied to the main LCD only.

2 To Change Backlight Mode



Select Backlight Mode from the Backlight menu.

→ 1.02 → 4.02



Press → 2.02 to select Yes' or 'No' and press → 4.02.

* Backlight Mode is applied to the key pad backlight only.

③ Changing Main LCD Contrast



VK Phonebook

1 Introduction to Menu and How to Use Menu

1. Press 
2. Press 
- Press  to select 'Phonebook'.
Press .



- 7 Delete all
- 8 My Number

2 To Store Number



Select Phonebook and select Store Number.



Enter the name and press 
• Enter home phone number, mobile phone number, office phone number, other number, fax number, speed dial, E-mail, group name and memo.
• Up to 16 English letters can be entered for a name (including spaces).

How to Enter

Press  to move to the item you want and enter. See page 57 for more details.



After entering, press 

- Select 'No' if you don't want to store it.



Press 

To finish, press 



③ To Enter Each Field


How to Enter Speed Dial



The speed dial number is automatically selected.


- To use another speed dial number, enter the speed dial number you want (000 ~ 999) or press **[OK]** to select another available speed dial number automatically.
- If you don't want to enter the speed dial, press **[OK]**.
- To use the speed dial number automatically selected, move to the phone number field and enter the phone number.
- Enter more than one phone number to save the speed dial number.

How to Enter Phone Number

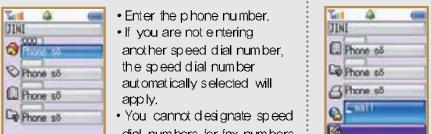


- Enter the phone number.
- If you are not entering another speed dial number, the speed dial number automatically selected will apply.
- You cannot designate speed dial numbers for fax numbers.

How to Enter Mobile Phone Number

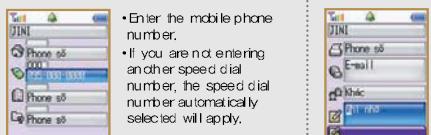


- Enter the mobile phone number.
- If you are not entering another speed dial number, the speed dial number automatically selected will apply.

How to Enter E-mail Address

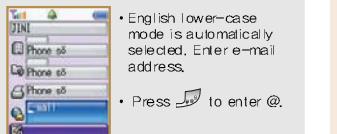

- English lower-case mode is automatically selected. Enter e-mail address.
- Press **[OK]** to enter @.

How to Enter Memo

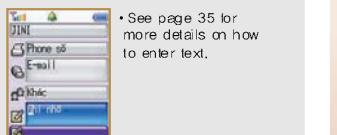

- See page 35 for more details on how to enter text.

④ To Store Phone Number You Entered

• If you press a phone number in standby status!



• If you press a phone number that the caller gives you during a call!



• If you can store the phone number recorded on the screen after a call!



Press **[OK]** to select the location to store the number.



Enter the name and press **[OK]**

* Up to 1200 phone numbers can be stored, and up to 1000 speed dials can be entered.





Finding Stored Phone Number

1 To Find by Name



Select Find Number from the Phonebook.



Enter the number to find and press

To Execute Edit/Delete/Add, press



To view the details of the number stored, press



To edit/delete the phone number selected, press

* To make a call to the number you found, press

2 To Find by Number




Select Find Number from the Phonebook.



Enter the number to find and press

To Execute Edit/Delete/Add, press

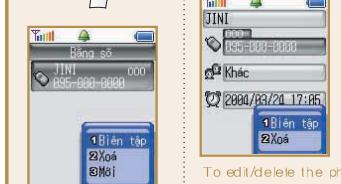

To view the details of the number stored, press



To edit/delete the phone number selected, press

* To make a call to the number you found, press





③ To Find by Location (Speed Dial)

All phone numbers stored in the phonebook are displayed. You can select the phone number for the speed dial you entered.



Select Find Number from Phonebook.



To make a call to the number you found, press



To Change/Cancel the speed dial number, press



Press 1: change the speed dial number you want to find (000 ~ 999) and press


④ To Find by Group



Select Find Number from Phonebook.



Select By Group and press

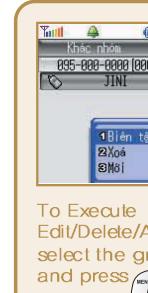

To Execute Edit/Delete/Add, select the group and press



To view the details of the number stored, press




To edit/delete the phone number selected, press






Using Recent Outgoing Numbers

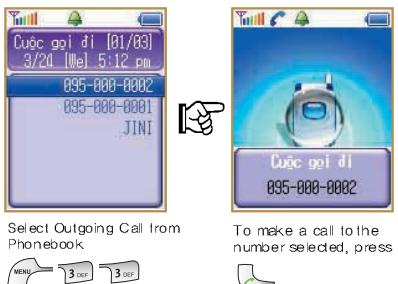

Select Outgoing Call from Phonebook

3 DEF 3 DEF

* Up to 30 outgoing numbers can be stored.

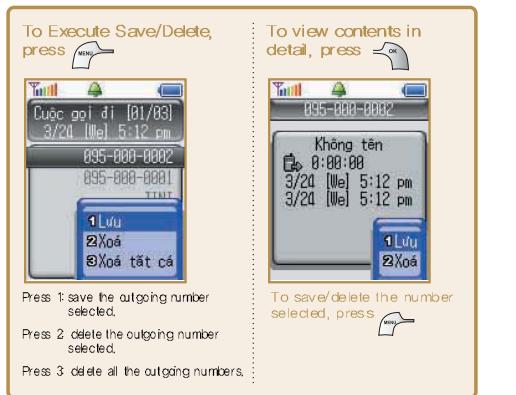

To Execute Save/Delete, press

To view contents in detail, press


To make a call to the number selected, press

To save/delete the number selected, press

Press 1: save the outgoing number selected.

Press 2: delete the outgoing number selected.

Press 3: delete all the outgoing numbers.

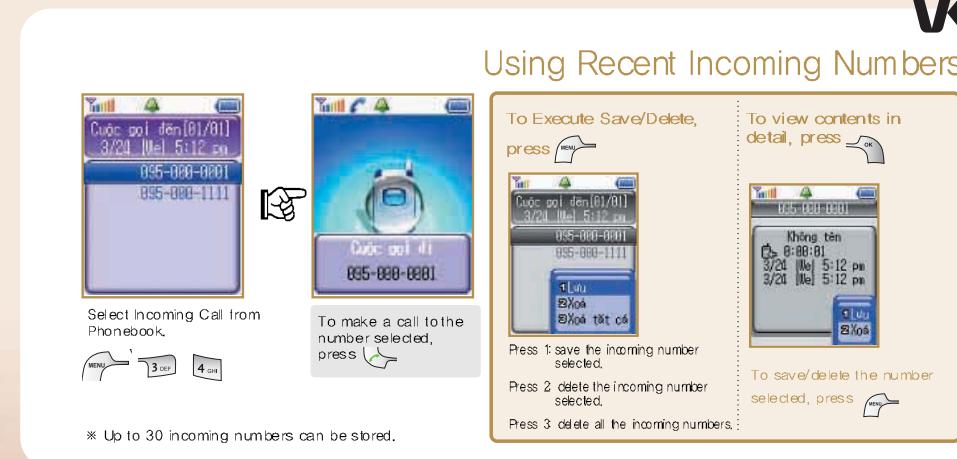


Select Incoming Call from Phonebook

3 DEF 4 CH

* Up to 30 incoming numbers can be stored.

Using Recent Incoming Numbers

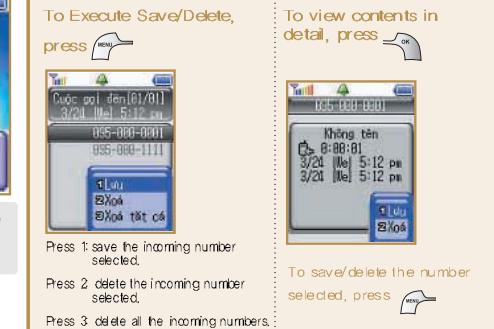

To Execute Save/Delete, press

To view contents in detail, press

To make a call to the number selected, press

To save/delete the number selected, press

Press 1: save the incoming number selected.

Press 2: delete the incoming number selected.

Press 3: delete all the incoming numbers.





Using Missed Incoming Numbers




Select Missed Call from Phonebook.



* Up to 30 missed numbers are stored.



To make a call to the number selected, press

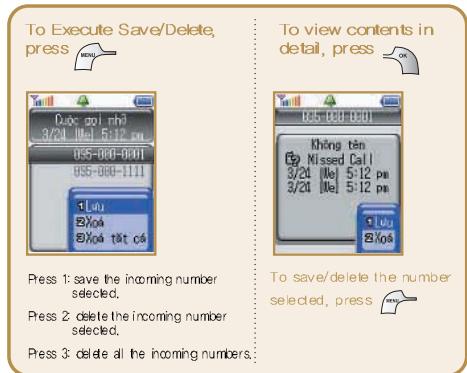

To Execute Save/Delete, press

To view contents in detail, press

Press 1: save the incoming number selected.

Press 2: delete the incoming number selected.

Press 3: delete all the incoming numbers.

① Phone Numbers Entered in Speed Dial 000 ~ 009

Press and hold the second digit number.

Ex) If stored in speed dial 001, press and hold .

Ex) If stored in speed dial 009, press and hold .

Ex) If stored in speed dial 000, press briefly, press and hold again

If you enter speed dial (000 ~ 999) when storing the phone number, you can make a call conveniently by simply pressing the relevant speed dial.

② Phone Numbers Entered in Speed Dial 010 ~ 999

Press the first digit number briefly, press and hold the last digit number.

Ex) If stored in speed dial 022, Press briefly, press and hold again.

Ex) If stored in speed dial 222, Press briefly, press and hold again.

