

Hello,

Thank you for purchasing VK cellular phone.

Thank you again for choosing VK product and we
hope you have greatest success in your business with
VK2000.

Please read 'Safety Precaution' prior to use.
The content of this manual and functions of
cellular phone are subject to change depending on
the software version and conditions in business.

Contents

PRIOR TO USE	6	BASIC FUNCTIONS	18
Safety Precaution	7	Basic Operation	19
Unpacking	10	Switching On/Off	19
Phone Layout and Keys	11	Making a Call	20
Function		Answering a Call	22
Keys Description	12	Hanging up	22
LCD Icon Description	14	Options During a Call	22
Inserting SIM Card and	15	Missed Calls	25
Battery		Volume Adjustment	26
Charging Battery	17	Manner Mode	26
		Using Ear-microphone	27
		Standby Screen	28
		Function	
		Contacts	29
		Storing Phone	29
		Numbers	
		Search Phone Number	33

BASIC FUNCTIONS		MENU FUNCTIONS	54
Contacts Menu	38	Menu Tree	57
Function			
Menu Function of	42	Message	61
Selected Items		Inbox	61
		Outbox	63
Character Input Mode	45	Write	65
T9 Mode	45	Settings	67
ABC Mode	48	Voice Message	68
Numeric Mode	51	Info. Message	69
Symbolic Mode	51	Memory Status	70
Changing Text Input	52		
Mode		Calls	71
		Call History	71
		Network Services	75
		Settings	79
		Display	79

Contents

MENU FUNCTIONS	OTHER FUNCTIONS	108
Sound	Safety Information	109
Phone Setting	Using the Batteries	112
Security	Safety Information	114
	Care and Maintenance	120
Organizer	FCC RF EXPOSURE	122
Calendar	INFORMATION	
Alarm	Glossary	125
Memo		
Calculator		
Unit Convert		
World Time		
Stop Watch		
Joy World		
Internet		
Games		

PRIOR TO USE

- Safety Precaution
- Unpacking
- Phone Layout and Keys Function
- Keys Description
- LCD Icon Description
- Inserting SIM Card and Battery
- Charging Battery

VK2000

VK2000

PRIOR TO USE

Safety Precaution

Please read safety precaution before using your cellular phone. Precaution contains contents that prevent users from potential health and financial hazards. Read carefully and use the product accordingly. If the following regulation stated in precautions is not followed, you may be subject to penalties or may cause illegal conditions. For more information, refer to 'Health and Safety Precaution' described in the appendix of this manual.



Traffic Safety

Do not use a hand-held mobile phone while driving a vehicle. Follow traffic related regulations while driving. Using hand-held device while driving can be direct and indirect cause of accidents. If it is necessary to use a hand-held phone, park the vehicle before conversing or use hands-free/ear-microphone.



Potentially Explosive Atmosphere

Switch off your phone when in any area with a potentially explosive atmosphere and obey all signs and instructions.



Switch Off While Refueling

Users are advised to switch off the phone while at a refueling point (gas station).



Switch Off in Aircraft

Electronic frequency generated from your cellular phone can influence electronic equipments that are not radio frequency shielded on an airplane and cause dangerous conditions.



Switch Off in Hospitals

Follow any regulations or rules in force. Switch off your phone near medical equipment. All wireless phones may be subject to interference that can influence the performance of medical equipment. Consult with the medical equipment manufacturer to assure the equipment is safe from high-frequency energy.



Special Regulations

Meet any special regulations in force in any area and always switch off your cellular phone whenever the use is forbidden such as concert hall, public area, and etc. Also, avoid using your phone where the use of phone can cause serious danger (hospital, potentially explosive area, while driving).

Effective Phone Usage

Please use your cellular phone for proper purpose.

Backup Data from Cellular Phone

Phone numbers, message and data stored in the phone book can be lost due to user's negligence. When cellular phone may be damaged and your data may be lost while repairing. Back up important data in safe medium. We do not take responsibility for damages incurred due to data loss.

Keep Cellular Phone in Dry Place

This cellular phone is not water-proof. Keep it in dry place.

Cellular Phone and Frequency Interference

All cellular phone are subject to radio frequency interruption. Radio frequency interference may influence the performance of your cellular phone.

Accessories and Batteries

Use only VK-approved accessories and batteries. If original accessories are not used, battery can explode or damage your cellular phone.

Approved Service Center

When repairing your cellular phone, use only VK approved service centers.


Emergency Calls

The cellular phone needs to be switched on and had to be in service area. If other functions are in use, finish the other function by pressing END key. Then, press emergency number and press CALL button. Describe your location and the emergency condition. Emergency call does not end until you hang up.

■ Unpacking




Cellular Phone

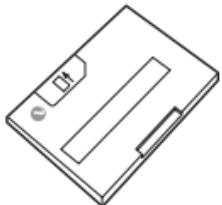

Battery



User's Manual

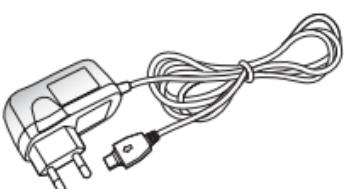

Travel adapter



Ear-microphone

Actual product may look different from the above picture.

■ Phone Layout and Keys Function



■ Keys Description



Left soft key

Enter the left bottom menu of the display.



Send/Dial key

Make/Answer a calls.

When this button is pressed in standby mode, the last number you dialed will be redialed.



Navigation key

Up : Organizer Down : Settings
Left : Messages Right : My Favorite



WAP/OK key

Enter WAP from standby mode.

Access function indicated on the bottom of the display.



Right soft key

Enter the Right bottom menu of the display.

In standby mode enters Contacts.



End/Power on-off key

End a call. Hold down to switch the phone on and off.

In menu mode, cancels input and returns the phone to standby mode.



Alphanumeric keys

Enter number and characters.




* key

Hold down to activate Etiquette mode on/off.



key

Hold down to activate Lock mode on/off.

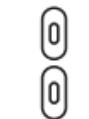

Volume key


Adjust the button volume from standby mode. Conversation volume adjustment while speaking on the phone.

LCD Icon Description




-  Shows the received signal strength.
[Strong :  Weak : -  Appears when a call is in progress.
-  Appears when you set the alarm to ring at a specific time.
-  Appears when you have new or unread message.
-  Appears when you set the alert type for incoming calls to vibration.
-  Appears when you set the key pad lock function.
-  Shows the level of your battery.

Inserting SIM Card and Battery

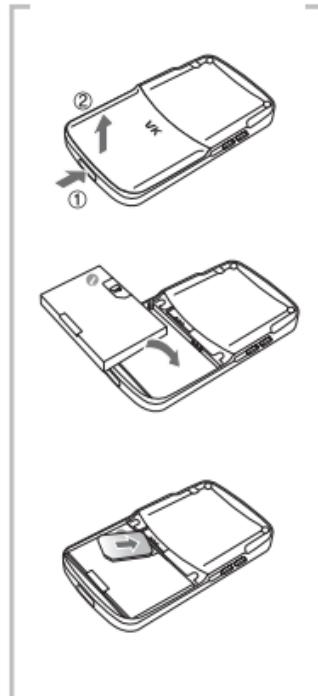

1. ① Turn off the power of cellular phone.
② Remove battery as shown in the figure below.
2. Face the gold color contact point of SIM card towards the cellular phone and push in the SIM card into the slot.
3. Push in the battery as shown in the figure below.
Align the battery as shown in the figure.

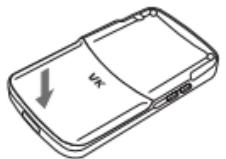

4. Push in the battery until it makes 'Click' sound.
5. Switch on the cellular phone.

■ Charging Battery

Charging with traveler's kit




Battery can be charged without desktop charger, thus, it is easier to take the charger with you. Charging through traveler's kit may take longer than using the desktop charger.

Connect traveler's kit to the external connector of cellular phone.


Connect the traveler's kit to the power outlet.

■ Reference About Battery Charging

Handset Power off Status

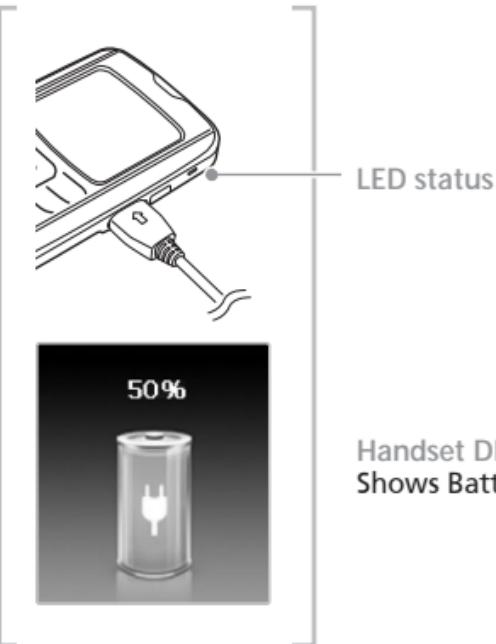

Handset Power on Status

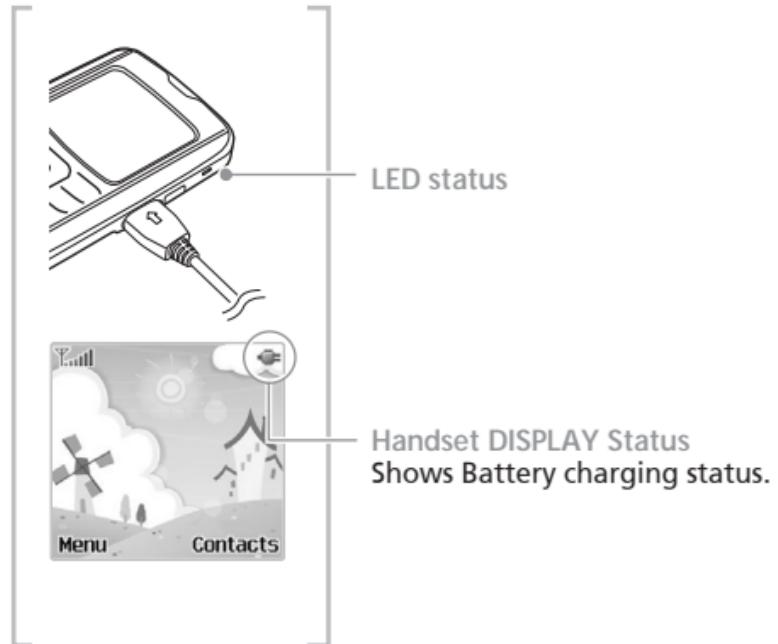

BASIC FUNCTIONS

- Basic Operation
- Contacts
- Character Input Mode

VK2000

■ Basic Operation

Switching On/Off

Switch On : Hold down  button for 2 seconds or longer.
If no SIM card is inserted in the cellular phone, a message window that states no SIM card is inserted is displayed.

In this case, only emergency call can be used and the rest of functions cannot be used.

If you are asked with password, enter the password and press  button.

The default password is set to '0000'.

When your cellular phone is set to Etiquette mode, the cellular phone vibrates as it is switched on.

Switch Off : Hold down  button for 2 seconds.

Making a Call

[Dialing]

1. Enter area code and phone number in standby mode.
2. Press  button.

When you entered a wrong number, press  button to erase one number at a time.

Hold down  button for 2 seconds to erase all entered numbers.

[Making a Call from Contacts]

You can make a call without entering phone number. Using phone numbers that are pre-stored, you can make a call.

Press the right soft key to enter the contacts.

For more details on contacts, see page 31.

[Latest Call List]

You can make a call using the latest call list.

1. Press  button shortly to display the latest call list in order of call time.
- Or, enter by accessing Menu ➔ 3. Calls ➔ 1. Call History.

2. Select desired phone number using up/down button of  key.

3. Press  button.

For more detail, refer to Call History on page 71.

[Speed Dialing]

You can make a call using speed dialing.

Using number keys from 2 to 9, hold down the pre-stored speed dial number for 2 seconds.

If the phone number is stored in your cellular phone hold down the speed dial number.

If the phone number is stored on SIM card press the speed dial number first, press  key, and press  key.

Speed dial number can be configured from 2 to 99.

For more detail, refer to Contacts on page 31.

[Making an International Call]

1. Holding down 0 button for 2 seconds displays  symbol.
2. Enter the country code, area code, and phone number after  symbol.
3. Press  button.

Answering a Call

1. When there is an incoming call, either bell tone or vibration is activated depending on the configuration.
2. Press  button.
3. To hang up, Press  button.
If a caller ID service is activated and if the incoming phone number is already stored in your contacts, the name you have stored for the phone number is displayed.

Hanging up

Press  button to hang up.

Options During a Call

You can use a variety of functions while talking on the phone.

[Call Standby]

This function is available only when a network service is provided. Using this function, you can make a call or answer other calls during any time of call.

[Ending a Call]

End a call during a Call : This function ends the current call.

End a call on hold : This function ends a call on hold.

End all calls : This function ends both the current call and the call on hold.

[Adding a call]

With this function, you can make a new call during a call.

[Waiting a call]

When there is a new incoming call, you can either answer the call or put it on hold.

[Swap]

You can switch the current call with the new incoming call.

[DTMF Function]

You can enter numbers and send it during a call.

In case where you need to enter a long sequence of numbers such as paging, ARS, or Telebanking, you can store the frequently used numbers (social security number or bank account number) to send them with greater convenience.

[Mute]

You can turn off the microphone so that the caller on the other side cannot hear you.

Select a call list and select 'Mute'.

When a call is ended, 'Mute' function is automatically released.

[Contacts]

You can search the contacts during a call.

[SMS Function]

When this function is used during a call, you can send SMS without handing up a call.

[Conference Call]

This function is available when a network service is provided.

Up to 6 people can talk at a time.

For more details, please contact your service provider.

[Private Call]

While using Conference Call function, you can use this function to talk to a specific person.

[Using Menu Function]

Menu function can be used during a call. During a call, use either the left soft key or option key to enter the call option. However, the available menu function during a call is limited.

For more details, refer to Menu Tree on page 57.

[Volume Adjustment During a Call]

You can adjust the volume during a call using  button located on the side of your cellular phone. The volume can be adjusted in five steps.

Missed Calls

Missed calls are displayed with the Caller's phone number.

Press  key to exit Missed Call window.

Missed call phone number can be stored or deleted.

For more detail, refer to Call History on page 71.

Volume Adjustment

You can adjust the conversation volume using  button located on the side of your cellular phone during a call.

In standby mode and press  button on the side of the cellular phone to adjust the button volume.

Press UP button of  key to increase the volume. Press down button of  key to decrease the volume.

For more information on ringtone and volume refer to phone setting on page 81.

Etiquette Mode

This function puts the cellular phone into Etiquette mode. Bell tone and button sound are changed to vibration, ramp blinking and Etiquette mode.

In areas where etiquette is required, such as public area, concert hall, lecture hall and conference room, this function is convenient.

Hold down  key to setup Etiquette Mode.

Hold down  button again to release Etiquette Mode.

When Etiquette Mode is configured,  icon is displayed on the screen.

When Etiquette Mode is set up, schedule/anniversary/alarm/message are notified through vibration.

When the cellular phone is turned off in Etiquette Mode, the cellular phone stays in Etiquette Mode when it is turned on later.


Using Ear-microphone

Ear-microphone frees your hand during a call.

To use ear-microphone, insert the ear-microphone into ear-microphone slot on the side of the cellular phone.

Standby Screen Function

Run the standby screen function using  and  keys.

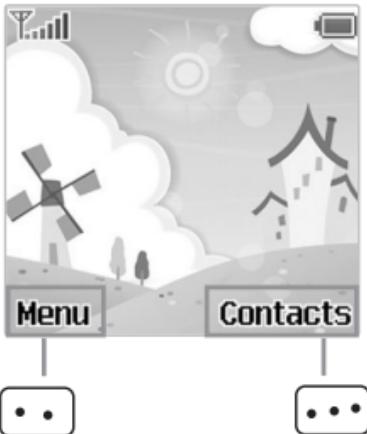

The left soft key executes function that left bottom line of the display.

In standby mode, pressing this key enters menu.

The right soft key executes function that right bottom line of the display.

In standby mode, pressing this key enters Contacts.

Contacts

You can store phone numbers and name in the contacts and retrieve to make a call. Data can be stored both in SIM card and your cellular phone, while you can search through one contacts list for data.

Note that the maximum amount of data stored depends on the type of SIM card.

When you purchase a new cellular phone, the phone numbers stored on SIM card can be inserted into the new cellular phone and retrieved.

Storing Phone Numbers

Phone numbers can be stored using either of two methods.

Directly Entering Phone Number.

Access Contacts and store a new phone number.

[Directly Entering Phone Number]

1. First, enter the phone number you want to store in the standby screen.
2. 'Save' is displayed on the left-bottom of the screen.
3. Confirm the entered phone number and press  key to save.

When you entered incorrect number, press  key to erase.

Press **[...]** key once to erase one number at a time. Hold down **[...]** key for longer than 2 seconds to erase all entered number.

4. Select whether to save on your cellular phone or on SIM card.

5. Set up the type of phone number.

Phone number types such as Mobile, Home, Office number can be saved on the cellular phone.

When the phone number is stored on SIM card, only one representative phone number for the individual can be saved.

6. Enter the name.

For more details, refer to "Character input mode" on page 47.

7. Set up the group type.

8. Two more phone numbers other than the first phone number you have saved, can be stored.

Enter the related phone numbers next to each icon.

Note that only one phone number can be saved for the individual on SIM card.

9. Set up the default phone number.

10. Configure the speed dial number. The speed dial number can be configured from 2 to 99.

11. Enter e-mail address.

12. Enter homepage address.

13. Enter fax number.

14. Enter home address.

15. Configure special bell tone.

When this bell phone is configured, an incoming call from the configured phone number plays the selected number.

16. Enter Job title.

17. Enter name of company.

18. Enter note.

19. Confirm all the entries and press **[...]** key to save.



Functions from 8 to 18 can only be used when the phone number is stored on the cellular phone. Only name, phone number, group type, and speed dial number can be configured on SIM card.

[Access Contacts and store a new phone number]

1. Press **[••]** key in standby mode to enter contacts.
2. The entire phone list is displayed.
3. Enter option screen by pressing **[••]** key.
4. Press 1 to enter 'New' screen.
5. Select whether to store phone number on the cellular phone or SIM card.
6. Enter the name.
For more details, refer to "Character input mode" on page 47.
7. Configure group type.
8. Enter phone number and relevant phone number into fields located next to each icon.
Note that only one phone number can be stored on SIM card.
9. Set up the default phone number.
10. Configure speed dial number. Speed dial numbers can be configured from 2 to 99.
11. Enter email, homepage URL, fax number, home address.
12. Configure the bell tone.
13. Enter occupation, name of company, and note.
14. Confirm all the entries and press **[••]** keys to save.



Functions from 8 to 13 can be used only when the phone number is stored on the cellular phone. Only name, phone number, group type, and speed dial number can be configured on SIM card.

Search Phone Number

You can search phone number from the entire contacts list or perform selective search using various methods. (name, phone number, speed dial, group and etc.)

[Search All]

This function displays all phone numbers stored in the contacts. (The list includes stored in the cellular phone and SIM card)

1. Press **[••]** key in standby mode to enter the contacts.
2. The entire contacts list is displayed.
3. Select a phone number and press **[T9]** key to make a call to the selected individual.

[By Name]

1. Press  key in standby mode to enter contacts.
2. Press  key to enter the search option.
3. Select 1 to enter 'By Name'.
4. When an edit window is displayed, enter the name of individual and press  key.
Entering only one character searches all names that contain the entered character.
5. Press  key to make a call to the selected individual.

[By Group]

1. Press  key in standby mode to enter the contacts.
2. Press  key to enter the search option.
3. Select 2 to enter 'By Group'.
4. Using left and right button on  key to select a group.
5. Search a phone number from the selected group.
6. Press  key to make a call to the selected individual.

[By Speed Dial]

You can save the phone number and then dial them easily whenever you want, simply by pressing the associated number key.

1. Press  key in standby mode to enter the contacts.
2. Press  key to enter the search option.
3. Select 3 to enter 'By Speed Dial'.
4. Enter the speed dial number that you want to search. If you don't know the speed dial number that you want to search, press  key to enter the entire speed dial number list.
The entire speed dial number list is searched.
Using  key, either select or enter the speed dial number to be searched.
5. Press  key to make a call to the selected individual.

[By Number]

1. Press  key in standby mode to enter the contacts.
2. Press  key to enter the search option.
3. Select 4 to enter 'By Number'.
4. Enter the number to search.

Entering only one number searches all phone numbers that contain the entered number.

5. Press  key to make a call to the selected individual.

[SDN]

You can search special service dial number via SDN. You can use this function in emergency paging. You can search items such as address, phone number, and voice mailbox number.

Telephone numbers supplied by your network provider and giving access to special services, such as voice mail, directory inquiries, customer support and emergency services.

1. Press  key in standby mode to enter the contacts.
2. Press  key to enter the search option.

3. Select 5 to enter 'SDN'.

4. Using  key, select a phone number.
5. Press  key to make a call to the selected phone number.

[DDD]

With this function, you can search for the area code.

1. Press  key in standby mode to enter the contacts.
2. Press  key to enter the search option.
3. Select 6 to enter 'DDD' .
4. When the list of area code appears, select an area code using  key.

Contact Menu Function

You can use variety of contacts functions.

1. Press  key in standby mode to enter the contacts.
2. Press  key to enter the option.

[New]

This function stores a new phone number.

Standby Mode ➔ ⋮ ➔ ⋮ ➔ Number 1

For more information, refer to 'Storing Phone Numbers' on page 31.

[Details]

This function shows details of the selected item.

Standby Mode ➔ ⋮ ➔ ⋮ ➔ Number 2

You can also enter this function by pressing  key in the entire phone number list of contacts.

[Delete]

You can either delete an item or the entire contacts.

Delete

Standby Mode ➔ ⋮ ➔ ⋮ ➔ Number 3 ➔ Number 1

Only the selected phone numbers are deleted.

Delete All

Standby Mode ➔ ⋮ ➔ ⋮ ➔ Number 3 ➔ Number 2

➔ Select among phone, SIM and Both.

All phone numbers in contacts are deleted.

[Copy]

Selected phone numbers can be copied. When a phone number stored in the cellular phone is copied, the phone number is copied to SIM card and vice versa. When 'copy all' is selected, all phone numbers are copied from the current storage medium to the other.

Copy

Standby Mode ➔ ⋮ ➔ ⋮ ➔ Number 4 ➔ Number 1

Copy All

Standby Mode ➔ ⋮ ➔ ⋮ ➔ Number 4 ➔ Number 2

➔ Select 'phone to SIM' or 'SIM to phone'

[Move]

A selected phone number is moved from the cellular phone to SIM card, and vice versa.

Standby Mode ➔ ⋮ ➔ ⋮ ➔ Number 5

[Group Manager]

Phone numbers can be categorized into groups. Selected bell tones can be configured for each group.

Standby Mode →  →  → Number 6

Select a group using  key.

New

1. Press  key to enter to make a new group.
2. Enter the new group name.
3. Configure the bell tone.
4. Select the members of the new group.
5. Confirm all the entries and press  key to save.

Edit

Group bell tone, and group members can be edited.

Group member can be selected from all phone number list stored in the cellular phone.

Delete

Delete a selected group.

[Speed Dial]

Standby Mode →  →  → Number 7

A list of phone number for speed dial numbers is displayed. Press  key from a selected item to display 'Add' or 'Edit', 'Delete' and 'Goto' menus.

It appears 'Add' at display, if the selected speed dial number didn't indicate the phone number, otherwise it displays 'Edit'.

Press 'Add' to edit the selected speed dial number to other number.

Press 'Edit' to move the selected phone number to other speed dial number.

Pressing 'Delete' removes the selected speed dial number item.

Press 'Goto', if you want to confirm in use, you can check speed dial number whether you can use it or not.

If you have not set up speed dial number, <Empty> message is displayed.

[Own Number]

Enter a desired number to set up speed dial.

Standby Mode ➔ ⋮ ➔ ⋮ ➔ Number 8

Only name and phone number can be stored using 'Own Number'.

[Memory Status]

This function displays the currently used memory by numbers.

Standby Mode ➔ ⋮ ➔ ⋮ ➔ Number 9

This function shows the status of SIM card and the cellular phone separately.

Menu Function of Selected Items

1. Press ⋮ in standby mode to enter the contacts.
2. Select a phone number to edit and press ⌂/OK key to see the details.
Or, press ⋮ key and press 2 key to see the details.
3. Press ⋮ key to display the option for the selected number.

[Edit]

All configured items such as name, group, phone number, default number, email address, address, and etc. can be edited.

Standby Mode ➔ ⋮ ➔ Select a phone number ➔ ⌂/OK ➔ ⋮ ➔ Number 1

For more details, refer to 'Storing Phone Numbers' on page 31.

[Send message]

You can send SMS message to a selected phone number.

Standby Mode ➔ ⋮ ➔ Select a phone number ➔ ⌂/OK ➔ ⋮ ➔ Number 2 ➔ Enter message ➔ Send

For more details, refer to 'Message' on page 61.

[Send Contact]

You can send the selected phone number via SMS to other people.

Standby Mode ➔ ⋮ ➔ Select a phone number ➔ ⌂/OK ➔ ⋮ ➔ Number 3

[Delete]

This function deletes the selected item.

Standby Mode →  → Select a phone number →  →
 → Number 4

[Copy]

This function copies a selected item. A phone number stored in a cellular phone is copied to SIM card, and vice versa.

Standby Mode →  → Select a phone number →  →
 → Number 5

[Move]

This function moves a selected phone number from the cellular phone to SIM card, and vice versa.

Standby Mode →  → Select a phone number →  →
 → Number 6

Character Input Mode**T9 Mode**

This mode allows you to enter English words with only one keypress per letter.

Each key on a keypad has more than one letter a single press on the 5 key could be J, K or L. The T9 mode automatically compares your key presses to an internal linguistic database to determine the correct word. This mode is based on a built-in dictionary.

This mode requires far fewer keystrokes than the traditional multi-tap method.

Typing English Words

To type a word, press keys corresponding to the letters you need. Remember the following as you are typing :

1. Press key on the phone just once per desired letter. For example, to enter 'hello', press the following keystrokes : 4,3,5,5,6.
2. The word you are typing appears in the display. It may change with each key you press.
3. Press the  key, you can display alternate word choices for the keys that you have pressed.
4. Complete each word with a space by pressing the  key.

5. If the word that appears in the display is not the word that you desire, press the  one or more times to display alternate word choices for the keys you have typed. (For example, 'of' and 'me' both share the sequence 6, 3) The phone displays the most commonly used choice first.




This mode displays all the words which are containing the letters you have entered. By doing this, the T9 mode saves you typing extra keypress.

Smart Punctuations

Full stop, hyphen and apostrophe are available on the 1 key. The T9 mode applies rules of grammar to insert the correct punctuation.

Notice that the 1 key is used twice in this example to display two punctuation marks :

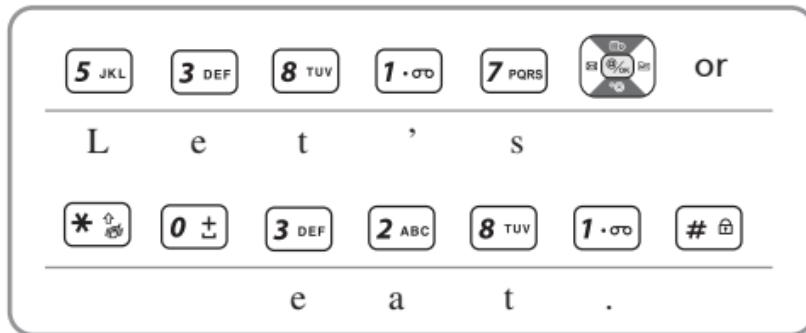

Shifting a Case

To change the case in T9 mode, press the  or  key. Lower case, Capital lock and Initial capital are available.

Scrolling

The  key scrolls to the alternative characters corresponding the keypress.

To view your message without moving the cursor, press  keys on the left side of the phone.

To move the cursor left or right through your text message, press the  key. Note that pressing the key without completing a word by the 0 key displays the alternative word.

Clearing Characters

Press the  key one or more times to remove characters from the text area.

ABC Mode

When typing in ABC mode, you should press numbers key labeled with the required character:

- Once for the first character.
- Twice for the second character and so on.

For example, you press the 2 key three times quickly to display the character "C", the 5 key three times quickly to display the character "L".

So, this method is called Multi-tap typing.

The cursor moves to the right when you press a different key.

When entering the same character twice (or a different character on the same key), just wait for a few seconds for the cursor to move right automatically, and then select the next character.

Refer to the table on page 50 for the list of characters assigned on each key.

Shifting a Case

To change the case in ABC mode, press the  key. Lower case, Capital lock and Initial capital are available.

Scrolling

To view your message without moving the cursor, press keys on the left side of the phone.

To move the cursor left or right through your text message, press the  key. Note that pressing the key without completing a word by the 0 key displays the alternative word.

Clearing Strokes and Characters

Press the  key one or more times to remove characters from the Text Area.
For list of characters available see table.

Key	Characters in the Order Displayed	
	ABC	abc
	. , ? ! 1 - / @	. , ? ! 1 - / @
	A B C 2	a b c 2
	D E F 3	d e f 3
	G H I 4	g h i 4
	J K L 5	j k l 5
	M N O 6	m n o 6
	P Q R S 7	p q r s 7
	T U V 8	t u v 8
	W X Y Z 9	w x y z 9
	□ 0 * < > % # £	□ 0 + () & _ \$

Numeric Mode

Numeric mode is indicated by 123. It enables you to enter numbers into a text message. Press number keys corresponding to the desired digits.

Symbolic Mode

Symbolic mode enables you to enter symbols into a text message.

To scroll through the available symbol categories, press the  key. When you see the desired symbol on the display, press the appropriate number key (1 to 6) to insert the symbol. The phone automatically switches back to the text entry mode used just prior to selecting Symbolic mode.

Changing Text Input Mode

When you are in a field that allows characters entry, you should notice the text input mode indicator in the display.

To change to another text input mode :

1. Press the  key repeatedly until you find the desired input mode.
2. Press the  key. You will see the text input mode indicator in the top line of the display.

- T9 mode > T9 ABC (T9 Abc, T9 abc)
- ABC > ABC (Abc, abc)
- Simplified Chinese > Pinyin
- Traditional Chinese > Stroke
- Numeric > 123
- Symbol > Symbol

Directions for using each of the text input modes appear later in this chapter.



You can also change the text input mode by pressing the key repeatedly in text entry screen. Each time you press the  key, the mode is changed in the following order :
T9 ABC (T9 Abc, T9 abc) > ABC (Abc, abc) > Pinyin > Stroke > 123 > Symbol

MENU FUNCTIONS

- Menu Tree
- Message
- Calls
- Settings
- Organizer
- Joy World

VK2000

VK2000

■ **Menu Tree**

Message

Inbox

- Delete
- Delete All

Outbox

- Unsent Items
- Sent Items

Write

- Add Object
- Save
- Exit

Settings

- SMS Center No.
- Delivery Report
- Validity Period

Voice Message

- Listen to Voice MSG
- Set Voice MSG No.

Info. Message

- Read
- Receive
- Topics

Memory status

Calls**Call History**

- Missed calls
- Received calls
- Dialed calls
- Delete All
- Call Duration

Network Services

- Call Diverting
- Call Barring
- Call Waiting
- Send My Number
- Select Network

Settings**Display**

- Standby
- Status Lamp
- Lighting

Sound

- Incoming Calls
- Message Alert
- Key Tone
- Volume

Phone Setting

- Date & Time
- Language
- Answer Key

Organizer**Calendar**

- New
- Delete all
- Schedule list
- Goto date
- Auto delete

Alarm

- Morning Call
- Reminder

Memo**Calculator**

Unit Converter

- Length
- Weight
- Volume
- Surface
- Temperature

World Time**Stop Watch****Joy World****Internet**

- Home
- Bookmarks
- Go to URL
- Profile Settings
- General Settings
- History
- WAP Inbox
- Clear Cache

Game-Bulbmon**Message**

Messaging is a network service.

Using this function, you can input, send, receive, check and edit messages.

A new message notification is displayed on the screen when a message arrives.

In Standby mode, press the left key  to quickly enter Messages mode.

Inbox

This function enables a user to write and send a new message. You can check and save received or sent messages.

1. In Standby mode, press the  key to display the menu screen.
2. Press number 2 to enter Messages.
3. Press number 1 to enter Inbox.

Check received messages.

On the screen with the list of received messages, press the  key to enter the Options menu.

[Delete]

Deletes messages stored in your Inbox.

Inbox ➔ ⋮ ➔ Number 1

[Delete All]

Deletes all the messages stored in your Inbox.

Inbox ➔ ⋮ ➔ Number 2

On the screen with the list of received messages, press the  key to display the content of the received messages.

On the screen displaying the message content, press the  key to enter the Options menu.

Delete : Deletes the selected message.

Reply : Send a reply to the message sender.

Forward : Forward (with or without editing) a received message to another recipient.

Call Back : Call the message sender.

Copy to Phone/SIM : Copy the selected message to the phone/SIM.

Move to Phone/SIM : Move the selected message to the phone/SIM.

Details : Displays the time and sender info for the selected message.

Outbox

The Outbox can store sent messages and message drafts to be sent.

1. In Standby mode, press the  key to display the menu screen.
2. Press number 2 to enter Messages.
3. Press number 2 to enter Outbox.

[Unsent Items]

Unsent messages, whether due to a sending failure or those explicitly saved before sending, are stored.

Delete

Deletes stored messages in the Outbox.

Outbox ➔ Number 1 ➔ ⋮ ➔ Number 1

Delete All

Deletes all the messages stored in the Outbox.

Outbox ➔ Number 1 ➔ [..] ➔ Number 2

On the screen with the list of unsent messages, press the  key to display the content of those unsent messages.

On the screen displaying the message content, press the  key to enter the Options menu.

Send : Resend a selected message.

Edit : Edit a selected message.

Delete : Delete a selected message.

Copy to SIM/Phone : Copy to SIM or Phone a selected message.

Move to SIM/Phone : Move to SIM or Phone a selected message.

[Sent Items]

Stores sent messages.

Delete

Outbox ➔ Number 2 ➔ [..] ➔ Number 1

Delete All

Outbox ➔ Number 2 ➔ [..] ➔ Number 2

On the screen with the list of sent messages, press the  key to display the content of the sent messages.

On the screen displaying the message content, press the  key to enter the Options menu.

Send : Resend a selected message.

Edit : Edit a selected message.

Delete : Delete a selected message.

Copy to SIM/Phone : Copy to SIM or Phone a selected message.

Move to SIM/Phone : Move to SIM or Phone a selected message.

Write

This function enables the user to write and send new messages.

1. In Standby mode, press the  key to display the menu screen.
2. Press number 2 to enter Messages.
3. Press number 3 to enter Write.

Write the message to send.

After inputting the message, press the  key to enter the Options menu.

Add Object : Using this function, you can add image, animation and sound to your message.

Save : You can save edited messages to send later. These messages will be saved under the Unsent Items tab in the Outbox and you can edit and send them later.

Exit : Return to the Messages menu.

Press the  key to enter the screen for keying in the sender's number. After you input the number, press the  key to send it.

If you have forgotten the telephone number, press the  key, while on the screen for keying in the sender's number, to enter the telephone directory.

Settings

You can set various options for SMS Center, delivery report, and validity period.

1. In Standby mode, press the  key to display the menu screen.
2. Press number 2 to enter Messages.
3. Press number 4 to enter Settings.

[SMS Center]

Set SMS Center No.

[Delivery Report]

Report whether the message successfully reached the SMS Center.

On : Reports whether or not the sent message was delivered.
Off : Does not report whether or not the sent message was delivered.

[Validity Period]

Sets the storage period of a message.

If this function is selected, received messages will expire and be automatically deleted after a set period of time.

You can select among one hour, one day, one week, one month and one year.

Voice Message

When a new voice mail arrives, an indicator icon is displayed on the screen. You can listen to the voice mail using this function.

Press the voice mailbox number if the number is stored in the handset's memory, or input the number manually.

Voice mail is a network service. For further details, consult your nearest service center.

1. In Standby mode, press the  key to display the Menu screen.
2. Press 2 to enter Messages.
3. Press 5 to enter Voice Message.

[Listen to Voice MSG]

Listen to Voice Message waiting in the Voice Mailbox.

Voice Message  Number 1  Enter a Voice Mailbox Number 

[Set Voice MSG No.]

Stores the Voice Mailbox Number.

Voice Message  Number 2  Enter a Voice Mailbox Number 

Info. Message

Informational Msg. is a network service that provides Informational Messages to many GSM mobile phone users. For example, it provides information on weather forecast, traffic and stock prices.

1. In Standby mode, press the  key to display the Menu screen.
2. Press 2 to enter Messages.
3. Press 6 to enter Info. Message.

[Read]

You can search and read the desired message.

Info. Message  Number 1  Select a desired message

[Receive]

Choose whether to receive informational messages or not.

Info. Message  Number 2  Select an option 1 : On, 2 : Off

[Topics]

Choose the message topics.

Info. Message → Press 3 → Select a message topic.

At the topics list, press the  key to display the option menu.

Edit : Edit the selected message topic.

Delete : Delete the selected message topic.

Memory Status

You can check the Memory Status of your handset's memory.

1. In Standby mode, press the  key to enter the Menu screen.
2. Press 2 to enter Messages.
3. Press 7 to enter Memory Status.

Calls

You can check your call history and utilize various network services in Calls.

Call History

Using this function, you can check recent calls you made, calls received and missed calls.

Also, you can check the time of each call.

1. In Standby mode, press the  key to display menu screen.
2. Press number 3 to enter Calls.
3. Press number 1 to enter Call History.
4. Full list of the Call History is displayed.

Pressing the  key displays currently selected call's information such as phone number, name and time spent.

Press the  keys to enter option screen and following menu items will be displayed:

Save : Saves the phone number in your Contacts.

Delete : Deletes the phone number.

5. When the full list of Call History is displayed, press the  key to enter option screen.

[Missed Calls]

Displays phone numbers of calls you missed.

Standby Mode ➔ [••] ➔ Number 3 ➔ Number 1 ➔ [••] ➔ Number 1

Pressing the  key displays information of caller's phone number, name and calling time.

Press the  key to enter menu screen and following menu items will be displayed :

Save : Saves the phone number in your Contacts.

Delete : Deletes the phone number.

[Received Calls]

Displays phone numbers of received calls.

Standby Mode ➔ [••] ➔ Number 3 ➔ Number 1 ➔ [••] ➔ Number 2

Pressing the  key displays currently selected call's information such as phone number, name and time spent.

Press the  key to enter menu screen and following menu items will be displayed :

Save : Saves the phone number in your Contacts.

Delete : Deletes the phone number.

[Dialed Calls]

Displays phone numbers of dialed calls you made.

Standby Mode ➔ [••] ➔ Number 3 ➔ Number 1 ➔ [••] ➔ Number 3

Pressing the  key displays currently selected call's information such as phone number, name and call time.

Press the  key to enter menu screen and following menu items will be displayed :

Save : Saves the phone number in your Contacts.

Delete : Deletes the phone number.

[Delete All]

Deletes call History information.

Standby Mode ➔ [••] ➔ Number 3 ➔ Number 1 ➔ [••] ➔ Number 4

Select among Missed Calls / Received Calls / Dialed Calls / All Calls.

[Call Duration]

Displays the duration of selected calls including received and dialed.

Call Duration time displayed on your handset may differ from the actual time recorded by the service provider according to network performance, calculation formula and other reasons.

Standby Mode →  → Number 3 → Number 1 →  → Number 5

Voice Call

Show the every variety of call duration.

Last Call : Displays last call's duration.

All Calls : Displays the sum of all received and dialed calls' duration.

Received Calls : Displays the sum of all received calls' duration up to now.

Dialed Calls : Displays the sum of all dialed calls' duration up to now.

Data Call

All Sent Data : Displays the sum of all sended data duration.

All Received Data : Displays the sum of all received data duration.

Network Services

Using this function, you can configure various network services.

Before using this service, check available services from your service provider.

1. In Standby mode, press the  key to display menu screen.
2. Press number 3 to enter Calls.
3. Press number 2 to enter Network Services.

[Call Diverting]

Using this function, you can divert incoming calls to a specified phone number.

For example, if you are off business and enjoying a movie in a theatre, you can divert incoming calls to your *(kidding -) HATRED* colleague's phone number.

Standby Mode →  → Number 3 → Number 2 → Number 1

Always : Diverts all incoming calls to the specified number.

If Busy : Diverts incoming calls to the specified number if your line is busy.

If Out of Reach : Diverts incoming calls to the specified number if your handset is turned off, not in a service area or unreachable for other reason.

If No Reply : Diverts incoming calls to the specified number if you don't reply to the call.

Cancel All : Releases the all Call Diverting settings.

Each Call Diverting setting may have following options :

All Calls : Configures Call Diverting to apply to all calls including Voice, Data and Fax Calls.

Voice Call Only : Configures Call Diverting to apply to Voice Calls only.

Data Call Only : Configures Call Diverting to apply to Data Calls only.

Fax Call only : Configures Call Diverting to apply to Fax Calls only.

After choosing an option, select Set Divert.

[Call Barring]

Using this network service, you can limit incoming and outgoing calls from your handset.

Standby Mode →  → Number 3 → Number 2 → Number 2

You can limit following calls :

Outgoing Calls : You cannot make an outgoing call from your handset.

International Calls : You cannot make an international call from your handset.

Int. Calls except to Home : You can make an international call to only a domestic phone number or the number serviced by a domestic service provider.

Incoming Calls : You cannot receive an incoming call.

When Roaming : You cannot receive an incoming call when you are not in a serviced area.

Cancel All : Cancels all Call Barring settings and all incoming / outgoing calls are made properly.

Change password : You can set and change the password given by the service provider.

[Call Waiting]

Using this network service, you are notified with an incoming call when you are on another call.

Standby Mode →  → Number 3 → Number 2 → Number 3

[Send My Number]

This function sends your previously specified phone number automatically.

It is convenient to use this function when you need to send your phone number for a call, ARS, phone banking and other services not to press your phone number by manual.

Standby Mode ➔  ➔ Number 3 ➔ Number 2 ➔ Number 4

Default : Sends the default number specified.

Hide Number : Does not send any number.

Send Number : Sends your phone number.

[Select Network]

Select Network is a function to choose a network when you are using an international roaming service whether by manual or by automatic selection.

However, a roaming network is available to choose when your network provider has an agreement on roaming service with the roaming network provider.

Standby Mode ➔  ➔ Number 3 ➔ Number 2 ➔ Number 5 ➔ Select an option among Automatic and Manual.

■ Settings

Using this function, you can set various options of Display, Sound, Phone setting and Security.

Display

Using this function, you can set various Standby and Lighting options.

1. In Standby mode, press the  key to display menu screen.
2. Press number 4 to enter Settings.
3. Press number 1 to enter Display.

[Standby]

You can set an image and clock displayed in Standby mode, and also you can input words and set the color of characters.

Standby Mode ➔  ➔ Number 4 ➔ Number 1 ➔ Number 1

Image

You can select an image that provided with your handset to set it as your Standby screen.

Select Image, and then select an image from provided images using the left and right side of  key to set it as your Standby screen.

Animation

You can select an Animation that provided with your handset to set it as your Standby screen.

Select Animation, and then select an animation from provided animations using the left and right side of  key to set it as your Standby screen.

Clock

Sets the Clock type displayed on your Standby screen.

You can select from None / Digital / Analog / Dual options.

Text Input

You can display words on your Standby screen.

After inputting words, you can select the font color.

[Status Lamp]

Standby Mode →  → Number 4 → Number 1 → Number 2 → Select an option On or Off

[Lighting]

Using this function, you can set time, contrast and brightness.

Standby Mode →  → Number 4 → Number 1 → Number 3

Sound

Using this function, you can set the Sound and its volume for incoming calls, Message Alert, Key tone, and volume.

1. In standby mode, press the  key to display menu screen.
2. Press number 4 to enter Settings.
3. Press number 2 to enter Sound.

[Incoming Call]

You can select a ring tone from various ring tones provided for Incoming Calls.

Standby Mode →  → Number 4 → Number 2 → Number 1

Mode

Sets the way of notification for Incoming Calls.

Ring Tone Only : The Ring Tone rings only.

Vibration Only : The handset vibrates only.

Ring Tone + Vib : Ring Tone rings, and your handset vibrates at the same time.

Silent : Your handset does not vibrate nor ring.

Ring Tone to Vib : Ring Tone rings, and then your handset vibrates afterwards.

Vib to Ring Tone : The handset vibrates, and then the Ring Tone rings.

Ascending : Ring Tone rings increasingly loud.

Ring Tone

You can select your Ring Tone from various tones and melodies provided with your handset.

[Message Alert]

You can set the sound for incoming messages.

Standby Mode →  → Number 4 → Number 2 → Number 2

You can set various options for message arrivals.

Alert Period : Sets the interval between repeating alerts when a message arrives.

Select from Once / Every 2 Min / None.

Alert Sound : Sets the Ring Tone for the message alert when you selected Ring Tone Only or Ring Tone + Vib option for your Alert Mode.

Alert Mode : Sets the type of notification for arriving messages.

Select from Ring / Vibrator / Vib + Ring / Silent.

[Key Tone]

You can set the key tone.

Standby Mode →  → Number 4 → Number 2 → Number 3 → Select an option On or Off

[Volume]

Sets the Volume of the ring tone which listed above, Incoming Calls / Message / Keytone / Power On/Off / Others.

Standby Mode →  → Number 4 → Number 2 → Number 4

Five levels are available.

Phone Setting

You can set the date, time, language and other various options of your handset.

1. In Standby mode, press the  key to display menu screen.
2. Press number 4 to enter Settings.
3. Press number 3 to enter Phone Setting.

[Date & Time]

You can set Date, Time and Time Zone. You can select the indication formats for Date and Time.

Standby Mode ➔ ⋮ ➔ Number 4 ➔ Number 3 ➔ Number 1

1. Set the date.
2. Select input type among YYYY / MM / DD, DD / MM / YYYY, MM/DD / YYYY.
3. Set the Time Zone.
4. Set the time.
5. Select the time format from 12hours / 24hours.
6. After finishing, press the  key to save your settings.



When user changed time value, the schedule could be deleted, which saved on handset.

[Language]

You can set the Language for your handset.

Standby Mode ➔ ⋮ ➔ Number 4 ➔ Number 3 ➔ Number 2

Select an option from English / Simplified Chinese / Traditional Chinese / Vietnamese.

[Answer Key]

You can set a key as the Answer Key to answer an incoming call.

Standby Mode ➔ ⋮ ➔ Number 4 ➔ Number 3 ➔ Number 3

Select an option from Any Key / Send Key.

[Auto Answer]

You can take advantage of this function when you use an ear-mic-phone (hands-free) connected to your handset. When the ear-mic-phone is connected to your handset and Auto Answer is set, an incoming call will be answered automatically without pressing the Answer Key.

Standby Mode ➔ ⋮ ➔ Number 4 ➔ Number 3 ➔ Number 4

Select an option from Off / 5 sec / 10 sec.

[Auto Redial]

Using this function, you can automatically redial the number from missed and other failed calls.

Standby Mode ➔ ⋮ ➔ Number 4 ➔ Number 3 ➔ Number 5

Select an option from Off / On.

[Factory Set]

Using this function, you can reset all settings of your handset to factory default values.

Entering password will enable the Factory Set.

Standby Mode ➔ ⋮ ➔ Number 4 ➔ Number 3 ➔ Number 6 ➔ Enter the password ➔ @/OK ➔ @/OK

[My Favorite]

Using this function, you can configure your own menu screen with frequently used and preferred menu items.

Standby Mode ➔ ⋮ ➔ Number 4 ➔ Number 3 ➔ Number 7 ➔ Select a desired menu by pressing the @/OK key ➔ ⋮

After saving menu items, press the right side of the  key in Standby mode to directly enter Favorite menu screen.

Security

Sets security numbers for your privacy and protection of your handset.

1. In Standby mode, press the ⋮ key to display menu screen.
2. Press number 4 to enter Settings.
3. Press number 4 to enter Security.

[PIN]

PIN (Personal Identification Number) prevents the use of an unapproved SIM card.

PIN is usually provided with the SIM card. When your PIN has been approved, you must enter the PIN each time you switch the phone on.

Standby Mode ➔ ⋮ ➔ Number 4 ➔ Number 4 ➔ Number 1

Enable PIN : As the SIM card is locked, you must enter your PIN whenever you switch the phone on.

[Change PIN]

To some SIM cards, PIN is also provided on some SIM cards. To use a function, this number may be required. This feature requires support of the SIM card.

Standby Mode ➔ [•] ➔ Number 4 ➔ Number 4 ➔ Number 2

Change PIN : You can change your current PIN to a new one. You must enter the current PIN before you can specify a new one.

[Lock]

You can lock a selected menu item or your entire handset for your privacy.

Standby Mode ➔ [•] ➔ Number 4 ➔ Number 4 ➔ Number 4 ➔ Number 3

Private Lock

Locks a selected menu item.

A locked menu item requires access password for each use. Select a menu to be locked by pressing the  key and then press the  key to save your setting.

The initial password is "0000".

Power on Lock

Locks your entire handset.

If this function is set, a password input is required every time the handset is turned on.

Change Password

Changes the password.

Enter the current password and then enter the new password to be set.

[FDN]

FDN : With the phone FDN (Fixed Dialing Numbers) is provided, you can dial only several numbers you specify. To use this mode, you have to enter PIN2 number.

Standby Mode ➔ [•] ➔ Number 4 ➔ Number 4 ➔ Number 4 ➔ Number 4 ➔ Number 4

The following options are available :

Enable : Activates or deactivates the FDN mode.

The number of your phone may be different from the number of the SIM card.

[Change PIN2]

To some SIM cards, PIN2 is also provided. To use a function, this number may be required. This feature requires support of the SIM card.

Standby Mode ➔  ➔ Number 4 ➔ Number 4 ➔ Number 5

Change PIN2 : You can change your current PIN to a new one. You must enter the current PIN before you can specify a new one.

■ Organizer

Organizer provides various functions such as Calendar, Alarm, Memo, Calculator, World Time, Unit Converter and Stop watch.

Calendar

Using this function, you can input and check your anniversaries, important appointments, and other events of which you can be reminded by setting the alarm.

1. In Standby mode, press the  key to display menu screen.
2. Press number 5 to enter Organizer.
3. Press number 1 to enter Calendar.
4. After the calendar is displayed, press the  key to select a date and then press the  key to display a submenu screen of the selected date.

To check your schedule, press the  key to select a date and then press the  key, and number 3 to display the Schedule List.

[New]

Inputs a new schedule item.

Standby Mode ➔  ➔ Number 5 ➔ Number 1 ➔  ➔ Number 1

1. Input following items :

Subject : Input the subject of the schedule item.

Start Date & Time : Input the start date and time of the schedule item.

End Date & Time : Input the end date and time of the schedule item.

Location : Input the location of the schedule item.

Notes : Input a reminding note of the schedule item.

Alarm : Set the alarm time.

Alarm Sound : Set the ring tone for the alarm.

2. After finishing, press the  key to save the schedule item.

[Delete All]

Deletes all the schedule items stored on the selected date.

To delete all the schedule items, confirm the prompt message displayed by pressing the  key.

Standby Mode →  → Number 5 → Number 1 →  → Number 2 →  → Enter the password → 

[Schedule List]

Displays all the schedule items stored on the selected date.

Standby Mode →  → Number 5 → Number 1 →  → Number 3

Press the  key to enter the option menu.

New

Inputs a new schedule item for the selected date.

1. Input respective schedule data items.

2. After inputting schedule data items, press the  key to save it.
For further details, please refer to 'New' of 'Calendar' on page 91.

Delete

Deletes one selected schedule item only.

To delete selected item, confirm the prompt message displayed by pressing the  key.

Delete All

Deletes all the schedule items stored on the selected date.

To delete all the schedule items, confirm the prompt message displayed by pressing the  key.

Go to Date

Moves to the selected date when you press the  key.

[Go to Date]

Moves to the selected date when you press the  key.

Standby Mode →  → Number 5 → Number 1 →  → Number 4

[Auto Delete]

Deletes schedule items automatically according to the selected expiry date.

Standby Mode →  → Number 5 → Number 1 →  → Number 5

You can select from Never / After 1 Day / After 1 Week / After 1 Month.



If you change the Date & Time of Phone Setting in Settings menu to the one following the date and time of a preset schedule item, this schedule item will not be automatically deleted by the Auto Delete setting.

Alarm

Sets the Alarm to notify you at the time you set.

1. In Standby mode, press the  key to display menu screen.
2. Press number 5 to enter Organizer.
3. Press number 2 to enter Alarm.

[Morning Call]

You can set the Morning Call time.

The Morning Call repeats after an interval set unless you stop it by pressing  key.

Standby Mode →  → Number 5 → Number 2 → Number 1

1. Input following items to set the Morning Call :

Time : Using number keys, set the time of Morning Call.

Days : Select the day on which you want to set the Morning Call.

Select from Everyday / Once / Mon - Fri / Mon - Sat / None.

Snooze : Select the Snooze interval of the Morning Call.

The Morning Call will repeat with a selected ring tone after an interval you set.

If Snooze is set to a value other than Off, you need to press the  key to release the Snooze not to repeat the ring.

Select from Off / 1 min / 5 min / 10 min / 30 min / 1 hour.

Alarm Mode : Sets the Alarm Mode of the Morning Call.

Select from Sound / Vibration / Vibration + Sound.

Alarm Sound : Sets the Alarm Sound of the Morning Call.

2. After finishing, press the  key to save and complete your Morning Call settings.

[Reminder]

You can set a Reminder to ring alarms for anniversaries, important and repeating schedule events at the time you set.

Standby Mode   Number 5  Number 2 
Number 2

Pressing the  key displays the Menu.

New

Sets a new Reminder item.

Select repeating interval from Once / Daily / Weekly / Monthly.

Once : Reminder will alarm on the date you set only.

- Subject : Set the Subject of the Reminder.
- Date : Set the date of the Reminder.
- Time : Set the time of the Reminder.

Daily : Reminder will alarm everyday at the time you set.

- Subject : Set the Subject of the Reminder.
- Time : Set the time of the Reminder.

Weekly : Reminder will alarm every week on the day you set.

- Subject : Set the Subject of the Reminder.
- Date : Set the day of the week of the Reminder.
- Time : Set the time of the Reminder.

Monthly : Reminder will alarm every month on the date you set.

- Subject : Set the Subject of the Reminder.
- Date : Set the dates of the Reminder. Set the dates using number keys.
- Time : Set the time of the Reminder.

After finishing, press the  key to save and complete your Reminder settings.

Delete

Deletes a selected Reminder.

Delete All

Deletes all the Reminder items stored.

Alarm Option

Sets Alarm Mode and Alarm Sound.

Memo

Using this function, you can edit and delete Memos.

Standby Mode →  → Number 5 → Number 3

Press the  key, you can enter a new Memo.

Enter the contents in the selected empty item.

Press the  key to save it.

Press the  key to display the option menu.

[Edit]

After editing a Memo, press the  key to save it.

[Delete]

Deletes a selected Memo.

[Delete All]

Deletes all the Memo items stored.

Calculator

Using this function, you can perform simple calculations such as addition, subtraction, multiplication, and division.

Standby Mode →  → Number 5 → Number 4

[Function Keys]

Resets the Calculator.



Returns to previous screen.



: Multiply X Divide ÷



: Add + Subtract -



: Shows the result.



Enters a decimal point.



Enters a plus or minus sign.

Unit Converter

You can convert one length, weight, volume, surface and temperature unit into another unit.

Standby Mode →  → Number 5 → Number 5

After selecting the original unit, select your target unit to convert into by using left and right side of the  key.

World Time

Displays the World Time for the selected region.

Standby Mode →  → Number 5 → Number 6

Using the  key, select the region you want to display the time for.

Stop Watch

You can use a stop watch function.

Standby Mode →  → Number 5 → Number 7

Start : Press the  key to start.

Stop : Press the  key to stop, when you use the Stop Watch function.

Lap : Use this function, you can measure the lap time.

Reset : Use this function, you can reset the measured time recording.

Joy World

You can enjoy various functions such as Internet and Game.

Internet

Your handset supports WAP browser so that you can connect to and use wireless internet connection.

1. In Standby mode, press the  key to display menu screen.
2. Press number 6 to enter Joy World.
3. Press number 1 to enter Internet.
Or, press the  key in Standby mode to enter Internet directly.

[Home]

Select this item to connect to the internet and it will display the Home page of the wireless internet service provider.

Standby Mode    Number 6  Number 1  Number 1

[Bookmarks]

Using this function, you can store a URL of your favorite site.

Standby Mode    Number 6  Number 1  Number 2

Add

1. Press the  key to display the option screen.
2. Press number 1 to add a new bookmark.
3. Give the bookmark a URL and Title. Press the  key to save the bookmark.

Edit

1. Select a URL to edit and then press the  key to display the option screen.
2. Press number 2 to edit the bookmark.
3. Edit selected bookmark as in Adding a New Bookmark, and then press the  key to save it.

Delete

1. Select a URL to delete and then press the  key to display the option screen.
2. Press number 3 to delete the selected URL only.

Set as Home

1. Select a URL to delete and then press the  key to display the option screen.
2. Press number 4 to set the selected URL as home.

[Go to URL]

You can enter the URL directly and connect to the site.

Standby Mode ➔ [.] ➔ Number 6 ➔ Number 1 ➔
Number 3

[Profile Settings]

Using this function, you can setup WAP browser options.

Standby Mode ➔ [.] ➔ Number 6 ➔ Number 1 ➔
Number 4 ➔ Select a service provider

Profile Name

Enter Profile Name.

Homepage

Enter Homepage.

Connect Mode

Select the connect mode option from CL / CO / TCP.

IP Address

Enter IP Address.

GPRS Data Attach

Attach the selected service provider.

GSM Data Attach

Attach the selected service provider.

Detach Data Account

Detach the selected service provider.

[General Settings]

Standby Mode ➔ [.] ➔ Number 6 ➔ Number 1 ➔
Number 5

Access Type

Select the Access Type option from GPRS preferred / GSM only / GPRS only.

Push Access

Sets the WAP push access option.

Load Images

Sets to display the image in WAP.

Data Account

GSM Settings

- Setup : Using this function, you can set the selected service provider's data call type, dial-up number, log-in name and password.
- Add : Using this function, you can add a new service provider.
- Edit : Using this function, you can edit the name of the selected service provider.

- Delete : Using this function, you can delete the selected service provider.

GRPS Settings

- Setup : Using this function, you can set the selected service provider's APN, Log-in Name, Password and Local address.
- Add : Using this function, you can add a new service provider.
- Edit : Using this function, you can edit the name of the selected service provider.
- Delete : Using this function, you can delete the selected service provider.

[History]

Shows the list of the contacted URL records.

Standby Mode →  → Number 6 → Number 1 → Number 6

On the screen with the list of the contacted URL, press the  key to contact the selected URL.

Press the  key to enter the option menu.

Delete : Deletes the selected URL.

Delete All : Delete the URL stored in the History.

[WAP Inbox]

Stores the WAP Push Messages.

Standby Mode →  → Number 6 → Number 1 → Number 7

[Clear Cache]

Clears the WAP browser's cache memory.

Standby Mode →  → Number 6 → Number 1 → Number 8

Game

You can enjoy games using your handset.

1. In Standby mode, press the  key to display menu screen.
2. Press number 6 to enter Joy World.
3. Press number 2 to enter Game.
4. Enjoying Games may consume more battery power.
4. Select the game and press the  key to start the game.

OTHER FUNCTIONS

- Safety Information
- Using the Batteries
- Safety Information
- Care and Maintenance
- FCC RF EXPOSURE INFORMATION
- Glossary

VK2000

Safety Information

Password Input

There are several passwords that are used by your phone and its SIM card. These passwords help you protect your phone against unauthorized use.

Phone Password

The phone password is used for unlocking the keys, deleting all Phonebook entries, restoring the factory setting, and locking or unlocking the phone. If the Phone Lock feature is enabled, you must enter the password each time the phone is turned on.

This password can be used to avoid unauthorized use of your phone. The password is usually preset to "0000".

PIN Code

PIN(Personal Identification Number)code protects your SIM card against unauthorized use. The PIN code is usually supplied with the SIM card. When the PIN code request is enabled, the code is asked each time the phone is switched on.

If you key in incorrect PIN code three times in succession, the phone will lock and you will be required to enter a PUK code. When you enter a new PIN code, you will have to enter your new password twice to confirm correct.

PIN2 code

Some SIM cards are provided with a PIN2 code. To use a function this code may be required. The use of this code requires the support of the SIM card.

If you key in an incorrect PIN2 code three times in succession, enter the PUK 2 code and then press the  key.

When you enter a new PIN2 code, you will have to enter it twice for confirmation and then press the  key.

PUK code

The PUK (Personal Unblocking Key) code is used for changing a blocked PIN code. This code is usually supplied with the SIM card, if not contact your service provider.

If you key in an incorrect PUK code ten times in succession, the SIM card will become void and you must obtain a new card. As the PUK code cannot be changed, contact your service provider if you forget the code.

PUK2 code

The PUK2 code, supplied with some SIM cards, is required to change a blocked PIN2 code. If you key in an incorrect PUK2 code ten times in succession, you cannot use the functions requiring the PIN2 code. Contact your service provider for a new card. You cannot change the PUK2 code. If you lose the code, contact your service provider.

Barring Password

The 4-digit barring password is required when you use the Call Barring function. You can obtain the password from your service provider when you subscribe to this function.

■ Using the Batteries

The battery provided with the phone is a Lithium slim battery.

Precautions When Using Batteries

- Never use any charger or battery that is damaged in any way.
- Use the battery only for its intended purpose.
- If you use the phone near the network base station, it uses less power ; talk and standby times are greatly affected by the signal strength on the cellular network and the parameters set by the network operator.
- Battery charging times depend on the remaining battery charge, the type of battery, and charger used. The battery can be charged and discharged hundreds of times, but it will gradually wear out. When the operation time (talk time and standby time) is noticeably shorter than normal, it is time to buy a new battery.
- If left unused, a fully charged battery will discharge itself over time.

- Use only approved batteries and recharge your battery only with approved chargers. When a charger is not in use, disconnect it from the power source. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.
- Extreme temperatures will affect the charging capacity of your battery: it may require cooling or warming first.
- Do not leave the battery in hot or cold places, such as in a car in summer or winter conditions, as you will reduce the capacity and life-time of the battery. Always try to keep the battery at room temperature. A phone with a hot or cold battery may temporarily not work, even when the battery is fully charged. Li-ion batteries are particularly affected by temperatures below 0°C (32°F).
- Accidental short circuiting can occur when a metallic object (coin, clip or pen)causes a direct connection between the + and - terminals of the battery (metal strips on the back of the battery), for example when you carry a spare battery in a pocket or bag. Short-circuiting the terminals may damage the battery or the object causing the short-circuit.
- Dispose of used batteries in accordance with local regulations. Always recycle. Do not dispose of batteries in a fire.

Safety Information

Traffic Safety

Do not use a hand-held mobile phone while driving a vehicle. If using a hand-held phone, park the vehicle before conversing. Always secure the phone in its holder, do not place the phone on the passenger seat or where it can break loose in a collision or sudden stop.

The use of an alert device to operate a vehicle lights or horn on public roads is not permitted.

Remember, road safety always comes first!

Operating Environment

Remember to follow any special regulations in force in any area and always switch off your phone whenever it is forbidden to use it, or when it may cause interference of danger.

When connecting the phone or any accessory to another device, read its users guide for detailed safety instructions. Do not connect incompatible products.

As with other mobile radio transmitting equipment, users are advised that for the satisfactory operation of the equipment and for the safety of personnel, it is recommended that the equipment should only be used in the normal operating

position (held to your ear with the antenna pointing over your shoulder).

Electronic Devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your mobile phone.

Pacemakers

Using the phone within 6 inches (20cm) may cause a potential interference with a pacemaker.

Persons with pacemakers:

- Should always keep the phone more than 6 inches (15cm) from their pacemaker when the phone is switched on.
- Should not use the phone near around their chests.
- Should use the ear opposite the pacemaker to minimize the potential for interference.
- If you have any reason to suspect that interference is taking place, switch off your phone immediately.

Hearing Aids

Some digital mobile phones may interfere with some hearing aids. For more information, contact your service provider.

Other Medical Devices

Electromagnetic waves generated from the cellular phones may dangerously affect medical devices. Switch off your phone in health care facilities in accordance with their regulations.

Car

Electromagnetic wave signals may affect improperly installed or inadequately shielded electronic systems in a car. Check with the manufacturer regarding your car before using your phone.

Potentially Explosive Atmospheres

Switch off your phone when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Users are advised to switch off the phone while at a refueling point (service station). Also switch your phone off when you

are below deck on boats; in chemical transfer or storage facilities and in vehicles using liquefied petroleum gas as the air may contain chemicals or particles such as grain, dust or metal powders.

Vehicles

Only qualified personnel should service the phone, or install the phone in a vehicle. Faulty installation or service may be dangerous.

Check regularly that all mobile phone equipment on your vehicle is mounted and operating properly. Do not store or carry flammable liquids, gases or explosive materials in the same compartment as the phone, its parts or accessories.

Do not install your mobile phone equipment near an air bag. If the air bag inflates, your phone may be damaged.

Switch off your phone before boarding an aircraft. The use of mobile phones in an aircraft may be dangerous to the operation of the aircraft, disrupt the wireless telephone network and may be illegal.

Failure to observe these instructions may lead to the suspension or denial of telephone services to the offender, or legal action, or both.

Emergency Calls

Important!

This phone, like any mobile phone, operates using radio signals, wireless and landline networks as well as user-programmed functions that cannot guarantee connection in all conditions. Therefore, you should never rely solely upon any wireless phone for essential communications (for example, medical emergencies).

Remember, to make or receive any calls the phone must be switched on and in a service area with adequate signal strength. Emergency calls may not be possible on all wireless phone networks or when certain network services and phone features are in use. When you cannot use this function, contact your local service provider.

To Make an Emergency Call :

1. If the phone is not on, switch it on.
2. Key in the emergency number for your present location (for example, 999 or other official emergency number). Emergency numbers vary by location.

3. Press the SOS key. If certain features are in use (key guard, restrict calls, etc.), you may first need to turn those features off before you can make an emergency call. Consult this document and your local cellular service provider. When making an emergency call, remember to give all the necessary information as accurately as possible. Remember that your phone may be only means of communication at the scene of an accident-do not cut off the call until given permission to do so.

Care and Maintenance

Your phone is a product of superior design and craftsmanship and should be treated with care. Carefully read the following information :

- Keep it and all its parts and accessories out of small children's reach.
- Keep it dry. Precipitation humidity and liquids contain minerals that will corrode electronic circuits.
- Do not use or store it in dusty, dirty areas.
- Do not store it in hot or cold areas. High or low temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store it in cold areas. When the phone warms up (to its normal operating temperature), moisture can form inside the phone, which may damage the phone.
- Do not drop, knock or shake it. Rough handling can break internal circuit boards.

- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean it. Wipe it with a soft cloth slightly dampened in a mild soap and water solution.
- Do not paint the phone. Paint can clog the devices moving parts and prevent proper operation.
- Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications of attachments could damage the phone and may violate regulations governing radio devices.
- If the phone, battery, charger, or any accessory is not working properly, take it to your nearest qualified service facility.

■ FCC RF EXPOSURE INFORMATION

Read this information before using your phone

In August 1996 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards.

Use only the supplied or an approved antenna. Unauthorized antennas, modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations.

Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

Body-worn Operation

For body-worn operation, the SAR testing of the device was performed using a 1.5cm air gap, which corresponds to using clips and holsters that contain no metallic components and meets FCC RF exposure guidelines. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure compliance and should be avoided.

Specific Absorption Rate (SAR) for Wireless Phones

The SAR is a value that corresponds to the relative amount of RF energy absorbed in the head of a user for a wireless handset. The SAR value of a phone is the result of an extensive testing, measuring and calculation process. It does not represent how much RF the phone emits. All phone models are tested at their highest value in strict laboratory settings. But when in operation, the SAR of a phone can be substantially less than the level reported to the FCC. This is because of a variety of factors including its proximity to a base station antenna, phone design and other factors. What is important to remember is that each phone meets strict federal guidelines.

Variations in SAR's do not represent a variation in safety. All phones must meet the federal standard, which incorporates a substantial margin of safety. As stated above, variations in SAR values between different model phones do not mean variations in safety. SAR values at or below the federal standard of 1.6W/kg are considered safe for use by the public.

The highest reported SAR values of VK2000 are :

GSM mode-Head : 1.400 W/kg	Body-worn : 0.119 W/kg
PCS mode-Head : 1.400 W/kg	Body-worn : 0.153 W/kg

FCC Radio Frequency Emission

This phone meets the FCC Radio Frequency Emission Guidelines. FCC ID number : SBWVK2000

More information on the phone's SAR can be found from the following FCC website :

<http://www.fcc.gov/oet/fccid>

Glossary

Airtime

Actual time spent talking on the wireless phone. You are billed according to this reference.

Antenna

A device for transmitting or receiving signals. The size and shape of antennas is determined, in part, by the frequency of the signal they receive. Wireless phones and the base station must have antennas.

ALS (Alternate Line Service)

ALS provides the capability of associating two alternate lines with one SIM card. You can make and receive calls on either line as desired with this service.

Call Barring

Ability to restrict outgoing and incoming calls.

Call Divert

Ability to reroute calls to another mobile or fixed line.

Call Holding

Ability to put one call on standby while answering or making

another call; you can then switch between the two calls, as required.

Call Waiting

Ability to inform users that they have an incoming call when engaged on another call.

CLI (Caller Line Identification) Service

Service allowing subscribers to view or block the telephone numbers of callers.

Conference Calling

Ability to establish a conference call involving up to five additional parties.

DTMF (Dual-tone Multi Frequency)

You send DTMF signals when you enter numbers by pressing the digit keys.

Hands-Free

A feature that permits a driver to use a wireless phone without lifting or holding the handset an important safety feature for automobiles, tractors and most other motorized vehicles.

GSM (Global System for Mobile Communication)
International standard for cellular communication, guaranteeing compatibility between the various network operators. GSM covers most European countries and many other parts of the world.

LCD (Liquid Crystal Display)

Commonly used to refer to the screen display on the wireless phone.

LED (Light Emitting Diode)

Commonly used to refer to a small light on the wireless phone or on the Desktop Charger. The lights on the charger indicate that battery charging is taking place.

PIN (Personal Identification Number)

Security code that protects the phone against unauthorized use. The PIN is supplied by the service provider with the SIM card. It may be a four to eight-digit number and can be changed, as required.

PUK (PIN Unblocking Key)

Security code used to unlock the phone when an incorrect PIN has been entered three times in succession. The eight-digit number is supplied by the service provider with the SIM card.

Roaming

Use of your phone when you are outside your home area (when traveling for example).

SIM (Subscriber Identification Module)

A card containing an integrated circuit. The circuit contains the information about the phone operation.

SMS (Short Message Service)

A network service sending and receiving messages to and from other persons without the need to call. The incoming messages immediately appear on the display, and you can edit, receive and send the messages.

Soft Keys

The function of this key :

- Varies according to the function that you are currently using.
- Is indicated on the bottom line of the display just above the corresponding key.

Voice Mail

When you cannot be reached, you can record your voice using this function.

Wireless

Receives signals. There is not need to connect using a physical connection, such as a metal wire (copper) or fiber optic cable.

For more details, contact your local service provider. There may be some differences between the phone and user manual.