



CRAIG®

**TOWER SPEAKER SYSTEM
WITH BLUETOOTH® WIRELESS
TECHNOLOGY**

Owner's Manual

PLEASE READ BEFORE OPERATING THIS EQUIPMENT.

Model: TA-304B



Size: 148.5(W) x 210(H)mm (A5)



IMPORTANT SAFETY INSTRUCTIONS



CAUTION
 RISK OF ELECTRIC SHOCK
 DO NOT OPEN



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert user to the presence of uninsulated "dangerous voltage" within the product's enclosure, that may be of sufficient magnitude to constitute a risk of electric.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instruction in the literature accompanying the appliance.

FCC NOTICE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide residential protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC NOTICE:

To assure continued compliance, follow the attached installation instructions and use only shielded cables when connecting to other devices. Modifications not authorized by the manufacturer may void user's authority to operate this device.

Before using the unit, be sure to read all operating instructions carefully. Please note that these are general precautions and may not pertain to your unit. For example, this unit may not have the capability to be connected to an outdoor antenna.

1. Read these instructions

All the safety and operating instructions should be read before the product is operated.

2. Keep these instructions

The safety and operating instructions should be retained for future reference.

3. Heed all warning

All warnings on the product and in the operating instructions should be adhered to.

4. Follow all instructions

All operating and use instructions should be followed.

5. Do not use this apparatus near water

Do not use the product near water and moisture, for example: near a bathtub, washbowl, kitchen sink or laundry tub; in a wet basement; or near a swimming pool.

6. Clean only with dry cloth

Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a dry cloth for cleaning.

7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

Slots and openings in the cabinet and in the back or bottom are provided for ventilation, to ensure reliable operation of the product and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product should never be placed near or over a radiator or heat source. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.

8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. a grounding type plug has two blades and a third grounding prong, the wide blade or the third prong are provided for your safety. if the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

11. Only use attachments/accessories specified by the manufacturer.

-

Portable Cart Warning

- [illegible]

 
EXAMPLE OF ANTENNA GROUNDING

Refer all servicing to qualified service personnel. Servicing is required when the unit has been damaged any way such as the following: the power-supply cord or plug has been damaged, liquid has been spilled into the unit, the unit has been exposed to rain or moisture, the unit has been dropped or the unit does not operate normally.

POWER SOURCE

Insert the small plug from the supplied AC/DC Adaptor to the DC IN Jack on the unit. Insert the AC/DC adaptor to a wall outlet having AC 100-240V~, 50/60Hz .


NOTE: This AC/DC Adaptor is intended to be correctly orientated in a vertical or floor mount position.

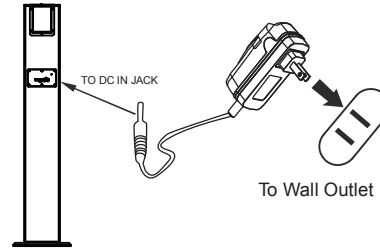

INSTALLATION


1. Main Body
2. Wooden Base
3. Screws

 4. Speaker Net
5. Speakers
6. Remote Sensor

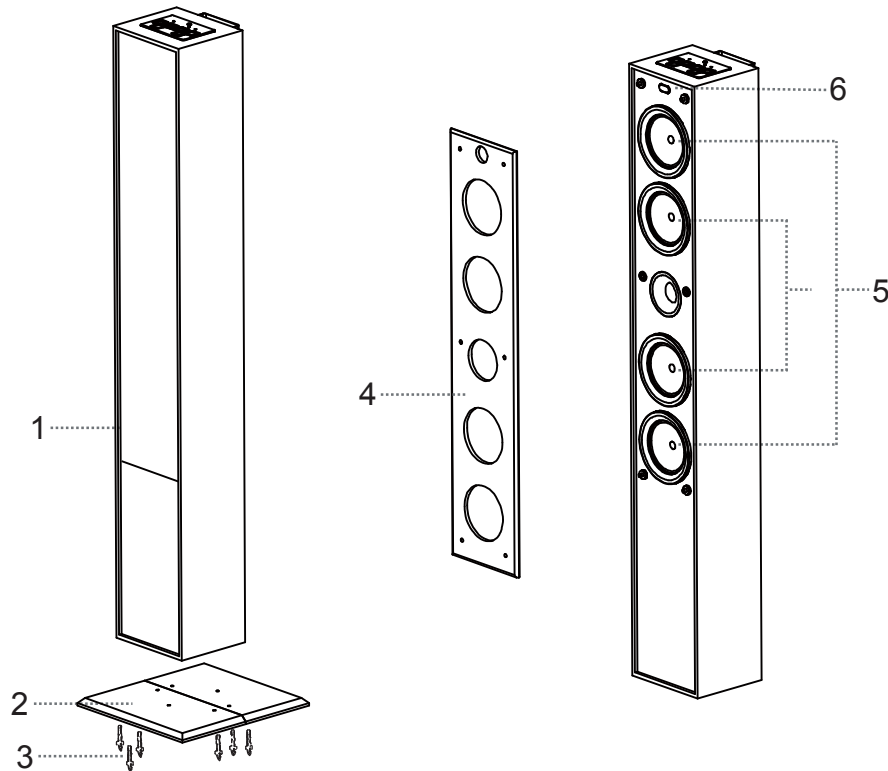

1). The speaker net can take out and reassemble as the figures above.

 ASSEMBLING METHOD

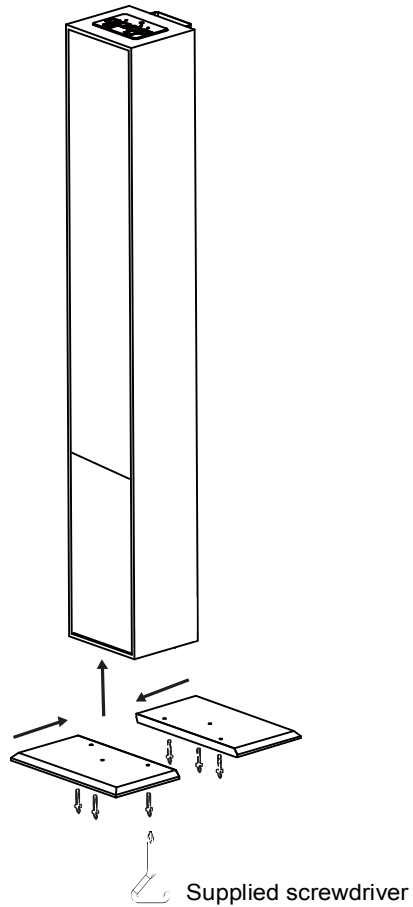


Assembling Method:


1. Assembly the two wooden bases to the bottom of unit by the supplied assembly screws and screwdriver as the figure above.

LOCATION OF CONTROLS

 1. FM ANT (FM ANTENNA)
2. POWER ON/OFF SWITCH
3. DC IN JACK
4. AUX IN 2 JACKS
5. AUX IN 1 JACK
6. ⌘ (BLUE TOOTH) INDICATOR
7. AUX 1 INDICATOR
8. AUX 2 INDICATOR
9. STANDBY/FM INDICATOR
10. SOURCE BUTTON
11. STANDBY ON/OFF BUTTON
12. VOL - (VOLUME DOWN) BUTTON
13. VOL + (VOLUME UP) BUTTON
14. TUNE +/- ►► BUTTON
15. TUNE -/◄◄ BUTTON

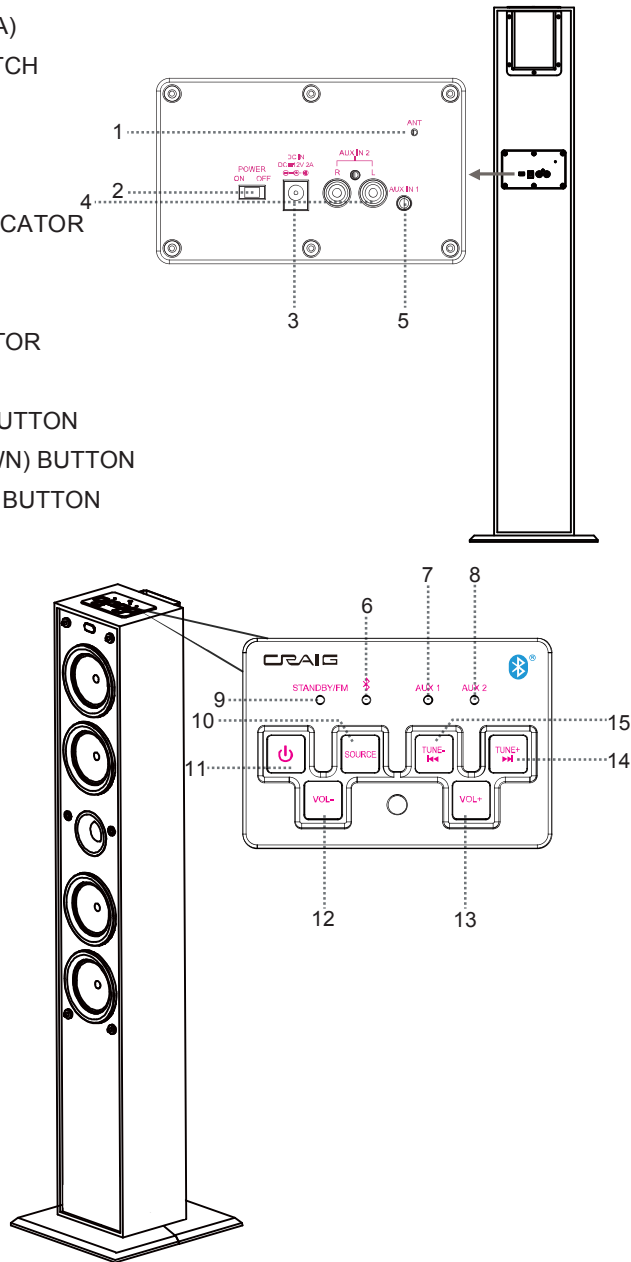

REMOTE CONTROL -LOCATION OF CONTROLS

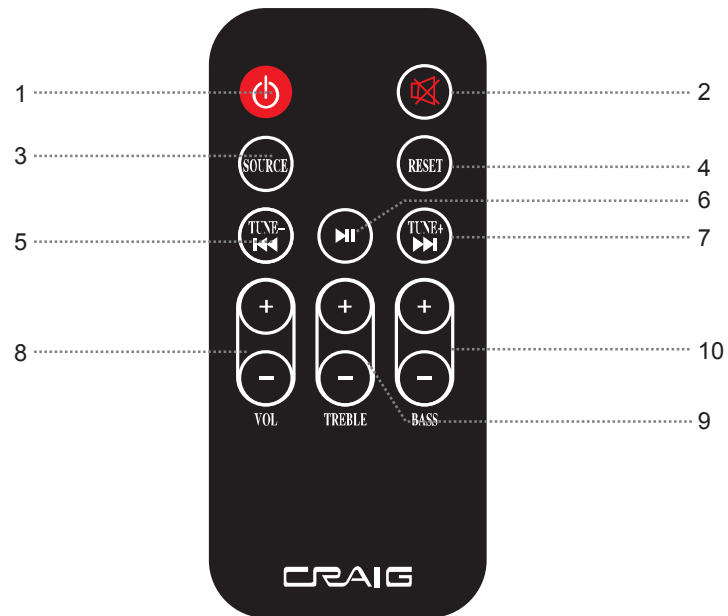 

1. Standby ON/OFF BUTTON

2. (MUTE) BUTTON

3. SOURCE BUTTON

4. RESET BUTTON

5. TUNE -/ BUTTON

6. (PLAY/PAUSE) BUTTON

7. TUNE +/ BUTTON

8. VOL (VOLUME) +/- BUTTONS

9. TREBLE +/- BUTTONS

10. BASS +/- BUTTONS

BATTERIES INSTALLATION (REMOTE CONTROL)

 
-First time use:

Remove and discard the insulation film as the figure on right.



- Replacing battery for the remote control

1. Push and slide out the battery tray as the figure below.
2. Replace the battery by a new CR2025 button cell with the polarity "+" face up as the figure below and the rear of remote control.
3. Close the battery tarp.

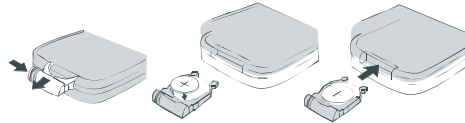

BATTERY PRECAUTIONS:

 
Follow these precautions when using a battery in this device:

1. Use only the size and type of battery specified.
2. Be sure to follow the correct polarity when installing the battery as indicated in the battery compartment. A reversed battery may cause damage to the device.
3. Do not mix different types of batteries together (e.g. Alkaline and Carbon-zinc) or old batteries with fresh ones.
4. If the batteries in the device are consumed or the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
5. Do not try to recharge the battery not intended to be recharged; it can overheat and rupture.
(Follow battery manufacturer's instructions.)
6. The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
7. Clean the battery contacts and also those of the device prior to battery installation

EFFECTIVE DISTANCE OF REMOTE TRANSMITTER


NOTES:

- When there is an obstacle between the unit and the transmitter, the transmitter may not operate.
- When direct sunlight, an incandescent lamp, fluorescent lamp or any other strong light shines on the REMOTE SENSOR of the unit, the remote operation may be unstable.

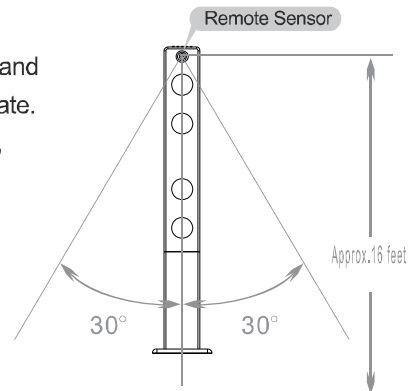


CONNECTION

 Connect to External Audio Device with 3.5mm Jack:

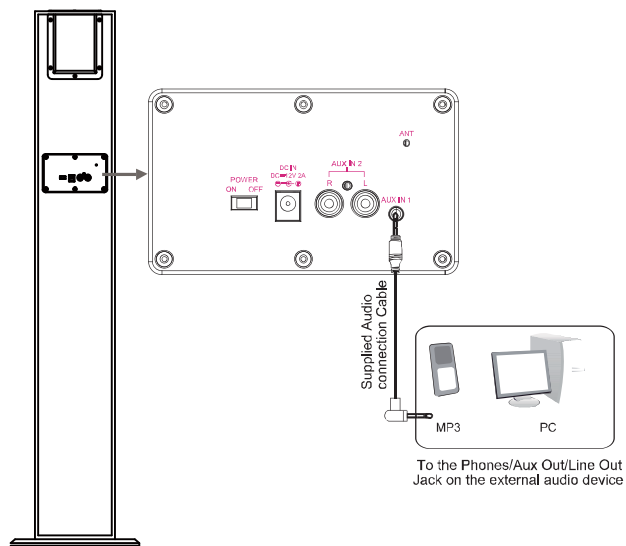

 Connect to External Video/Audio Device with RCA Jacks:

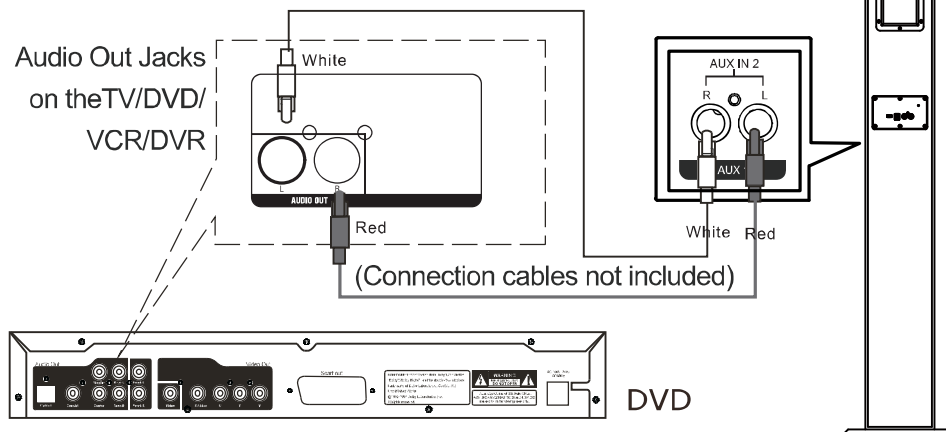

OPERATIONS:

1. Connected the external Audio or Video/Audio Devices to the unit as previous procedures.
2. Slide the POWER ON/OFF Switch on the rear of unit to ON position to turn the unit to Standby mode. The Power Indicator will light.
3. Press and hold the  button on the unit or press the  button on the Remote Control to turn on the unit from Standby mode.
4. Press the SOURCE button on the unit or Remote Control to select input source as desire.
 - A. If FM (Radio) is selected, STANDBY/FM Indicator will blink:
 - i. Press the TUNE +/  button repeatedly to search and plays the next available FM station.
 - ii. Press the TUNE -/  button repeatedly to search and plays the previous available FM station.
 - iii. To searching the stations from begin. Press the RESET button on the Remote Control to reset the radio to minimum frequency.

Notes:

- The Antenna wire on the rear of unit is for radio reception. If reception is weak, unwound and extended the wire or relocation the wire to improve the radio reception.
- If a stereo FM station was searched, the unit will plays it in stereo mode automatically.

- B. If AUX 1 is selected, the AUX 1 Indicator will light. Plays the music in the AUX 1 connected Audio device as usual.
- C. If AUX 2 is selected, the AUX 2 Indicator will light. Plays the video or music in the AUX 2 connected Video/Audio device as usual.
- D. If BT (Blue Tooth) is selected, the  Indicator will light and blinking. If this is the first time to use BT or re-pairing the unit to a new BT device, pairing the unit to external BT device as bellows:
 - i. Power on the external BT device and enter to searching mode.
 - ii. Start pairing as the on screen instructions on the external BT device.
 - iii. After paired, the  Indicator will stop blinking. (For details pairing procedures, please refer to the user's manual of your BT device.).
 - iv. Plays the music in the paired BT device as usual.

Notes:

- When the external BT device searched the unit, our model number "CHT 941" will appears on the display of external BT device.
- Pairing code "0000" may need to enter.

Normal operation after paired:

- i. Turn on the BT function of the external BT device.
 - ii. Power on the unit and selected the input source to BT as previous procedures.
 - iii. Wait a few seconds until the unit paired to the external BT device automatically. (The  Indicator will stop blinking).
 - iv. Plays the music in the paired BT device as usual.
5. Press the VOL (Volume) +/- buttons to adjust volume level.
6. Press the  button on the remote control to turn off the sound temporary, press again to turn the sound back.
7. Press the BASS +/- buttons on the remote control to enhance or reduce the bass level (low audio frequency) as desire.
8. Press the TREBLE +/- buttons on the remote control to enhance or reduce the treble level (high audio frequency) as desire.
9. When finished, press and hold the  button on the unit or press the  button on the Remote Control to turn off (standby) the unit.

NOTE: If long period of time will not use the unit, power off the unit by slide the POWER Switch to OFF position or unplug the AC/DC Adaptor from the unit and wall outlet.

GENERAL SPECIFICATIONS

Power Source: DC $\equiv$ 12V, 2A $\ominus$  $\oplus$

Power Source of Remote Control: DC $\equiv$ 3V, 1 x CR 2025 button cell (Included)

Radio Coverage FM 87.5-108 MHz

Impedance of Speakers: 4 x 4 Ohms, 6 W

Accessories:

- 1 x Remote Control (uses 1 x CR 2025 button cell, included)
- 1 x AC/DC Adaptor (Input: AC 100-240V~, 50/60Hz 1A; Output DC $\equiv$ 12V, 2A $\ominus$  $\oplus$)
- 1 x Audio Connection Cable with 3.5mm Stereo plugs
- 1 x User's Manual
- 2 x Wooden Stand
- 6 x Assembly Screws
- 1 x Screwdriver

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



LIMITED WARRANTY

Craig warrants this product to be free from manufacturing defects in material and workmanship under normal use for a period of 90 days from date of purchase. If service is required, please return the product to the store where it was purchased for exchange; or, pack the unit in the original packing material with all accessories if applicable, a copy of your sales receipt and a Cashier's check or Money Order for \$12.00 (to cover shipping and handling costs) payable to Craig Electronics Inc. For consumers in Canada, please make sure that the cashier check or money order is redeemable through a U.S. bank. Ship your product freight pre-paid. Your unit will be repaired, replaced or if the unit can not be repaired or replaced, a refund will be forwarded to you within four weeks of receipt of your unit. Please ship your unit to:

Craig Electronics Inc.
1160 NW 163 Drive
Miami, FL 33169

This warranty is void if the product has been: a) Used in a commercial application or rental. b) Damaged through misuse, negligence, or abuse. c) Modified or repaired by anyone other than an authorized Craig service center. d) Damaged because it is improperly connected to any other equipment.

Note: This warranty does not cover: a) Ordinary adjustments as outlined in the Owner's Manual which can be performed by the customer. b) Damage to equipment not properly connected to the product. c) Any cost incurred in shipping the product for repair. d) Damage to the product not used in the USA.

This warranty is not transferable and only applies to the original purchase. Any implied warranties, including the warranty of merchantability, are limited in duration to the period of this expressed warranty and no warranty whether expressed or implied shall apply to the product thereafter.

Under no circumstance shall Craig be liable for any loss or consequential damage arising out of the use of this product. This warranty gives specific legal rights. However, you may have other rights which may vary from state to state. Some states do not allow limitations on implied warranties or exclusion of consequential damage. Therefore, these restrictions may not apply to you.

To Obtain Service on your Product
email:service@craigelectronics.com

Printed in China

CHT941_WC_E0FG1_V0US



Size: 148.5(W) x 210(H)mm (A5)

