



BLUETOOTH JUMBO JUKEBOX BJB-1/5876



INSTRUCTION MANUAL
PLEASE READ ALL INSTRUCTIONS CAREFULLY
AND RETAIN FOR FUTURE USE

Getting Started

- Remove the unit from the box.
- Remove any packaging from the product.
- Please retain all packaging until you have checked and counted all the parts and the contents against the parts list.

Package Contents

- Bluetooth Jukebox
- AC/DC Adaptor (Input: AC 100-240V; 50/60Hz 1A; Output: DC 12V, 2A Centre Positive)
- AUX Cable
- Remote Controller with CR2025 Button Cell Battery Included
- Instruction Manual

Key Features



- Bluetooth® Jukebox – Streams music wirelessly from any audio device like iPod Touch, iPhone, iPad or Android Smartphone's, Tablets, Laptop Computers & more.
- Syncs in Seconds
- Wireless Range (26 - 33) Feet
- Built-In FM Digital Radio
- Built-In Auxiliary Input & RCA Input
- AUX Cable Included

Safety Instructions


Keep the unit away from heat sources, direct sunlight, humidity, water and any other liquids. Do not operate the unit if it has been exposed to water, moisture or any other liquids to prevent against electric shock, explosion and/or injury to yourself and damage to the unit. Do not use the unit if it has been dropped or damaged in any way. Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk. Do not use the unit with wet hands. Do not put objects into any of the openings. Keep the unit free from dust, lint etc. Do not use this unit for anything other than its intended use. Keep the unit out of reach of children. This appliance is not a toy. Do not use the handset at excessive levels as damage to hearing may occur. Batteries (battery pack or batteries installed) shall not be exposed to excessive heat place, such as sunshine, fire or the like.

DESCRIPTION OF PARTS

- Remote Sensor
- Standby / FM Indicator
- BT (Bluetooth) Indicator
- Aux 1 Indicator
- Aux 2 Indicator
- Standby Button
- Mode & LED Lights ON/OFF Switch
- Tune + / Skip Forward Button
- Tune - / Skip Backward Button
- Volume - Button
- Volume + Button
- Power ON/OFF Switch
- DC IN port (DC 12V, 2A)
- AUX 1 - Input Jack
- AUX 2 - Input Jack
- FM Antenna

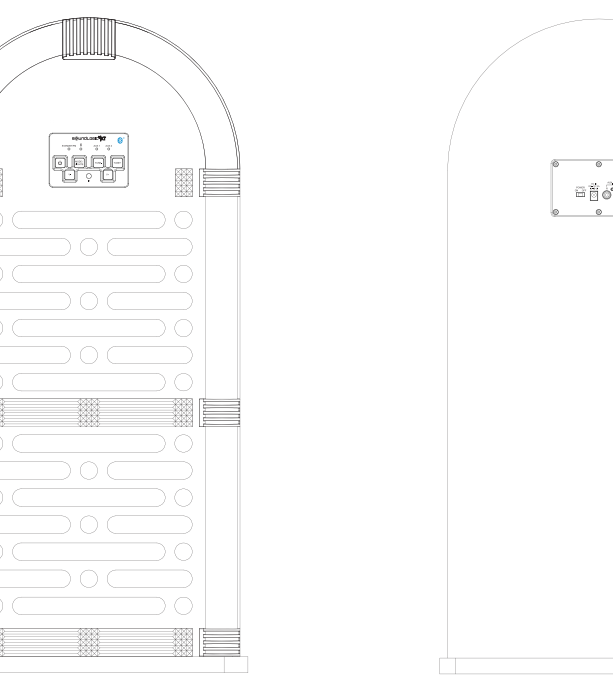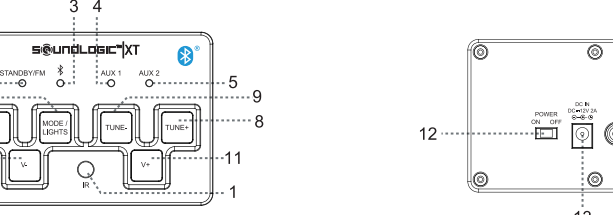

REMOTE CONTROLLER

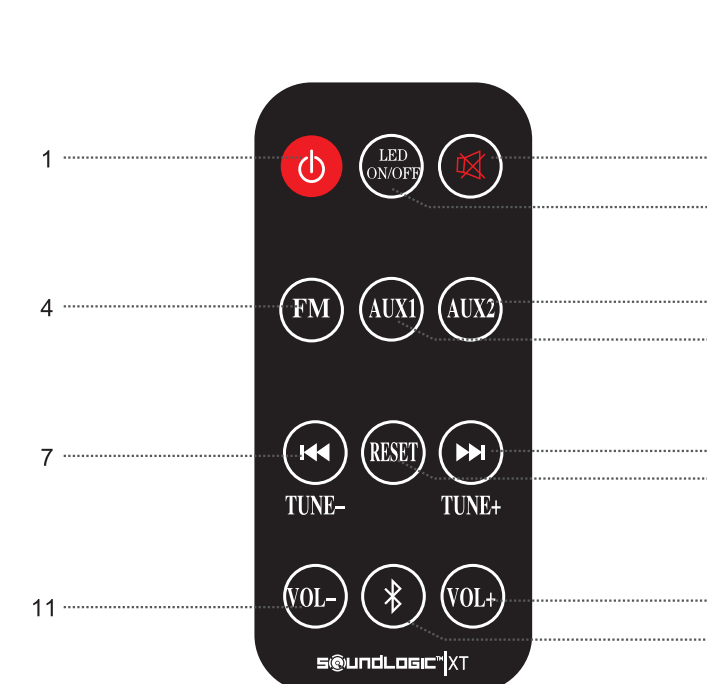


- Standby Button
- Mute Button
- LED ON/OFF
- FM Button
- AUX 1 Button
- AUX 2 Button
- Tune - / Skip Backward Button
- Tune + / Skip Forward Button
- RESET Button
- BT (Bluetooth) Button
- Volume - Button
- Volume + Button

INSTRUCTIONS FOR USE

Installation

Connect the AC/DC Adaptor to DC port on the rear of the unit. Insert the AC/DC adaptor to a wall power port with AC 100-240V; 50/60Hz

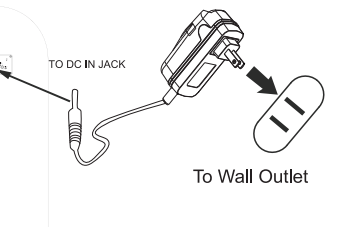


3

Batteries Installation


In first time use, slide the insulation film from under the battery cover and discard it, as shown in the figure below.

When battery is drained, replace battery as shown below:

- Pull the battery tray out and slide it out as the figure below
- Install new CR2025 button cell in the Remote Control as per the indicated polarity
- Close the battery tray

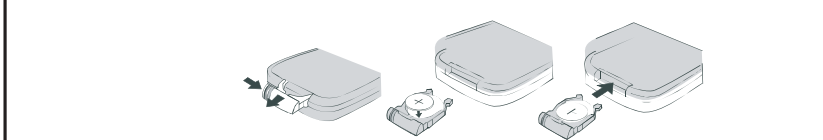

Remote Range

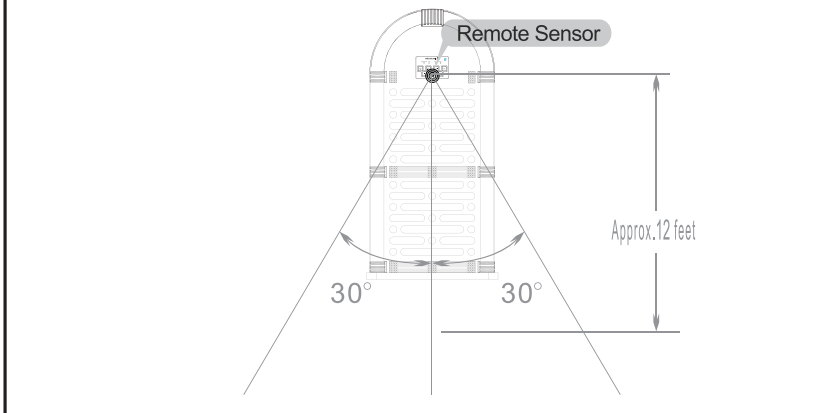

- Transmitter may not work if there's any obstruction in the transmitting range.
- Remote may not work well, if Remote Sensor is exposed to direct sunlight or an incandescent lamp, fluorescent lamp or any other strong light.

General Operation:

- Slide the Power ON/OFF Switch on the rear of the unit to ON position to Power ON the unit. The STANDBY/FM Indicator light will turn on.
- Press & hold the Standby button on the unit for about 2 seconds or Press once on the remote controller and then release the button to turn the unit ON from Standby mode.
- Press the Mode button on the unit or Remote Controller repeatedly to select the desired input source, and the respective Source LED indicator will light up on the control panel.
- Press Volume +/- buttons to adjust the volume level
- Press the Mute Button on the Remote Controller to turn off the sound temporarily; press again to turn it back on
- Press & hold the Standby button on the unit for about 2 seconds or press once on the remote controller and then release to turn the unit off (Standby mode)
- If you do not intend to use the unit for long period, turn off the unit. Slide the Power ON/OFF switch on the rear of the unit to OFF position. All indicators will turn off.

4

DECORATIVE LED LIGHTS

- To turn on the decorative LED lights, press and hold the "Mode & LED Lights" button on the device or press the LED ON/OFF button on the remote controller.
- To turn it off, press and hold the "Mode & LED Lights" button on the device or press the LED ON/OFF button on the remote controller.

RADIO

- Power ON the unit
- Press the Mode button repeatedly until the STANDBY/FM Indicator lights up and keeps blinking.
- Press Tune + / Tune - button to auto search the next or previous available FM Radio stations.
- Note: The Antenna wire on the rear of unit is for radio reception. If the FM Radio reception is weak, unwind and extend the wire or relocate the wire to improve the radio reception.

BLUETOOTH CONNECTIVITY

- For first time use or re-pairing to a new Bluetooth Device, please follow below procedure -
- Power ON the unit
- Press the Mode button repeatedly until the Bluetooth Indicator lights up and starts flashing.
- Turn ON the bluetooth on your Mobile Phone or Tablet or Computer
- Search for available Bluetooth devices and you would find "SL JUKEBOX" - Pair it with this device
- If required, enter the password "0000" to pair with the device
- Once paired, the Bluetooth indicator light will stop blinking.
- You can now stream music wirelessly through the paired device.


To pair with an existing paired device; follow the below procedure -

- Turn ON the unit
- Press the Mode button repeatedly until the Bluetooth Indicator lights up and starts flashing.
- Turn ON the bluetooth on your Mobile Phone or Tablet or Computer
- Wait for few seconds until the unit is paired to the Jukebox automatically. Once paired, the Bluetooth indicator light will stop blinking.
- You can now stream music wirelessly through the paired device.

5


CONNECT THROUGH AUX1

- Turn ON the unit
- Insert one end of the Auxiliary cable (included) to the Headphone Jack or Line Out Jack or AUX Out Jack of an external audio device such as Smart Phone or Tablet or MP3 Player etc. as the photo below. Insert the other end of the Auxiliary cable to the AUX 1 jack of the Jukebox.
- Press the Mode button repeatedly until the AUX 1 indicator lights up
- Play music from the audio source. Make sure the volume level on the audio source is on highest level, and further control the volume on Jukebox

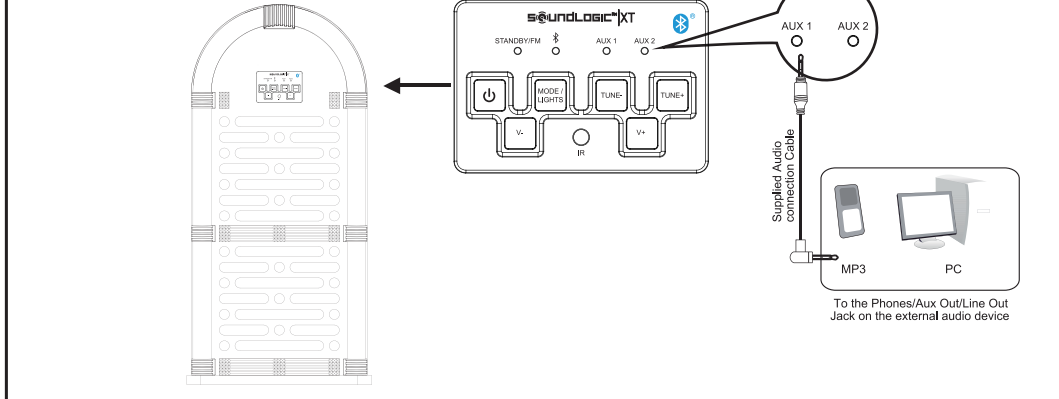

CONNECT THROUGH AUX2

- Turn ON the unit
- Insert one end of the RCA Cable (Not included) to the Audio Out Jack (RCA Type) on external Audio/Video device such as TV/DVD/VCR etc. and the other end to AUX 2 jack of the Jukebox
- Press the Mode button repeatedly until the AUX 2 indicator lights up
- Play the music from the external audio device as normal. Make sure the volume level on the audio source is on highest level. Adjust the volume on Jukebox.

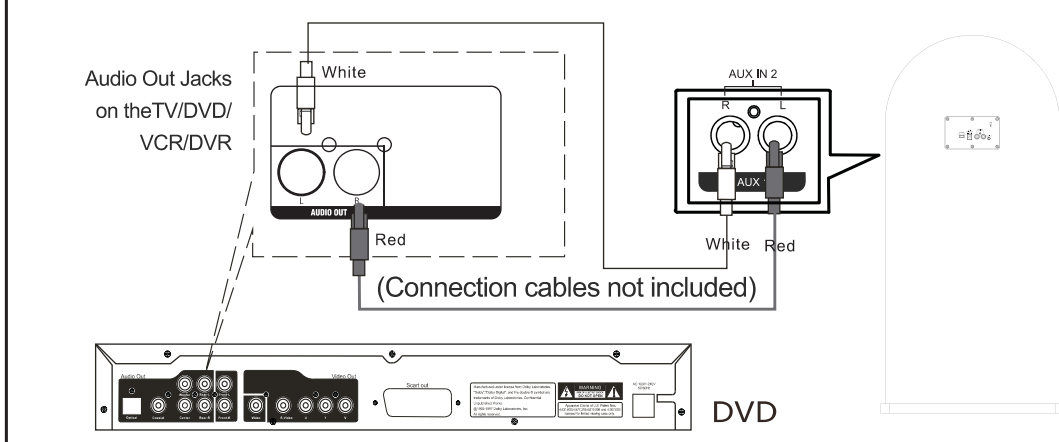

6

TROUBLESHOOTING GUIDE -

Check the below table, before returning the product.

SYMPTOM	POSSIBLE CAUSE	POSSIBLE SOLUTION
No Power	AC/DC Adaptor has not been plugged into the Wall Socket The unit is in STANDBY mode	Plug the AC/DC Adaptor into the wall power port properly Slide the Power Switch on the rear of unit to ON position Press and hold STANDBY button on the unit for 2 seconds OR press the STANDBY button on the remote controller once to turn on the device from Standby mode
No Sound	Volume in low level Wrong input source	Raise the Volume level by pressing Volume + button on unit or remote controller Set the appropriate input source and play music
Sound Distortion	Volume level too high	Reduce the volume level by pressing the Volume - button on unit or remote controller
Bluetooth does not function	Bluetooth Source Device is too far from the Jukebox	Place the Bluetooth Source Device closer to Jukebox
Remote Controller does not work	The batteries in the remote controller are dead	Replace it by new battery

SPECIFICATIONS -

Power Source: DC 12V, 2A Centre Positive
Power Source of Remote Controller: DC 3V, 1 x CR2025 Button Cell
FM Radio Band Coverage: 87.5 - 108MHz
Bluetooth Range: Up to 33 Feet
Remote Controller Range: Up to 12 Feet

ND MAINTENANCE

- Read the following recommendations before using the Bluetooth Multi Media Speaker System. Following these you will be able to enjoy the product for many years.
- Do not expose the unit to liquid, moisture or humidity to avoid the product's internal circuit being affected.
 - Don't use abrasive cleaning solvents to clean the unit.
 - Do not expose the unit to extremely high or low temperature as this will shorten the life of electronic devices, destroy the battery or distort certain plastic parts.
 - Don't dispose of the unit in fire as it will result in an explosion.
 - Don't expose the unit to contact with sharp objects as this will cause scratches and damage.
 - Don't let the unit fall down onto the floor. The internal circuit might get damaged.
 - Don't attempt to disassemble the unit as it may get damaged if you are not professional.

In case the unit does not function properly, please contact the number shown on the Warranty Page for help.

7

FCC Instructions

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

NOTE: This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

LIMITED WARRANTY

This manufacturer's product warranty extends to the original consumer purchaser of the product. Neither the retailer nor any other company involved in the sale or promotion of this product is a co-warrantor of this manufacturer warranty.

WARRANTY DURATION: All materials and workmanship are warranted to the original consumer purchaser for a period of ninety (90) days from the original purchase date.

WARRANTY COVERAGE: This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty doesn't cover the following which may be supplied with this product, including but not limited to: LCD Screens, glass parts, lenses, etc. This warranty is effective only if the product is purchased and operated in USA, and does not extend to any units which have been used in violation of written instructions furnished by manufacturer or to units which have been altered or modified or, to damaged products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

WARRANTY DISCLAIMERS: This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume any liability in connection with the sale of our products. There shall be no claims for defects or failure under any theory of tort, contractor commercial law including but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract.

8

WARRANTY PERFORMANCE: During the above 90 day warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at manufacturer's option). The repaired or replacement product will be in warranty for the balance of the 90 day warranty period and an additional one-month period. No charge will be applicable for such repair or replacement.

SERVICE AND REPAIR: If service is required for this product, you should first contact Midwest Trading Group Customer Service at info@midwesttradinggroup.com or by calling 1 (866) 815-4714, Monday to Friday 9am to 5pm CST.

NOTE: Manufacturer cannot assume responsibility for loss or damage during incoming shipment. As a precautionary measure, carefully package the product for shipment, and insure it with the carrier. Be sure to enclose the following details with the product: your full name, return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.

9