


AVIT⁵

STYLISH MP3 PLAYER

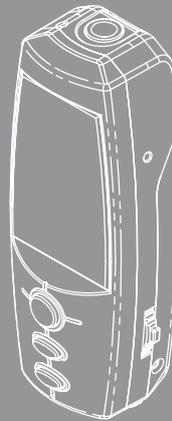

Please visit our homepage and see the relevant notices and resources (Download) to check the available models and how to upgrade firmware.

Homepage
www.usbmp.com / www.e-alltec.com



is a trademark of SRS Labs, Inc.

SRS WOW technology is incorporated under license from SRS Labs, Inc.

FCC NOTE

:This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES.

OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND

(2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED,

INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE

CAUSED UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH

MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

COPYRIGHT

Alltec Electronics Co., Ltd. has the copyright of this User Manual.

Without the prior written permission of Alltec Electronics Co., Ltd, any part or whole of this document should not be reproduced, copied, or transmitted in any form or by any means, such as copying the photographs, recording or storing & playing back the information.

- The OS (Operating System) that requires an installation driver:

Under Windows 98/ME, the users need to install the driver once before using the player.

- The OS (Operating System) that does not require any installation drivers:

When the users connect the player to the USB port under Windows 2000/ME/XP, the player will be recognized as a portable drive (removable disk).

AVIT₅

- AVIT₅ is the registered trademark of Alltec Electronics Co., Ltd.
- Windows is the trademark of Microsoft Corporation.
- Pentium is the trademark of Intel Corporation.



CAUTIONS FOR SAFETY


You should avoid:

1. Keeping the player under direct sunlight or near heat, that is around heaters.
2. Putting or dropping any metallic or flammable materials into the player.
3. Disassembling or remodeling the player without authorization.
4. Keeping the player at places with moisture, dusts, soot, etc for a long time.
(This might cause the function failures.)
5. Spreading or pouring water on the player while cleaning it.
6. Dropping the player or giving a strong shock to it.
7. Keeping the player on magnetic things or vibrating ones.
8. Keeping the player under dense moisture and too high/low temperature.
9. Pressing several keys at a time or disassembling the player without care.

HOW TO USE A HEADPHONE

1. Do not use any headphones or earphones while you are driving a car, a bicycle, or a motorbike, etc.
2. Be cautious since you may feel dizzy or deafened when you listen to the player keeping the high volume for many hours. And please turn the volume down or stop playing it.


제품 각부 명칭

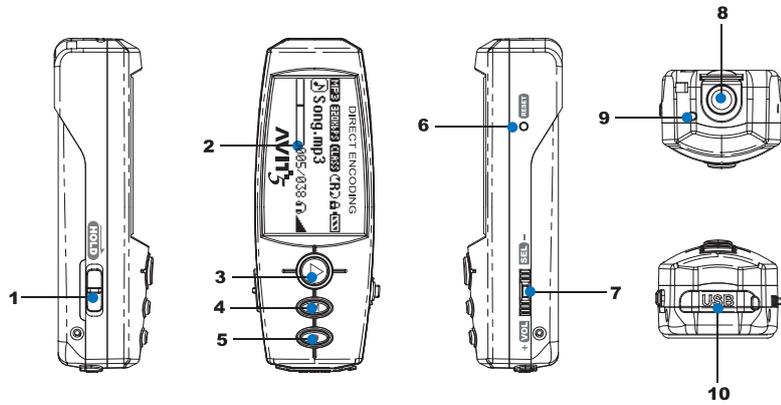

- | | |
|-------------------------------|---|
| 1. Lock Switch | 6. Initialization Hole (Reset Hole) |
| 2. Display Screen | 7. Volume Control/ Song Select/ Menu Select Key |
| 3. Play/Stop (Power on/off) | 8. Earphone Jack |
| 4. Menu/Navigation Switch Key | 9. Built-in Recording Microphone |
| 5. Recording Key | 10. USB Port/ Line-in input jack |


DISPLAY CONFIGURATION

● Sound File Display

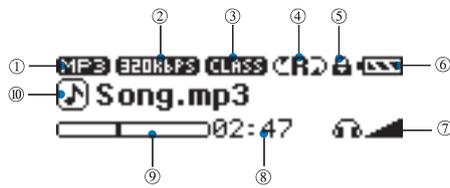


1. Sound File Format Indicator
2. Sound Quality Indicator
3. Equalizer Indicator
4. Repeat Mode Indicator
5. Hold Function
6. Battery Level Indicator
7. Volume Level Indicator
8. Song Timer
9. Song Length Remaining Status Bar
10. Current Mode, 'PLAYING'

● Recording Display

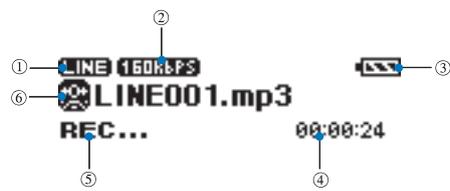

1. Recording Mode Indicator
2. Sound Quality Indicator
3. Battery Level Indicator
4. Recording Timer
5. Current Mode, 'RECORDING'
6. Recording File Name

● FM Radio Display

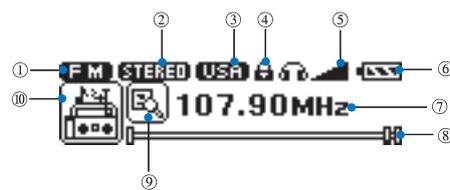

1. FM Mode Indicator
2. Sound Mode Indicator
3. FM BAND Indicator
4. Hold Function
5. Volume Level Indicator
6. Battery Level Indicator
7. Transmitting Frequency
8. Transmission Range Indicator
9. Channel Mode
10. Current mode, 'RADIO'

PACKAGE CONTENTS

* Each Image of the components can be changed in certain conditions.



MP3 Player Body




Earphone



Necklace




USB Cable

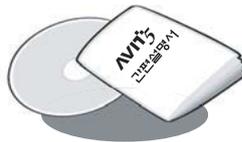


Installer CD & Simplified User Manual

 HOW TO OPERATE THE KEYS

NAME OF KEY	HOW TO OPERATE	OPERATION STATUS
 [POWER ON/OFF]	Pressing it short Pressing it long	Playing or stopping a file Switching on/off, Stopping recording while recording a file
 [MENU]	Pressing it short Pressing it long	Invoking Navigation Mode(File Select) Invoking Menu Mode
 [RECORDING]	Pressing it short Pressing it long	Pausing the Recording Starting/ stopping a recording
 [HOLD]	Up Down	Locked Status Unlocked Status
 [LEFT/RIGHT] [VOLUME/SELECT]	Right (+) Left (-)	In Volume mode, the volume level increases one by one, but in Song Select mode, next song is selected. In Volume mode, the level decreases one by one, but in Song Select mode, the previous song is selected.
 [The middle part of] [VOL/SEL]	Pressing it short Pressing it long	Switching "Volume/Song Select" modes, but in Menu mode, the menu is selected. Changing to 'FM Radio' mode

HOW TO INSTALL AN INSTALLATION DRIVER ON WINDOWS 98

* The player will be ready to work without installation of the driver on Windows ME/2000/XP when it is connected once.

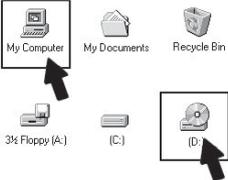
OPERATION TYPE	OPERATION IMAGE	OPERATION DESCRIPTIONS
Operation Descriptions	Please connect the MP3 player to a PC referring to "How to connect the MP3 player to a PC."	
Insert the driver CD		Insert the Installer CD into the CD-ROM drive. *Since Windows 98 or lower version does not identify the USB device, you must install the driver from the CD.
Access to the installation file.		You can find an installation file after double-clicking the 'CD-ROM drive' in 'My Computer' icon while the CD is inserted.
Install the driver (1)		Double-click the "Install" file icon.
Install the driver (2)		The installation starts to be processed.

HOW TO INSTALL AN INSTALLATION DRIVER ON WINDOWS 98

OPERATION TYPE	OPERATION IMAGE	OPERATION DESCRIPTION
Install the driver 3		The following screen is shown on your PC when connecting the player with the USB port.
Install the driver 4		After selecting an option 'Search an appropriate driver for the device', click on the tap, 'Next'.
Install the driver 5		The pop-up window appears to search the driver as seen in the left picture.
The completely installed file status		The pop-up window indicates the finished installation process.


HOW TO CONNECT THE MP3 PLAYER TO YOUR PC & TO CHARGE IT

► CONNECTING THE MP3 PLAYER TO YOUR PC

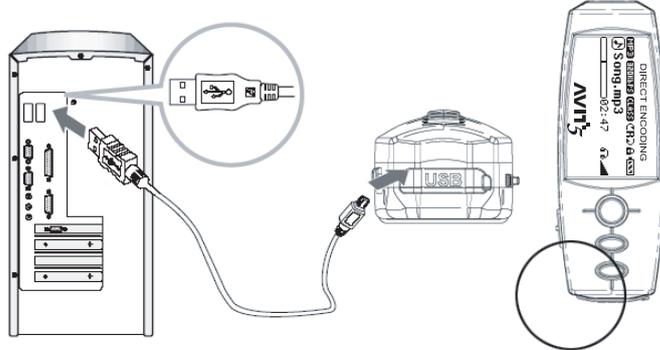

Please connect the USB cable to both the USB port, built in at the bottom of the MP3 player, and the USB port of your PC. The USB port is built in the bottom of the MP3 player. Please connect the USB plug after uncovering the rubber cap of the USB port of the player.
* Only a dedicated USB cable provided by Alltech Electronics should be used.

► COMPLETED STATUS OF THE CONNECTION

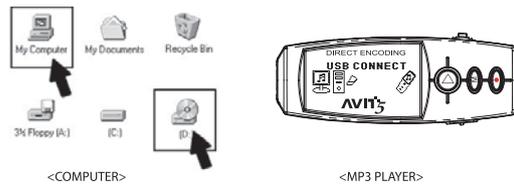

► CHARGING THE MP3 PLAYER BATTERY

This built-in battery MP3 player is automatically charged while it is connected to a PC.

POWER ON/OFF

► POWER ON



AVIT'S

[POWER/PLAY] The power is turned 'ON' when the switch key is pressed somewhat long. (For around 3 seconds)

► POWER OFF



Bye  **Bye**

[POWER/PLAY] The power is turned 'OFF' when the switch key is re-pressed somewhat long. (For around 3 seconds)

HOW TO PLAY A SOUND FILE

► Play Music File



When pressing the key, [POWER/PLAY], after switching on, the selected song is played. While the song is played, the icon, , on the screen changes to the icon, .

► Volume Control



Press on the middle part of the key, [VOL/SEL]. As seen in the left picture, the bar is activated.

► Play Previous Song/Next Song



By rolling the key, [VOL/SEL], to the right or left on the initial screen, you can select the previous or next song. When the desired song is displayed on the screen, press the key, [POWER/PLAY], to play the song. However, when the screen shows the [VOL/SEL] bar, press on the middle of the key, [VOL/SEL] in order to change the mode to 'Select Song' mode.

REFERENCE

In 'Select Song' mode :		↑ Next Song	←
		↓ Previous Song	
In 'Adjust Volume' mode :		↑ Volume Up	←
		↓ Volume Down	

When trying to change "Select Song" mode to 'Adjust Volume' mode or vice versa, press the middle part of the key, [VOL/SEL].

► HOW TO NAVIGATE-FILE SEARCH



Press the key, [M], somewhat short while the power is on. While the stored files in the MP3 player are being displayed, navigate the desired file by rolling the key, [VOL/SEL], to the left/right. When you find out a desired file to play, press the key, [POWER/PLAY], in order to play the sound file.

► NAVIGATION PROCEDURE



Turn on the power.



After setting the 'Navigation' mode by pressing the 'Menu' button on the screen short, search a desired file while rolling the key, [VOL/SEL], to the right or left.



Play the selected sound file by pressing the key, [POWER/PLAY].

HOW TO USE THE MENU-BASIC

▶ MENU MODE



While the power is on, press the menu button on the screen by using the key, [M], somewhat longer.

▶ STAGES UNDER MENU MODE OPERATION



While the power is on, press the menu button on the screen by using the key, [M], somewhat longer.



When the "Menu" mode is shown on the screen, navigate the desired menu by rolling the key, [VOL/SEL].
When the desired menu appears on the screen, press the middle of the key, [VOL/SEL], somewhat short to select the menu.

MENU MODE-NAVIGATION

▶ MENU MODE-NAVIGATION



Functions to select a file or navigate other options.

▶ SUB-MENUS FOR NAVIAGION

1. Select Files



Use the menu when you try to select a desired file.

2. Select Bookmarks



Use the menu when you designate only some specific songs among the stored songs.

3. Delete



Use the menu when you try to delete some files among the stored files.

4. FM Radio



Use the menu when you try to select "FM Radio" mode.
'Yes'- to change to 'FM Radio' mode
'No' – to maintain the 'MP3' mode