

Wireless Monitoring Tool

Access Point, PoE Repeater / Injector



Model: ZW-N22F


Quick User Guide

Package Contents

The ZW-N22F package contains the following:

- ZW-N22F Wireless Monitoring Tool _____ 1
- AC Adaptor (48VDC Output) _____ 1
- Antenna _____ 1
- Quick Guide (This document) _____ 1

Physical Description

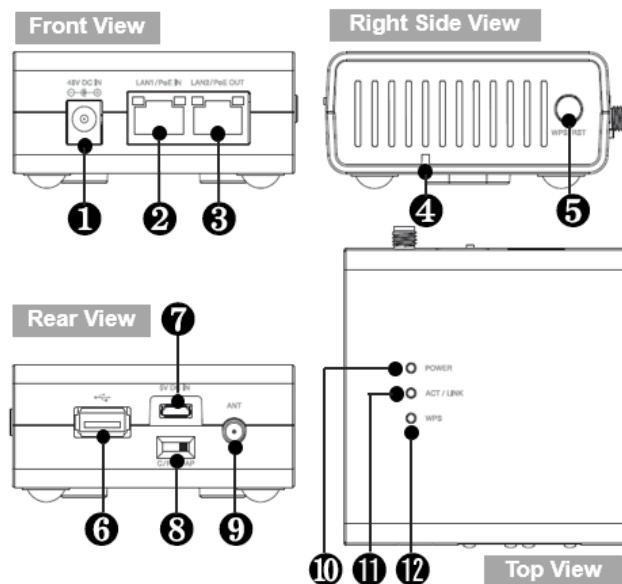


1	48VDC IN for PoE OUT port	Connect the included AC adaptor for PoE power output from LAN2/PoE OUT port.
2	LAN1/PoE IN	Connect Router or PoE HUB with this LAN port by a LAN cable. This LAN port may also be used when changing the product settings from a PC. This port supports IEEE802.3af/3at from PSE*1.
3	LAN2/PoE OUT	Connect this port with Camera (or IP products) by a LAN cable. This port supports IEEE802.3af for PD*2.
4	Strap Hole	This hole may be used to hang and carry the product.
5	WPS/Reset Button	WPS: Hold down this button for over 2 seconds, and then release the button to perform WPS function. Reset: To reset the device to factory default, hold down this button for over 10 seconds.
6	USB port	This port supports USB 2.0 devices.
7	micro USB port	Connect 5VDC power source by a separately-sold USB (micro-B) cable. Only wireless function can be performed via supplied USB power.
8	Mode Switch	Switch the operation mode select Access Point (AP), Repeater (RPT) or Client(C). Powering off is required before switching the mode.
9	Antenna	Connect the included Antenna.
10	PWR LED (Green)	Lit (On): Power is ON Unlit (Off): Power is OFF Flash: Resetting to factory defaults is in progress.
11	ACT/LINK LED (Blue)	Lit (On): Wireless connection is being established. Unlit (Off): Wireless connection is inactive, or not connected. Flash: Wireless connection is in operation.
12	WPS LED (Blue)	Unlit (Off): This product is in operation normally. Flash: WPS connection is in operation for max. 2 minutes.


Powering up and LAN cabling

(Access Point mode: Default)


1. Connect LAN2/PoE OUT port and IP camera (or IP product) by LAN cable (sold separately).
2. This product (wireless tool) can also be powered by following methods:
 - Using the included AC adaptor.
Connect AC adaptor with power supply jack on the product.

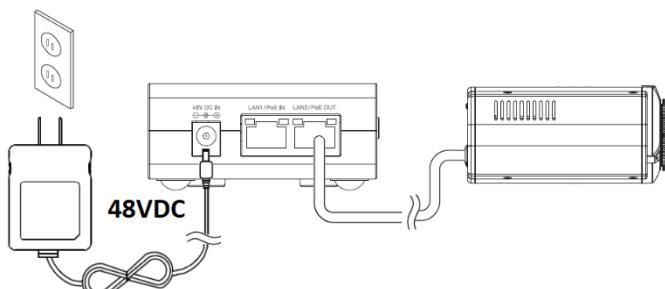

- Using PoE power source from PoE HUB or any PoE product.
Connect a PoE (PSE) port on the PoE HUB and LAN1/PoE IN port on the product by LAN cable (sold separately).

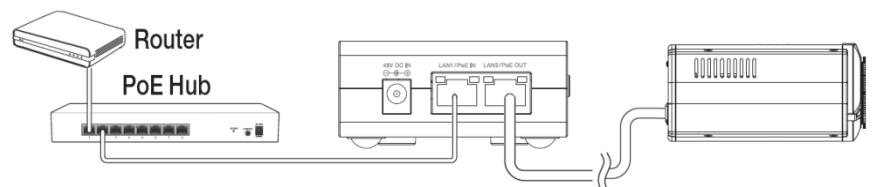

- Using USB power supply adaptor (micro-B type only, sold separately) for connection with the product.
When non-PoE supported IP product is connected on LAN2/PoE OUT port, the wireless operation of product is then power feed only through USB power source.

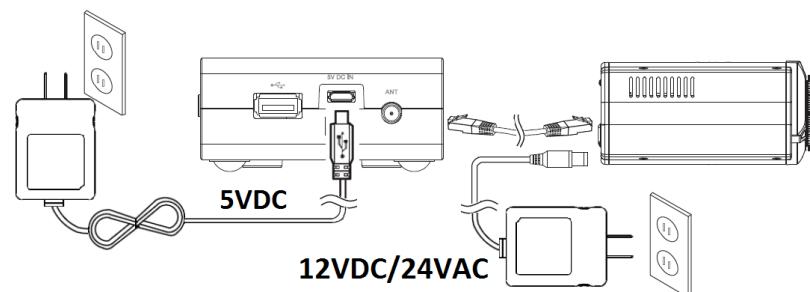

3. Check LED Indicator to see if Power and ACT/LINK are on.

Connecting with other devices


This section describes how to connect with other devices.

A. Wireless connection (Smartphones, Tablet PCs, PCs).

1. Open wireless network connection settings menu on the client device.
2. Find “**cbcganz-xxxx**” of device’s SSID as default on the wireless network lists. “**xxxx**” on the device name for SSID is displayed last two octets of its Mac address.
E.g. When Mac address is 00:1C:B8:90:01:02, SSID is **cbcganz-0102**.
3. Click to connect the device’s SSID without password.
Default password is disabled. You can configure the password and other settings in setup page.




4. Click to open Web browser on the client device after wireless connection is established. Enter the address of **http://cbc ganz.setup** on the address bar of web browser to access the setup page of device, and enter.

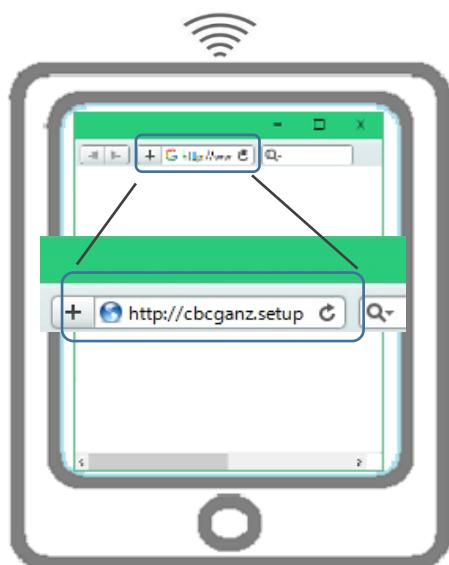

QR code may also be used for accessing to the setup page. QR code is printed on the gift box as well.

5. The web browser displays Search page as below.

And click the Search button to discover the device(s) on the network ports.

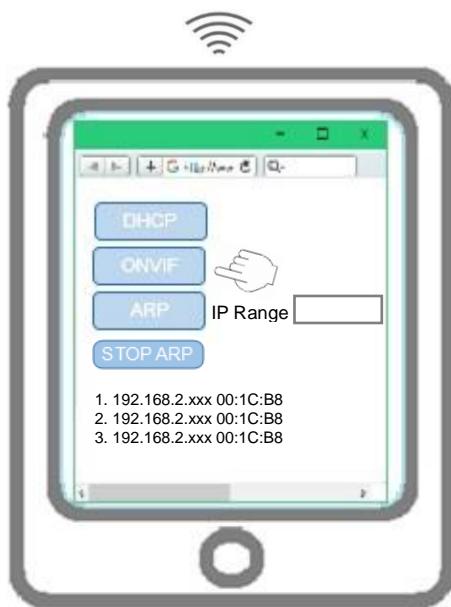

6. To access the connected device, click to access any device listed on the browser. Clicking the detected device's list opens Web browser with a new window or tab for the accessed device.



B. Wired connection with PC.

Connect LAN1/PoE IN port with your PC using LAN cable sold separately (only when LAN1/PoE IN port is unoccupied by PoE HUB etc.)

DHCP Server / Client

This product supports both DHCP Server / Client function as default. When the product is connected with a LAN on which DHCP Server is in the network, the product works in DHCP client mode automatically. However when the product is connected with network without DHCP Server, the product's DHCP function works as a DHCP Server mode automatically. Then the connected devices can obtain IP address from the product. By default settings, the product will assign an IP addresses range between 192.168.0.100 to 192.168.0.200. The product's IP address is 192.168.0.2. These settings can also be configured in product's setup page.

Perform the device settings

1. Click the Setup Page button on Search page of web browser.
2. Perform the configuration changes in each menu.

Visit our website www.ganz-global.com to find user's manual for further information.

Note: *1 (PSE): Power Sourcing Equipment
*2 (PD): Power Device

Important Safety Information

In order to keep the safety of users of this device and their properties, the following safety instructions must be observed:

1. This product is designed for indoor use only and must not be exposed to direct sun light, rain, snow or any harsh environment.
2. DO NOT put this product at or near any hot or humid places, such as kitchens or bathrooms. Also do not leave this product in vehicles when the surrounding temperature is high
3. Keep this product away from the reach of small children to avoid any accidental ingestion and their fatal damages.
4. The surface temperature of this product may get high after being used for a long period of time though such temperature increase is considered normal. DO NOT place this product near any flammable objects such as papers, clothes, etc. when the product has been or will be used for a long period of time.
5. If you found the product not working properly, contact your dealer for further assistance. DO NOT attempt to disassemble the product as the product warranty may be voided.
6. In case the product dropped into the water, do not attempt to power it up until the unit is inspected by your dealer.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



CBC Co., Ltd.
2-15-13, Tokyo 104-0052 Japan
www.ganz-global.com



Wireless Monitoring Tool

Access Point, PoE Repeater / Injector

Model: ZW-N22F

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device and its antenna(s) must **not** be co-located or operating in conjunction with any other antenna or transmitter. For product available in the USA/Canada market, only channel 1~11 can be operated. Selection of other channels is not possible.

IMPORTANT NOTE:

Federal Communication Commission (FCC) Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm (0.66ft) between the radiator & your body.

Disposal of your old appliance; WEEE Notification



This symbol on the product or on its packaging indicates that this products should not be disposed of with household waste [2012/19/EU]. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.



CBC Co., Ltd.

2-15-13, Tokyo 104-0052 Japan

www.ganz-global.com

1607A