



FireGenie™

North American Version

REMOTE CONTROL INSTALLATION & OPERATING INSTRUCTIONS



The FireGenie™ Remote Control is tested safe when installed in accordance with this installation manual. It is your responsibility to read all instructions before starting installation and to follow these instructions carefully during installation.

The FireGenie™ Remote Control is carefully engineered and MUST be installed only as specified. If you modify it or any of its components, you may possibly cause a fire hazard.

The FireGenie™ Remote Control MUST be installed by a qualified installer.

FCC Requirements

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 to the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiver antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

Canadian Equipment Requirements

This digital apparatus does not exceed the (class A/class B)* limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications.

This device complies with RSS-210 of Industry and Science Canada. Operation is subject to the following two conditions; (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

All wiring should be done by a qualified electrician and shall be in compliance with local codes and with the National Electric Code ANSI/NFPA No. 70-current (In the United States), or with the CSA C22.1 Canadian Electric Code (in Canada).

TABLE OF CONTENTS

Remote Control Keypad	4
Remote Control Screen Display (LCD)	4
Remote Control - Basic Functions	5
Switching the Remote ON and OFF	5
Setting Time & Day	5
Receiver Operation	5
Manual Mode	6
Auto Mode	6
Program Mode	7
Setting the Program Mode	8
Installing the Receiver	13
Installing to a Wall Mount	13
Installing to a Fireplace	14
Troubleshooting	17
Special Conditions in Program Mode	17
Displaying Temperature in Celsius or Fahrenheit	18
Matching Remote Control & Receiver ID Code	18

The FireGenie™ is a custom designed Remote Control system with the following features:


- * Thermostatic Control;
- * An Automatic & Manual Mode for controlling unit ON and OFF;
- * A Program Mode for programming 2 time periods per day for all days of the week.

A **Quick Reference Sticker** is available to be placed on the back of your remote control handset. Place the sticker close to the very top of the remote, away from the battery opening and wall mounting bracket.

REMOTE CONTROL KEYPAD

There are 7 push buttons on the Remote Control:


- (1) **ON/OFF** Button: Switches the Remote ON or OFF;
- (2) “+” Button: This is the *INCREMENT* or *HOUR* button;
- (3) “-” Button: This is the *DECREMENT* or *MINUTE* button;
- (4) **AUTO/MAN** Button: Toggles between *Manual*, *Auto* and *Program* mode;
- (5) **TIME** Button: Initiates the setting of the *Time and Day*;
- (6) **PROG** Button: Initiates the programming for Auto mode;
- (7) **RESET** Button: Restores factory set programs;

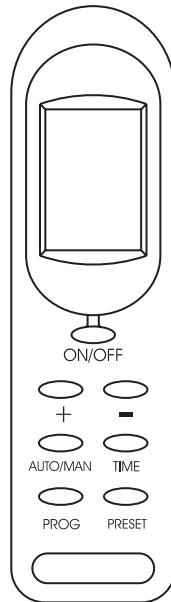

REMOTE CONTROL SCREEN DISPLAY (LCD)

The LCD provides the following display features:

1. Flame Indication;
2. Manual & Auto Mode Indication - “MANUAL” / “AUTO”;
3. “ROOM” or “SET” Temperature Indicator;
4. Day of Week;
5. Transmit Indicator “”;
6. System Status Indicator “ON” or “OFF”;
7. Battery Low Indicator “”
8. Programmed Mode Indication “PROG 1” / “PROG 2”;
9. Temperature Display in “°C” or “°F”;
10. Time of Day with AM, PM;

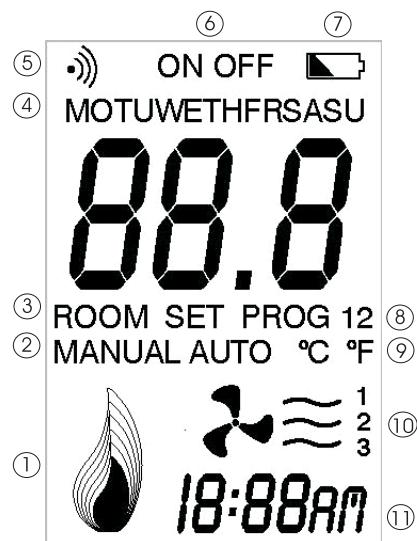

REMOTE CONTROL — BASIC FUNCTIONS

Switching the Remote ON & OFF

The ***On/Off*** button is used to switch the Remote ON or OFF.

If the Remote is switched OFF, pressing and releasing the ***On/Off*** button will switch ON the Remote. Once switched ON, the Remote will continue with its last selected operating mode, for example, *Manual*, *Auto* or *Program* mode. When the Remote is OFF, the LCD display continues to show the current day, time and room temperature.

Setting Time & Day

Note: The remote needs to be ON in order to set the Time & Day.

Time

Press and hold the “TIME” button for 2 seconds and then use the “+” button to set the hour and use the “-” button to set the minute.

Day

Press the “TIME” button again and use the “+” or “-” button to set the day.

RECEIVER OPERATION

The Remote Receiver has 3 operating modes, namely ON, OFF and Remote. The operating mode is selected by means of a slide switch on the front panel of the Receiver.

ON: When “ON” Mode is selected, the flame will turn ON.

OFF: When “OFF” Mode is selected, the flame will turn OFF. However, the unit can be turned ON or OFF with the standard ON/OFF switch.

Remote: When Remote Mode is selected, the Receiver will turn the flame ON or OFF depending on the setting of the Remote Control.

MANUAL MODE

Note: Ensure the remote has been turned ON in order to operate in this mode.

Manual mode can be selected by pressing and releasing the **AUTO/MAN** button until the symbol “MANUAL” is shown on the LCD.

In *Manual* mode, the Flame can be turned on and off using the remote via the on/off button.

AUTO MODE

Note: Ensure the remote has been turned ON in order to operate in this mode.

In *Auto* Mode the remote operates as a thermostat to turn the fire on and off depending on what temperature setting it has been programmed to.

Auto mode can be selected by pressing and releasing the **AUTO/MAN** button until the symbol “AUTO” is shown on the LCD.


In *Auto* mode, when either the “+” or “-” button is pressed, the Set Temperature will be displayed on the LCD instead of the Room Temperature. The Set Temperature will remain displayed on the LCD for 5 seconds after the button is released and then the display will revert to show the Room Temperature. The Set Temperature can be adjusted while it is displayed using the “+” and “-” buttons.

The LCD will show the following when either the “+” or “-” button is pressed:



Auto Mode normal display

← Room Temperature
Set Temperature →

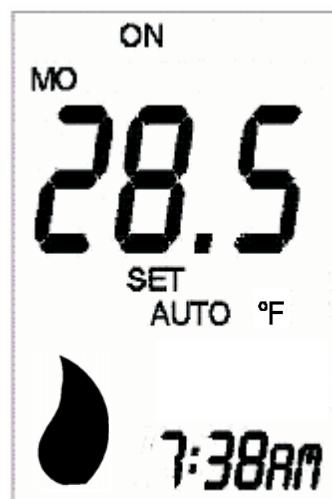

When “+” or “-” button is pressed

ADVANCED FUNCTION - PROGRAM MODE

Note: Ensure the remote has been turned ON in order to operate in this mode.

Program mode is selected by pressing and releasing the **AUTO/MAN** button until the symbol “PROG” is shown on the LCD. The Remote will operate according to the settings in the 2 Time Periods programmed by the user. Refer to *Setting the Program Mode* for details.

The Remote has been pre-programmed with the following default factory program:


Time Period	On-Time	Off-Time	Set Temperature (°F)
1 – Mon. – Fri.	6:00 am	8:00 am	71.6
1 – Sat. – Sun.	7:00 am	10:00 am	71.6
2 – Mon. – Fri.	5:00 pm	10:00 pm	71.6
2 – Sat. – Sun.	4:00 pm	11:00 pm	71.6

By pressing and holding the **PRESET** button for 10 seconds or longer, the Remote Control’s programs will be reset to the above default factory set program.

Pressing and releasing the **PROG** button successively will allow the user to review the programmed times for each day of the week.

To exit this mode wait approximately 20 seconds after the last button is released or press the ON/OFF button twice to return to the last operating mode.

If the Time Periods have not been programmed in the Remote, the display will show the following:

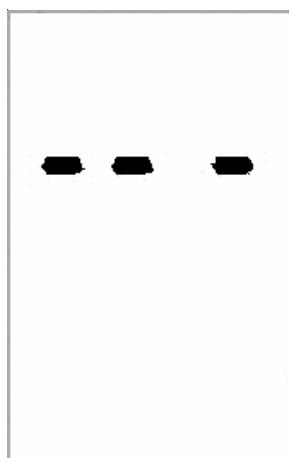

Programs have not been set.

SETTING THE PROGRAM MODE

The user can program two On-Times and two Off-Times as well as the Temperature settings for each day of the week. The **PROG** button is used to initiate the programming mode. The “+” and “-” buttons are used to adjust the time and temperature settings.

Note: The remote needs to be ON in order to set the Programs.

Follow the steps below to set the programs:


1) Programming the On-Time of Time Period 1

Press and hold the **PROG** button for 2 seconds or more to initiate the Programming mode.

The symbol “PROG 1” will flash to indicate the Remote is in Programming mode.

The On-Time for Time Period 1 will also flash. The “+” and “-” buttons can be used to adjust this time setting.


The LCD will show the current setting in Time Period 1 for Monday:

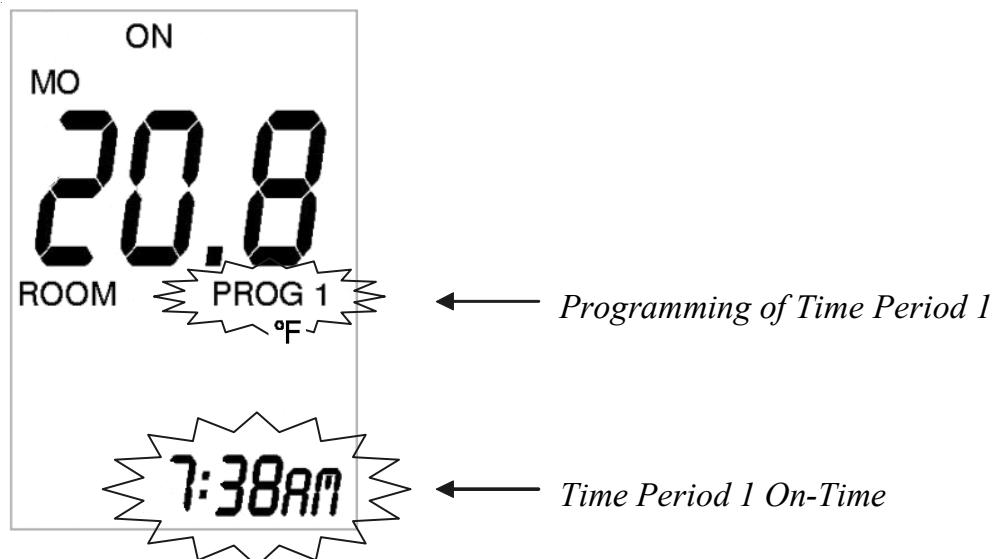

2) Programming the Off-Time of Time Period 1


Press and release the **PROG** button again to program the Off-Time for Time Period 1. Use the “+” and “-” buttons to adjust this time setting.

The LCD will show the following:

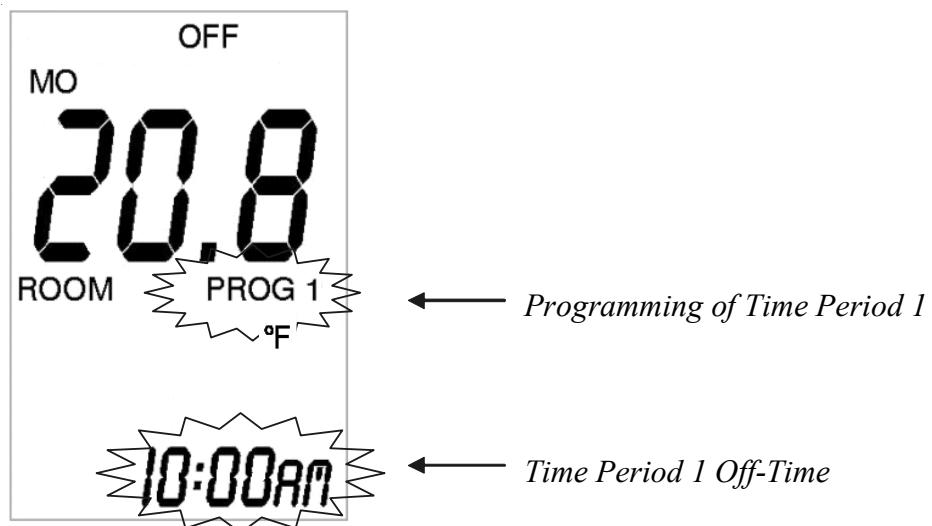

3) Programming the Set Temperature of Time Period 1


Press and release the **PROG** button again to program the Set Temperature. Use the “+” and “-” buttons to adjust the temperature setting.

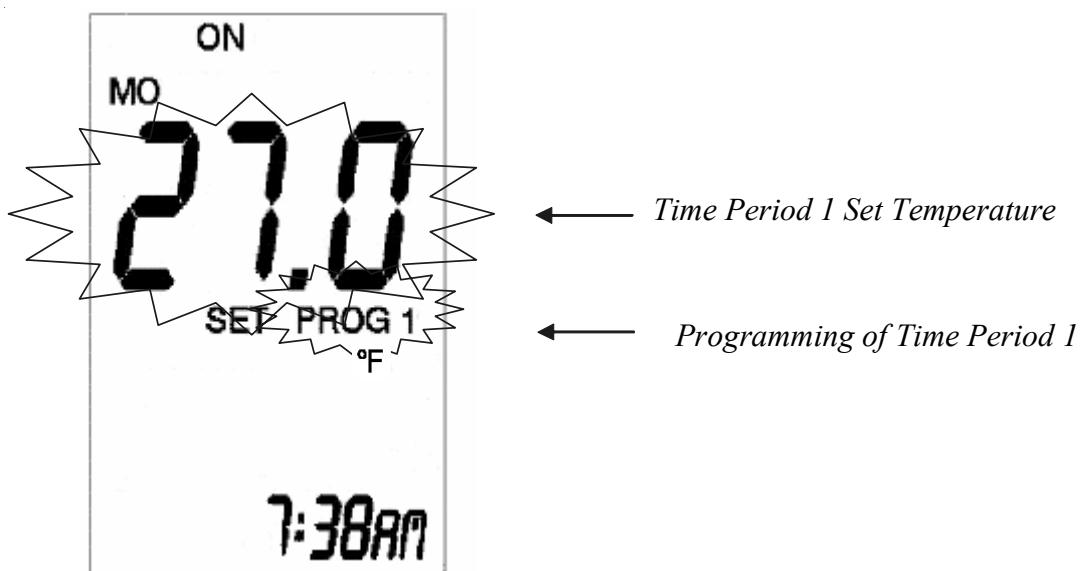

4) Programming the On-Time of Time Period 2

Press and release the **PROG** button again to program the On-Time of Time Period 2. Use the “+” and “-” buttons to adjust this time setting.


The LCD will show the following:

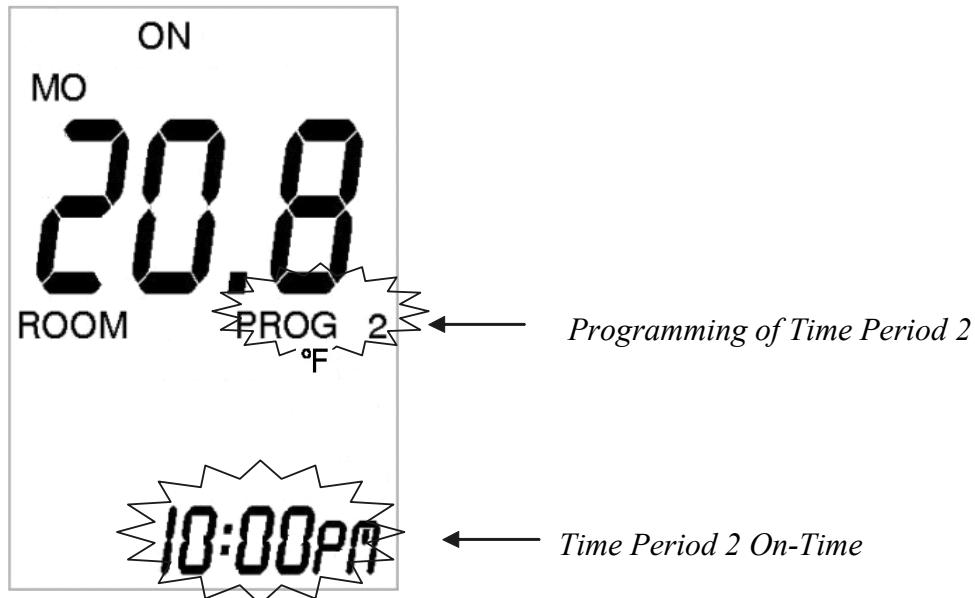

5) Programming the Off-Time of Time Period 2


Press and release the **PROG** button again to program the Off-Time of Time Period 2. Use the “+” and “-” buttons to adjust this time setting.

The LCD will show the following:

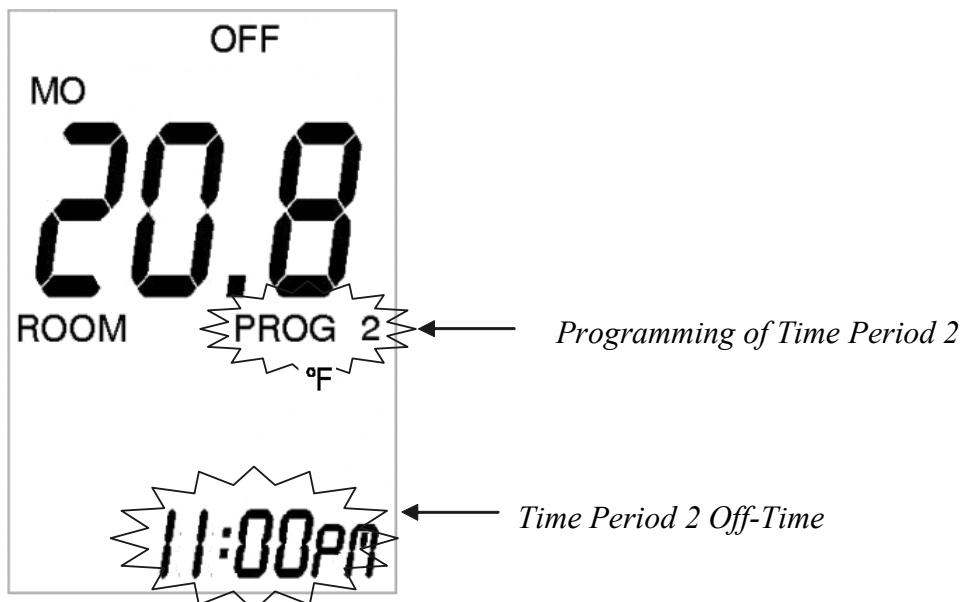

6) Programming the Set Temperature of Time Period 2

Press and release the **PROG** button one more time to program the Set Temperature of Time Period 2. Use the “+” and “-” buttons to adjust the temperature setting.

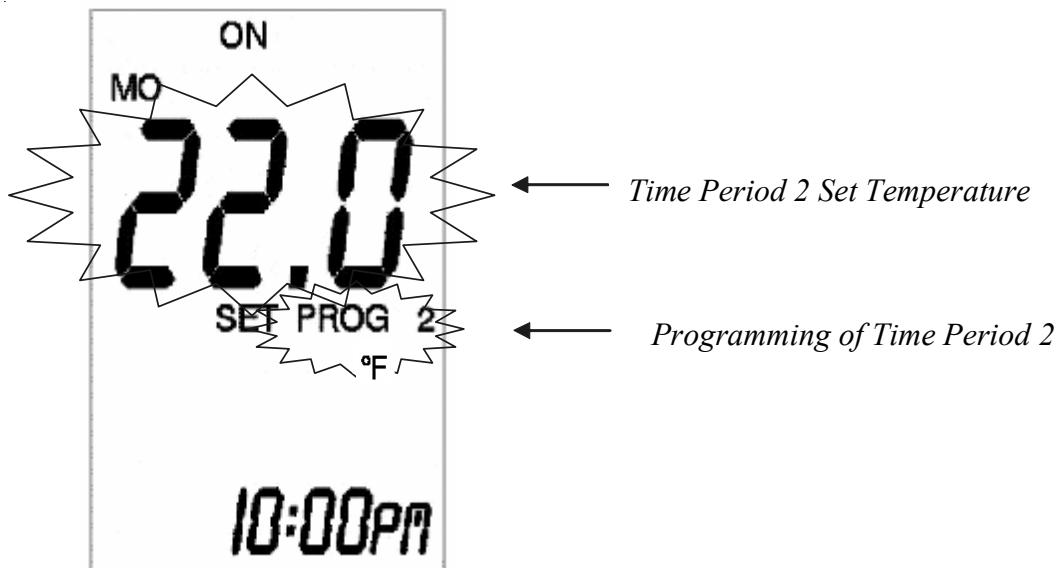


7a) Programming the Rest of the Week

Repeat steps 2 to 6 until all 7 days have been programmed.


7b) Alternatively, Copy Programs Over to the Other Days

Pressing and holding the **PROG** button for 2 seconds or longer will initiate the copying process.

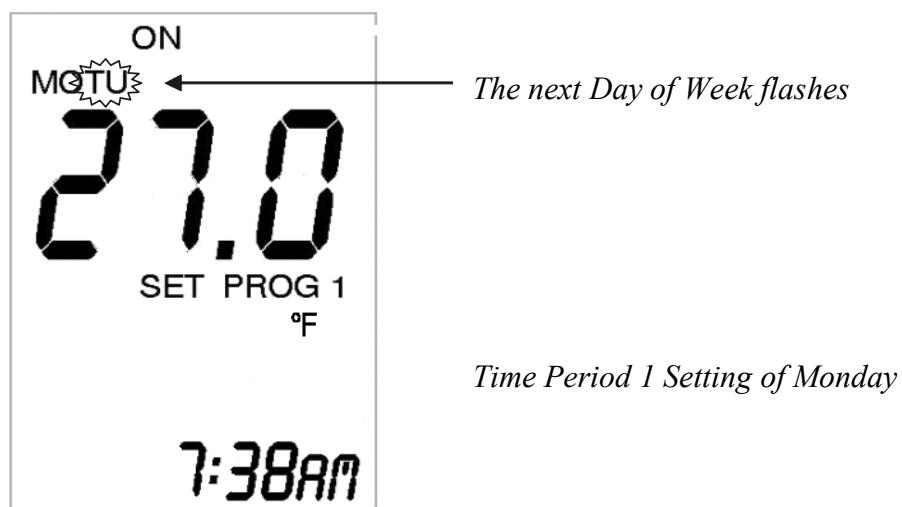

Pressing and releasing the “+” button will select the Day(s) of which the program is to copy to.

Pressing and releasing the “-” button will confirm the copying process in which the original program will copy across to the selected day(s).

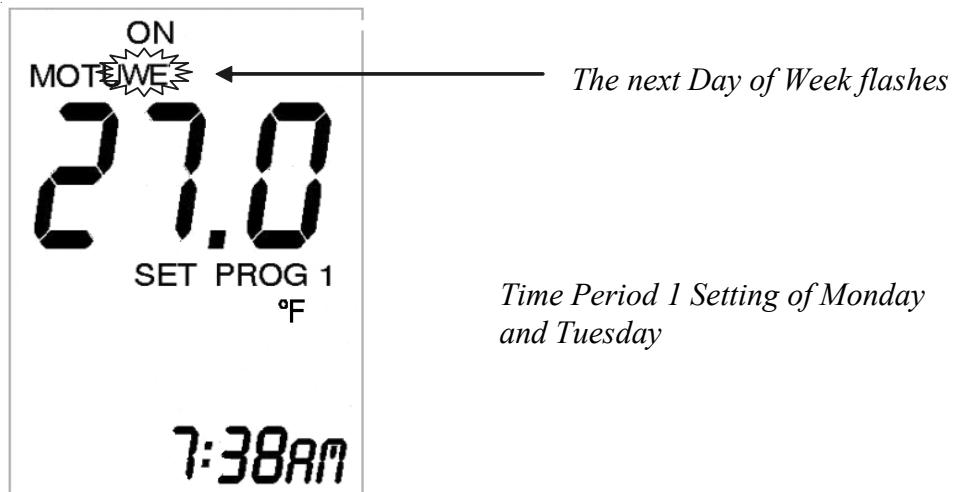

After the program is copied, the selected days will remain lit and the following day will start to flash.

Press and release the **PROG** button to return to normal programming mode.

8) Exiting Program Mode


There are 2 ways to exit Program Mode;

- 1) The Remote will automatically exit the Program mode 20 seconds after the last button is released or
- 2) By pressing the ON/OFF button twice, the remote will return to the last operating mode.

INSTALLING THE RECEIVER


1. Make sure the slide switch on the Receiver is at the “OFF” position.
2. Connect the output cable of the Receiver to the valve.

Refer to the unit instruction manual for wiring details.

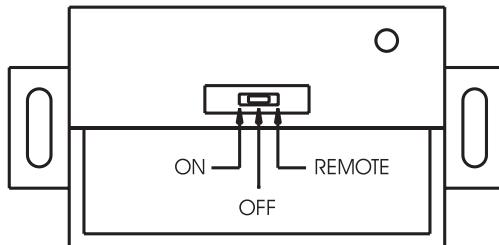


Installing the Receiver to a Wall Mount

- a. Secure the Receiver to the wall receptacle box.
- b. Use the screws provided to secure the face plate to the Receiver.

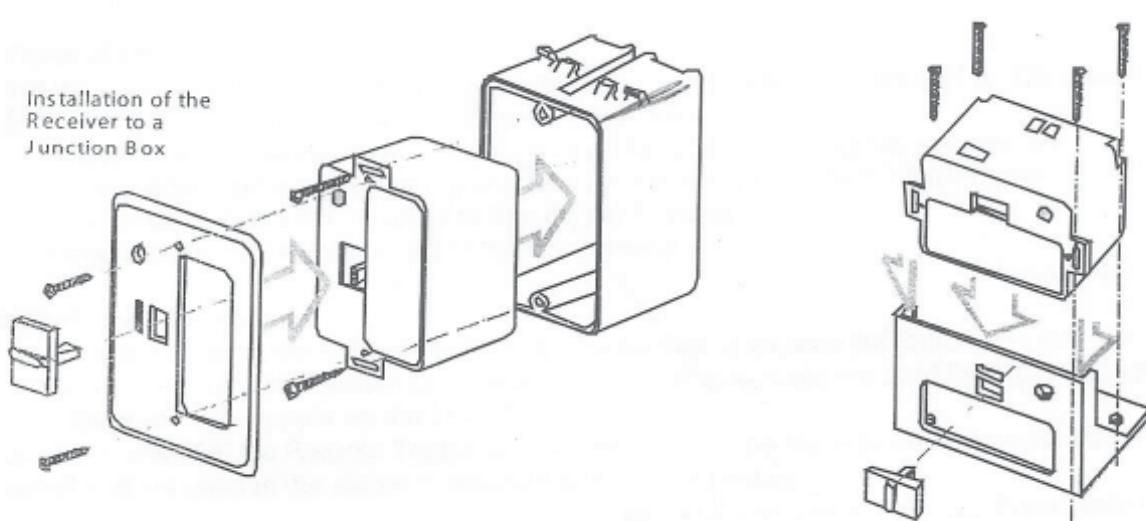


Installing the Receiver to a Fireplace


- 1) Remove control switch from remote receiver by pulling out gently.

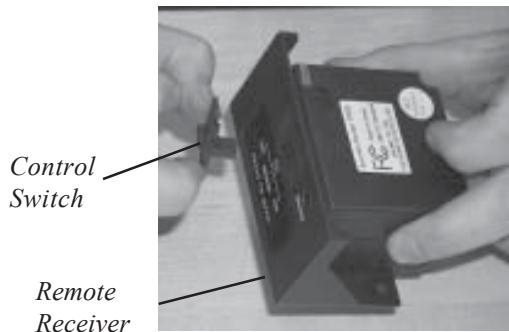


- 2) Remove spring loaded battery pack by pushing in and then pulling out.

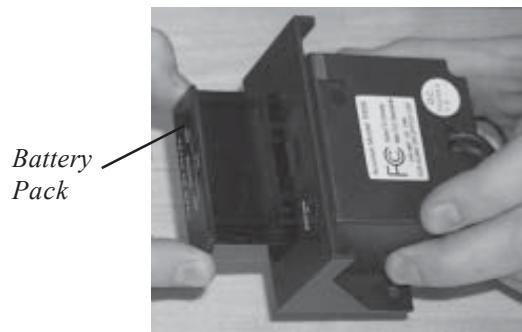


- 3) Remove receiver from bracket and discard bracket.

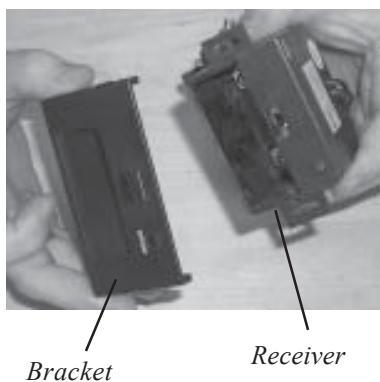

- 4) Place heat shield over receiver. Be careful not to crimp wires under edge of shield.

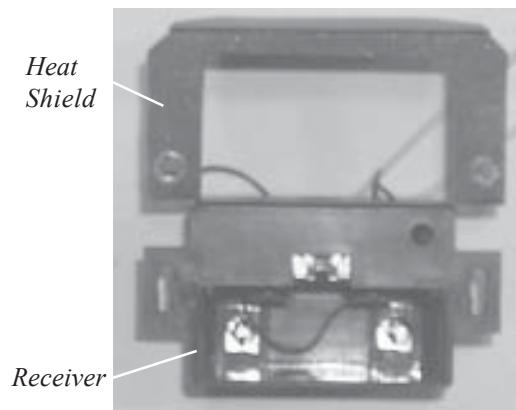

- 5) Secure heat shield onto receiver with 2 x #10 x 1/2" screws. Ensure the bottom of the heat shield is flush with the receiver as shown in the diagram below.

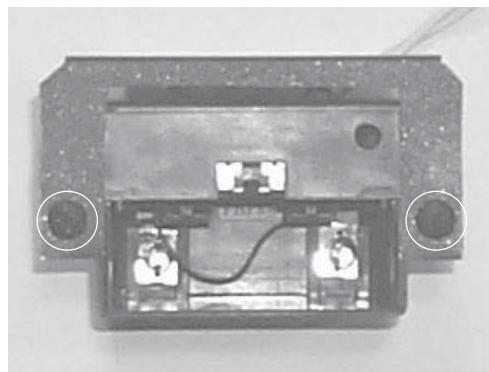


- 6) Re-install battery pack and control switch by reversing steps 2 and 1 only.

NOTE: After this step, installation of the E21 differs from the rest of the units. Please follow steps specified for the E21.

Continuation For E21 Installation Only


- 4) Remove bottom glass trim.
- 5) Place remote receiver under firebox.

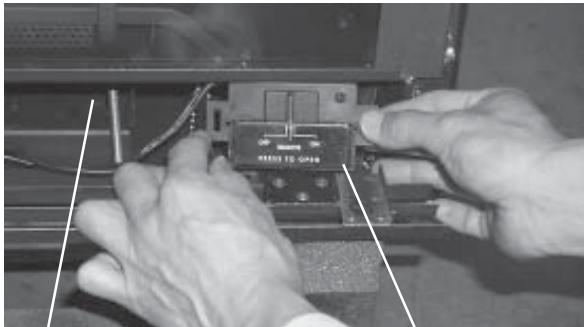


Firebox

Remote Receiver

- 7) Secure heat shield with 2 screws as shown below.

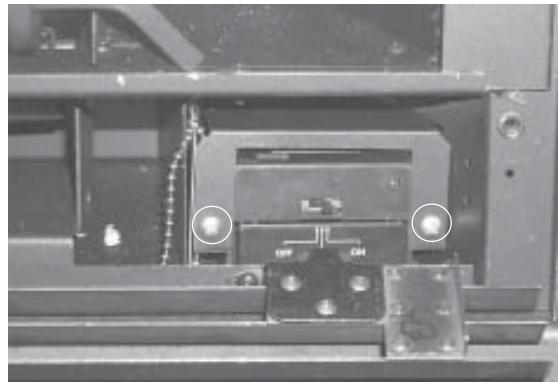

- 6) Place heat shield over receiver.

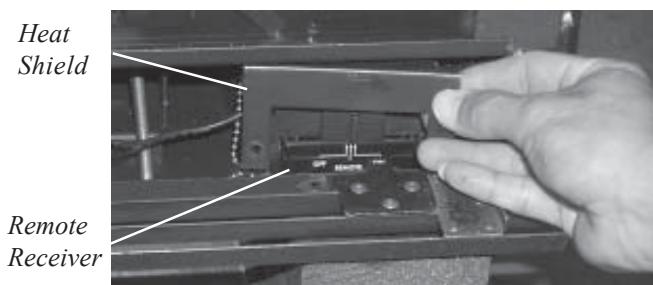

- 8) Ensure wires do not touch base of firebox.
- 9) Re-install bottom glass trim.

TROUBLESHOOTING

If the remote control does not turn on:

- Check to see that the receiver is in “Remote Mode”.
- Ensure the batteries are correctly installed in the receiver.
- Check the batteries for replacement, 2 x AAA alkaline.

When batteries are replaced, only the current time and day will need to be reset. The set program times are not affected.

When the light on the Receiver blinks repeatedly, this means the batteries in the battery pack of the receiver need replacement (4 x AA alkaline).

Special Conditions in Program Mode

- If the On-Time of a Time Period matches the Off-Time of the same Time Period, the Time Period is disabled.
- If the Off-Time of the First Time Period crosses over to the On-Time of the second Time Period, the Off-Time of the first Time Period will have precedent, for example, if Time Period 1 is programmed to end at 2:00 pm whereas Time Period 2 is programmed to commence at 1:00 pm, the following will occur:

Time Period 1		Time Period 2	
On-Time	Off-Time	On-Time	Off-Time
8:00 am	2:00 pm		
1:00 pm		4:00 pm	
On-Time		Off-Time	
Operates in Time Period 1 Setting		Operates in Time Period 2 Setting	

Displaying Temperature in Celsius or Fahrenheit

The default setting of the Remote is to display the temperature in Fahrenheit.

However, the Remote can be changed to display temperature in Celsius by the following steps:

1. Ensure the Remote is switched off by using the ***On/Off*** button.
2. Press and hold the “-” button.
3. While the “-” button is held down, press and release the “+” button, this will toggle the temperature display between °C and °F.

This setting is stored in memory hence the Remote will continue to display the temperature in Celsius even if the battery is replaced.

Matching Remote Control and Receiver ID Code

The Remote Control only responds to a remote control with a matching ID Code.

To match the Receiver ID Code, the following steps are to be followed:

1. Ensure the Remote Control is switched OFF.
2. Switch the Receiver OFF.
3. Switch the Receiver to REMOTE.
4. Press and hold the ***PROG*** and ***PRESET*** buttons simultaneously for approximately 8 seconds. The screen display will show the letters “LC” momentarily indicating the ID codes have been transmitted.
5. Release both the ***PROG*** and ***PRESET*** buttons.
6. The screen display will revert back to the normal off mode display.

NOTE: This must only be performed by a qualified installer.

NOTES:

