

FEATURES & POINTS OF INTEREST

TURBO FUNCTION - YOU WILL NOTICE THE TURBO BUTTONS ABOVE THE B & R BUTTONS. TURBO ALLOWS YOU TO USE A SINGLE BUTTON OR BOTH BUTTONS WITH TURBO SPEED.




TURBO DIALS - ADJUSTABLE DIALS LET YOU SPEED UP OR SLOW DOWN RAPID-BUTTON-PRESSES SO YOU CAN SET HOW QUICKLY TO SHOOT, PUNCH, ETC. WHILE IN TURBO MODE.

CHANNEL SWITCH - THE CHANNEL SWITCH IS LOCATED IN THE TOP RIGHT CORNER ABOVE THE SELECT BUTTON. YOU CAN SELECT CHANNEL 1, 2, 3, OR 4.



NOTE: PLAYER 1 = CHANNEL 1 OR 3
PLAYER 2 = CHANNEL 2 OR 4

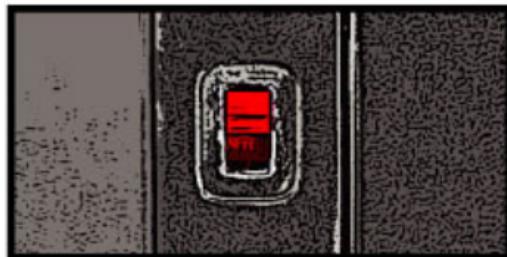


POWER SWITCH - THE POWER SWITCH IS LOCATED ON THE BOTTOM OF THE ARCADE STICK NEAR THE BATTERY COMPARTMENT.



NOTE: WHEN THE POWER IS ON, THE MESSIAH LOGO WILL GLOW RED.

FEATURES & POINTS OF INTEREST

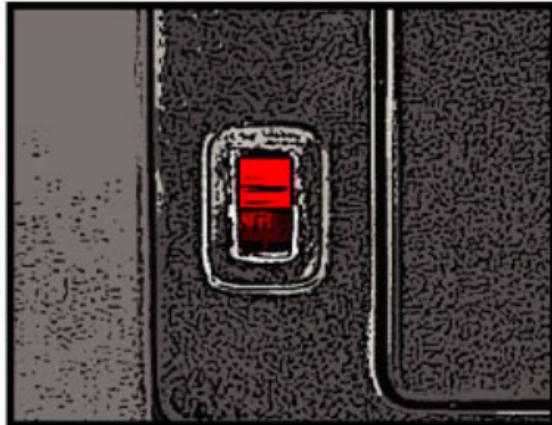


SLEEP MODE

THE WIRELESS ARCADE STICK WILL AUTOMATICALLY GO TO SLEEP IF THERE IS NO ACTIVITY FOR 10 MINUTES. TO WAKE THE WIRELESS ARCADE STICK, SIMPLY SWITCH **OFF** AND **ON** THE POWER SWITCH.

SLOW MOTION FUNCTION

PASS THE FASTEST MOST INTENSE LEVELS EFFORTLESSLY BY SLOWING THE GAME DOWN TO A SNAIL'S PACE



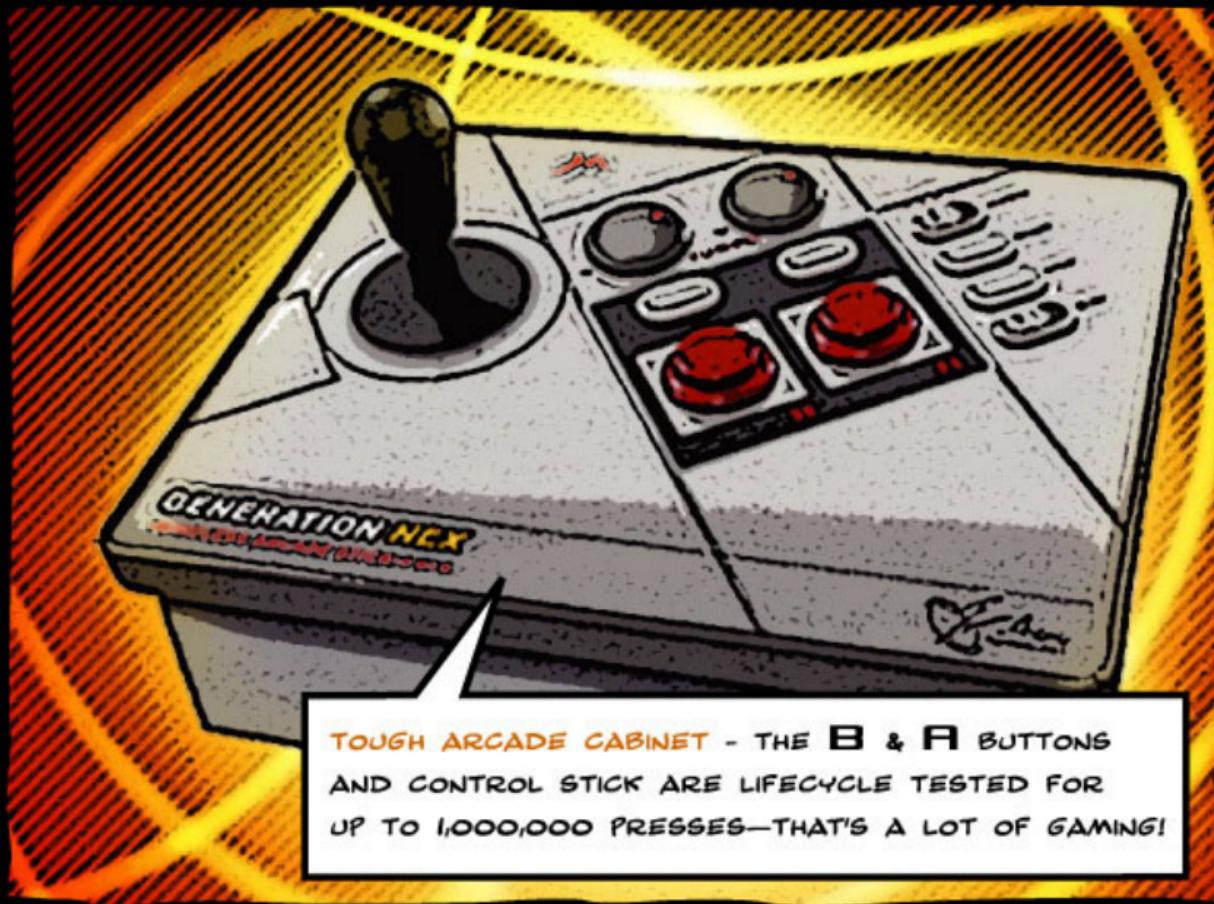

TOUGH ARCADE CABINET - THE B & A BUTTONS
AND CONTROL STICK ARE LIFECYCLE TESTED FOR
UP TO 1,000,000 PRESSES—THAT'S A LOT OF GAMING!

SET-UP INSTRUCTIONS

step 1

(((WARNING)))

Do not mix used and new batteries (replace all batteries at the same time).


Do not mix alkaline with any other type of battery (carbon zinc, nickel cadmium, etc).

Do not leave batteries in the Arcade Stick for long periods of non-use.

Do not put the batteries in backwards. Make sure that the positive (+) and negative (-) ends are facing in the correct directions. (see next page)


Misuse of batteries within this unit may cause batteries to leak and/or explode and lead to personal injury.

OPEN BATTERY DOOR
ON THE BOTTOM OF
THE ARCADE STICK.

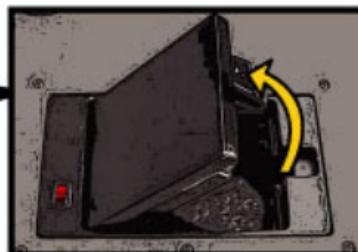

SET-UP INSTRUCTIONS


step 2

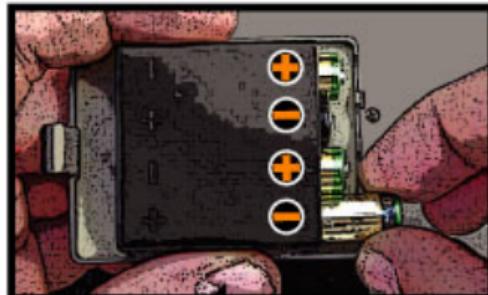

INSERT THE BATTERIES AND
MATCH + AND - EXACTLY.



SELECT A CHANNEL
CH 1 = PLAYER 1
CH 2 = PLAYER 2
CH 3 = PLAYER 1
CH 4 = PLAYER 2

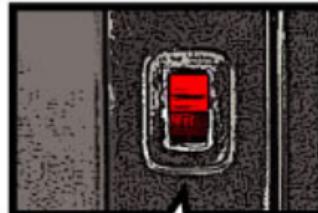

TURN THE POWER
SWITCH ON.



THE "M" WILL GLOW
WHEN THE POWER
IS TURNED ON.

THE "M" WILL FLASH
WHEN THE BATTERIES
ARE LOW. BE SURE
TO CHANGE ALL 4
BATTERIES AT ONCE.