






13





14



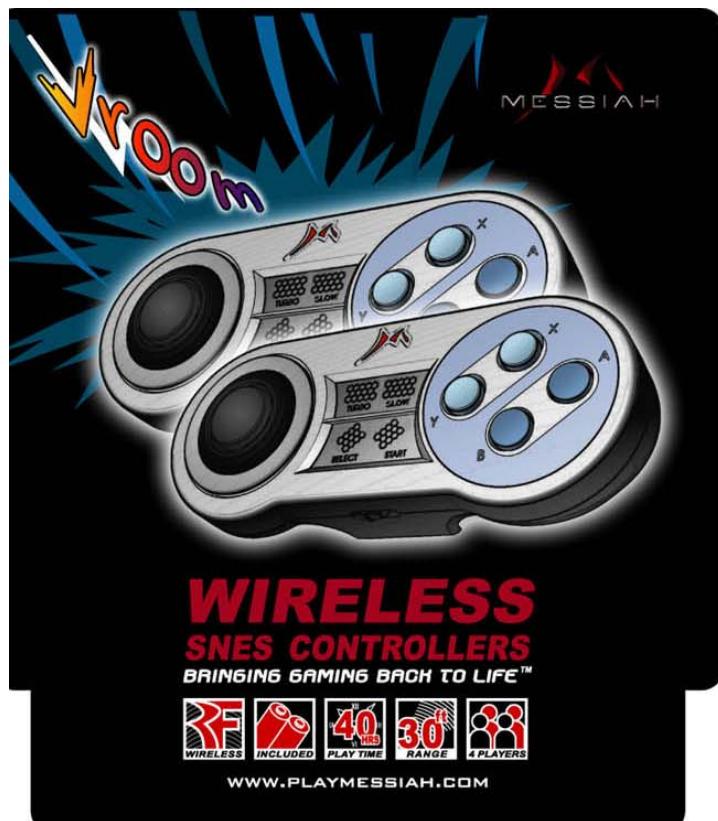

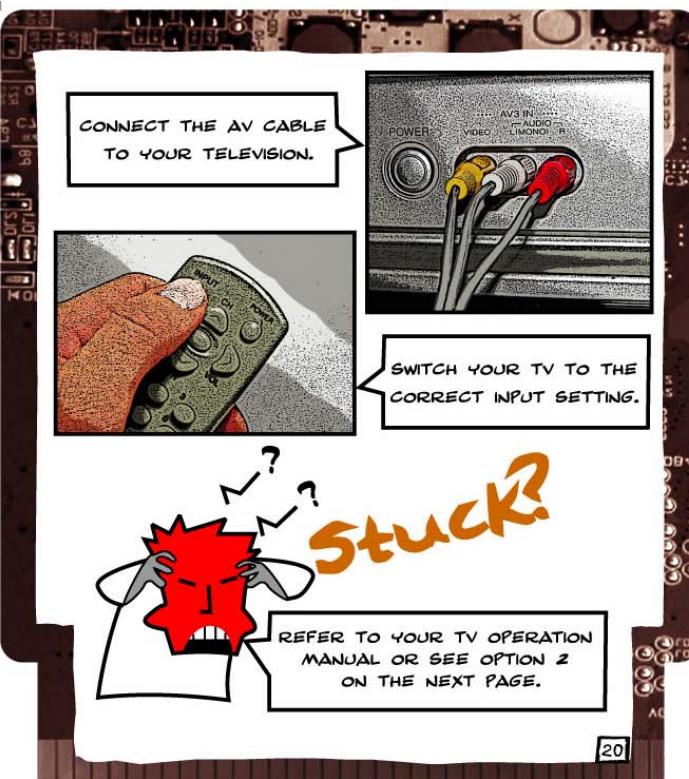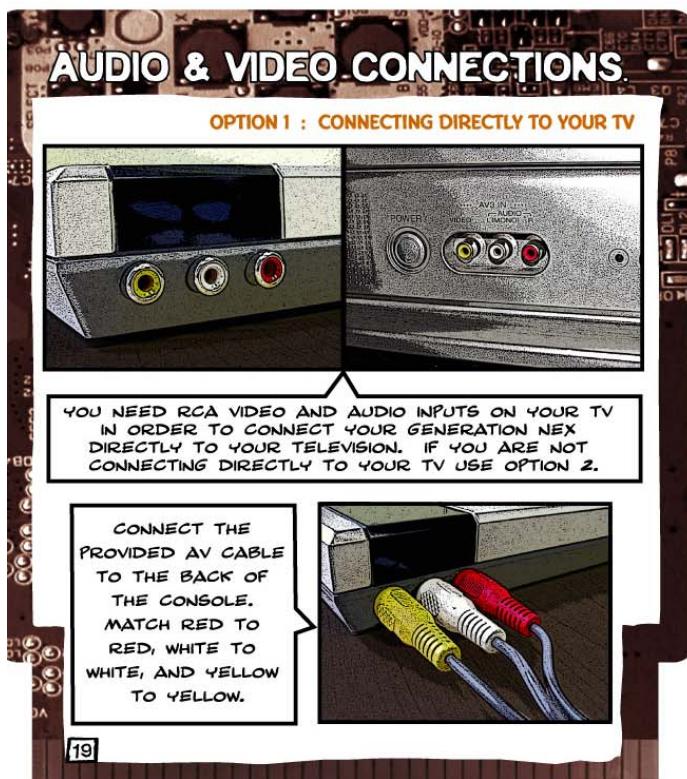

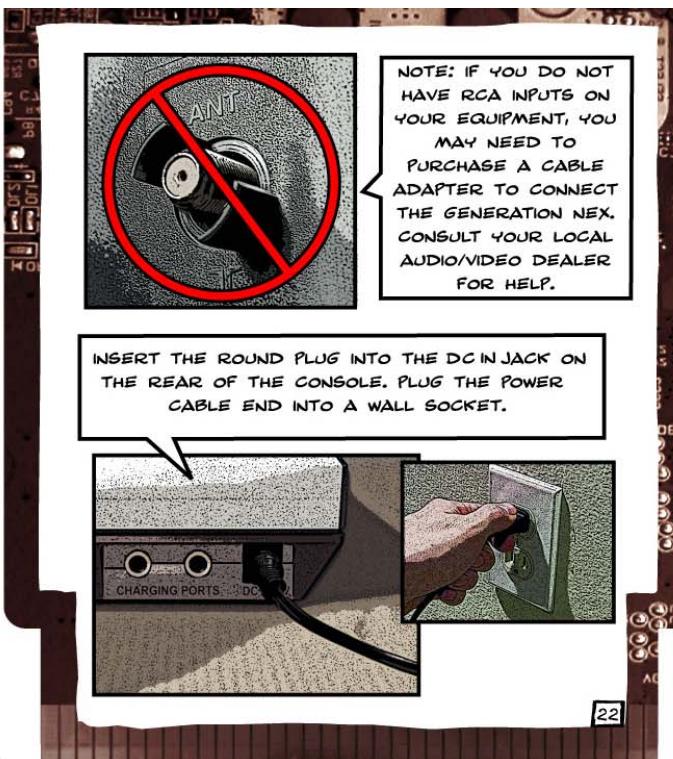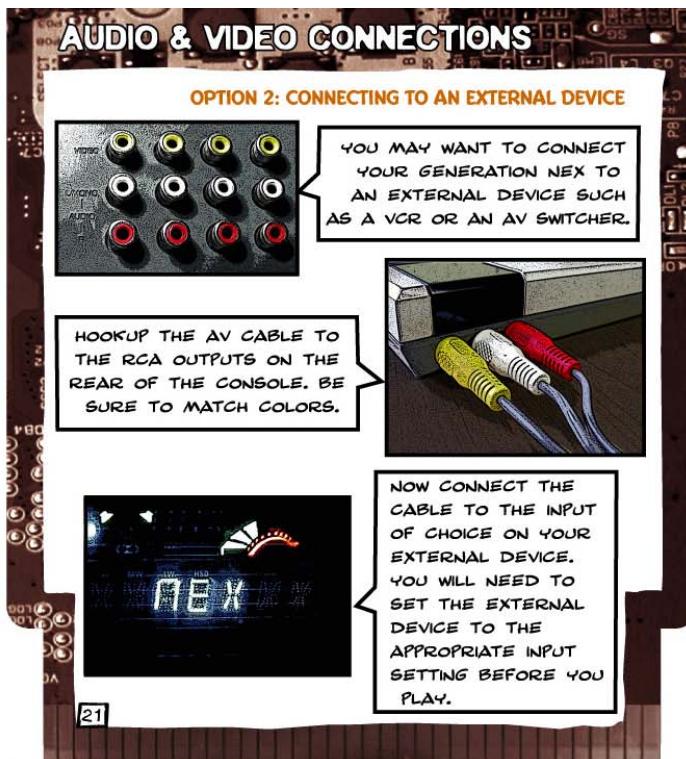

## WIRED CONTROLLERS



MAKE SURE YOUR GENERATION NEX IS TURNED OFF.

PLUG THE CONTROLLER FOR PLAYER 1 INTO SOCKET 1 ON THE FRONT OF THE CONSOLE.



FOR PLAYER 2, CONNECT AN ADDITIONAL CONTROLLER TO SOCKET 2.



23

## WIRELESS CONTROLLERS




[WWW.PLAYMESSIAH.COM](http://WWW.PLAYMESSIAH.COM)

GAME ON WITH COMPATIBLE 2.4GHZ WIRELESS CONTROLLERS.



(SOLD SEPARATELY)


FLIP THE WIRELESS SWITCH TO THE "ON" POSITION.

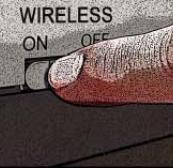


A WIRELESS LOGO WILL LIGHT UP ON THE FRONT OF THE GENERATION NEX.


NOTE: You can play with one or two players in built-in wireless mode. For wireless controller setup instructions, review the user manual that came with your product.

24

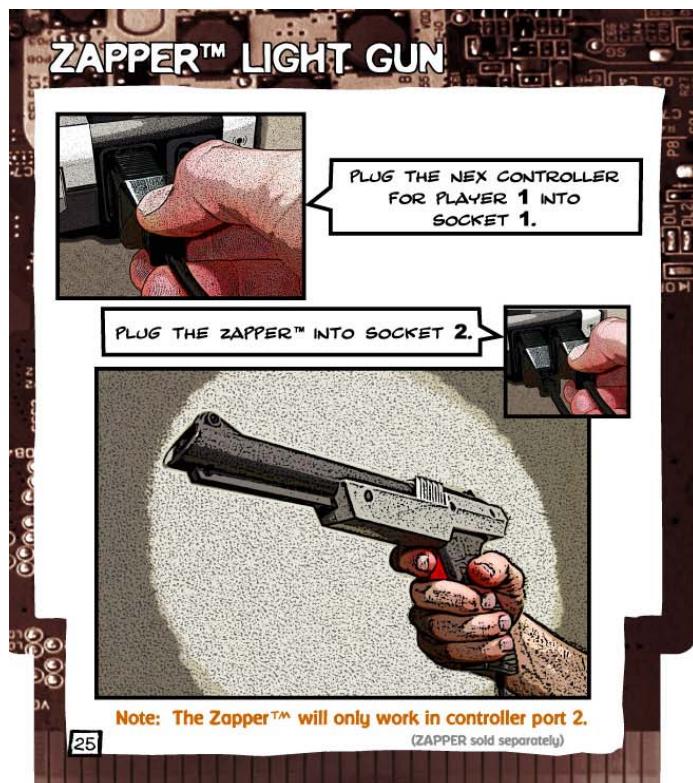


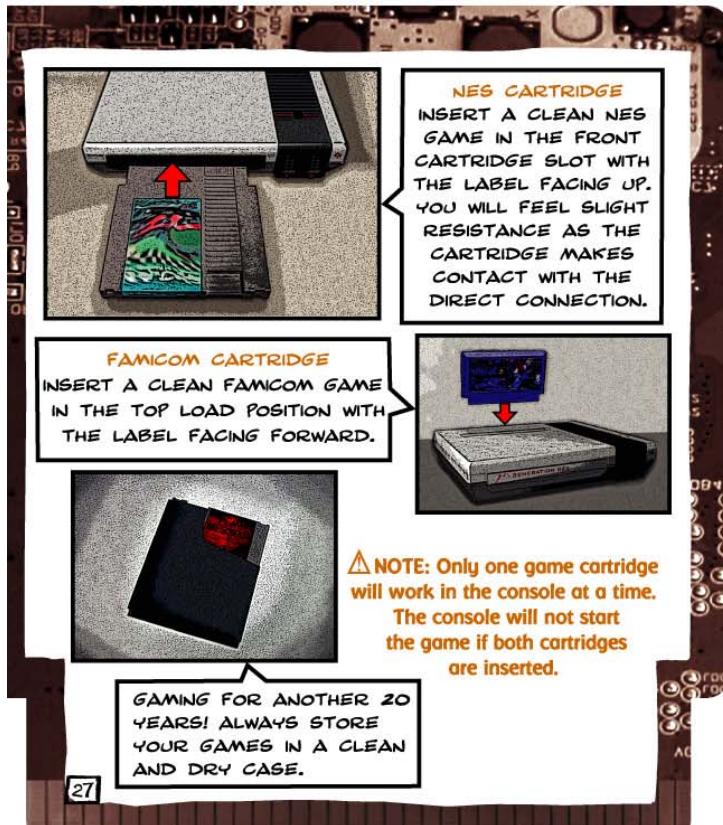

27

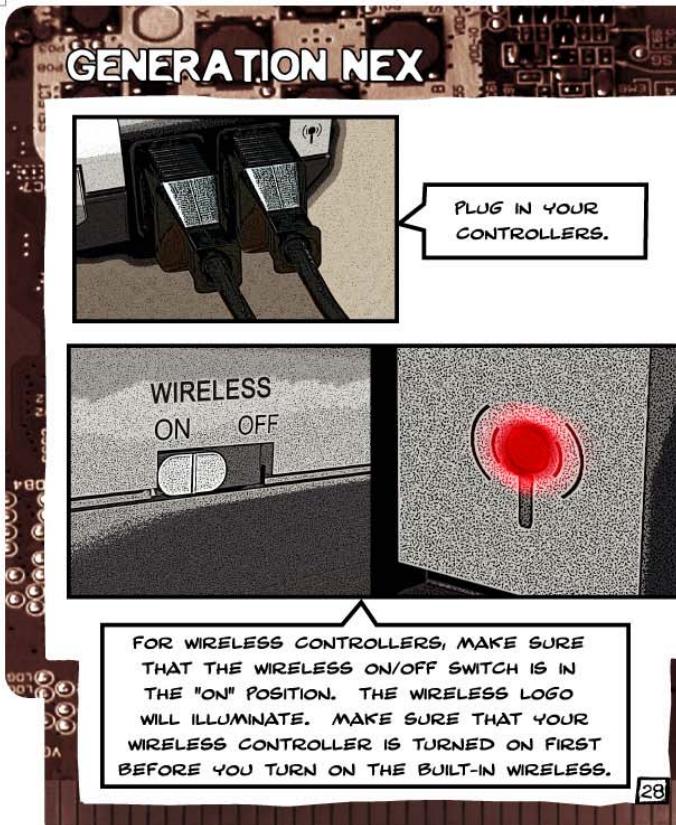

28

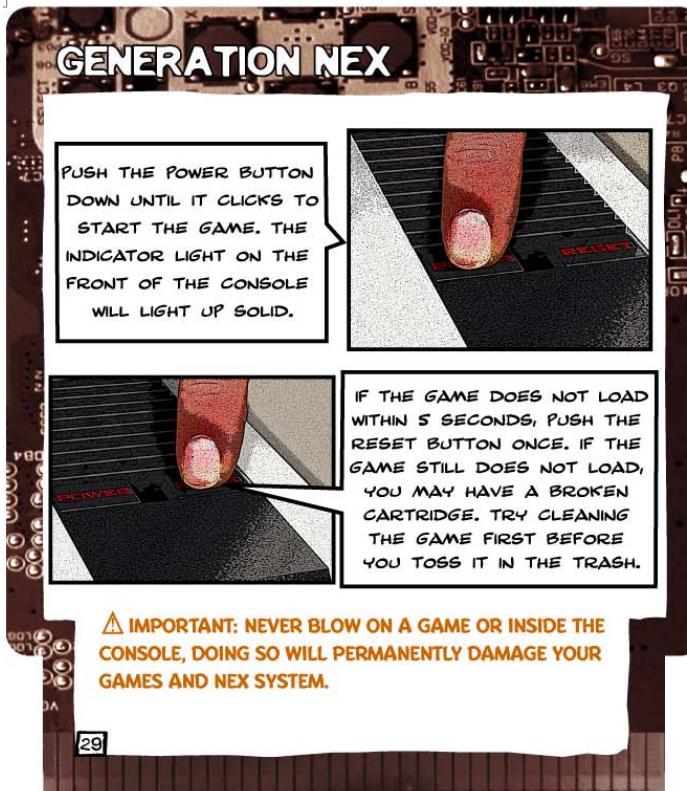

29



30

