

TABLET PC ANDROID 4.1 INSTRUCTION MANUAL

User's Guide

1	Notes.....
1.1	Acknowledgements
1.2	Notes.....
2	TABLET PC Summary
2.1	Device Hardware spec:
2.2	Device Software spec:
2.3	TABLET PC Using and Preparation.....
2.4	TABLET PC working Status and Notifications
3	Quick Start Instruction.....
3.1	Buttons
3.2	Startup and shutdown
3.3	Main Operation
3.4	USB Connection.....
4.	Equipment operation interface
4.1	Main interface describe
4.2	Delete icons.....
4.3	Check all application and setting.....
4.4	Wallpaper setting.....
4.5	status bar describe
4.6	Use touch panel
5	Basic settings
5.1	Setting.....
5.2	Turn on/off wifi
5.3	Silent mode
5.4	Display.....
5.5	Applications
5.6	Factory date reset.....
5.7	Storage
5.8	Language & keyboard.....
5.9	Date & time setting
5.10	USB Mode Select.....
5.11	About tablet
6	Apps Install and manage.....
6.1	App installer.....
7.	Problem solutions.....

1. INTRODUCTION

1.1 Acknowledgements

Highly appreciated for you to choose our Tablet pc which running with Andriod 4.1 and 800*480 touch display , under RK3066 ARM Cortex A9 Dual Core High-speed running processor, Memory with 1GB Ram and 8GB Flash storage .

This User's Guide has introduced a variety of functions of the tablet pc , tips and cautions, please read it carefully before using the TABLET PC.

1.2 Note:

- * This product is a high precision electronic products, do not disassemble.
- * Avoid strongly beat and the collision.
- * Avoid using this product the following conditions: high and low temperature, moisture, dust, magnetic fields strong and long-term exposure to sunlight.
- * Please use a wet cotton cloth wrung gently wipe the product shell, do not use other chemical cleaning solution. This product should not be dripping or splashing water, so should not be placed near the product category, such as glass filled with a liquid items.
- * Too long, use the headphone volume is too large may cause permanent hearing damage.
- * Do not cross the road, driving motor vehicle or bicycle use headphones to avoid traffic accidents.
- * Please only use permitted batteries, chargers and accessories, any other type of products use would violate the warranty regulations and cause dangerous.
- * Please follow the relevant local environmental regulations to deal with obsolete machines and accessories.
- * This product is in the course of any questions, please contact your local dealer or the company's customer service center directly.
- * For those because the product is damaged, repair or other causes of memory loss wipe coating, the Company assumes no responsibility, please follow the user manual for standard operation, and timely backups.

2 TABLET PC Summary

2.1. Device Hardware spec:

CPU processor: RK3066 ARM Cortex A9 Dual Core 1.4Ghz

Nand Flash built-in: 8GB

Memory: 1GB DDR3

Card slot: Micro SD card slot

Battery type: Polymer Rechargeable lithium battery

USB port: USB2.0

3 speaker built-in

G-Sensor support

I / O interface: USB port,3.5mm earphone jack

Wireless Internet: WIFI 802.11B/G/N

2.2 Device software spec:

OS : Andriod 4.1

Browser:Google Browser

Video: support AVI,RM/ RMVB,FLV,MPG4 – 1,MPEG – 2 ect

Audio: support MP3,WMA,AAC,AC3,WAV,APE ect

Photo: support JPEG,BMP,PNG ect

3D accelerator to play thousands of popular 3D games

2160P high definition video play MPEG-2, MPEG-4, AVS,H.264,WMV,

AVI, MP4, RMVB, FLV, MKV,

High precision 16 bits G-sensor, realize screen direction rotate 360 degree.

5V DC power supply, can keep the device fully in 3hrs

Network WIFI: SDIO 802.11b/g/n

Built-in speaker

Brower, MSN talk, Gmail, Youtube, Officesuite, FBreader, Music, Galley, calculator, Recorder, Google map, Global time, 3D games, Google market, Facebook ect.

Ebook: PDF/TXT/CHM/DOC/EXCEL

Photo: JPEG/BMP/GIF/PNG

2.3 TABLET PC Using and Preparation

Battery charging

To charge the tablet pc By the AC/DC Adaptor or USB interface.

Before the first time using, please make sure the device's battery is fully charged (Around 6 hours)

2.4 TABLET PC working status and Notices

Notice Icons

Manage the main interface software ICONS: long press the icons 3 second, after the icons become bigger, then you can drag anywhere in the interface. (Generated a shortcut on the desktop)

Delete icons: long press the icons 3 seconds, drag the icons to the Recycle Remove Box, once it become red, Loosen your hand, you can delete icon then. You touch the screen keep seconds, it appears shown as below:

	New E-mail		Flight Mode
	USB Connected		USB Connected Debugging
	The return key		Downloads
	Menu key		Home(Main Menu) Key
	Battery (power)		Wifi connected ,Internet works
	Without Micro SD Card		Alarm Clock On
	General Notice		Voice (Sound)Notice

In the main interface, you can touch the icon to open the APPs

In different browser(file, music, video, pictures), You shift and drag the scroll bar, so that the file list can up or down to roll.

3. Main Instruction

3.1 Button function instructions:



Power	Short time press for Sleep/wake up function, Long time press for TABLET PC On/Off function.
Volume + (up)	The buttons on top Volume +
Volume - (down)	The buttons down Volume -
Menu	Single press Menu Icon to open the current interface
HOME	Press any Icon back to Home Page (Main Manue)
Back	Press Back Icon could back to the upper directory

3.2 Power On / Off

3.2.1.Power On

startup: Long Press and hold the power button, the system will enter the main interface

3.2.1.Power Off


shutdown: In the main menu interface, Press the power button about 5 second to shutdown, The system can hint "power off" option, Clike"ok". you can safely shut down.

(Picture 3-1)

Lock screen: Short press Power button to lock screen or unlock screen.

Remark 1.When the TABLET PC is out of battery,system will shut down automatically.

2.Illegal turn off the device,when restart the device ,it will scan and restore the disk,so it may take longer time to enter into system.

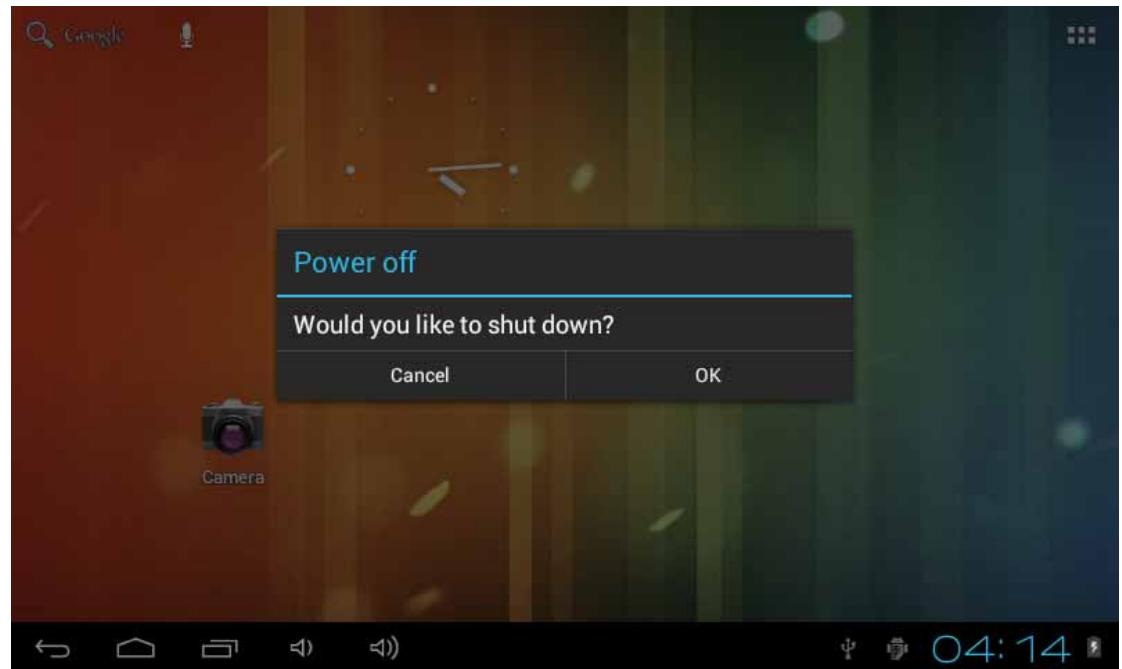

Picture 3-1

3.3.Main Operation

3.3.1 ESC

Short Press ESC button will return the upper interface, long Press ESC button will return the main interface

3.3.2 Menu

the Tablet under normal operating conditions, short press M button will Back to the home manue

3.3.3 Volume +, Volume-

the buttons on top Volume +, Volume-achieve changes in the volume.

3.3.4 earphone jack

3.5 mm standard earphone jack

3.3.5 Video output interface

HDMI output interface

3.3.6 TF card

TF-CARD slot: external T-FLASH card

3.3.7 MiniUSB

MiniUSB jack: you can use it to connect the computer for data transmission, charging and external connection USB flash drive

3.3.8 Reset

When the Tablet under the condition of the crash, use the small objects to short press RESET button, Tablet will force to shutdown.

【Remark】: unless unable to shutdown, otherwise don't use the reset to force shut down the unit , if not,it will easy to damage the machine system.


3. First use

3.1 To charge the tablet pc By the AC/DC Adaptor or USB interface.

Before the first time using, please make sure the device's battery is fully charged (Around 6 hours)

3.4.USB Connection


Use USB cable to connect device to PC, device will pop up the USB connection window, click Turn on USB storage to connect to PC into the load mode, you can copy or delete the file on the device or memory card.

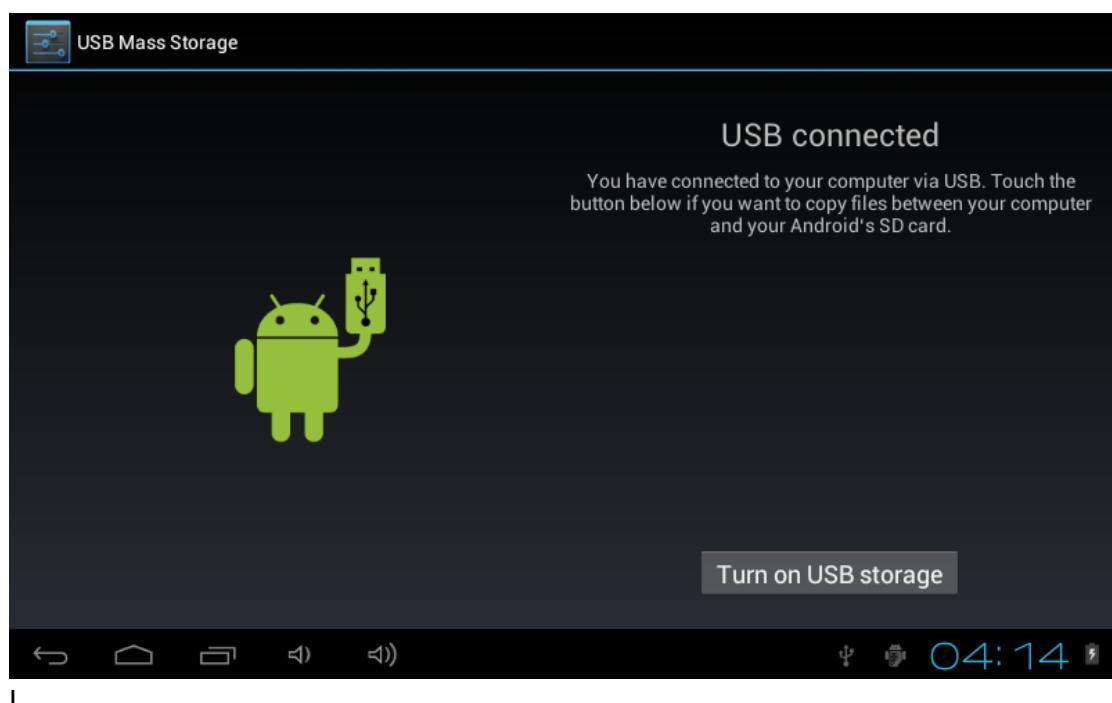

4. Equipment operation interface

4.1 Main interface describe

After startup will enter the main interface

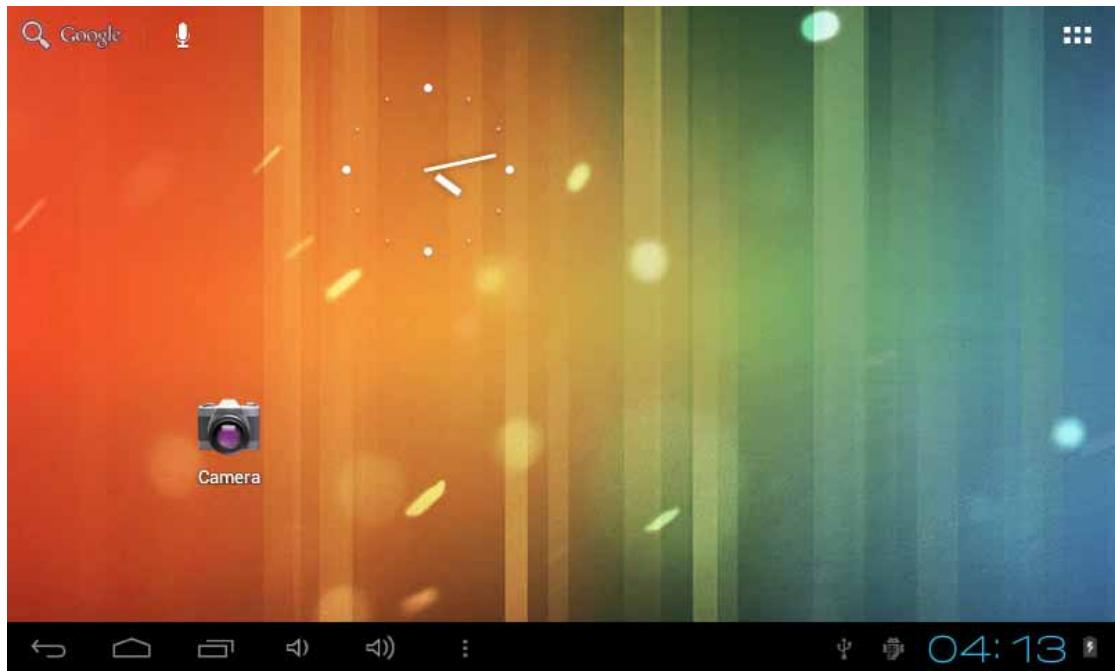

In the main interface, you can manage the main interface software ICONS: long press the icons 3 second, after the icons will bigger, then you can drag anywhere in the interface.


4.2Delete icons

long press the icons 3 second, drag the icons to the Recycle Bin icon, once it become red, Loosen your hand, after that you can delete icon

4.3 Check all application and setting




Touch the "grid" icon in main interface you can see all applications and setting as follows :

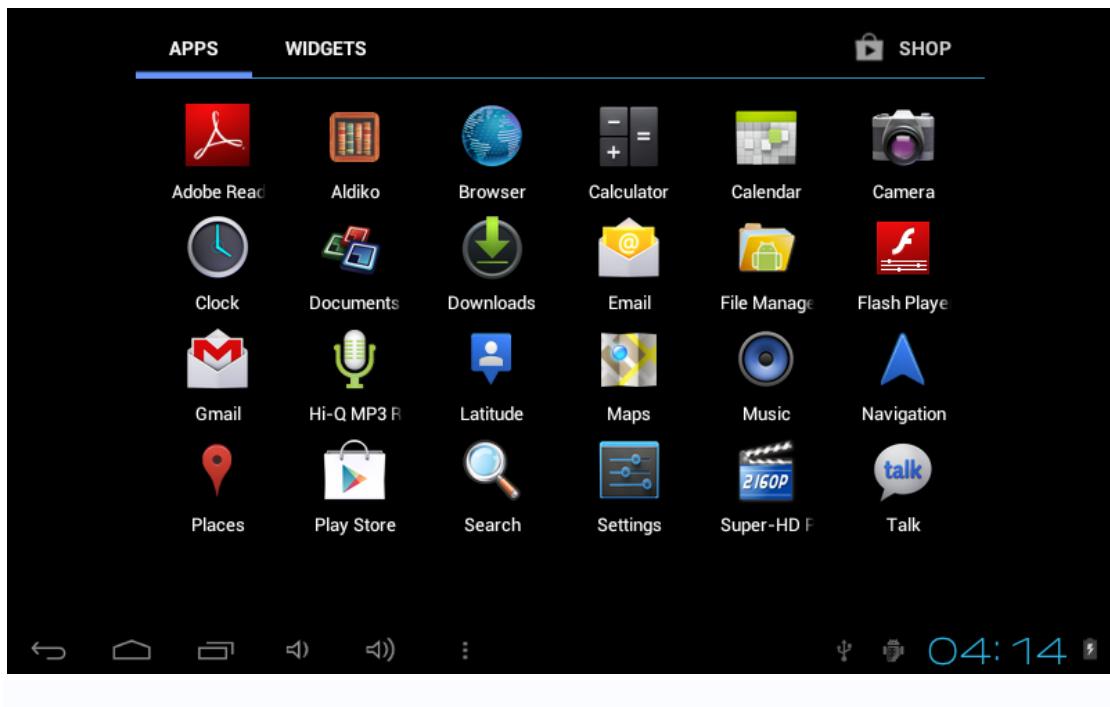

4.4. Wallpaper setting

You touch the screen of main interface for seconds, it appears the dialog box "Choose wallpaper from", As show blow

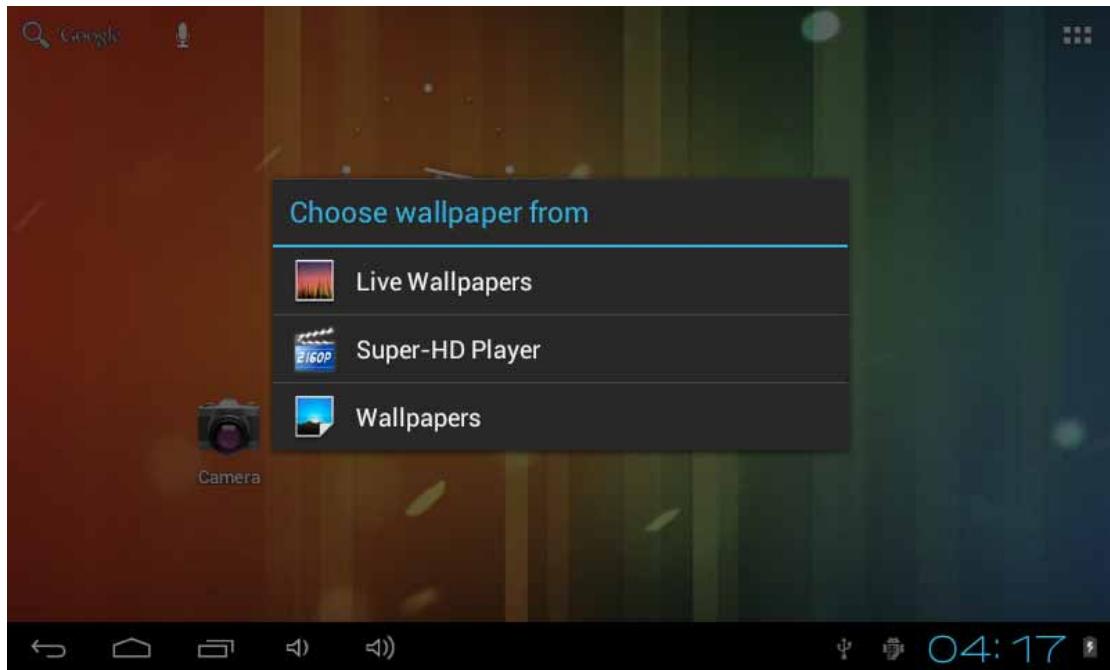

4.5 status bar describe

4.5.1.The status bar above of the screen

Top left display main interface software, T-Flash card, USB connection status and so on

Top right display the battery, battery charge icons, current time, set time, Settings Menu, ESC button.

4.6 Use touch panel

As for 7 " resistive touch screen. Following the main touch screen area is described, here shows you how to use the touch screen.


No matter which interface you are on the screen, it can go back to main screen through pressing the soft key  on the bottom right corner of the main screen.

【Attention】 The main screen soft key  functions as the machine back key 

In different applications, by tapping the back soft key  on the bottom right corner on the touch screen, you can return to its interface on the upfloor.

In different applications, by tapping the menu key  on the upper right corner of touch screen, the screen will appear the operation setting interface as follows,

【Remark】 : The main screen soft key  functions as the machine menu 

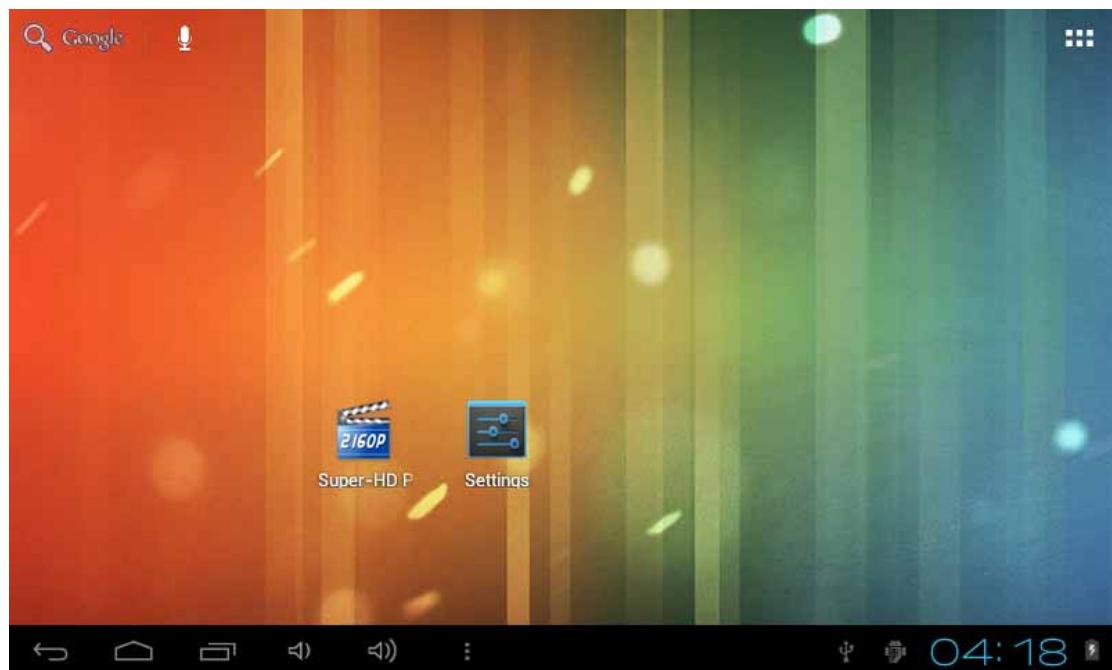


In the main interface, you can touch the icon to open the APPs

In different browser(file, music, video, pictures), You shift and drag the scroll bar, so that the file list can up or down to roll.

5. Basic setting



5.1 Setting: Click setting icons , enter setting interface

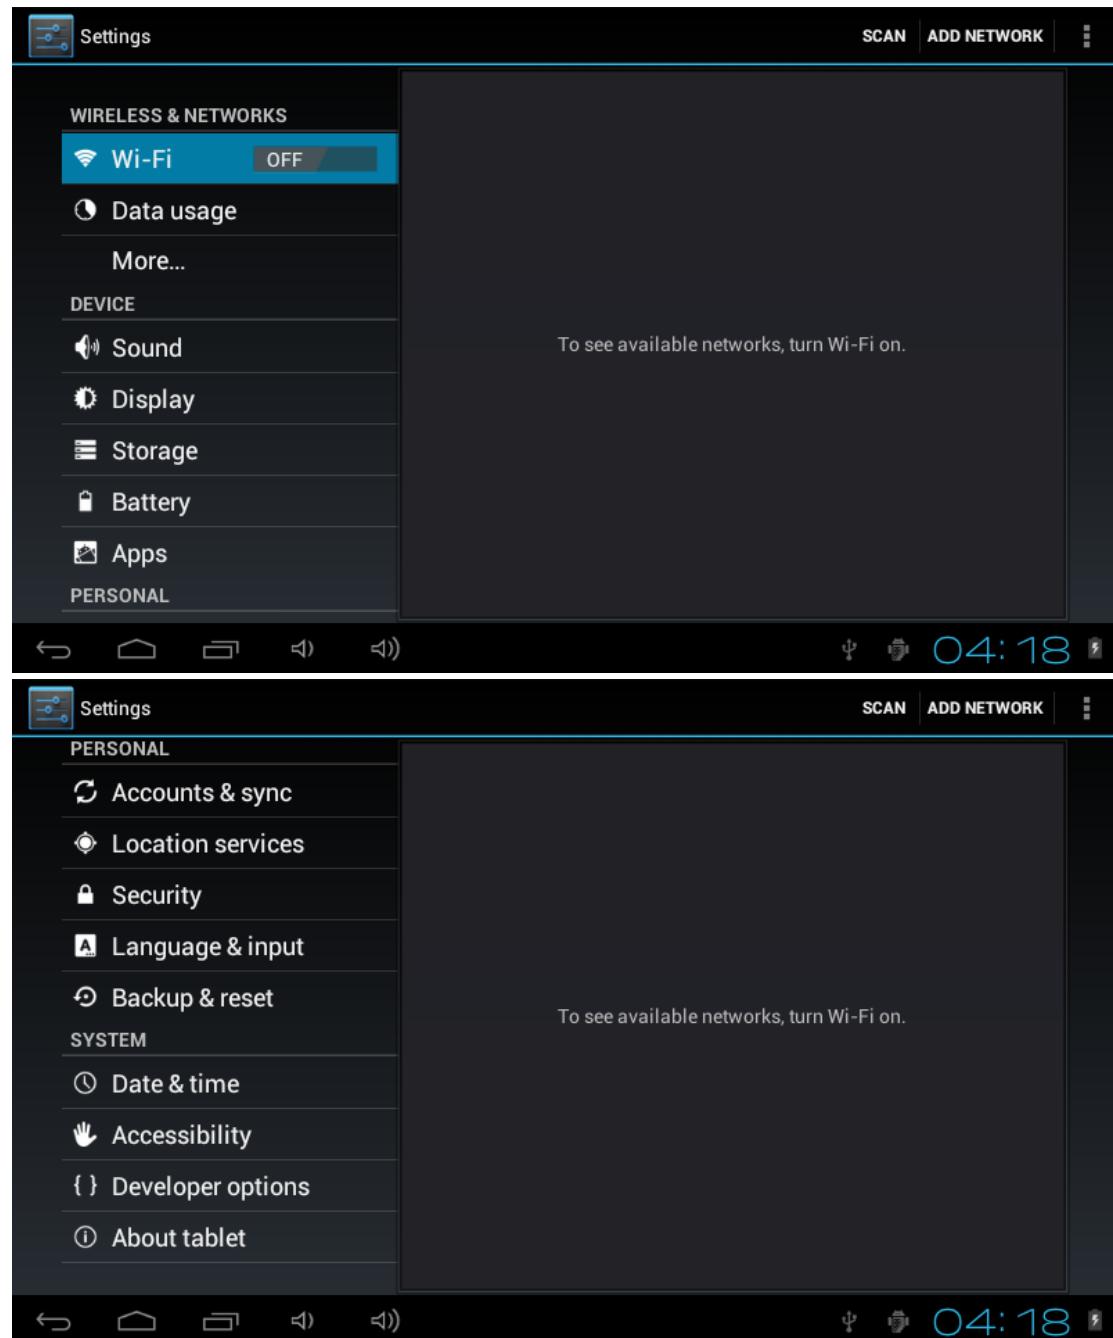


5.2 Turn on/off wifi

Touch the to choose turn on or turn off the wifi .

After turn on the wifi you can find the wifi list at right side .Then choose the one you want to connect then will be ok.


5.3 Silent mode

Volume,Notification ringtone,Audible selection,Screen lock sounds,

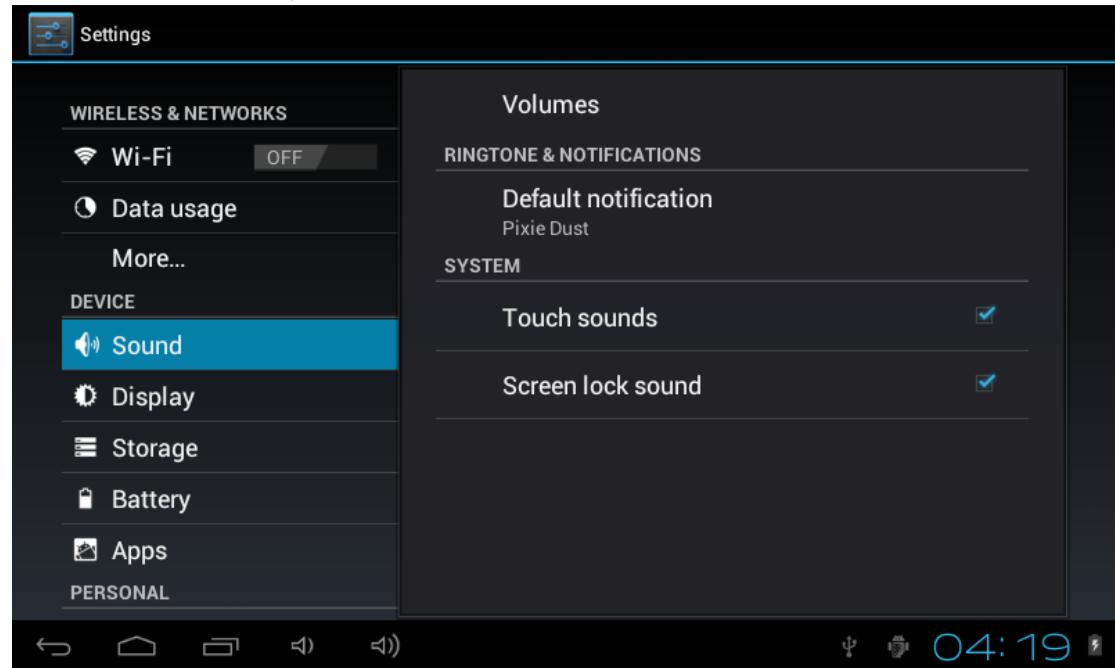


5.4. Dispaly


You can setting the display as follows :

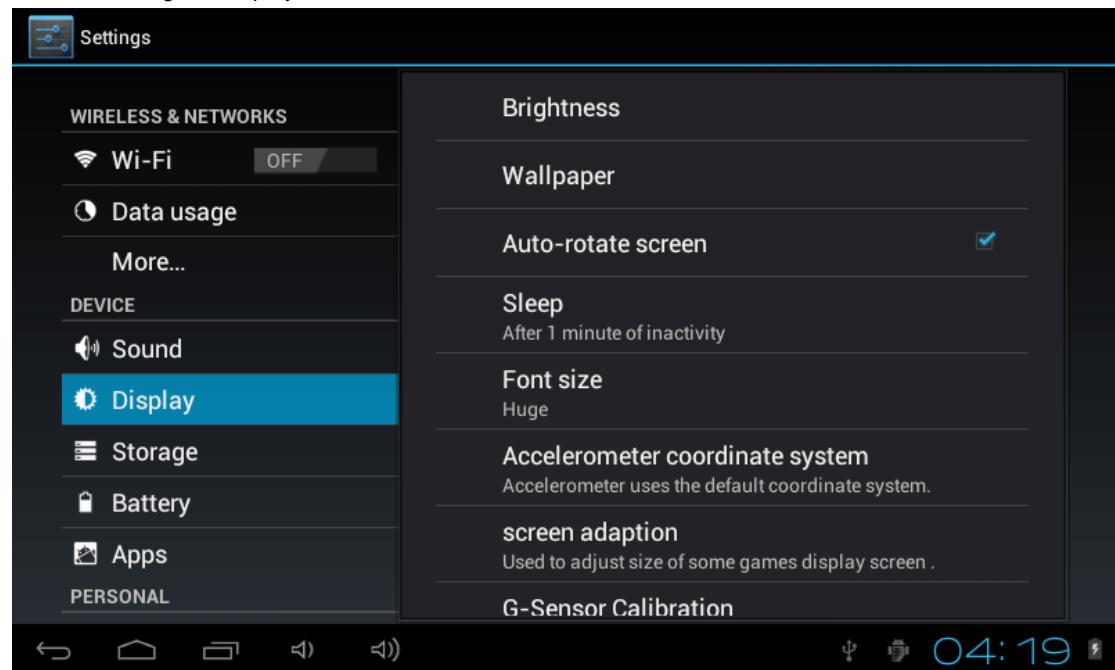

5.5 Application

 5.5.1 Manage applications

Please enter  Security
Click “Unknown Sources”, then click “OK”
first .Then you can install Applications .It's as follows :

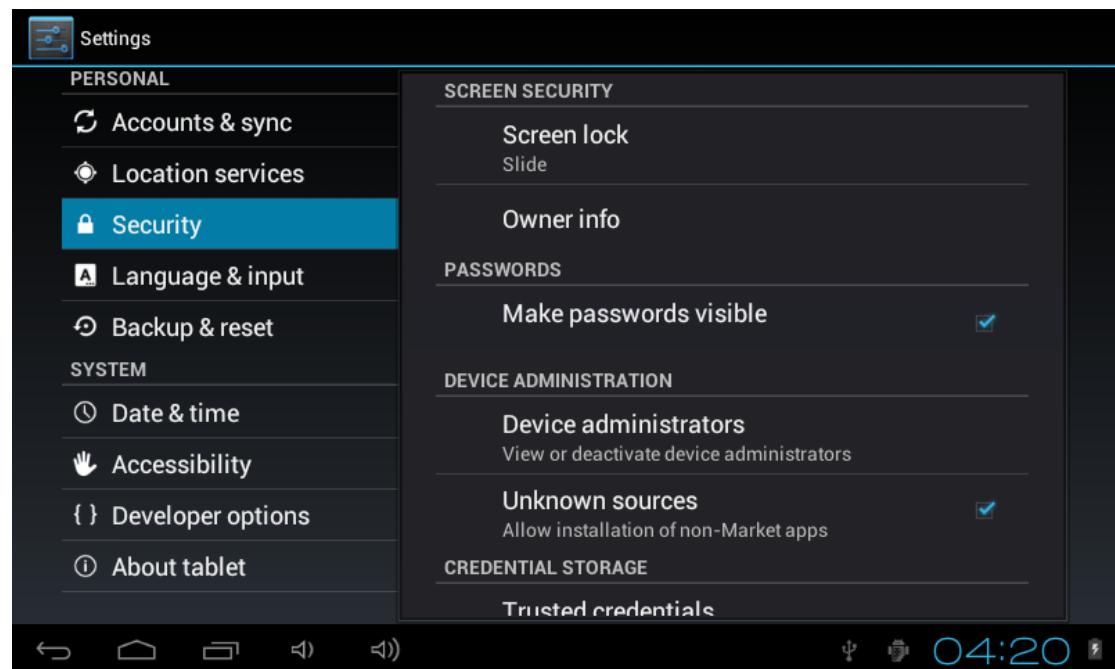


5.5.2 Manage application: manager and uninstall Application

How to uninstall?




1. enter  “setting”>“Application”>“Manage application” And then there will be installed the program list
2. Click the icons which you

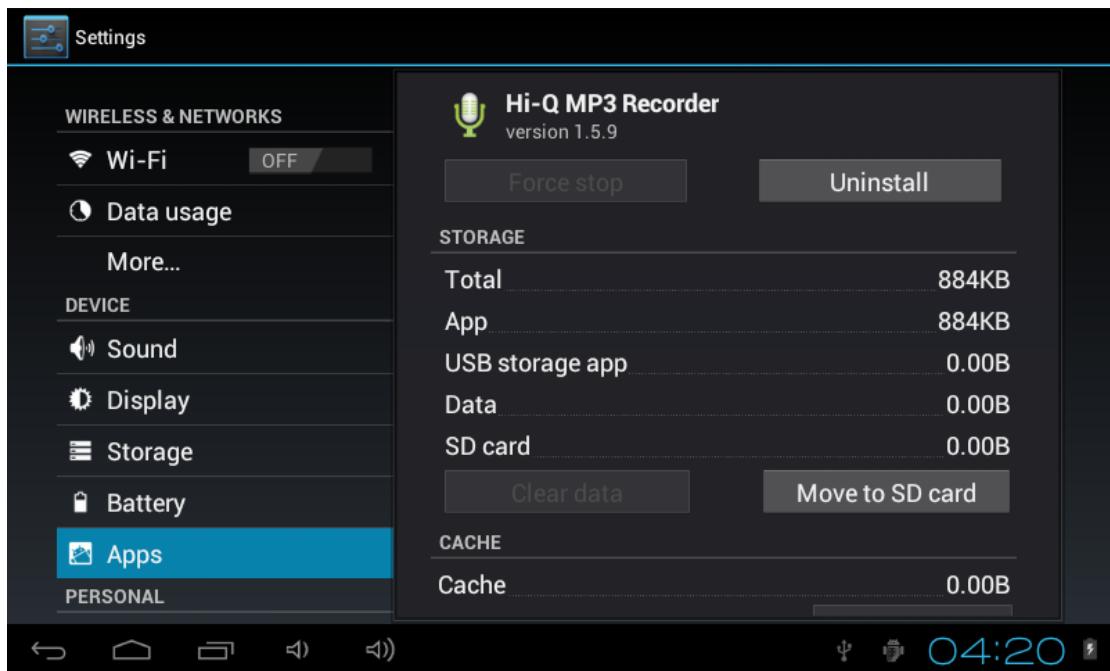

3. Click Uninstall, then you can delete the applications


5.6 Factory data reset

Please enter **Backup & reset** and you can reset it as follow picture show:

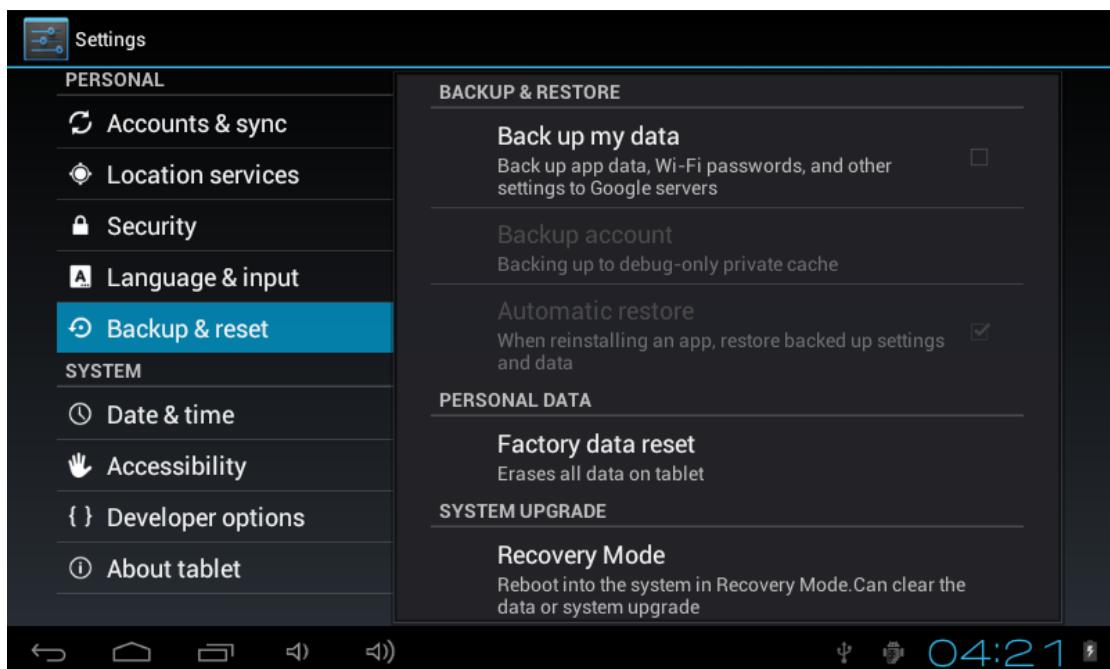

5.7 Storage


Remove TF card, view of the available storage space

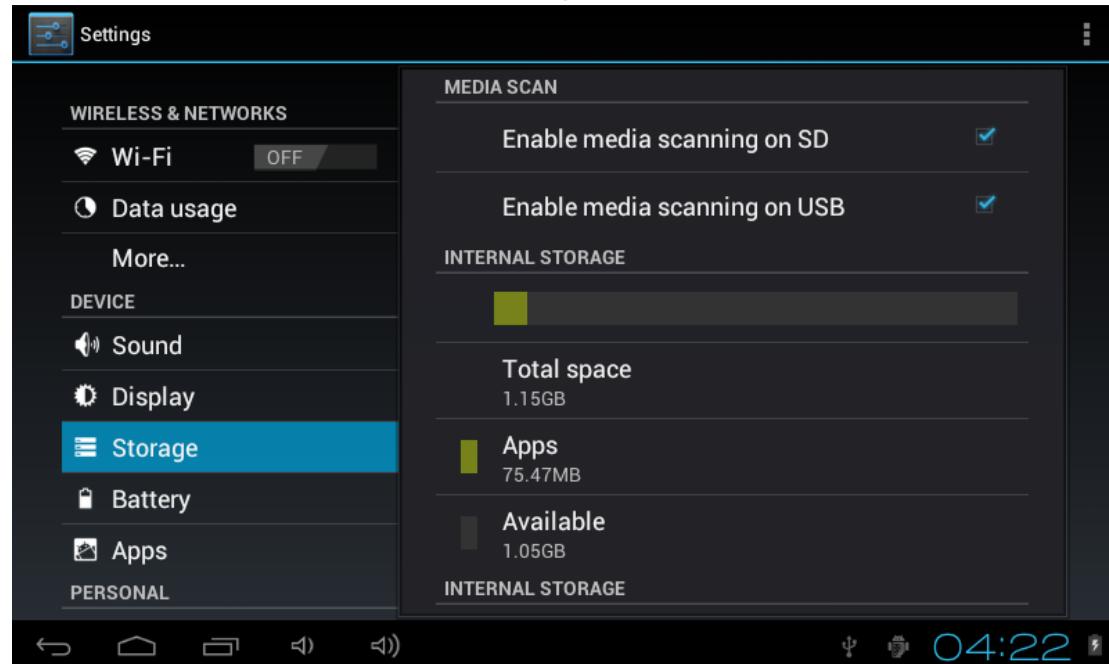

【Remark】: pls touch option "delete SD card", so that can romeve SD card safety

5.8. Language & keyboard

Setting: (Language), text input and automatic error correction options;

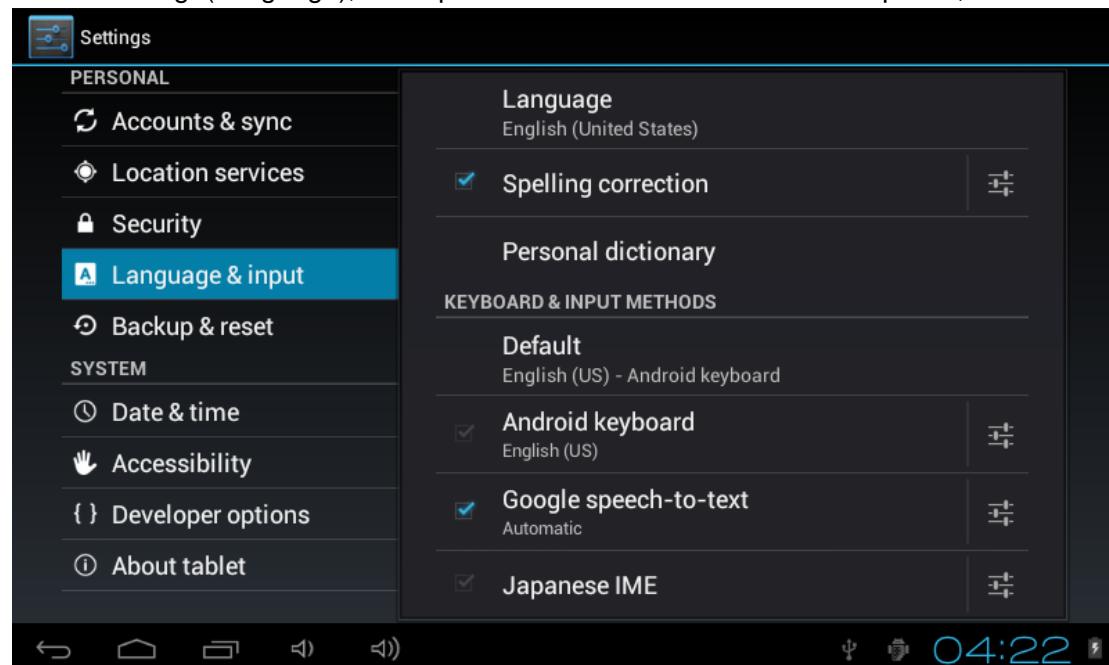


Select Language: 54 kinds of national languages are available

Remark: Android system can support 54 kinds of language, now manu interface just

support 14 kinds of language,
Android keyboard: Android keyboard setting
Sound on Key-press
Auto-capitalisation
Show suggestions: Display suggested words while typing
Auto-complete: Spacebar and punctuation automatically insert highlighted word

5.9. Date & time setting


Set date, set time, Select time zone and select date format

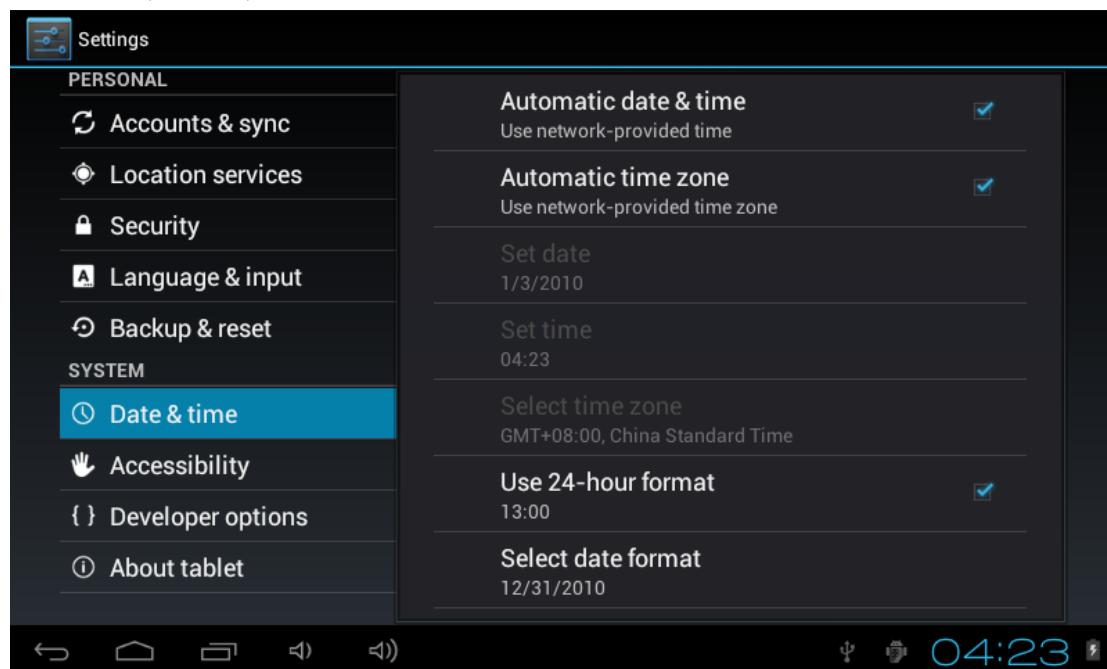

5.10 USB Mode Select

Choose USB work pattern: OTG/HOST/SLAVE.....

5.11 About tablet

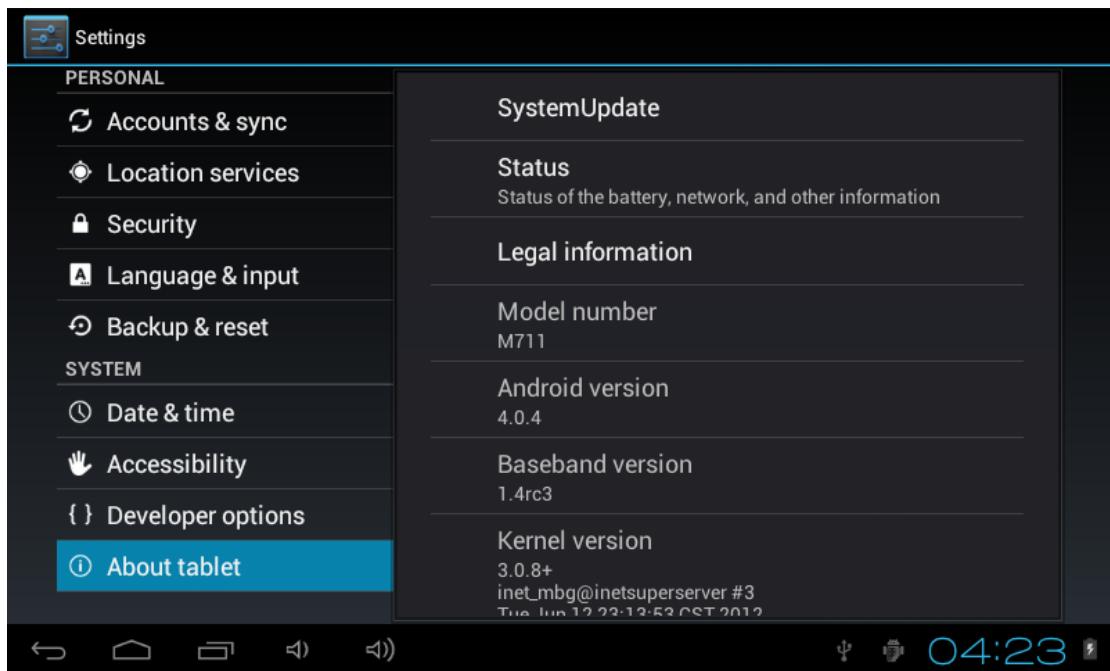

6. Apps Install and manage

6.1 App installer

This Tablet can support Android APP in market by third party, most Apps can install in the network, can copy to NAND FLASH or SD card.

Click Appinstaller icon, will appear Install, manage, Exit options.

Install: Click install, enter Apk install interface

Separately for Internal Memory disk and SD Card disk.

Selec the APK you would like to install,click it to install,go back to main menu,will display the installed app you just selected.

Remark: some 3rd APP must install properly by memory card,downloaded 3rd party app may not install properly on device.

Manage: click manage, enter third party interface

Click install icon, will enter Action interface

7. Problem solutions

7.1 Device can't open

1. Check the battery power
2. Connect adaptor first, then check again
3. After charging then can't open, pls contact with the supplier

7.2 After startup the screen or the opening picture has been appeard , the device appears shutdown

1. Power is not enough, please charge

7.3 Headset can't hear the voice

1. Pls check the volume whether set to 0
2. Check the music file whether damaged. Try playing other music, if the file have damaged may lead to serious noise or hop sounds.

Can copy file or paly music and so on

1. Pls check between computer and device is in correct connection
2. check the memory storage space was already full
3. check the USB cable is good or not
4. USB connection was disconnected

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

changes or modifications not expressly approved by the party responsible for compliance

could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC RF Radiation Exposure and SAR Statements SAR Statement The Archos 7 home tablet has been tested for body-worn Specific Absorption Rate (SAR) compliance. The FCC has established detailed SAR requirements and has established that these requirements. RF Exposure Information The radio module has been evaluated under FCC Bulletin OET 65C (01-01) and found to be compliant to the requirements as set forth in CFR 47 Sections, 2.1093, and 15.247 (b) (4) addressing RF Exposure from radio frequency devices. This model meets the applicable government requirements for exposure to radio frequency waves. The highest SAR level measured for this device was **0.334 W/kg.**