

PKAR

User Guide

Portable Karaoke Audio System (M7000)





For your safety, the information in this manual must be followed to prevent any personal injury or property damage.

Caution

1. Avoid dropping or applying strong impact on the unit.
It may cause malfunction or serious damage to the device.
2. Do not store or leave this device in places such as followings.
 - Places subject to high temperature (over 60℃)
 - Direct rays of sun or close to heater
 - Inside a car (especially during summer time)
 - Places with high humidity such as bathroom
 - Places subject to excessive dust
3. Do not press or apply excessive power on the LCD screen. It may cause malfunction of LCD or serious damage to the device.
4. Do not leave this device close to any card that uses magnetic strip, including credit card or prepaid subway pass. It may affect the magnetic and cause permanent damage to such cards.
5. The manufacturer is not responsible for any loss or damage and indemnification claims filed by any third party related to the use of this product.
6. The manufacturer is not responsible for any loss of recorded message caused by damages and repairs of product and any other reasons related to such loss.

For your safety

1. Do not disassemble or alter this device in any ways including any repair attempts.
2. In case of smoke coming out of the device or deformation caused by heat, please contact the A/S center.
3. Avoid using the device on an airplane or at any other places where the use of electronic devices are prohibited.
4. Avoid using the device while driving or walking. It may cause a serious accident.

Package contents

Package contents



Player



Stereo Earphone



Hand Strap



USB Cable



Neck Strap



Audio cable



Carrying Case




Antenna




Name of parts

- S** Shortly press button
- L** Press button and hold

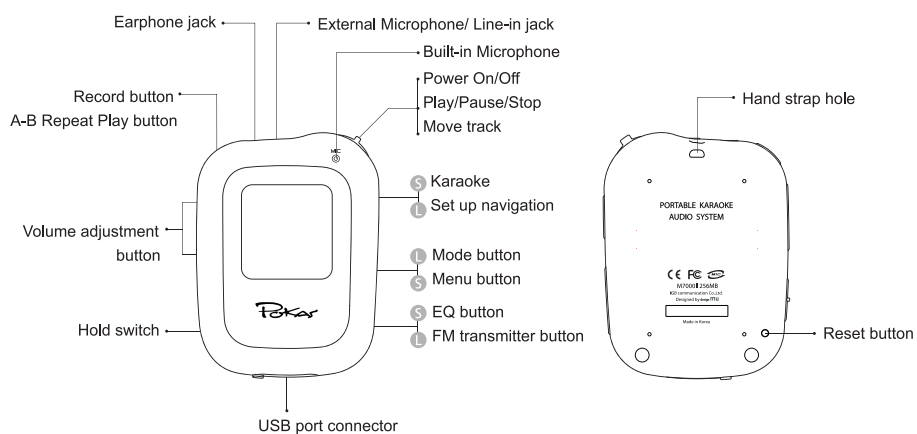




LCD

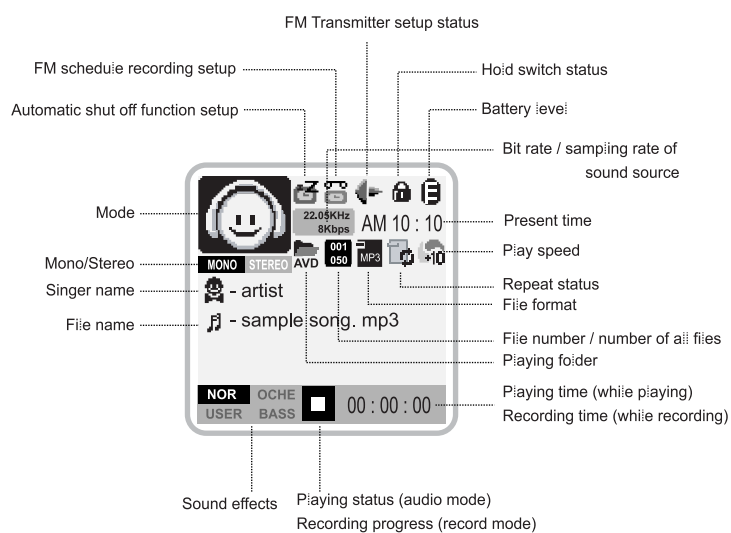



Power On

1. Press and hold jog button () for more than 2 seconds. Power turns on.

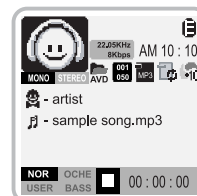

Power Off

Automatic shut off

1. Power turns off automatically when the unit is not in use for certain period of time in Pause or Stop in Audio or Recording Mode.- Auto power off

Manual shut off


1. Press and hold jog button () for more than 2 seconds in Pause or Stop in Audio or Recording or FM Mode.- Power turns off.



Setting up Hold function


To activate Hold function

- Slide the hold switch () towards the direction indicated by the arrow.
 - LCD screen will display blinking () icon to indicate the unit is locked.
 - Play button will not work while the Hold function is activated and unit is in lock position.

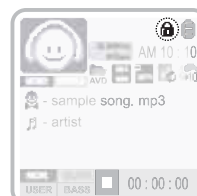

To deactivate Hold function




- Slide the hold switch () towards the opposite direction indicated by the arrow.
 - () icon on LCD screen will disappear and the unit is unlocked..

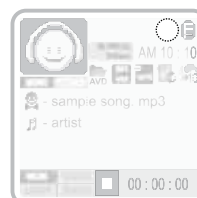



Changing Mode

1. Press and hold menu button () to switch mode
2. The mode changes to Audio mode, Record mode and FM mode in order.

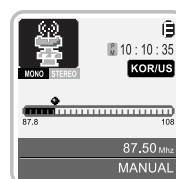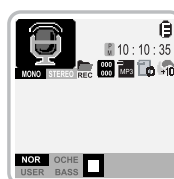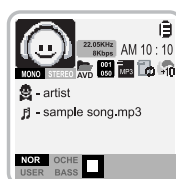

Adjusting Volume


1. Press volume button () to adjust volume.
 - Press volume up button (+) to increase the volume level
 - Press volume down button (-) to decrease the volume level






Play

1. Select folder/file to playback.

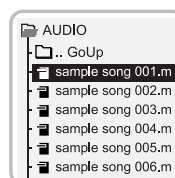

2. Press jog button ().
 - The selected file is played and the LCD screen will display playback, file information, file number, and play time.

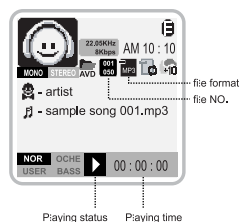

Pause


1. Shortly press jog button ().
 - The playback will be paused. Press () button again to resume playback.





Stop

1. During playback, press and hold () jog button.

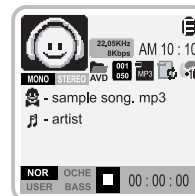


- Main directory consists of Audio / Record / FM folder.



Audio Mode : Play files in AUDIO folder.



Record Mode : Play files in RECORD folder.

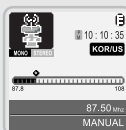

FM Mode : Play files in FM folder.