





Navigation

While in Audio, Record, or FM Mode


1. Press and hold () button.
- Folder/File directory of current mode is displayed.

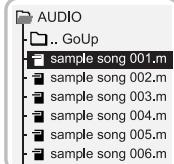

2. Press jog button towards ( . ) to move to desired folder/file, and then press () button.

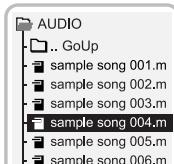

3. Select () folder to go back to root folder.

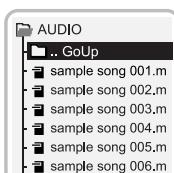




Erase file

While stopped in each mode.


1. Press and hold () button.
- Folder/File directory of current mode is displayed.

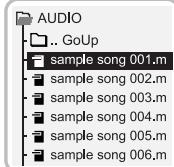

2. Press jog button towards ( . ) to access file or folder to be removed and press jog button ().
-The message "Are you sure" will be displayed.



3. Choose () to erase selected file.

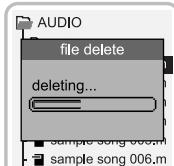



Moving and Searching files

1. During playback, shortly press jog button towards (**◀◀ . ▶▶**)
 - Current playback stops and the next (or previous) file starts to play.






Setting up Repeat Play function

This feature allows you to repeatedly play the whole or a specific section of a file. You can set up different sections for repeat play.

Repeat Play


While the unit is in Play/Pause/Stop in each mode.

1. Shortly press () button.
- Menu is displayed.

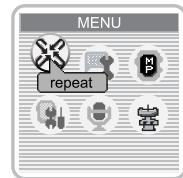

2. Select () icon.
- Sub menu is displayed.

	Continuously repeat the selected file
	Repeat the selected file only once
	Continuously repeat all the files in the selected folder
	Repeat all the files in the selected folder only once
	Continuously repeat all files
	Repeat all files only once
	Repeat all the files in the selected folder in random order
	Play only the beginning part of the selected file

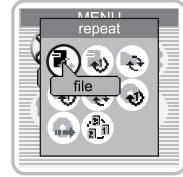

- Move to the previous menu after completing the set up.

3. Shortly press the () button.
- Move to each mode.




You can create your own Play List using the files stored in the device.


To make a play list

While stopped in Audio mode

1. Press and hold () button.
- Audio folder file directory is indicated.

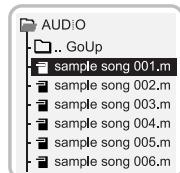


2. Press () button.
- PlayList selection is displayed on the LCD screen.

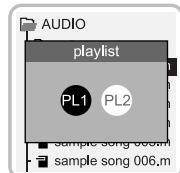

3. Select (, ) button.
- At this moment, file directory will appear on the upper part and play list will appear on the lower part of the screen.



4. Move to files that you would like to include in PlayList using () jog button.

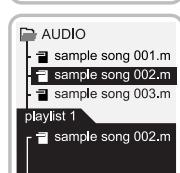

5. Select files using () button.
- A file name is created in PlayList appeared on the lower part of LCD screen.



6. Repeat step 4-5 to enter up to 64 files in the PlayList.

To play from the play list

After completing play list

1. Press the () button.
- Cursor moves to the play list on the bottom.



2. Press and hold () jog button.
- Plays from the play list.



Editing PlayList

Edit mode.

1. Press and hold () button, and then press () button.





2. Move to PlayList (**PL1** , **PL2**) you want to edit with (**<>**) jog button, and then press (**■**) jog button.

- At this moment, file directory will appear on the upper part and play list will appear on the lower part of the screen.



3. Press (**■**) button.

- Cursor moves to the play list and goes into edit mode.



Erase files

While in PlayList editing mode

1. Move to the file to be erased in the PlayList using (**<>**) jog button.
 - Please refer to page xx to learn about selecting a file.



2. Select a file by pressing (**VOLUME -**) button.
 - The selected file will be erased from the PlayList.





Changing the order of playback


While in PlayList editing mode.

1. Press jog button towards (\leftarrow . \rightarrow) to move to desired file.
2. Press (\square) jog button to select.
- A file icon appears
3. Move the icon to the desired spot using (\leftarrow . \rightarrow) jog button, and then make a selection by pressing (\square) jog button.
-The playback order of the PlayList is changed.





This sing-a-long feature allows you to mix voice and music, adjust octaves and playback. You can also set up caption, sync type and the number of lines in caption using this feature.

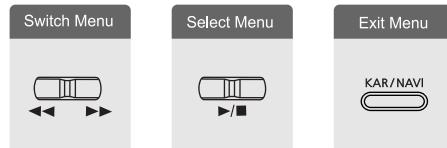

To setup Karaoke function

While in PLAY or STOP in Audio mode.

1. Press and hold () button.
- Menu will appear.



2. Select (), and then sub menu shows up.



3. Select ().
- When the setup is finished, move to the previous menu.



Allows user to customize EQ settings for different genre of music.

	For standard music
	For Classical music
	For Live effect
	For Pop music
	For Rock music
	For Jazz music



Allows user to customize EQ setting for personal preference (by adjusting 9 bands)



Surround and Middle-low sound / set between 4 levels of high-pitched tone

	Selecting one SURROUND / BASS / TREBLE
	Selecting one OFF / LOW / MID / HIGH



Allows user to set up surround effect
-OCHE3D can be used with E-Bass

	Enable surround effect
	Disable surround effect



Allows user to create middle-low base effect
- E-BASS can be used with OCHE3D

	Enable e middle-low base effect
	Disable middle-low base effect