


1.7 User Manual

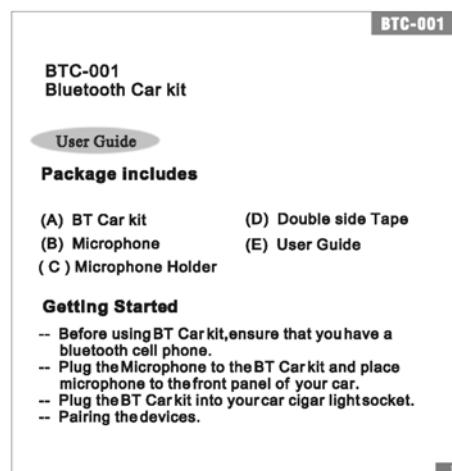



BTG-001

To pair the devices

- Turn on the Cellphone and place it within 10 feet apart from the BT Car kit.
- Initiate the Bluetooth device-pairing (discovery) feature on the Cellphone. Refer to the User Guide of your Cell phone to initiate this feature.
- Plug in the Car kit to your cigar lighter socket, a BI sound can be heard and blue LED will be flash.
- Push and hold the "Talk" button until the LED is turned off.
- Push and hold the "Talk" button for five seconds, blue/amber LED will be flashing and a pairing tone can be heard. The BT Car kit is in pairing mode.
- Follow the Cell phone prompts. Press the Tel button "0000" when prompted for the passkey (pass code/BTPIN). When pairing is completed, BT Car kit will be placed in standby mode. The amber LED will be off and the blue LED will flash. The BT Car kit is ready to receive calls.

3

BTG-001

Notes: Pairing is the process of linking the Car kit and Cell phone. After pairing, you can use the Car kit only with its paired Cell phone. Pairing process has to be repeated whether you use a new cell phone.

To Cancel Pairing Mode

- While in pairing, you can cancel the pairing by push and hold the "Talk" button for 4 seconds.
- LED will be turned off and you will hear an off tone.

To turn off the Car kit

- Push and hold the "Talk" button for 4 seconds, you can hear an off tone.

Make Calls

You can make a call either through your cell phone or directly through BT Car kit by using voice-dialing command. Voice dialing is supported by your Cell Phone.

To make Calls from your Cell Phone

- Press the dialing keypad of your Cell phone, the BT Car kit can be connected to the call automatically.

4

BTC-001

To make calls by voice Dialing
-- Press the "Talk" button of your BT Car kit to prompt your Cell phone.
-- Speak the name of the caller, the BT Car kit can be connected to the call automatically.

Receive Calls
-- Press the "Talk" button once after BT Car kit has rung. The call can be connected to your BT Car kit automatically.

Note:
-- Your Cell phone will ring when a call is coming. BT Car kit will ring a little bit delay as to recognize an incoming call.
-- You have to configure your cell phone to receive incoming calls directly to your BT Car kit. You should review the User Guide of the cell phone carefully how to initiate this feature. However, some cell phones may not necessary to configure.

5

BTC-001

End Calls
-- Press the "Talk" button of BT Car kit to disconnect a call.



Transfer Calls
-- Press the "Talk" button of the Cell phone during ringing, call can be transferred to your BT Car kit.


Adjust the Volume level
To increase the Volume
-- Press the "+" direction, the volume can be increased. Repeat the step until you have reach a desired level.

To decrease the Volume
-- Press the "Talk" button at the "-" direction, the volume can be decreased. Repeat the step until you have reach a desired level.

Mute the BT Car kit
To mute the microphone
-- Press and hold the "Talk" at "+/-" direction for 3 seconds, the microphone of BT Car kit can be muted.

6

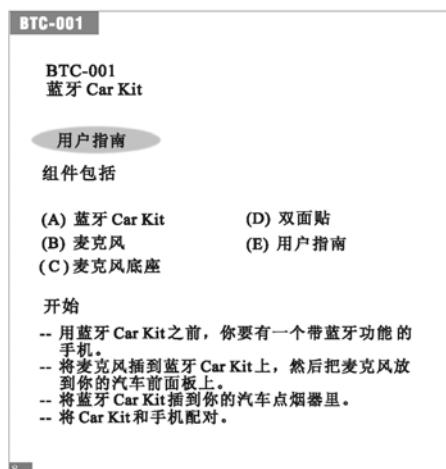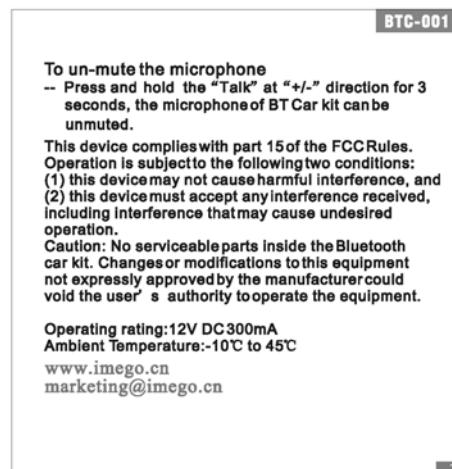

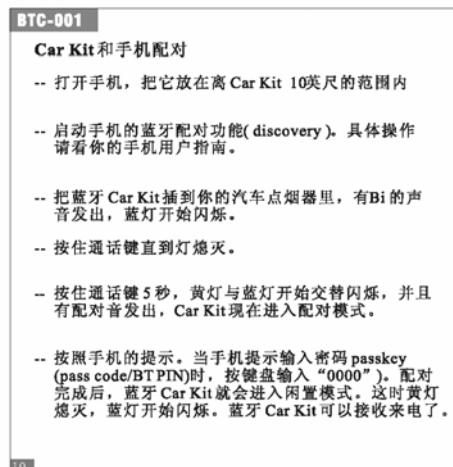

BTC-001

注意：配对就是把 Car Kit 和手机连接起来。配完对后，Car Kit 只能和配了对的手机一起使用。如果你用一个新手机的话，你需要重新配对。

退出配对模式
- 配对时，按住通话键 4 秒可退出配对。
- 灯熄灭，能听到一声退出音。

关掉 Car Kit
- 按住通话键 4 秒，能听到一声退出音。

打电话
你可用手机拨号或直接用 Car Kit 以语音拨号，条件是你的手机支持拨号功能。

手机拨号
- 用手机拨打电话，蓝牙 Car Kit 能自动和电话接通。

11

BTC-001

语音拨号
- 按下你的 Car Kit 上的通话键给手机提示。
- 说出被呼叫者的姓名，蓝牙 Car Kit 能自动和电话接通。

接听来电
- Car Kit 响铃时按通话键。蓝牙 Car Kit 便可以自动接听来电了。

注意：
- 来电时你的手机会响铃。蓝牙 Car Kit 响铃会稍微有点延迟。
- 你需要设置你的手机使它直接把来电转到 Car Kit 上。具体操作请看你的手机用户指南。但是有些手机可能不需要设置。

12

BTC-001

挂机
-- 按下 Car Kit 的通话键挂机。

转接来电
-- 手机响铃时，按下 Car Kit 的通话键，来电就会转接到 Car Kit 上。

调节音量
增加音量
-- 拨通话键上的 '+' 方向，音量就会增加，重复此操作，以达到你满意的音量。

减小音量
-- 拨通话键上的 '-' 方向，音量就会减小，重复此操作，以达到你满意的音量。

蓝牙 Car Kit 静音
麦克风静音
-- 按住通话键的 '+/-' 方向三秒，Car Kit 的麦克风就会被静音。

13

BTC-001

解除静音
-- 按住通话键的 '+/-' 方向三秒，Car Kit 的麦克风就会解除静音。

这个设备遵守了FCC条例里，第十五部分。设备的运作被以下两个条例所支配：
(1)这个设备不可造成有害的干扰，和
(2)这个设备必须接受任何收到的干扰，包括可能造成不良运作的干扰。
警告：不耐用的部分放在Car kit里面。没有批准的更改或变动可能会导致使用者操作装备的权利无效。

额定操作：12V DC 300mA
环境温度：-10°C to 45°C

www.imego.cn
marketing@imego.cn

14

机身体号

BTC-001	
保 证 卡	
购买商户:	<input type="text"/>
批发商户:	<input type="text"/>
购买日期:	<input type="text"/>
机身编号:	<input type="text"/>
用 户 资 料	
姓名:	<input type="text"/>
联络电话:	<input type="text"/>
地址:	<input type="text"/>
网址:	<input type="text"/>

Log NO.:

BTC-001	
Warranty Card	
Retail dealer:	<input type="text"/>
Sale agent:	<input type="text"/>
Date of purchase:	<input type="text"/>
Log number:	<input type="text"/>
User Reference	
Name:	<input type="text"/>
Telephone No.:	<input type="text"/>
Address:	<input type="text"/>
E-MAIL:	<input type="text"/>