

## INSTRUCTION MANUAL

### Ovale Wireless Docking Speaker

Model: OVD270/US

#### FEATURES

- iPod/iPhone/iPad Dock Play Mode
- Wireless Bluetooth Play Mode
- FM Radio Play Mode (20 station presets available)
- Aux In Play Mode(3.5mm Audio Cable included)
- Full featured remote control
- Stereo Sound System
- 2-Level Dynamic Bass Boost
- 5 Band Equalizer
- LED Display Screen with 4-level brightness settings
- Digital Clock Display – 12/ 24 hour display screen
- Alarm Clock with choice of waking up to music, buzzer or FM radio
- Gentle Wake Alarm – Alarm volume gradually increases when activated

#### IMPORTANT SAFETY NOTES

**WARNING--READ AND SAVE THESE OPERATING AND SAFETY INSTRUCTIONS BEFORE USING THIS PRODUCT.**

The user of electrical products may create hazards that include, but are not limited to injury, fire, electrical shock. These instructions are intended to provide you with important information. When using electrical products, basic precautions should always be followed to reduce risk of hazards.


1. **WARNING:** Read all instructions before using this product.
2. **WARNING:** To reduce the risk of electric shock, unplug the Ovale™ Wireless Docking Speaker from the AC electrical socket before attempting any cleaning.
3. **WARNING:** DO NOT allow children to handle or operate this product.
4. **WARNING:** Do NOT attempt to power or operate this product if the AC Power Adapter, cords or any part of the Ovale™ Wireless Docking Speaker is damaged or corroded.
5. **WARNING:** DO NOT store, power or operate the Ovale™, the Remote Control or any parts in close proximity to combustible or flammable materials.

6. **WARNING:** Store the Ovale™, the Remote Control and any parts at room temperature or cool temperatures. DO NOT store in a room with very hot temperatures, or under direct sunlight.
7. **WARNING:** DO NOT immerse the Ovale™, the Remote Control or any parts in water or any liquid.
8. **WARNING:** DO NOT attempt to open any fixed parts or disassemble the Ovale™, the Remote Control or any parts as it may expose you to dangerous electric shock. Do not insert foreign object into the this product.
9. **WARNING:** Listening to LOUD sounds or listening to this speaker at very high volumes may impair or damage hearing.
10. **WARNING:** To reduce the risk of electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that objects filled with liquids, such as vases, shall not be placed on apparatus.
11. **WARNING:** The direct plug-in adapter is used as disconnect device, the disconnect device shall remain readily operable.
12. Correct Disposal of this product. This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.
13. Use only power supplies listed in the user instructions.

#### OVERVIEW OF OVALE™ MAIN UNIT



## OVERVIEW OF THE REMOTE CONTROL

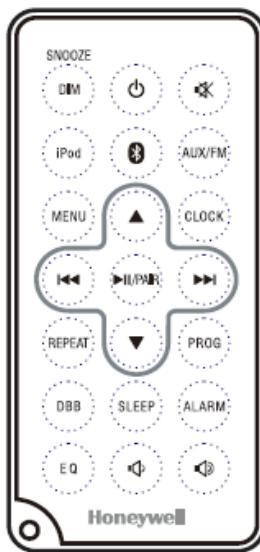

**ON/OFF** – Power On/ Off

**DIM/SNOOZE:** Press to adjust brightness of the LED Display Screen in Standby Mode/ Press to activate the “SNOOZE” function when Alarm is activated.

**MUTE** – Press to Mute or silence all sounds.

**iPod** – Press to connect Ovale™ to your iPod/ iPhone/ iPad in the “iPod” Play Mode.

 - Press to select the Bluetooth Play Mode.

**MENU** – Press to select the previous menu screen on your iPod/ iPhone/ iPad.

**CLOCK** – Press and hold to manually set the time.

**REPEAT** – Press to set Ovale™ to REPEAT the current song on your iPhone/iPod/iPad or connected Bluetooth device.

**PROG** – The PROG Button on the Remote Control is used to manually preset your favorite FM radio stations.

**DBB** – Select Dynamic Bass Boost sound enhancement on/off.

**SLEEP** – Press to activate Sleep Timer.

**ALARM** – Activates manual alarm setting program.

**EQ** – Press to select a preferred digital sound profile.

**▲ and ▼** - Volume Down/ Volume Up, Preset Radio Station selection, menu selection.

**◀◀/▶▶** - Music selection/ Radio Station Selection

**▶||/PAIR** – Play and Pause in iPod/iPhone/iPad & Wireless Bluetooth Play Modes/ Press and hold to enter the Bluetooth pairing play mode.

 - Volume Down.

 - Volume Up.

## SPECIFICATIONS

### Speaker:


- Output Power: 20W RMS
- Frequency Response: 20Hz-20KHz
- Signal to Noise Ratio: 69dB
- Sound Enhancement: 2-Level Dynamic Bass Boost
- 5 Band Equalizer: DSC-Flat, Pop, Rock, Jazz, Classic
- Aux In: Yes

### iPod/ iPhone/ iPad Dock:

- Type: Lightning Dock

Input

### iPhone/ iPad Compatibility:

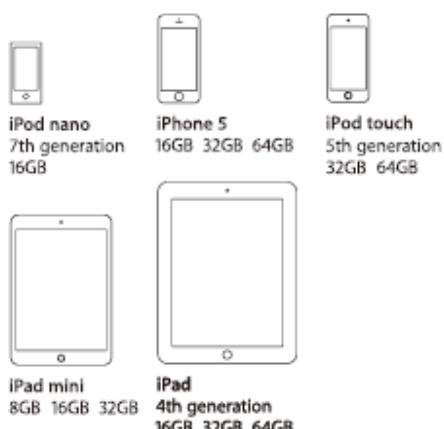

iPod touch  
5th generation  
32GB 64GB

iPad  
4th generation  
16GB 32GB 64GB

### Wireless Bluetooth:

- Bluetooth Version: 2.1
- Bluetooth Profiles: A2DP, AVRCP, SPP
- Bluetooth Wireless Range: 10m or 30FT.

### FM Radio

- Tuning Range: 87.5-108
- Tuning Grid: 50kHz
- Sensitivity: <22dBu
- Search Selectivity: <30dBm
- Total Harmonic Distortion: <1%
- Signal to Noise Ratio: 69dB

### General Specifications:


- AC Power Adapter: HK-AX-120A200-CP
  - Input: 100-240V 50/60Hz 0.8A
  - Output: 12V 2.0A
- Operation Power Consumption: 32W
- Standby Power Consumption: <1W

- Main Unit Dimensions (WxHxD): 298 x 114 x 98mm / 11.73" x 4.49" x 3.86"
- Main Unit Weight: 1.25Kg

4. Press the ▲ and ▼ Button again to select the Hour time setting. The Hour digits will blink while you select the correct Hour digit. Press the CLOCK Button to confirm.
5. When the Hour digit has been set, press the ▲ and ▼ Button again to select the Minute setting. The Minute digits will blink while you select the correct Minute digit. Press the
6. CLOCK Button to confirm.

## SET UP

### Connect Power

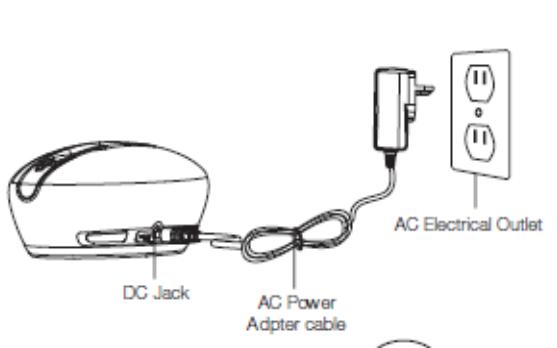

1. Connect the AC Power Adapter cable into the DC Jack on the back-side of the Ovale™ Wireless Docking Speaker.
2. Plug the AC Power Adapter into an available AC Electrical Outlet.
3. Press the  Button to turn ON the Ovale™ Wireless Docking Speaker. The LED Display Screen will switch ON.
- 4.

### For Adapter

Model No :HK-AX-120A200-CP  
Manufacturers:HON-KWANG ELECTRIC(SHENZHEN)CO.LTD

### Set Clock Time by remote control



1. Make sure Ovale™ is in Standby Mode, or switch to Standby Mode by pressing and holding the  function button for 2 seconds until the Display Screen shows the clock time.
2. Press and hold the CLOCK Button on the Remote Control for about 2 seconds.
3. Press the ▲ and ▼ Button on the Remote Control to select a 12 or 24 Hour display format. Press the CLOCK Button to confirm.

### Set Clock by main unit

1. Make sure Ovale™ is in Standby Mode, or switch to Standby Mode by pressing and holding the function  button for 2 seconds until the Display Screen shows the clock time.
2. Press and hold key '-' for 2 second, 24H will blink on the display, then press '+' to select 12 or 24 Hours display format. Press '-' to confirm.
3. Press the key '+' to select hours, then press '-' to confirm. Again, press key '+' to select minutes, then press key '-' to confirm.

### Power On/ Standby Mode

1. Press the  Button to switch ON the Ovale™ Wireless Docking Speaker. The speaker and the LED Display Screen will automatically switch to the last selected Play Mode.
2. Press hold the button  for 2 seconds to switch the speaker to a Standby Mode. In Standby Mode, the entire unit switches off and only the clock time will appear on the LED Display Screen.

**IMPORTANT:** Unplug the AC Power Adapter to completely switch off the speaker and Clock Display Screen. All Clock, Alarm Clock and Radio Station Preset Channels will be forgotten and must be reset upon reconnecting the power to the speaker.

### Sleep Timer

The Ovale™ can switch to Standby Mode automatically after a set period of time.

1. Press the SLEEP Button repeatedly on the Remote Control to select a period of time before the Ovale™ switches to Standby Mode. Choose from 90, 60, 30 or 15 minutes.
2. After choosing the Sleep Mode time, the LED Display Screen will display '.' on the top-left corner. This indicates that the Sleep Timer is activated and the Ovale™ will automatically switch to a Standby mode within the set period of time.

**IMPORTANT:** After the Ovale™ switches to Standby Mode, the Sleep Timer is deactivated and must be reset again the next time you wish to set a Sleep Timer.

## LED Display Brightness

Make sure the Ovale™ is switched to Standby Mode. Set the brightness level of the LED Display by pressing the DIM Button on the Remote Control. Press repeatedly until you reach the desired brightness. There are 4 different brightness levels to choose from.


## PLAY

Press the  Button to select one of four Play Modes:

- **iPod/iPhone/iPad Dock Play Mode**
- **Wireless Bluetooth Play Mode**
- **FM Radio Play Mode**
- **Aux In Play Mode**

## iPod/ iPhone/ iPad DOCK PLAY MODE

Play from an iPod/iPhone/iPad.

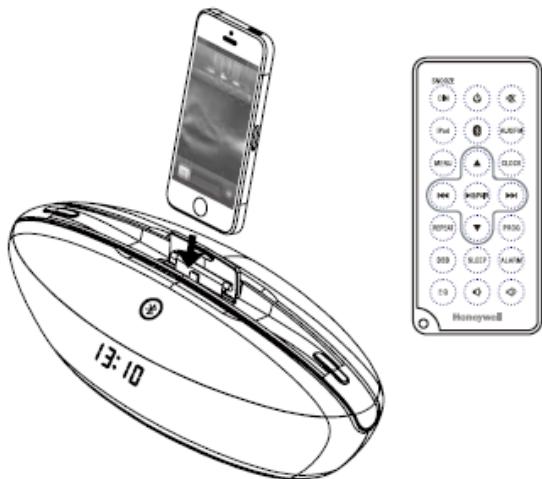

1. Gently place the iPhone/ iPod/ iPad into the Lightning Dock Connector on the speaker.
2. Press the  Button repeatedly until you see "iPod" displayed on the LED Display Screen.
3. The connected iPod/ iPhone/ iPad plays automatically, or press the  button on your device, or on the Remote Control to play music.
4. To pause/ resume play, press .
5. To skip a track, press .

6. To search during play, press and hold


, then release to resume normal play.

## Charging the iPod/ iPhone/ iPad

When the speaker is connected to power, the docked iPod/ iPhone/ iPad begins to charge and continues to charge until the iPod/ iPhone/ iPad is disconnected from the speaker.

## WIRELESS BLUETOOTH PLAY MODE

Play wirelessly from a Bluetooth device.

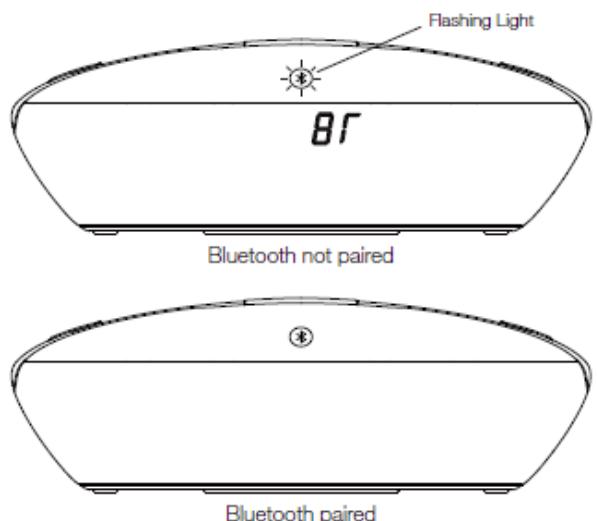

1. Go to Bluetooth Play mode by pressing the  Button until you see  on the LED Display Screen. The  Button will flash while Ovale™ is trying to pair with a Bluetooth device.
2. Go to the Bluetooth® settings on your smartphone, tablet, computer or other Bluetooth device. Search and connect to "Ovale Speaker".
3. The  Button will stop flashing when your Bluetooth device has been paired successfully.
4. Unpair the Bluetooth® device when you want to pair with a new device.

## Repeat the Current Song


You can choose to repeat the current song being played during iPod/iPhone/iPad Dock Play Mode or Wireless Bluetooth Play Mode, by pressing the REPEAT Button on the Remote Control. Press again to deactivate the REPEAT function, so that the next song can be played. 'AEP' will display on the screen for 2 sec.

2. Press the **▲** or **▼** Button on the Remote Control to select the Preset Program number that you want to preset a radio station for (from 1 to 20).

3. Press the **◀◀◀▶▶▶** Button on the Remote Control to select the FM radio station that you wish to preset in the chosen Preset Program that you chose in Step 3.
4. When you have reached the preferred station, press the **PROG** Button once. This will automatically program that radio station in the chosen Preset Program.
5. Repeat Steps 1 to 5 for any other radio stations you want to preset. You can preset up to 20 radio stations.
6. To overwrite a programmed radio station, simply store another radio station in the particular Preset Program you wish to replace, using Steps 1 to 5 above.

### Selecting & Listening to a Preset Radio Station

After successfully presetting a number of Preset Programs in the FM Radio Play Mode, you can select your preset stations on the main unit or using the Remote Control:

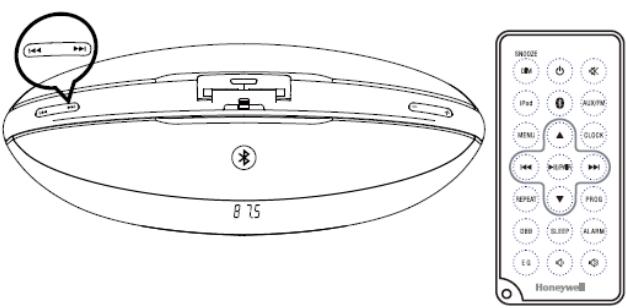

1. Go to the FM Radio Play Mode by pressing the **Bluetooth** Button until you see a radio channel number (E.g. "87.5") on the LED Display Screen.
2. In this mode, press the **◀◀◀▶▶▶** Button on the Ovale™ or the Remote Control to search and choose an FM Radio Station to listen to.

### Programming Radio Stations Automatically

1. Press and hold the "PROG" Button located on the Remote Control for more than 2 seconds. "AUTO" will display on the LED Display Screen.
2. Ovale™ will automatically search for available radio stations and program them in the order of waveband reception strength.
3. The first programmed radio station will broadcast automatically upon completion of auto-programming.
4. Go to the User Manual section titled "Presetting Radio Stations" to learn how to preset up to 20 FM Radio Stations.

### Programming Radio Stations Manually

The PROG Button on the Remote Control is used to manually preset your favorite FM radio stations in the FM Radio Play Mode. You can program up to 20 preset radio stations.

1. Press the PROG Button on the Remote Control once. The LED Display Screen will display a number from "P01", "P02" to "P20". "P01" represents "Preset Program 1" and "P02" represents "Preset Program 2" and so on.

1. On the main unit, press the **◀◀◀▶▶▶** Button once and the LED Display Screen will display a Preset Station Program from "P01" to "P20" (usually the last used Preset Station Program will display first). Press **◀◀◀▶▶▶** repeatedly until you reach the Preset Program number you want to listen to\*.

\*If at anytime you wish to select a radio station that is not a preset program, simply press the **◀◀◀▶▶▶** Button on the main unit for 2 seconds or more, to activate the auto-search function to automatically search for the next available radio station. After landing on the first auto searched radio station, press the **◀◀◀▶▶▶** Button again to revert back to manually selecting any radio station.

2. On the Remote Control, press the **▲** or **▼** to select the Preset Program\*.

\*If at any time you wish to select a radio station that is not a preset program, simply press the **◀◀◀▶▶▶** Button on the Remote Control to manually select any radio station.


### Radio Reception

Only FM Radio Stations can be received on this Ovale™. Sometime radio reception can be unclear. For optimal radio reception, adjust and extend the radio antenna located at the back side of the Ovale™.

**IMPORTANT:** It is recommended to position the Ovale™ radio antenna away from other radio receiving devices that can cause interference with radio reception, such as a TV, VCR or other radio player.

## AUX IN PLAY MODE

Play from an MP3 player or other external audio device using the 3.5mm Audio Plug & Cable (included).

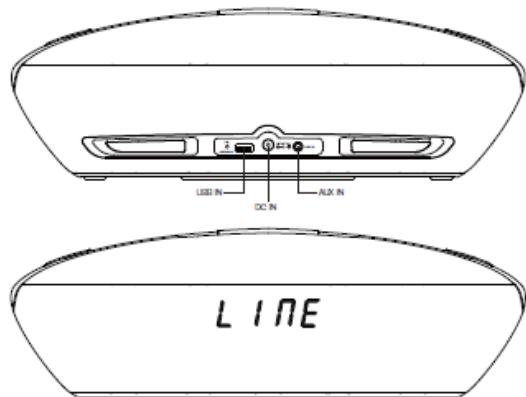

1. Connect the 3.5mm Audio Plug into the AUX IN Jack on the back-side of the Ovale™.
2. Plug the otherend of the 3.5mm Audio Plug into your device.
3. Play the device by following the Play instructions on your audio device or device user manual.

## SPEAKER & SOUND PROFILES

### Adjusting the Volume of Sounds

In any Play Mode, press the or Button on the Remote Control or, press the + or – Button on the Ovale™ main unit to reduce or increase the volume of the speakers.

**WARNING: Listening to music or sounds at very high volume levels can damage hearing. It is recommended to listen to Ovale™ at moderate and comfortable volume levels that will not impair or damage hearing.**

### Muting Sounds

At anytime you may press the MUTE Button on the Remote Control to silence all sounds being played in any of the four Play Modes above.

### Digital Sound Profile

Press the EQ Button on the Remote Control to select the digital sound equalizer profile you prefer. Press repeatedly until you reach the desired profile. Choose from one out of 5 equalizer profiles:

1. FLAT
2. POP
3. ROCK
4. JAZZ
5. CLASSIC

### Dynamic Bass Boost Sound Enhancement

The Dynamic Bass Boost (DBB) Button allows you to enhance the bass sounds of the speaker. Press the DBB Button on the Remote Control to switch on or off the Dynamic Bass Boost.

## Alarm Clock

### Setting Up the Alarm Clock



1. Press and hold the ALARM Button on the Remote Control for about 2 seconds.
2. Press the and Button to select the alarm type:
  - TUN (to wake to your selected FM Radio channel)
  - iPod (to wake to your iPhone/ iPod/ iPad music)
  - Buzz (to wake to a buzzer sound)Press the ALARM Button to confirm the alarm type.
3. Press the and Button to select the volume of the alarm. Press the ALARM Button to confirm the volume setting.
4. Press the and Button to select the Hour time setting for the ALARM. Press the ALARM Button to confirm the Hour setting.
5. Repeat Step 4 to set the Minute time setting.
6. ALARM is now set up.
7. Press the ALARM Button once to activate the set alarm. The Alarm Indicator Light on the LED Display Screen will turn ON to indicate the ALARM is activated.

### Deactivating the Set Alarm Clock

Press the ALARM button on the Remote Control to deactivate the alarm at any time. The Alarm Indicator Light will switch off to indicate that the Alarm has been deactivated and will NOT switch On again.

### Setting up a Music Playlist for iPod Alarm Type

If you have chosen the iPod alarm type to wake up to music from your iPod/ iPhone/ iPad, the alarm will automatically start playing from the last played music track from your iPod/ iPhone/ iPad. If you wish to wake up to songs from a selected play list, you need to create a new playlist using iTunes and copy the song tracks that you wish to set as your alarm music play list.

### Gentle Wake

Each alarm type is set to activate with Gentle Wake. Gentle Wake means each alarm will gradually increase in volume, for a more comfortable start to your day.

- If you have selected the TUN (FM Radio) or iPod (iPod/ iPhone/ iPad playlist) alarm types, the radio/music alarm volume will gradually increase in a few seconds of alarm activation.
- If you have selected the Buzzer alarm type, the buzzer beep sound will increase in volume after 2~3 seconds.

### Alarm Snooze Mode/ Alarm Stop Mode

When the alarm is activated, you can press the  Button on the Ovale™ main unit or the "SNOOZE" Button on the Remote Control at any time to activate the Snooze Mode. In Snooze Mode, the alarm will switch off temporarily for about 7 minutes. After 7 minutes, the alarm will reactivate again.

To stop the alarm for the current alarm session, press the

 Button for over 3 seconds. This will switch off the alarm until 24 hours later, or until the next set alarm time.

**IMPORTANT:** The alarm stops but the alarm settings remain and so the alarm will reactivate after 24 hours, or until the next set alarm time. You must deactivate the Alarm by pressing the ALARM Button on the Remote Control to switch off the Alarm indicator light on the LED Display Panel in order to completely deactivate the alarm, to stop the alarm from reactivating again.

### REPLACING THE REMOTE CONTROL BATTERY

The Remote Control is powered by 1 x CR2025 Button Cell Battery. When the power has been used up in the Remote Control Battery, you may replace the battery by following these instructions:

1. Locate the Battery Door located on the Remote Control.
2. There is a Lock/ Hinge mechanism on the Battery Door to secure it from opening while using the Remote Control. To open the Battery Door Lock, use one finger to push the Hinge from Right to Left side.
3. While pushing this Hinge, use your finger from the other hand to slide the Battery Door out of the Remote Control body.

4. The Battery Door should slide out easily to expose the Battery Tray holding the CR2025 Battery.
5. Remove the old Battery and replace with a new CR2025 Battery. Make sure to insert the battery with the correct polarity by observing the polarity instructions on the Remote Control.
6. When the new Battery has been inserted correctly into the Battery Tray, slide the Battery Door back into the Remote Control body until it is locked back into place.

### BATTERY PRECAUTIONS

**WARNING:** If there is a leakage from the CR2025 Battery, wipeaway the leakage inside the Battery Tray and replace the batterywith a new CR2025 Battery.

**WARNING:** If there is a leakage from the CR2025 Battery, removethe battery from the device and dispose of battery in the trash.Immediately wash any exposed body surfaces, clothing, orfurniture with soap and water. If contact with eyes or mouthoccurs, flush with clean water immediately and seek immediate medical assistance.

**WARNING:** Do not use any different type or size of battery otherthan a CR2025 Battery.

#### Caution

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

**WARNING:** Do not heat or disassemble battery. Never throw thebattery in fire or water.

**WARNING:** Do not carry or store batteries with other metallic objects. Doing so could cause batteries to short circuit, leak orexplode.

**WARNING:** Never recharge the CR2025 Battery.

**WARNING** The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like

### FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules.Operation is subject to the following two conditions:
  - (1) This device may not cause harmful interference.
  - (2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**RF warning statement:**

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

wear and tear will not be considered manufacturing defects under this warranty.

**[COMPANY]** IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an applied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you also may have other rights which vary from jurisdiction to jurisdiction. This warranty applies only to the original purchaser of this product from the original date of purchase.

B. At its option, **[COMPANY]** will repair or replace this product if it is found to be defective in material or workmanship.

C. This warranty does not cover damage resulting from any unauthorized attempts to repair or from any use not in accordance with the instruction manual.

D. If you believe this product to be suffering from a manufacturing fault please return it to the original place of purchase. It is at the sole discretion of the service agent there to first observe and evaluate the product sent for repair to establish if the defect is covered by warranty.

All warranty requests must be accompanied by a proof of purchase, which is a copy of the original receipt. Failure to provide such proof will void the product's warranty.

Model: **OVD270/US**

Date of Purchase: \_\_\_\_\_

Purchased from: \_\_\_\_\_

Further information can be made by contacting the below Customer Care Centre:

**CUSTOMER CARE**

[COMPANY]

[ADDRESS]

Email:

Telephone:

## 1-YEAR LIMITED WARRANTY

**Read all the instructions before attempting to use this product.**

A. This 1 year limited warranty applies to repair or replacement product found to be defective in material or workmanship. This warranty does not apply to any damage resulting from commercial, abusive, unreasonable use or supplemental damage. Defects that are the result of normal