

# Haier MobilePhone-UserManual

**Model:HM-C300**

## **Basic Functions**

### **Switching On/Off**

In the power off status, long press the **Power Key** to switch on the phone.

In the power on status, long press the **Power Key** to switch off the phone.

### **Making phone call**

Making phone call by dialing number

1. In the standby mode, enter the phone number you want to dial, press the Dial key and select SIM 1or SIM2 to make the call.
2. To end the call, press the End Key.

### **Answering the call**

Answer or reject an incoming call

1. To answer the call, press the Dial key or Left soft key.
2. To reject the call, press the End key or Right soft key.

## **1 Phonebook**

You can store names and phone numbers in the phone and the SIM 1/2 card memory

## **2 Message**

### **The messages defined in the desktop location**

Your phone is capable of creating, sending and receiving text and multimedia messages. On message edit screen, you can edit recipients and message contents

## **3 Call center**

### **Call logs**

You can enter the menu to check missed calls, dialed calls, received calls and rejected calls. You can also select Delete all to clear all call logs.

### **Call settings**

You can set call settings.

## **4 File Manager**

In the menu you can manage your resource files on the SD card.

## **5 Camera**

You can take photos and then save the photos to your memory card.

In the viewfinder, press left soft key to enter and complete different kinds of operations.

You also can switch between camera and video recorder.

## 6 Haier Apps

Enclosed is the haier customer calls and commonly used haier applications

## 7 FM radio

You can play the FM radio with this application.

## 8 Organizr

### **Calculator**

Use this menu to perform basic arithmetic functions, such as addition, subtraction, multiplication, and

### **Bluetooth**

After the bluetooth connected to the equipment matching, it can support bluetooth headset to listen to music, make a phone call and transfer files

### **Calendar**

Once you enter this menu, there is a monthly-view calendar for you to refer to.

### **Alarm**

Use this menu to set alarms.

## **Torch**

Turn on/off the torch as per your need. In idle screen, long key press OK key to activate/deactivate the torch light.

# **9 Settings**

## **Profiles**

Your phone provides you with various profiles. You can customize the ringtone and other settings for profile depending on the environment and need. You can activate or deactivate a profile

## **Phone settings**

To set parameters related to phone, such as time and date, language, Screen power on/off, Display, Dedicated keys, Misc. settings etc.

## **Security settings**

You can set SIM1/2 security and phone security, the phone initial password is 1234.

## **Network settings**

The network parameters associated Settings

## **Dual SIM settings**

Can be arbitrary switching between single and double card or flight mode

## **Connectivity**

Data connection options

**Restore factory settings**

Input default password 0000 to restore factory settings.

## **10 Multimedia**

**Image viewer**

Enter this menu, you can view pictures

**Video recorder**

You can record videos and then save the videos to your memory card.

In the viewfinder, press left soft key to enter and complete different kinds of operations.

You also can switch between video recorder and camera.

**Video player**

You can play the video with this application. In the video play list interface, you can select the video from the list to play

**Audio player**

You can play the music with this application. In the music play interface, you can select the music from the List to play.



#### Notice:

Listen to music at a moderate level. Listening to high volume music may damage your hearing.

---

#### **Sound recorder**

You can use this function to record audio files.

.

## **11 Games**

Have a Sky Gift for you to play game.

.

## **12 Services**

This function enables you to view the internet. You can start to view only by starting corresponding way.

Note: Consulting the local network operator for related fee and specific setup.

## 14 Other instructions

### Battery warnings

1. Use only the specified battery charger.
2. To prevent injury or burns, do not let metal objects contact or short-circuit the battery connectors.
3. Do not throw the battery in fire, it has the threat of explosion.

### Care and Maintain

If your mobile phone had abnormal conditions, please check it with the following table. If the problem still remains, please ask mobile phone sales for help.

Common problems	Check item
Can not charge	*Please check if the charger is properly connected to the phone and the power source jack.
Can not power on	Please check if the battery level is too low; Please check if the batter is properly loaded; Please press Power Key enough time.



Common problems	Check item
Insert the SIM card but cannot read the information in the SIM card	Please check if properly inserted the SIM card; Please check if your SIM card is valid.
The mobile phone displays "Input PUK Code"	Please communicate with the service provider to get the PUK code and use it to unlock.
Can not make phone call	Please check if the phone number is valid. Please check if you are in service area.
Weak talk quality	Please check if the phone signal is strong enough; If you are in the building, please move the phone or move near the window.
The contact can not get your voice when making phone call	Please check if your microphone has blocked by fittings or other blocks.
Receiver sound is too low	Please check if your receiver volume has been adjusted to the maximum.
The mobile phone has a weak receive signal or usually drop in the phone call	Please check if the phone has a strong signal. If no signal, please use it in a strong signal place.

Common problems	Check item
The screen display the information such as “No Service” or: Searching...”	<p>Please check if you are in a weak signal area (in the channel or surround by buildings), change the area and retry.</p> <p>Please check if you can try to get the services without the service provider permission. If needed the service, please contact the service provider for more information.</p>

### Packing list

No	Content	Quantity/unit
1	Handset	1pcs
2	Battery	1pcs
3	Travel Charger	1pcs
4	User Manual	1pcs
5	Warranty Card	1pcs

**FCC Caution:** Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

**NOTE:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions,

may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**FCC ID: SG7201802C300**

Specific Absorption Rate (SAR) information:

This Mobile Phone meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

FCC RF Exposure Information and Statement The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: HM-C300(C300) (FCC ID: SG7201802C300) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 0.608W/kg and when properly worn on the body is 1.316W/kg. This device was tested for typical body-worn operations with the back of the handset kept 0mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 10mm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

#### Body-worn Operation

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 10mm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.