

SAFETY PRECAUTIONS

FCC INFORMATION

Warning: Modifying, tampering and adjustment to this unit or replacement of any transmitter component (crystal, semiconductor, etc.) to this unit that could result in a violation of the rules.

FCC NOTICE

This wireless microphone system complies with Part 90 of FCC Rules. There are two frequencies available for the system. You must get a licence for each frequency you plan to use before you use the system (one license can include both frequencies).

Please look for this website <http://wireless.fcc.gov/uls/> to apply the licence or phone to the nearest FCC offices and contact them to get the necessary application. Licensibility depends on how you will use the system.

For RF exposure

"IMPORTANT NOTE: To comply with the FCC RF exposure compliance requirements, no change to the antenna or the device is permitted. Any change to the antenna or the device could result in the system exceeding the RF exposure requirements."

SAFETY INFORMATION

Your wireless microphone contains a low power transmitter. When the EUT is power on and it sends out radio frequency (RF) signals. In August 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for wireless devices.

IMPORTANT

To maintain compliance with the FCC's RF exposure guidelines hold the transmitter and antenna at least 1 inch (2.5 centimetres) from your face and speak in a normal voice, with the antenna pointed up and away from the face. Ensure that the antenna is at least 1 inch (2.5 centimetres) from your body when you using your wireless microphone.

Use only the supplied antenna. Unauthorised antennas, modifications, or attachments could damage the transmitter and may violate FCC regulations.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

 
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.
- Consult the dealer or an experienced radio/TV technician for help.


**PLEASE KEEP ALL PACKAGING MATERIAL FOR AT LEAST 90 DAYS
IN CASE YOU NEED TO RETURN THIS PRODUCT TO YOUR PLACE
OF PURCHASE OR MEMOREX.**

LOCATION OF CONTROLS


MICROPHONE

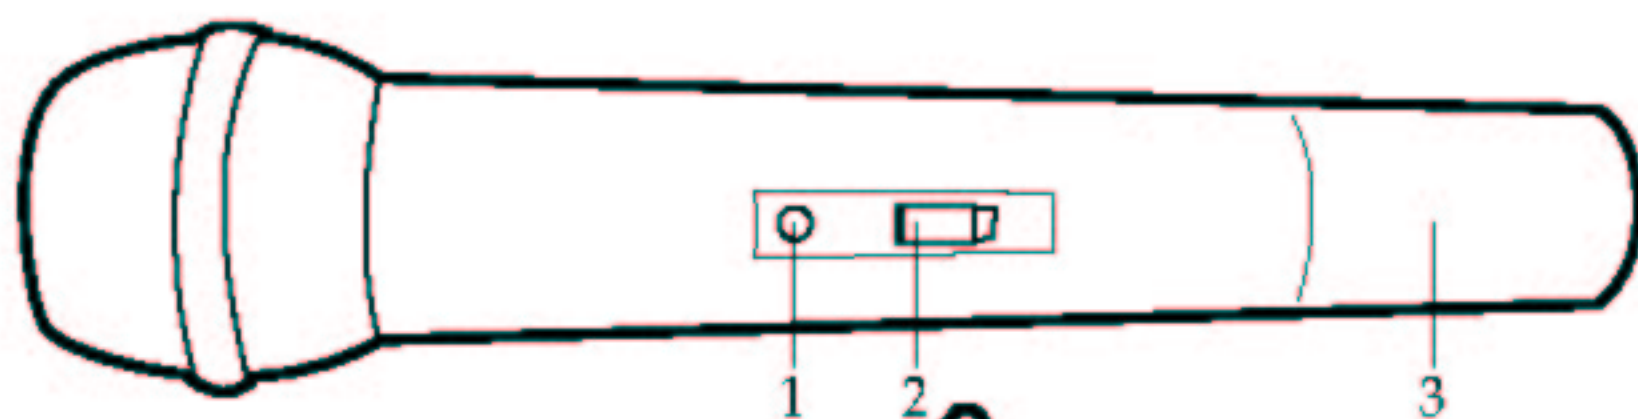

RECEIVER FRONT

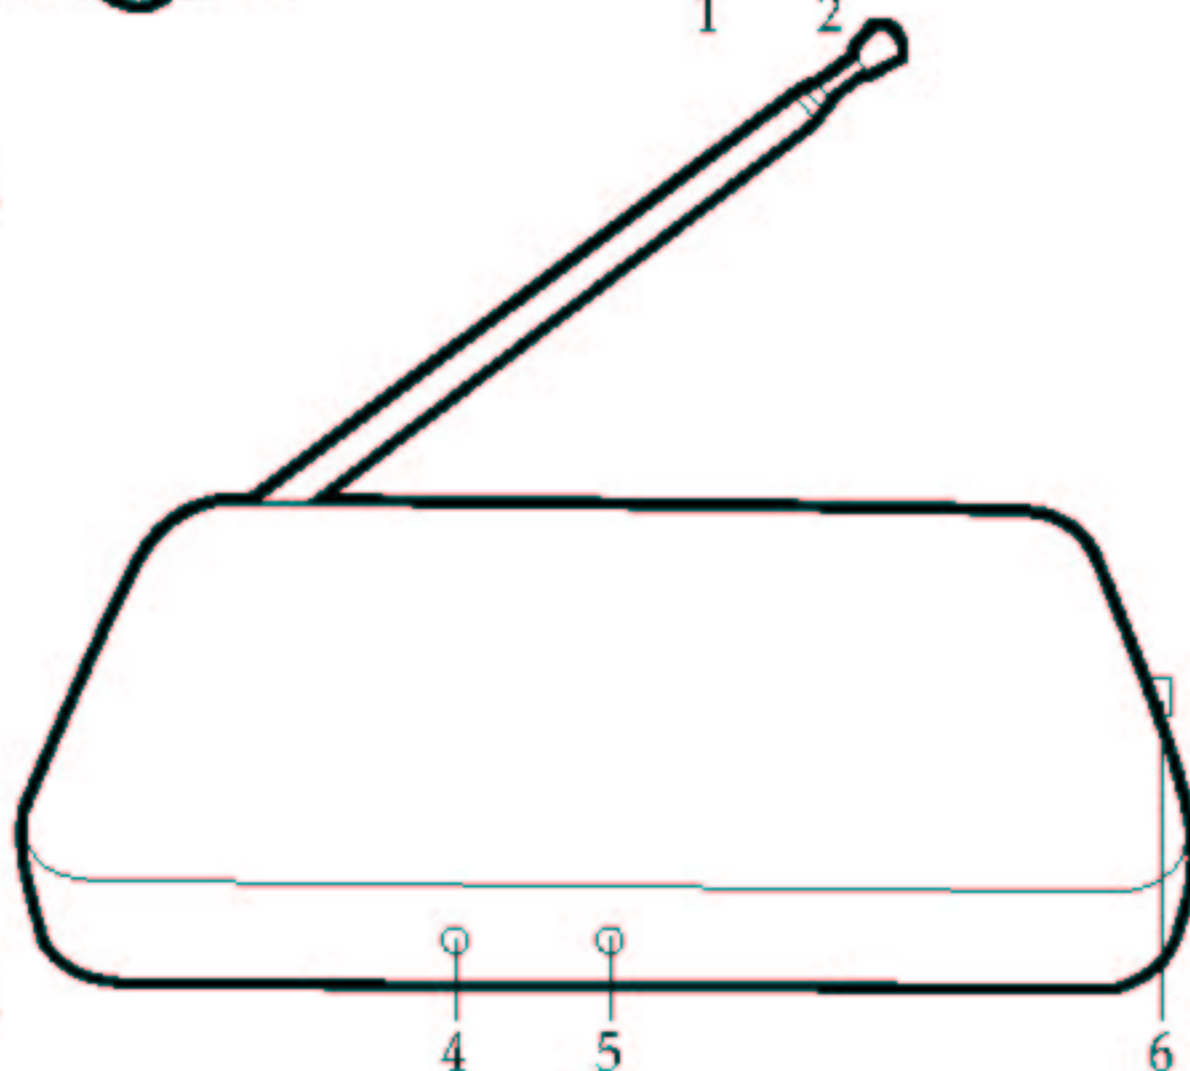 

RECEIVER REAR

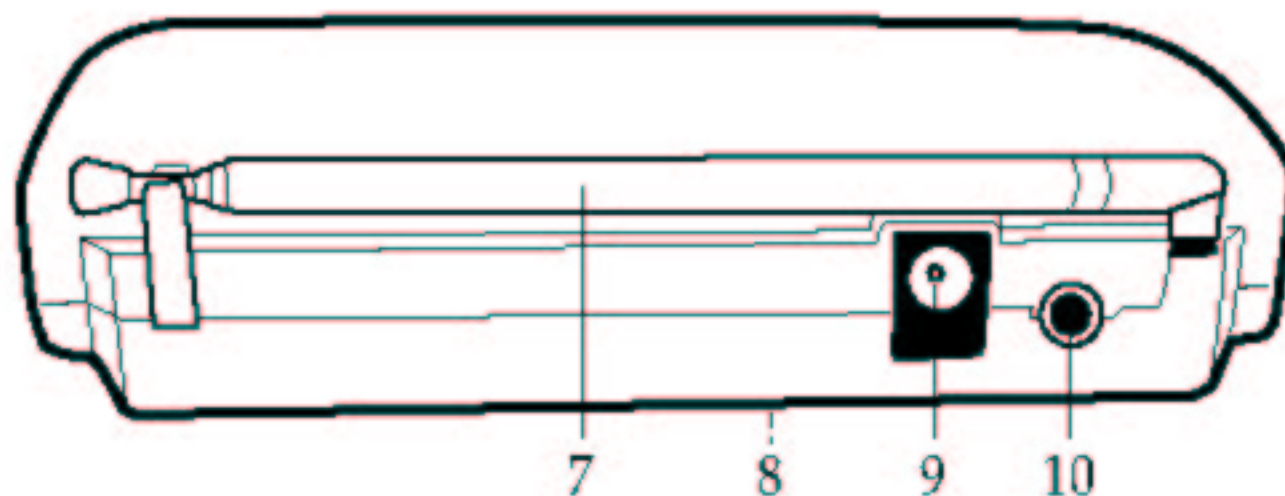 


- | | |
|--|--|
| 1. POWER Indicator | 6. POWER ON/OFF Switch |
| 2. Microphone
ON/STANDBY/OFF Switch | 7. Antenna |
| 3. Battery Compartment | 8. Battery Compartment
(Bottom of Receiver) |
| 4. Microphone ON Indicator | 9. DC 4.5V Jack $\ominus \bullet \oplus$ |
| 5. POWER ON Indicator | 10. Line OUT Jack |

INSTALLATION


REPLACING THE BATTERIES

If the sound quality starts to become poor or the receiving distance has shortened, replace the batteries in the microphone and the receiver as follows:

 INSTALLING THE BATTERY INTO THE MICROPHONE

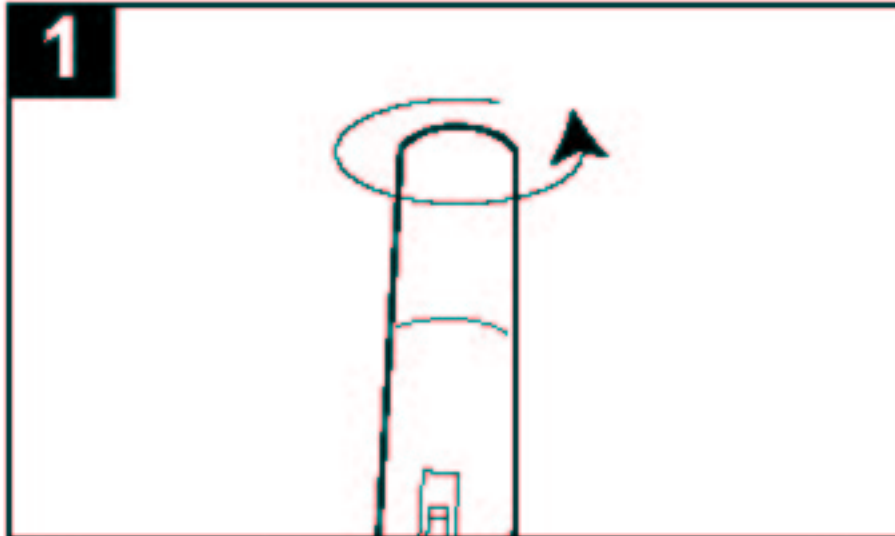


 Remove the battery cover at the bottom of the microphone by twisting it counterclockwise.

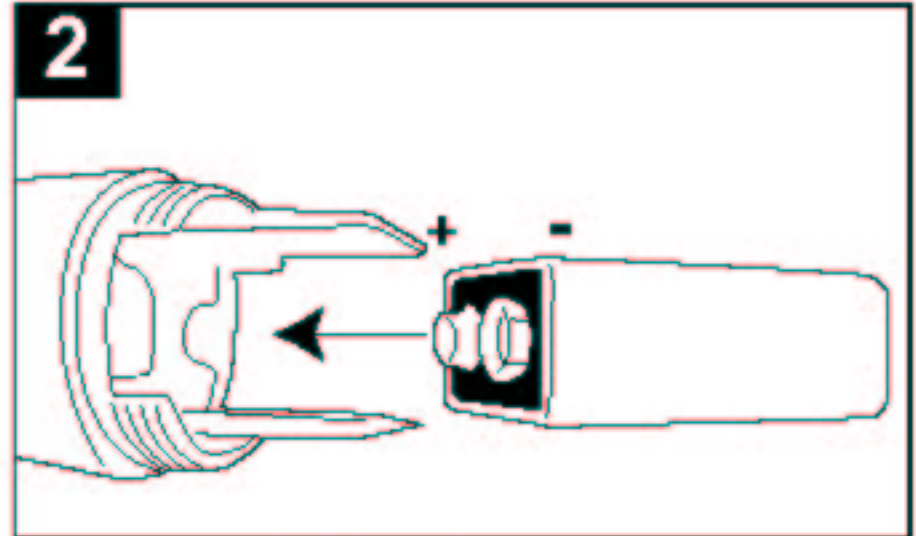


Insert one 9V battery, making sure to observe the correct polarity (+/-). Twist the battery cover clockwise to put it back on.

 INSTALLING THE BATTERIES INTO THE RECEIVER

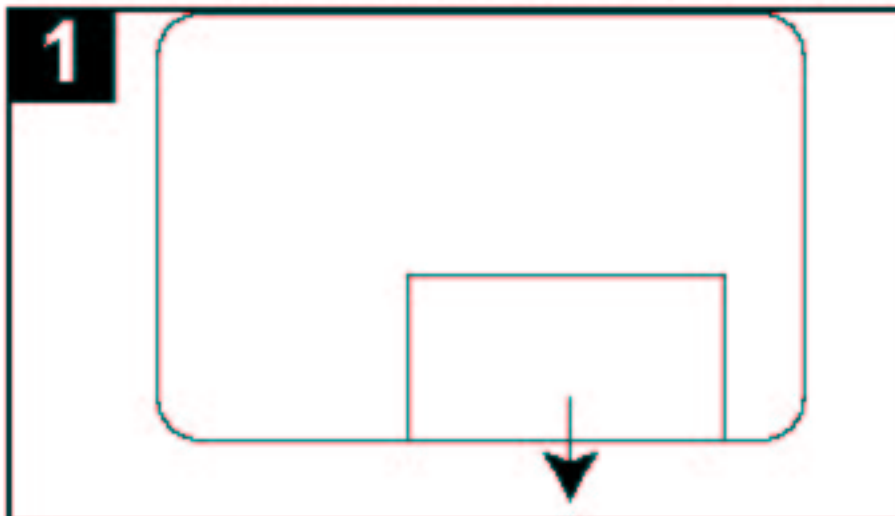

 Remove the battery cover by sliding it off.

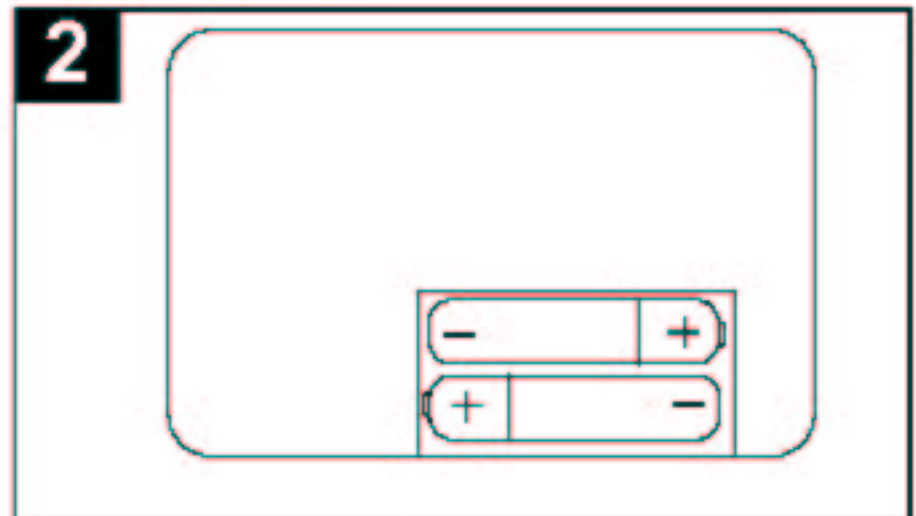

Insert two (2) "AA" size batteries (not included) following the polarity diagram (+/-). Slide the battery cover back into place.

DC JACK

To use the receiver with the external AC adapter (included) having 4.5V and a positive center pin, insert the AC adapter's plug into the DC 4.5V jack on the receiver. The batteries will be disconnected when the AC adapter is connected.

BATTERY PRECAUTIONS

 
Follow these precautions when using batteries in this device:

1. Use only the size and type of batteries specified.
2. Be sure to follow the correct polarity when installing the batteries as indicated in the battery compartment. Reversed batteries may cause damage to the device.
3. Do not mix different types of batteries together (e.g. Alkaline, Rechargeable and Carbon-zinc) or old batteries with fresh ones.
4. If the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
5. Do not try to recharge batteries not intended to be recharged; they can overheat and rupture. (Follow battery manufacturer's directions.)


OPERATION

USING YOUR MICROPHONE (TRANSMITTING)


To use your microphone, please see the following:

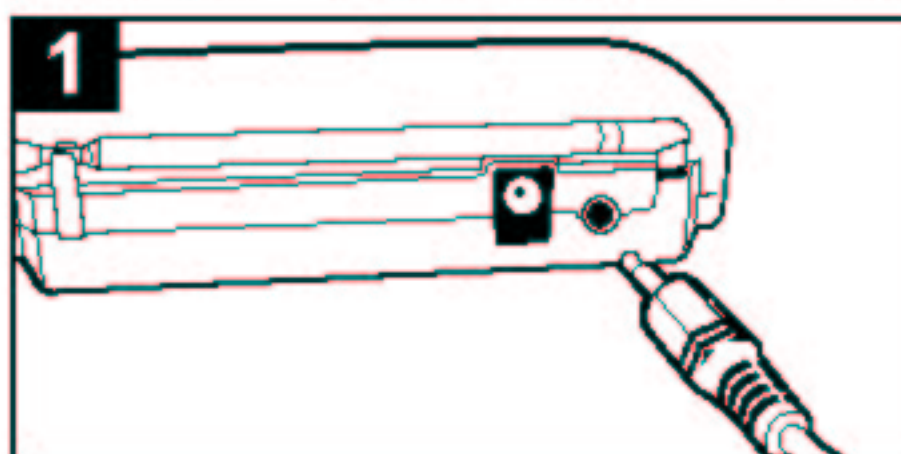

 
Insert the large end of the cord into the Microphone jack on the unit you are connecting this wireless microphone to, and the small end into the Line OUT jack on the receiver.

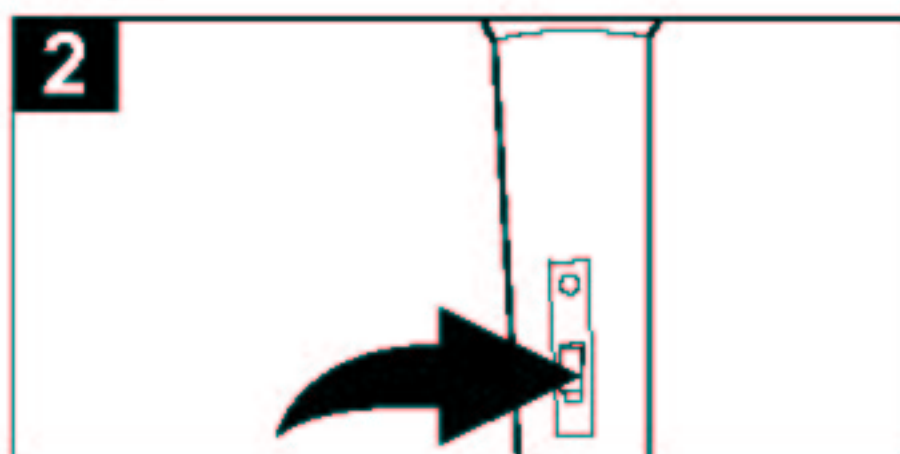

 Slide the Microphone ON/STANDBY/OFF switch to the ON position; the POWER indicator on the microphone will light.

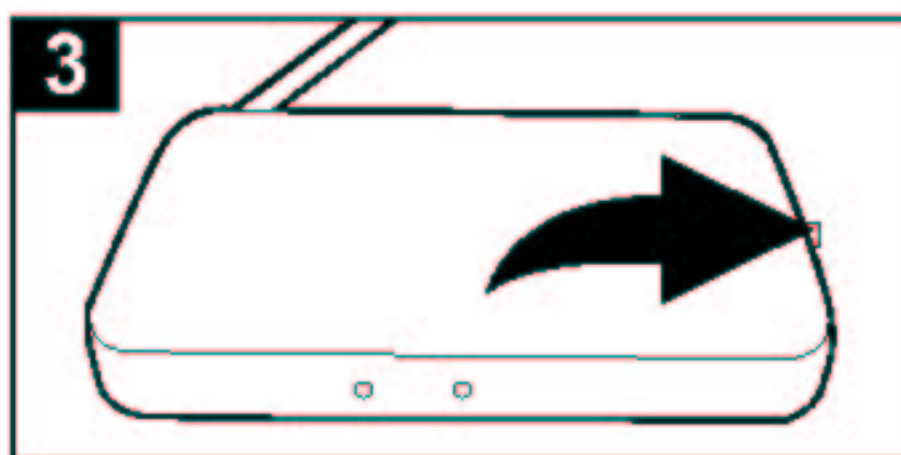

 Slide the Receiver's POWER switch to the ON position; the red POWER indicator on the receiver will light. If the microphone is on, the green Microphone ON indicator on the receiver will also light. Raise the antenna for best reception and speak or sing into the microphone as desired.

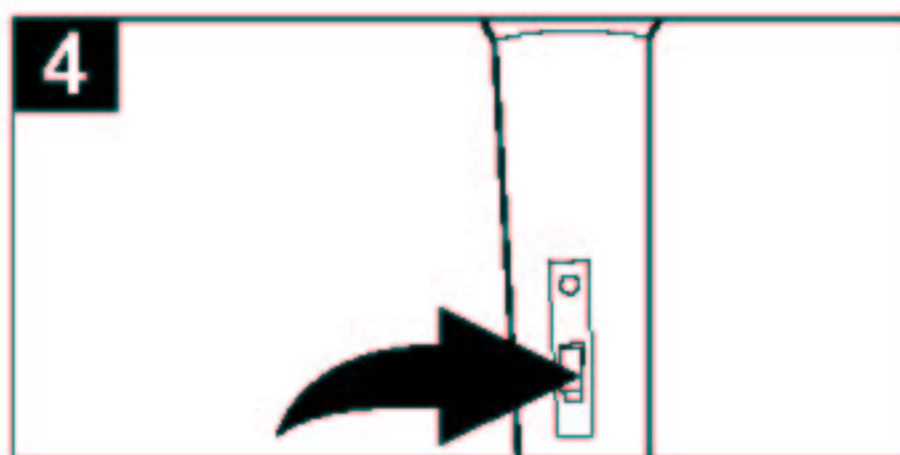

Slide the Microphone ON/STANDBY/OFF switch to the STNBY (Standby) position to put the microphone in Standby mode (it will be on, but will not transmit). Slide the Microphone ON/STANDBY/OFF switch to the OFF position to turn the microphone off; the POWER indicator on the mic and the green MIC indicator on the receiver will go out.

NOTES:

- When done using the receiver, slide the POWER switch to the OFF position; the red POWER indicator will go out.
- If your microphone is not to be used for a long period of time, remove the batteries in the microphone and the receiver.
- If the microphone is out of range (microphone too far away from the receiver) the green Microphone ON indicator on the receiver will turn off and the microphone will be muted.