SAFETY PRECAUTIONS

FCC INFORMATION

Warning: Modifying, tampering and adjustment to this unit or replacement of any transmitter component (crystal, semiconductor, etc.) to this unit that could result in a violation of the rules.

FCC NOTICE

This wireless microphone system complies with Part 90 of FCC Rules. There are two frequencies available for the system. You must get a licence for each frequency you plan to use before you use the system (one license can include both frequencies).

Please look for this website http://wireless.fcc.gov/uls/ to apply the licence or phone to the nearest FCC offices and contact them to get the necessary application. Licensibility depends on how you will use the system.

For RF exposure

"IMPORTANT NOTE:To comply with the FCC RF exposure compliance requirements, no change to the antenna or the device is permitted, Any change to the antenna or the device could result in the system exceeding the RF exposure requirements."

SAFETY INFORMATION

Your wireless microphone contains a low power transmitter. When the EUT is power on and it sends out radio frequency (RF)signals. In August 1996. the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for wireless devices.

IMPORTANT

To maintain compliance with the FCC's RF exposure guidelines hold the transmitter and antenna at least 1 inch (2.5 centimetres) from your face and speak in a normal voice, with the antenna pointed up and away from the face. Ensure that the antenna is at least 1 inch (2.5 centimetres) from your body when you using your wireless microphone.

Use only the supplied antenna. Unauthorised antennas, modifications, or attachments could damage the transmitter and may violate FCC regulations.


Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and ,if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the recever is needed.
- Consult the dealer or an experienced radio/TV technician for help.

PLEASE KEEP ALL PACKAGING MATERIAL FOR AT LEAST 90 DAYS IN CASE YOU NEED TO RETURN THIS PRODUCT TO YOUR PLACE OF PURCHASE OR MEMOREX.

LOCATION OF CONTROLS

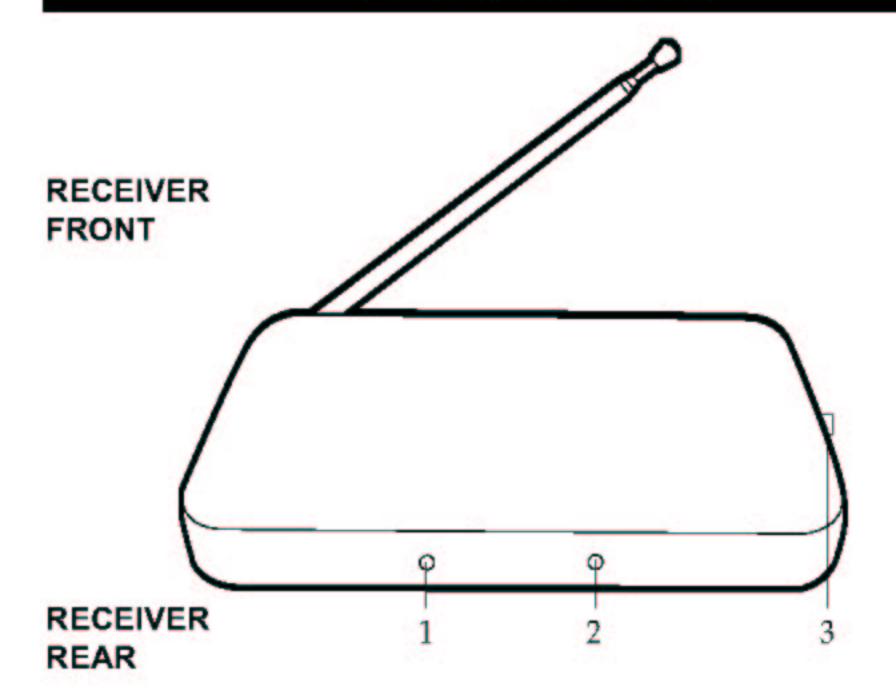


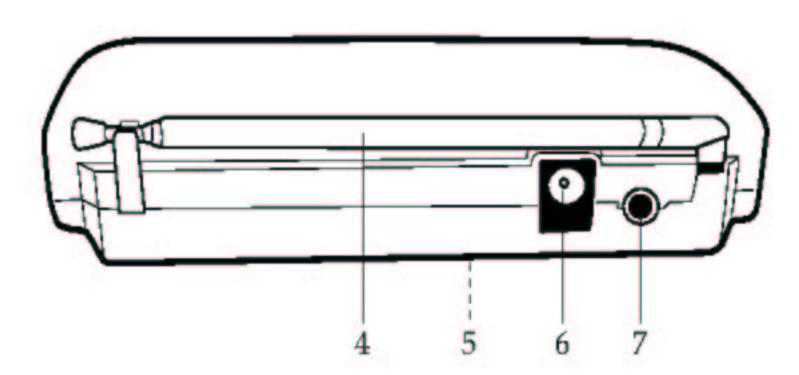


- Microphone ON Indicator
- 2. POWER ON Indicator
- 3. POWER ON/OFF Switch
- 4. Antenna
- Battery Compartment (Bottom of Receiver)

- DC 4.5V Jack ⊙⊕⊕
- 7. Line OUT Jack

LOCATION OF CONTROLS (CONTINUED)

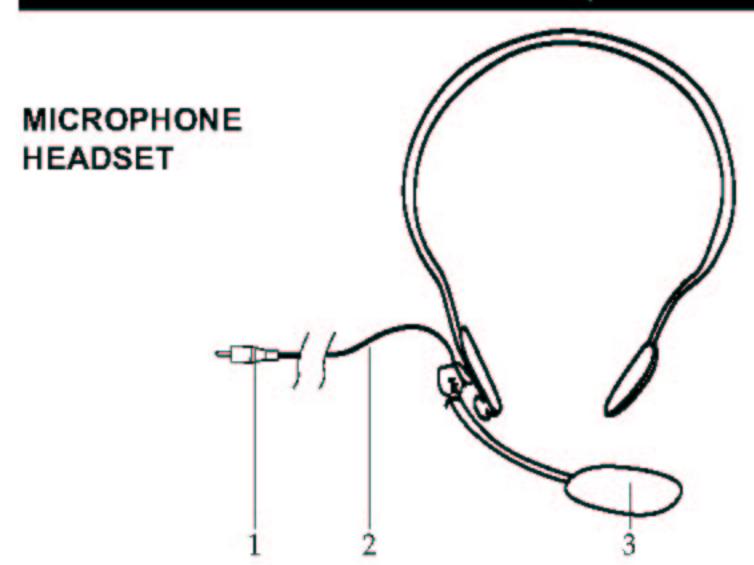

TRANSMITTER-REAR VIEW

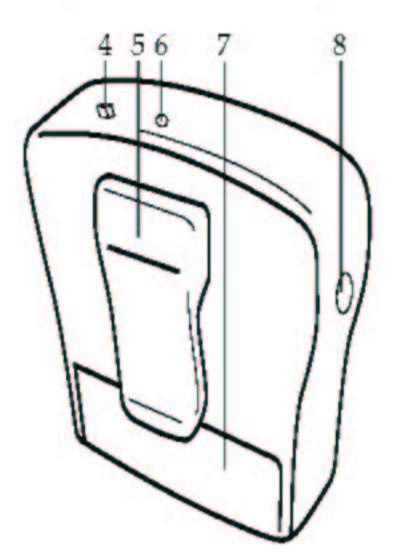

- Headset Plug
- 2. Headset Cord
- Microphone
- 4. OFF/STANDBY/ON Switch
- Belt Clip
- POWER Indicator


- 7. Battery Compartment
- 8. Headset Jack

INSTALLATION

REPLACING THE BATTERIES


If the sound quality starts to become poor or the receiving distance has shortened, replace the batteries in the microphone and the receiver as follows:

INSTALLING THE BATTERY INTO THE TRANSMITTER

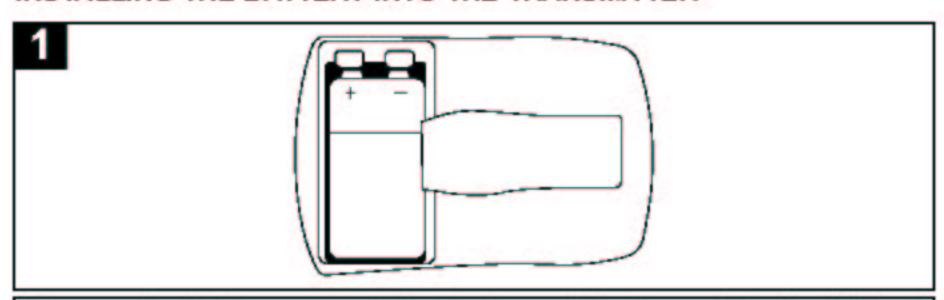


Remove the battery cover at the bottom of the transmitter by sliding it downward. Insert one 9V battery, making sure to observe the correct polarity (+/-). Replace battery cover.

INSTALLING THE BATTERIES INTO THE RECEIVER

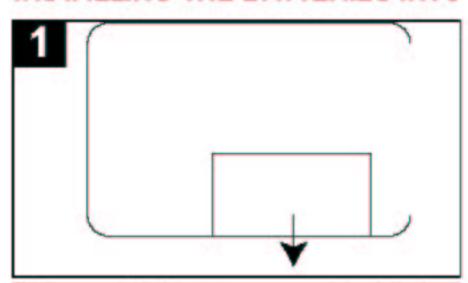

Remove the battery cover by sliding it off.

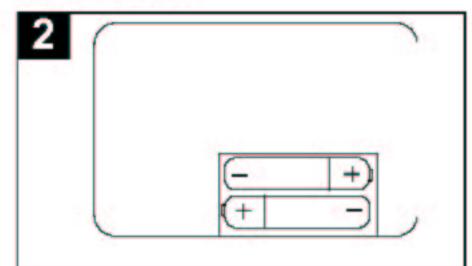

Insert two (2) "AA" size batteries (not included) following the polarity diagram (+/-). Slide the battery cover back into place.

DC JACK ⊕⊕⊕

To use the receiver with the external AC adapter (included) having 4.5V and a positive center pin, insert the AC adapter's plug into the DC 4.5V jack on the receiver. The batteries will be disconnected when the AC adapter is connected.

BATTERY PRECAUTIONS

Follow these precautions when using batteries in this device:

- 1. Use only the size and type of batteries specified.
- Be sure to follow the correct polarity when installing the batteries as indicated in the battery compartment. Reversed batteries may cause damage to the device.
- Do not mix different types of batteries together (e.g. Alkaline, Rechargeable and Carbon-zinc) or old batteries with fresh ones.
- If the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
- Do not try to recharge batteries not intended to be recharged; they can overheat and rupture. (Follow battery manufacturer's directions.)