

LinTech

keeps you connected

Bluetooth® serial port adaptor

Model number 1409_G



Manual

CONTENTS

1.INTRODUCTION	4
1.1. General Description	4
1.2. Package Contents	5
2. PREPARING FOR USE	5
2.1 View of adaptor	5
2.2. Switching on	6
2.3. Charging the battery	6
2.4. Switching on for the first time	7
2.5. The coupling process for setting up a Bluetooth data connection	8
2.6. Setting up a connection	9
3. CONFIGURATION	9
3.1. Standard settings	10
3.2. Changing between configuration mode and normal operation	10
3.3. Connecting to the configuration service	11
3.4. Connecting to the serial interface of the adaptor – configuration using a physical serial interface	11
3.5. Configuration using the LinTech BlueTool configuration programme	11
3.6. Configuration using AT commands	12
4. MASTER AND SLAVE OPERATING MODES	13
4.1. General explanation	13
4.2 Setting up a connection from the adaptor as Master to a known partner device	13
4.3. Setting up a connection as Master to an unknown partner device	13
4.4. Changing between Master and Slave modes	14
4.5. Notes regarding setting up connection as Master in the event that the partner device does not react	14
4.6. Setting up Master connection	14
5. SPECIAL FUNCTIONS	14
5.1 ACTIVE DEVICE SEARCH AND COUPLING WITH OTHER BLUETOOTH® EQUIPMENT	14
5.2 Using two Bluetooth serial port adaptor to replace a cable connection	15
5.2.1. Requirement	15
5.2.2 Coupling and setting up the connection	15
6. MEANING OF LED2 - MODE	17
6.1 Slave mode	17
6.2. Master mode	18
6.3. Special functions	18

7. FIRMWARE UPDATE	19
7.1. UpToDate – Software Update Tool for LinTech Bluetooth devices	19
7.2. Switching the Bluetooth Adapter to Firmware Download mode	19
8. OVERVIEW OF TECHNICAL DATA.....	20
9. AGENCY AND REGULATORY BODY APPROVALS	21
9.1. Exposure to Radio Frequency Radiation	21
9.2. FCC Part 15 Radio Frequency Interference Statement	21
9.3. Industry Canada ICES-003 Emission Compliance Statement.....	21
9.4. European Radio Approval Information	22
9.5. Europe – EU Declaration of Conformity	22
9.6. Rest of World	22
10. BATTERY STATEMENT – FOR YOUR SAFETY	22
11. ANTENNA DISTANCE.....	23

LIST OF ILLUSTRATIONS

Illustration 1 View of Bluetooth serial port adaptor	5
Illustration 2 Searching for device in the Bluetooth Manager.....	8
Illustration 3 Requesting Bluetooth PIN code	8
Illustration 4 Searching for device with the service-ID: COM-HARDWARE.....	9
Illustration 5 Searching for device with the service-ID: COM-CONFIG	11

1.Introduction

1.1. General Description

The Bluetooth serial port adaptor is a *Bluetooth** adaptor for use with a serial interface and can be connected to any piece of equipment displaying this interface.

The adaptor is equipped with a high-performance rechargeable battery, so an external power source is not required. This makes the adaptor particularly suitable in mobile applications.

No driver installation is required and the adaptor functions fully independently of the operating system platform in use.

A Bluetooth connection between two devices is always in the form of a Master-Slave connection, i.e. one device always initiates the connection. The new Bluetooth serial port adaptor can be operated in both Master and in Slave mode, i.e. the Bluetooth serial port adaptor can also establish a connection with another Bluetooth device and is not restricted to waiting for a connection request from an external piece of equipment.

The only condition is that the partner device supports the Bluetooth serial port profile.



The Bluetooth serial port adaptor is operational in slave mode immediately upon switch-on. An easy-to-use configuration programme is supplied with the adaptor with which the user can configure the connection parameters of the Bluetooth serial port adaptor, such as the baud rate.

For systems which do not operate under the Windows operating system, it is also possible to configure the adaptor using AT commands.

The device is fitted with a high-power LI rechargeable battery. In mobile applications, where power consumption and operating time are of central importance, an automatic power management function is available, which switches the device into energy saving mode ('SNIFF' mode). This results in a considerable reduction in power consumption by the partner device.

A further important feature in this context is that the adaptor really becomes operative when a signal is received at the serial interface. This means that the adaptor is only in active mode once the device to which the Bluetooth serial port adaptor is connected has been switched on.

Our experience has shown that a multitude of requirements are placed on Bluetooth solutions. For this reason, the Bluetooth serial port adaptor has been conceived to enable its use for a large number of solutions.

If your individual application can not be implemented using the standard functions described in this handbook, please be sure to read the section 5 – Special Solutions.

The Bluetooth serial port adaptor is a completely new product and displays a whole host of exciting functions. So as to avoid problems, we highly recommend that you read the instructions in this handbook before putting the adaptor into operation for the first time.

* Bluetooth and the Bluetooth logos are trademarks owned by Bluetooth SIG, Inc., U.S.A. and licensed to LinTech GmbH, Berlin Germany.

1.2. Package Contents

Bluetooth* serial port adaptor with standardised (male) RS-232 DSUB-9 plug connector
(Optionally available with DSUB-9 connector (female))

Charging unit

Computer disc, with handbook and configuration software for use with Windows systems

2. Preparing for use

2.1 View of adaptor

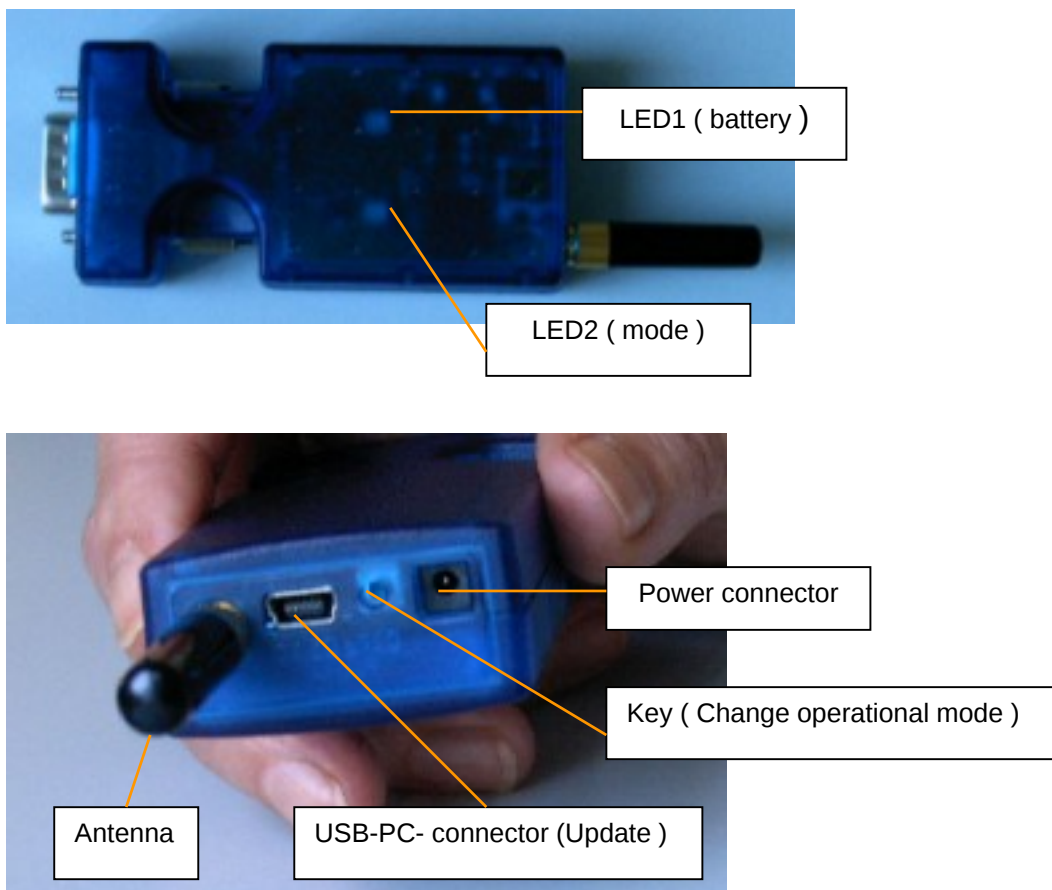


Illustration 1 View of Bluetooth serial port adaptor

2.2. Switching on

The standard configuration of the LinTech *Bluetooth** serial port adaptor is as follows:

Baud rate	: 115200 Bit/s
Stop bit	: 1
Parity	: None
Data bits	: 8
Bluetooth* PIN	: 1234

Plug the adaptor into the serial interface of the device that the serial port adaptor it is to be operated with.

The Bluetooth serial port adaptor recognises whether or not signals are incoming via the serial interface, i.e. whether the device is switched on or off.

If the device is switched on, the Bluetooth serial port adaptor changes into operating mode, LED 2 flashes rapidly for approx. 3 seconds and then slowly green.

(For LED sequences, please see the overview in section 6.)

If the device is switched off, the Bluetooth Adapter remains in Standby mode.

You can wake up the serial-interface of the device by typing the push-button of the serial-adaptor. You can activate this function permanently by using AT command: AT+FRS.

Should the serial port adaptor not switch into operational mode although it is switched on, please charge the battery. (See 2.3)

Please be sure to have the Bluetooth Adapter in use during charging.

2.3. Charging the battery

The Bluetooth serial port adaptor is equipped with a high-performance rechargeable battery, so an external power source is not required. This makes the adaptor particularly suitable in mobile applications.

We recommend charging the battery before using the device for the first time.

Please notify: connect charger first with BT serial port adaptor and afterwards with wall socket.

To avoid overcharging and faulty operation, always use the battery charger supplied and connect it to the appropriate socket at the rear of the Bluetooth serial port adaptor (see Ill.1) .

The status of the charging process is indicated by LED1 on the upper surface of the Bluetooth Adapter (see Ill. 1)

LED 1	Meaning
RED	Battery is charging – charge duration to full capacity for empty battery approx. 2 hours
GREEN	Battery fully charged or serial port adaptor is being powered via the mains supply
OFF	serial port adaptor is not connected to the power supply

* Bluetooth and the Bluetooth logos are trademarks owned by Bluetooth SIG, Inc., U.S.A. and licensed to LinTech GmbH, Berlin Germany.

2.4. Switching on for the first time

The Bluetooth serial port adaptor is equipped with a high-performance rechargeable battery, so an external power source is not required. This makes the adaptor particularly suitable in mobile applications. We recommend charging the battery before using the device for the first time (see section 2.3).

A Bluetooth connection between two devices is always in the form of a Master-Slave connection, i.e. one device always initiates the connection. The new Bluetooth serial port adaptor can be operated in both Master and in Slave mode, i.e. the Bluetooth serial port adaptor can also establish a connection with another Bluetooth device and is not restricted to waiting for a connection request from an external piece of equipment.

The only condition is that the partner device supports the Bluetooth serial port profile (SPP).

When the *Bluetooth** serial port adaptor is switched on for the first time, it is in Slave mode. You can then select between two operating modes: **Normal mode** and **Configuration mode**.

In **Normal mode** a data connection is set up to the *Bluetooth** Adapter; the **Configuration mode** is used to configure the settings for the *Bluetooth** Adapter either via the Bluetooth connection or the serial interface.

The standard configuration of the LinTech *Bluetooth** serial port adaptor is as follows:

Baud rate	: 115200 Bit/s
Stop bit	: 1
Parity	: None
Data bits	: 8
Bluetooth* PIN	: 1234

Before the configuration of the Bluetooth connection can be changed, the device must be switched to configuration mode and a connection must exist to a Bluetooth device (for further information please see the corresponding section of the manual).

If you want to create a connection from another Bluetooth device to the serial port adaptor without changing the configuration, continue as outlined in the following sections.

2.5. The coupling process for setting up a Bluetooth data connection

To set up a *Bluetooth** connection, you require a second *Bluetooth** Master device that supports the *Bluetooth** Serial Port Profile. Please perform the coupling procedure as outlined in the following.
The first step is to initiate a device search using the *Bluetooth** partner device (integrated *Bluetooth** circuit, USB dongle, PCMCIA card, or similar) in the Bluetooth environment.
Here you should find displayed 'LinTech SPA', indicating that the Bluetooth serial port adaptor has been found.

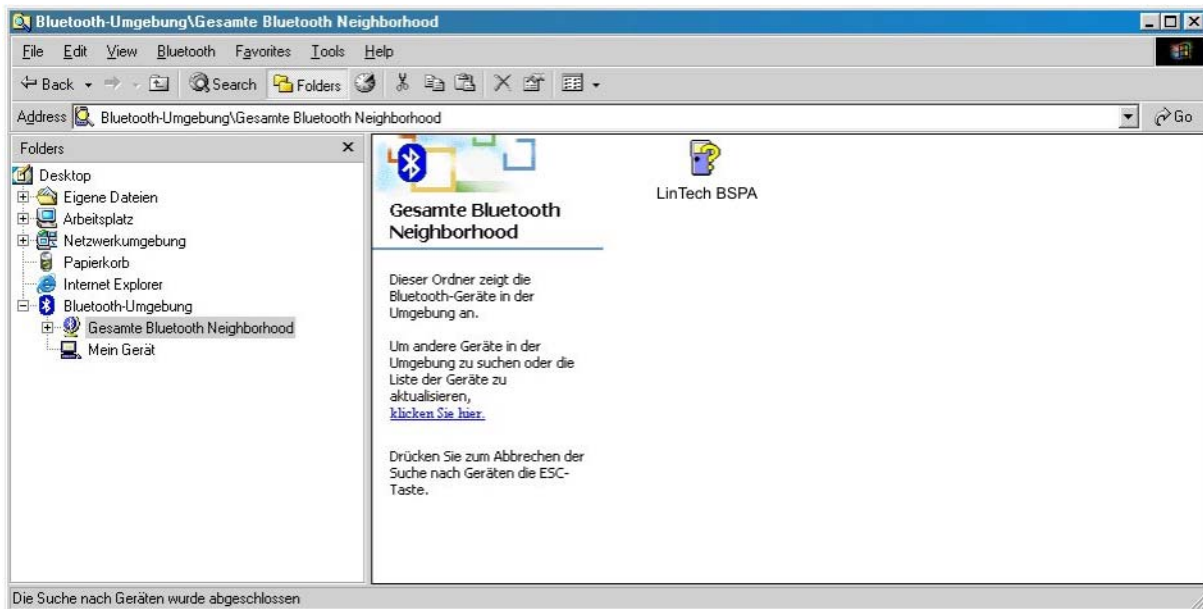


Illustration 2 Searching for device in the Bluetooth Manager

Now initiate the coupling procedure.

The standard-PIN/ Bluetooth key for the Bluetooth serial port adaptor is **1234**.

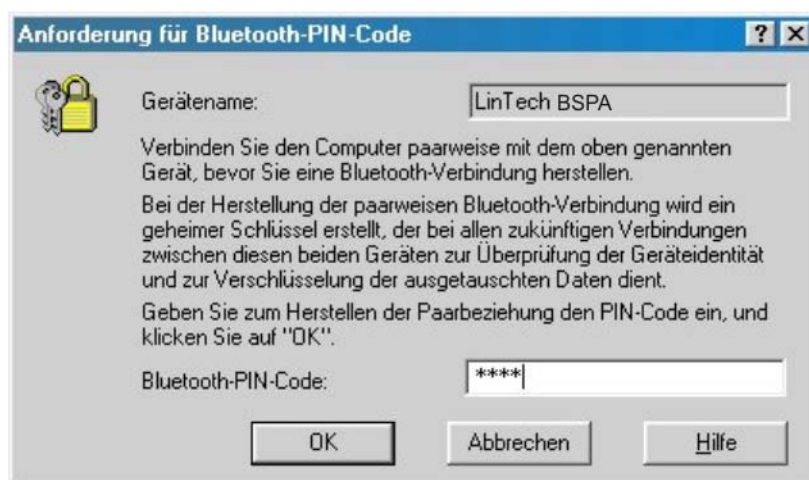


Illustration 3 Requesting Bluetooth PIN code

Once the coupling procedure has been completed, the Bluetooth serial port adaptor offers a serial service, by the name of COM-HARDWARE, using which you can connect the serial interface of the Bluetooth serial port adaptor with that of your equipment.

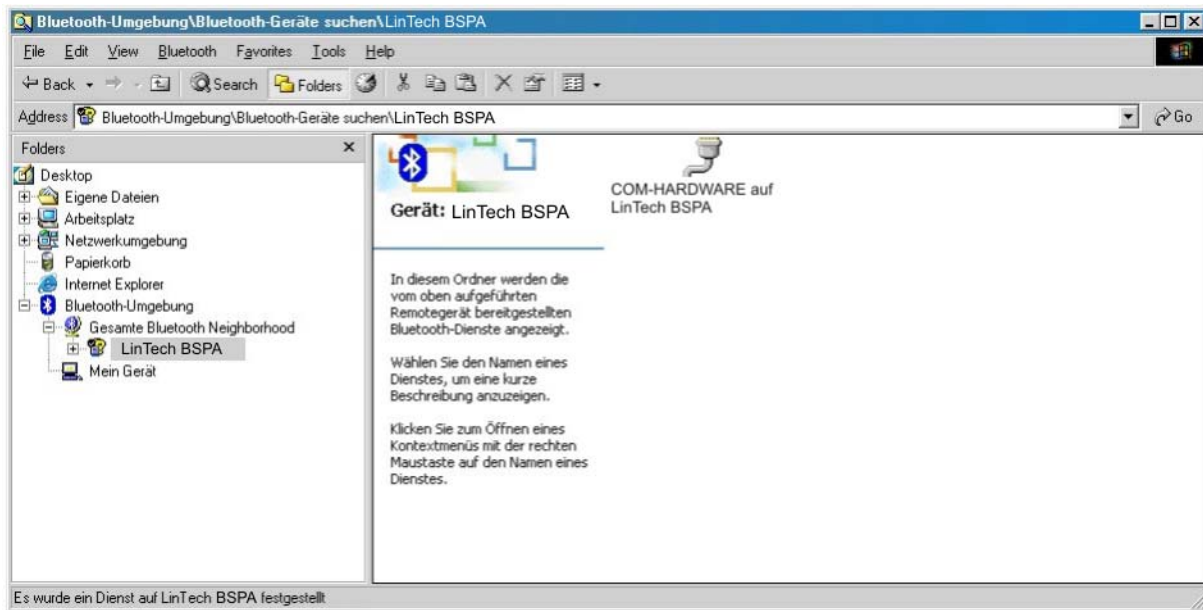


Illustration 4 Searching for device with the service-ID: COM-HARDWARE

2.6. Setting up a connection

For information on how to establish a connection using a service, please consult the instructions supplied with your Bluetooth equipment.

In most cases, the Bluetooth environment provides you with virtual COM ports. The *Bluetooth** Serial Port Profile must be allotted to one of these COM ports. It is via this COM port that you communicate with the Bluetooth serial port adaptor .

3. Configuration

The Bluetooth serial port adaptor can be configured either via an existing Bluetooth connection or via direct connection to the serial interface of a PC.

In either case, it is first of all necessary to switch the Bluetooth serial port adaptor from normal mode to configuration mode (see section 3.2.)

* Bluetooth and the Bluetooth logos are trademarks owned by Bluetooth SIG, Inc., U.S.A. and licensed to LinTech GmbH, Berlin Germany.

3.1. Standard settings

The standard configuration of the LinTech *Bluetooth** serial port adaptor is as follows:

Baud rate	: 115200 Bit/s
Stop bit	: 1
Parity	: None
Data bits	: 8
Bluetooth* PIN	: 1234

An easy to use programme is provided with which you can alter standard settings and also access other features (such as activating SNIFF mode, connection properties, security settings etc.) via an existing *Bluetooth** connection or the serial interface of the adaptor (see BlueTool manual).

For all those applications for which no Windows application is available, it is possible to perform the configuration by means of AT commands using any available terminal programme (section 3.6).

For configuration purposes, the LinTech serial port adaptor provides you with a special *Bluetooth** service. In other words, in addition to its normal operational mode, it is possible to use the Bluetooth adaptor for configuration purposes and for changing from one operational mode into this configuration mode.

It is not necessary to remove the Bluetooth adaptor from the device with which you are operating it before performing the configuration.

For information on how to switch between the two modes, please see the following section.

3.2. Changing between configuration mode and normal operation

Press the key on the rear side of the Bluetooth Adapter briefly (see Ill. 1).

LED2 will then flash continuously for about two seconds, following which LED2 flashes rapidly in short, green bursts for 3 seconds before changing to slow, short, red bursts.

When LED2 flashes in slow, short, red bursts, it means that the adaptor is currently in configuration mode.

The serial Bluetooth service COM-CONFIG is now available.

If you press the key again for a short time, the Bluetooth adaptor will return to normal operation. (LED2 again flashes continuously, after which LED2 flashes slowly in short green bursts).

When LED2 flashes slowly in short, green bursts, it means that the adaptor is currently in normal operational mode.

The serial Bluetooth service COM-HARDWARE is now available.

3.3. Connecting to the configuration service

To be able to configure the Bluetooth serial port adaptor via Bluetooth, it is first necessary connect the Bluetooth partner device (Master) with the Bluetooth serial port adaptor connection service.

To do this, it is necessary to perform a service determination procedure in the Bluetooth manager of the Bluetooth partner device. The Bluetooth serial port adaptor offers the service COM-CONFIG.

Connect up to this service.

For information on performing this step, please consult the instruction manual received with your Bluetooth partner device.

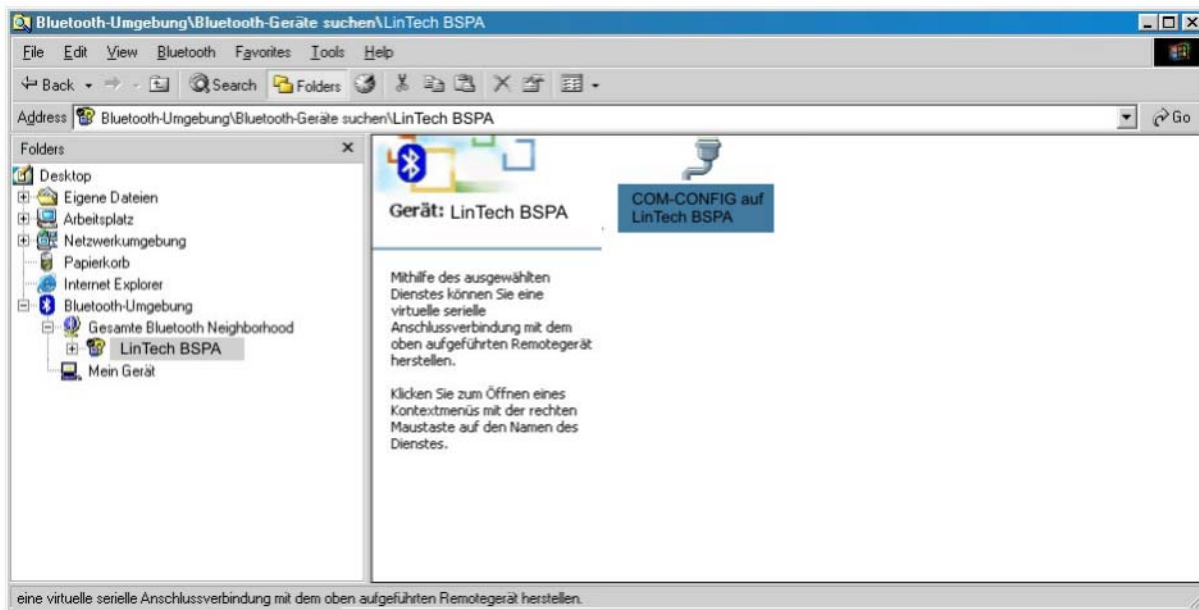


Illustration 5 Searching for device with the service-ID: COM-CONFIG

3.4. Connecting to the serial interface of the adaptor – configuration using a physical serial interface

Once you have switched the Bluetooth serial port adaptor into configuration mode (section 3.2), plug the adaptor into the serial interface of a personal computer.

3.5. Configuration using the LinTech BlueTool configuration programme

The LinTech BlueTool is an easy to use Windows configuration programme, with the aid of which you can perform all the settings required for the Bluetooth serial port adaptor easily and clearly.

Please copy the programme from the disc supplied to a folder on your hard disc, and start the programme from the hard disc.

Before using the BlueTool configuration programme, it is necessary that a Bluetooth connection exists to the Bluetooth serial port adaptor which uses the configuration service of the Bluetooth serial port adaptor or a physical connection to a serial interface on your PC.
For further information, please consult the BlueTool manual.

3.6. Configuration using AT commands

In addition to the conventional method of using the BlueTool Windows configuration programme for configuring the Bluetooth serial port adaptor 's connection parameters, it is also possible to perform the settings using AT commands.

This option is provided due to the fact that not all environments use Windows as an operating system. All that is required on your serial port adaptor partner device is a terminal programme, e.g. Hyperterminal.

If you wish to configure the Bluetooth serial port adaptor via an existing Bluetooth connection, the Bluetooth partner device must be connected to the configuration service of the Bluetooth serial port adaptor.

It is however also possible to configure the adaptor using AT commands, by connecting it directly to the serial interface of a PC.

In either case, the Bluetooth serial port adaptor must be in configuration mode. For switching from normal mode to configuration mode, please consult the appropriate section of the manual (3.2)

Start the Terminal programme.

Connect the Terminal programme to the Com port to which the COM-CONFIG service of the serial port adaptor is connected (or to the COM port of the physical interface).

Select the following settings: baud rate 115200 Bit/s, 8 data bits, 1 stop bit, 1 start bit and no parity.

Once the connection has been successfully established, the terminal programme window will display a list of available AT commands.

Should this listing not be displayed, please enter **<AT+Z>** followed by **<CR>** . This will effect a repeat display of the available commands.

The respective commands are entered in the terminal window; no echo is produced when the characters are inputted. All command inputs must be acknowledge by pressing **<CR>** .

All changes are implemented immediately and saved in the serial port adaptor.

4. MASTER and SLAVE operating modes

4.1. General explanation

A Bluetooth connection between two or several devices always constitutes a Master-Slave connection. The Master device is always the one that initialises the connection, i.e. it is the device that initiates the device search, locates Bluetooth equipment and initiates the coupling procedure.

The Bluetooth serial port adaptor is always in Slave mode immediately after switch-on, i.e. it is awaiting a request from the partner device to establish a connection.

There are many cases, however, in which it is necessary for the serial port adaptor itself to establish a connection, for instance, if the connection is interrupted for any reason. It is also generally more effective to initiate a connection from a central recording instrument to the partner devices, when the former is used to control the calibration of equipment or machines or for everyday data recording from such equipment.

The LinTech serial port adaptor can also be connected as a Master, which means that the Bluetooth serial port adaptor is able to initiate a connection.

4.2 Setting up a connection from the adaptor as Master to a known partner device

This implies connection to a partner device with which the Bluetooth serial port adaptor has already been connected:

The LinTech serial port adaptor has already been operational in slave mode with a Bluetooth partner device and you now require that the serial port adaptor itself establishes the connection to this equipment.

All that you need to do is to change the Bluetooth serial port adaptor from Slave to Master mode, since in this case the partner device is already known. **For more information, see section 4.4. Changing between Master and Slave modes**

4.3. Setting up a connection as Master to an unknown partner device

The Bluetooth serial port adaptor can be programmed so that in future, it sets up a connection to an unknown, user-selected Bluetooth partner device.

Conditions:

You must know the address of the Bluetooth partner device, with which you wish to establish the connection.

The partner device must support the Serial Port Profile according to *Bluetooth** Specifications 1.1.

In this case, you must first of all switch the Bluetooth serial port adaptor into configuration mode set up a connection with the configuration service from any Bluetooth partner device and perform the settings for the connection to the future Bluetooth partner device (see also sections 3.2 – 3.6).

Please note:

If the serial port adaptor is in Master mode, it will by default attempt to establish the connection using the PIN 1234.

* Bluetooth and the Bluetooth logos are trademarks owned by Bluetooth SIG, Inc., U.S.A. and licensed to LinTech GmbH, Berlin Germany.

If the future partner device requests a PIN for the connection, this can also be entered using the configuration programme.

4.4. Changing between Master and Slave modes

Press the key at the rear of the Bluetooth® serial port adaptor to change easily between Master and Slave modes.

Press the key continuously for about 15 seconds. This is then followed by an LED sequence (red – green – orange) lasting about 2 seconds. Now release the key.

THEN:

The serial port adaptor restarts and flashes red for approx. 3 seconds – the adaptor is now in Master mode and it will attempt to create a connection to the partner device.

OR:

The serial port adaptor restarts and flashes green for approx. 3 seconds – the adaptor is now in slave mode and will accept any incoming connections.

4.5. Notes regarding setting up connection as Master in the event that the partner device does not react

When the serial port adaptor is configured as the Master, it will automatically attempt to create a connection to the configured or known partner device.

If this connection fails, there may be several reasons. If the partner device is not switched on, the serial port adaptor changes to 'Master idle' mode.

The LED2 then lights up orange.

A new attempt at creating the connection can be initiated by pressing the key.

Note: The LinTech serial port adaptor can be configured to perform continual attempts at connecting to the partner device. This setting is recommended when the serial port adaptor is required to re-establish a connection which has broken down due to excessive distance.

To do this, you can use either the LinTech BlueTool or the respective AT command (**AT+SCMC=1**).

4.6. Setting up Master connection

To terminate an existing connection, simply press the key on the adaptor briefly.

5. Special functions

5.1 Active device search and coupling with other Bluetooth® equipment

The functionality of the Bluetooth serial port adaptor means that it can be used in variety of system environments and projects.

In the previous sections of this handbook, it was described how the adaptor operates in standard mode as a Slave with all Bluetooth partner devices that support the serial port profile and how the Bluetooth Adapter can be configured to automatically set up a connection to other Bluetooth equipment, in the so called Master mode. The condition in all cases for operation Master mode was that the partner device is known.

However, now there is a special function available, with which the Bluetooth serial port adaptor can also perform an active device search for other Bluetooth devices and to set up a connection to these.

The advantage of this special function is that it is controlled by use of AT commands (in a manner similar to modem control). This means that, unlike other standard available Bluetooth adaptors, the LinTech Bluetooth serial port adaptor can be operated using equipment/PCs that run with a different operating system to Windows.

For instance, the LinTech serial port adaptor is able to initiate a device search, perform a coupling procedure and connect to the device thus located.

All that you require on your PC or other equipment, to which the serial port adaptor serial port adaptor is connected, is a terminal programme (e.g. Hyperterminal), with the aid of which you can control the device search and connection setup, using AT commands.

This special function must first be activated in Slave – Configuration mode either via the AT command interpreter or using the BlueTool (AT+MCON=1).

To do this, the serial port adaptor must be in Master mode (see section 4.4: Changing between Master and Slave operating modes).

The serial port adaptor must be connected to the physical serial interface of a PC and the terminal programme must be opened via its COM-Port. The connection parameters (baud rate, stop bit, etc. ...) correspond to the settings in the serial port adaptor.

The available commands can be read out using the command **<AT12>**

For descriptions of the various AT commands, please see the AT Command List in the separate document.

5.2 Using two Bluetooth serial port adaptor to replace a cable connection

If you have two serial port adaptor s you can use them as a replacement for a cable connection.

5.2.1. Requirement

Configure your adaptors as described in section 3 – 'Configuration'.

Please note that the PIN of your device and that of the external device must be the same. The PIN and that of the external device for the Adapters must also be the same.

5.2.2 Coupling and setting up the connection

Both adaptors must be switched off and disconnected from any device.

Press the key on the first adaptor and plug the power supply into the corresponding socket of the adaptor. LED 2 should now light up red to indicate the adaptor is now in cable replacement coupling mode. Now release the key.

Repeat the procedure with the other adaptor.

 
 
When the LEDs of both adaptors have lit up in red, plug the two adaptors together.

If you have two adaptors with a plug or a socket, you will have to use a null modem cable.

 
 
The device IDs are now exchanged, which can take up to thirty seconds. Once this process is over, the Slave first restarts, followed by the Master. The Master then attempts to set up an automatic connection to the Slave. Once the connection has been successfully set up (LED2 flashes red and green alternately) disconnect the adaptors from each other. The connection parameters are stored and you can now use both adaptors.

6. Meaning of LED2 - mode

6.1 Slave mode

LED2 Sequence	Meaning
LED flashes green for approx. 3 seconds in short, rapid bursts 	Bluetooth serial port adaptor begins Slave mode operation
LED flashes green in slow, short bursts 	Bluetooth serial port adaptor is in normal operating mode – COM-HARDWARE service is active. Incoming connections are accepted.
LED flashes red in slow short bursts 	Bluetooth serial port adaptor is in Configuration mode – COM-CONFIG service is active. Incoming connections are accepted.
LED alternates rapidly between red and green 	A connection has been successfully established. Sniff mode is not active.
LED alternates slowly between red und green 	A connection exists. Sniff mode is active.
LED alternates for approx. 2 seconds between red, green and orange rapidly 	The serial port adaptor button has been pressed. Press briefly to change between Normal mode and Configuration mode. OR: Press continuously to change between Slave and Master mode.

6.2. Master mode

LED2 Sequence	Meaning
LED flashes approx. 3 seconds in rapid, red bursts 	serial port adaptor begins Master mode operation
LED flashes in slow, green bursts 	serial port adaptor is attempting to set up a connection to the partner device.
LED alternates rapidly between red and green 	A connection has been successfully established. Sniff mode is not active.
LED alternates slowly between red und green 	A connection exists. Sniff mode is active
LED lights up a constant orange 	Connection attempt failed. Press button to repeat connection attempt. <i>Note: The device can be set in Configuration mode to automatically repeat connection attempt.</i>
LED alternates for approx. 2 seconds between rapid red, green and orange bursts 	Press continuously to change between Slave and Master mode.

6.3. Special functions

LED2 Sequence	Meaning
LED is a constant red 	serial port adaptor is in cable replacement coupling mode.
LED is a constant green 	serial port adaptor is in firmware download mode.

7. Firmware Update

7.1. UpToDate – Software Update Tool for LinTech Bluetooth devices

To download the current firmware version to the serial port adaptor, please use the **UpToDate** software update tool for LinTech Bluetooth devices. For software and firmware updates, please visit www.lintech.de - downloads.

UpToDate supports the following operating systems:

MS Windows NT4.0

MS Windows 2000

MS Windows XP

Please consult the programme instructions for information on how to perform a firmware update.

UpToDate functions via the serial interface of the PC to which the Bluetooth serial port adaptor is connected for the purpose of updating the firmware.

Before using **UpToDate** it is necessary to set the Bluetooth Adapter to Download mode – this is the only mode in which a software download can be performed.

The following section explains how to switch the Bluetooth serial port adaptor into Download mode.

7.2. Switching the Bluetooth Adapter to Firmware Download mode

The adaptor must be switched off and disconnected from any device.

Press and hold the key and plug the power supply into the adaptor.

LED 2 should now light up red – continue to press the key until LED2 changes to green.

The serial port adaptor is now in Firmware Download mode.

For all other information, please consult the instructions to the UpToDate software update tool for the Lintech Bluetooth Adapter.

LED2 remains off as long as the Bluetooth serial port adaptor is in Firmware Download mode.

Please note also that the Bluetooth serial port adaptor must be connected via the charger unit for as long as it is in this mode.

8. Overview of technical data

Transmission frequencies	2.402 GHz to 2.480 GHz	
Range	Up to 30 m	
Bluetooth* Interface:	Supported Bluetooth* profiles:	Generic Access Profile Serial Port Profile
Serial interface:	Transmission power: DSUB-9 plug connector Baud rate: 1200 Bit/s - 230400 Bit/s	(class 2) max. 4dBm
USB Interface:	Mini USB 2.0	
Battery:	Lithium-Ion rechargeable battery, 3.7V/540mAh Standby time up to 10,000 hours Operating time up 10 hours (115.2 kBit/s) Charge time: < 2 h	
LED1:	Status display for battery	
LED2:	Status display for serial port adaptor	
Casing:	ABS translucent blue, dimensions 80x40x18 mm Weight including antenna and battery: 62 grams	
Operating temperature:	-20 - +60°C	
Charging temperature:	0 – +45 °C	
Storage temperature:	-20 - +45°C	

* Bluetooth and the Bluetooth logos are trademarks owned by Bluetooth SIG, Inc., U.S.A. and licensed to LinTech GmbH, Berlin Germany.

9. Agency and Regulatory Body Approvals

Bluetooth product operating in 2.4GHz band for Home and use.

9.1. Exposure to Radio Frequency Radiation

The radiated output power of the BT serial port adaptor is far below the FCC, Industry Canada and European Union radio frequency exposure limits. Nevertheless, the wireless radio shall be used in such a manner that the potential for human contact during normal operation is minimized. The internal wireless radio operates within guidelines found in radio frequency safety standards and recommendations which reflect the consensus of the scientific community.

The level of emitted energy emitted is far less than the electromagnetic energy emitted by wireless devices such as mobile phones. However, the use of wireless radios may be restricted in some situations or environments, such as aboard airplanes. If you are unsure of restrictions, you are encouraged to ask for authorization before turning on the wireless radio.

The FCC, Industry Canada and European Union have set a general guideline of 20 cm (8 inches) separation between the device and the body. This device should be used more than 20 cm (8 inches) from the body when wireless devices are on.

9.2. FCC Part 15 Radio Frequency Interference Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on. The user is encouraged to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet that is on a circuit different from the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Caution:

Pursuant to Part 15.21 of the FCC Rules for intentional or unintentional radiators, any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

9.3. Industry Canada ICES-003 Emission Compliance Statement

This Class B digital apparatus meets the requirement of the Canadian Interference-Causing Equipment Regulations.

Cet appareil numérique de la classe B respecte toutes les exigences du règlement sur le matériel brouiller du Canada.

9.4. European Radio Approval Information

The Bluetooth serial port adaptor is low power, wireless communication devices, operating in the 2.4 GHz band, intended for home or office use. The power output of this device is well below the RF exposure limits as set by the European Commission through the R&TTE directive.

The Bluetooth serial port adaptor can be operated in the following European Union and European Economic Area countries:

Austria, Belgium, Cyprus, Czech Republic, Denmark, Estonia, Finland, France, Germany, Greece, Hungary, Iceland, Ireland, Italy, Latvia, Liechtenstein, Lithuania, Luxembourg, Malta, the Netherlands, Norway, Poland, Portugal, Slovakia, Slovenia, Spain, Sweden, Switzerland and the United Kingdom.

9.5. Europe – EU Declaration of Conformity

This device complies with the R&TTE Directive 1999/5/EC, and the following standards:

EN 301 489-1 EN 301 489-17	Electromagnetic compatibility and radio spectrum matters(EMR); Electromagnetic compatibility (EMC) standard for radio equipment and services.
ETS 300 328-1: ETS 300 328-2:	Electromagnetic compatibility and radio spectrum matters (EMR); Wideband transmission systems; Data transmission equipment operating in the 2.4 GHz ISM band and using spread spectrum modulation technique.

Low voltage Directive (Safety) 73/23/EEC as per:

EN 60950	Safety of information Technology Equipment
----------	--

9.6. Rest of World

Country restrictions apply for home and office use.

10. Battery statement – for your safety

The Bluetooth serial port adaptor is powered by a rechargeable LI-battery.
Temperature extremes can affect the ability of your battery to charge.
Use the battery only for its intended purpose.

Do not leave the adaptor with battery in vehicles, directly sunlight, or other places where the temperature may rise above 60C Do not expose the battery to water or extreme moisture.
Do not drop the battery or subject it to mechanical shocks.

Never use any charger or battery which is damaged..Batteries should be charged in Original manufacturer's Lilon specified charging equipment. Use of other chargers may cause excessive heat or even fire.
Charge the battery after purchasing or when it has not been used for a long time before use.

Do not open the adaptor. Do not short-circuit the battery.

* Bluetooth and the Bluetooth logos are trademarks owned by Bluetooth SIG, Inc., U.S.A. and licensed to LinTech GmbH, Berlin Germany.

Batteries has to be replaced by authorized personal only. Caution: Risk of explosion if battery is replaced by an incorrect type.

Please contact your dealer / manufacturer for get service informations.

Leaving the battery in hot or cold places, such as in a closed car in summer or winter conditions, will reduce the capacity and lifetime of the battery.

Do not dispose of batteries in a fire!

Dispose of batteries according to local regulations (e.g. recycling). Do not dispose of as household waste.

11. Antenna distance

The external antennas used for this Bluetooth serial port adaptor must provide a separation distance of least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.