

Entercom

Instruction Sheet

LIST OF CONTENTS:

1. Main unit 2. Remote unit

INSTALLING BATTERIES:

1. Both the main unit and the remote unit each use 1-9 VDC volt battery each.
2. Use a Phillips screwdriver to loosen the battery compartment cover, then lift up the cover.
2. Put the batteries into the compartment using care to match the polarity (+ / -) as marked inside the battery compartment.
3. Replace the cover and tighten the screw.

TO OPERATE:

Main Unit

1. Turn the unit on by turning the On/Off Volume control knob clockwise and adjust the volume accordingly.
2. To announce your presence, push the Doorbell button
3. To talk with remote unit, press the Call button and then talk into the mic opening at the bottom of the unit.
4. To leave a message press the Leave Message button and talk into the mic opening at the bottom of the unit. When finished, the red light will go on indicating there is a message.
5. If the red light is on indicating there is a message, push the Play button to listen to the message. After you have listened to the message the red light will go out. You can only play the message once.
6. To turn the unit off, turn the On/Off Volume control knob counter clockwise until a click is heard.
7. Turn the "Status Dial" to select the current status (one of seven settings).

TO OPERATE:

Remote Unit

1. To turn on press the On/Off button on the front of the unit.
A red light above the on/off button will go on indicating the unit is on.
2. Adjust the volume as necessary using the Volume control on the side of the unit.
3. To talk with the main unit, press the Talk button on the side of the unit and talk into the speaker.
4. To turn the unit off, press the On/Off button.

CAUTION

- Only adults should replace batteries.
- Replace the battery in either unit when unit stops operating properly.
- Use only fresh batteries of the required size and recommended type.
- Dispose of old batteries promptly and properly.
Do not burn or bury them.
- If you do not plan to use your unit for several weeks, remove the batteries. Batteries can leak chemicals that can harm electronic parts.
- Do not operate main or remote unit without antennas as removal of antenna will affect normal operation of unit.

COMPLIANCE WITH FCC REGULATIONS:

This equipment has been tested and found to comply with the limits for a Radio Transceiver, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures;

- Reorient or relocate the receiving unit.
- Increase the separation between the equipment and receiver.



© 2004 Summit Products, Inc.
Trussville, AL 35173

Printed in China.

NOTE:

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER AUTHORITY TO OPERATE THE EQUIPMENT.