

Remote Control Instruction Manual

This 7.5' tree is pre-strung with 1,400 clear and colored mini lights (800 clear, 200 blue, 200 red, and 200 green)

CARTON INCLUDES:

- 4 Pre-lighted tree sections (A-Top, B-Upper Middle, C-Lower Middle, D - Bottom)
- Sturdy metal tree stand
- 4 Screws for tree stand
- 27 Extra 2.5 volt replacement bulbs
- 1 Spare fuse (5-Amp) inside plug for mini light string (Exhibit A)
- Warranty Registration Card

How To Use Your Remote Control:

- 1) Locate **On/Off** switch on right hand side of remote control and position button to On mode. Always remember to turn remote Off after use to conserve battery life.
- 2) Please notice there are 4 buttons on front of remote control box. **Color**, **On/Off**, **Function**, and **Speed**.
- 3) Push the **On/Off** button to illuminate your tree.
- 4) Then determine your color selection using the **Color** button:
 - a. Push button once for all clear lights
 - b. Push button twice for combination of clear and blue lights
 - c. Push button three times for combination of clear and red lights
 - d. Push button four times for combination of clear and green lights
 - e. Push button five times for combination of clear, blue, red, and green lights creating a multi light effect
- 5) Then determine the motion effect you want to show off the lighting of your tree by using the **Function** button:
 - a. Push button once for **Steady** illumination
 - b. Push button twice for **Color Changing** illumination. This will cause your lights to change colors – depending on your color selection. IE: Clear to blue, clear to red, clear to green or from clear to blue/red/green (multi)
 - c. Push button three times for **Chasing** illumination. This will cause your lights to chase through your color selection. IE: Clear to blue, clear to red, clear to green or clear (always on) chasing through blue, red, and green colors.
- 6) Finally – determine the speed of the function selected utilizing the **Speed** button:
 - a. There are five speeds. Push the button as many times as necessary to achieve your desired speed.

The device is complied with FCC 15.231(a)(1), a manually operated transmitter shall employ a switch that will automatically deactivate the transmitter within not more than 5 seconds of being released.

Please Note: These operating instructions are merely a guide to get you comfortable with using the remote control. Once you turn on the remote and the tree - you can set these functions in any order you want – the choice is yours.



FCC Warning

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ☐ Reorient or relocate the receiving antenna.
- ☐ Increase the separation between the equipment and receiver.
- ☐ Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.
- ☐ Consult the dealer or an experienced radio/TV technician for help.