

Addendum to Instructions for MOJO Decoys (Model HW 2011) Multi-Cycle Remote Control

The HW2011 Remote Control is simple to use and adds a very real sense of movement to your motorized decoy. By varying the cycles of automatic “ON/OFF” operation, it provides a lifelike simulation of multiple ducks landing – one after another. Each remote control has 2 buttons marked “I” and “II”.

Decoy Remote Operation

To turn decoy remote features ON or OFF, press button # 1. Once the decoy receiver has been turned ON, movement of the wings will begin.

The timing of the wing’s flapping can be adjusted by pressing button #II. Each press of the button will rotate through the wing spinning settings in the order listed below.

Wing Movement Choices – Button #II

Steady ON (continuous spinning)



16 seconds ON / 6 seconds OFF

6 seconds ON / 16 seconds OFF

20 seconds ON / 10 seconds OFF

2 seconds ON / 20 seconds OFF

Caution

Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.