

REMOTE CONTROL USER MANUAL

PUT THE ON/OFF SWITCH UNDER THE TAIL OF THE DECOY TO THE OFF POSITION. PLUG THE RECEIVER INTO THE WIRING HARNESS. HOLD DOWN THE START (BLUE) BUTTON ON THE TRANSMITTER. WITH YOUR OTHER HAND, TURN THE ON/OFF SWITCH UNDER THE TAIL TO THE ON POSITION. HOLD THE START (BLUE) BUTTON ON THE TRANSMITTER FOR APPROX 10 SECONDS. A RED LIGHT ON THE RECEIVER WILL BLINK FOR THE 10 SECONDS ALSO. AFTER THE 10 SECONDS THE RED LIGHT ON THE RECEIVER WILL STOP BLINKING AND THE START (BLUE) BUTTON ON THE TRANSMITTER CAN BE RELEASED. THE TRANSMITTER HAS NOW BEEN PROGRAMMED TO THE RECEIVER.

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

