

► Caller Features

Motorized Decoy: Proven Mojo Critter Decoy Stores in Magnetic Decoy storage receptacle (located in the handle) when not in use.

Internal Antenna: Allows for extended range and battery life.

Expandable Tri-pod Legs: Raises the caller and decoy off the ground for improved visibility and sound disbursement.

Mojo Extension Pole Receptacle with internal threaded tri-pod receiver: This allows the use of the MOJO extension pole for even greater height; further improving visibility and sound disbursement. Female threaded camera tri-pod receptacle allows use of standard tri-pods.

Charge indicator light: Blinks green while charging. Lights solid green when fully charged (Stops Blinking).

Backlit LCD Screen: Illuminates for 15 seconds after pressing any button on the caller.

Decoy Storage Receptacle: The decoy top is stored conveniently in the handle of the housing. Just insert the magnetic end in the top hole provided in the top of the handle and allow to seal firmly on the metal peg in the bottom of the handle. Simply pull to remove.

◆ Buttons

No extended buttons to bump in your pack or bag – all buttons are flush.

On / Off: Press and hold for 5 seconds to power on the remote. Press and hold for 5 seconds to turn off the caller.

Volume Up and Down: 20 Step Volume Control. Press Volume Arrow Up to turn up the volume to a maximum level (20). Press Volume Arrow Down to turn down the volume to a minimum level (0).

Track Up and Down: 1000 Step Track Control (000-999). Press Track Arrow Up to scroll up from 000 to 999. Press Track Arrow Down to scroll down from 999-000.

Select Track Button: Once the screen displays your desired track. Press the Select Button to play desired track.

► Remote Control Features

External Antenna: Allows for extended range and battery life.

Soft Rubber Protective Cover: This helps protect the remote from the elements and also dampens noise while in use on the hunt.

2" Backlit LCD Screen: Illuminates for 30 seconds after pressing any button on the remote.

Lanyard Loop: Allows use of lanyard.

◆ Buttons

No extended buttons to bump in your pack or bag – all buttons are flush.

On / Off: Press and hold for 5 seconds to power on the remote. Press and hold for 5 seconds to turn off the remote. **NOTE:** Remember to power down your remote after use to avoid draining your batteries.

Volume Up and Down: 20 Step Volume Control. Press Volume Arrow Up to turn up the volume to a maximum level (20). Press Volume Arrow Down to turn down the volume to a minimum level (0).

Track Up and Down: 1000 Step Track Control (000-999). Press Track Arrow Up to scroll up from 000 to 999. Press Track Arrow Down to scroll down from 999-000.


Select Track Button/ Track List Synchronization: Once the screen displays your desired track. Press the Select Button to play desired track. See Track Synchronization on page (9)

Recall: Plays Previous sound selected.


Mute: Press once to turn off audio. Press again to resume audio. (This is not a pause feature)

Hot Buttons 1-4: Stores selected tracks and volume levels for easy quick access to your most used tracks. See configuring “Hot Buttons” on page (9)


Decoy On/Off: Press once to turn on the decoy motor on the caller. Press again to turn off the decoy motor on the caller

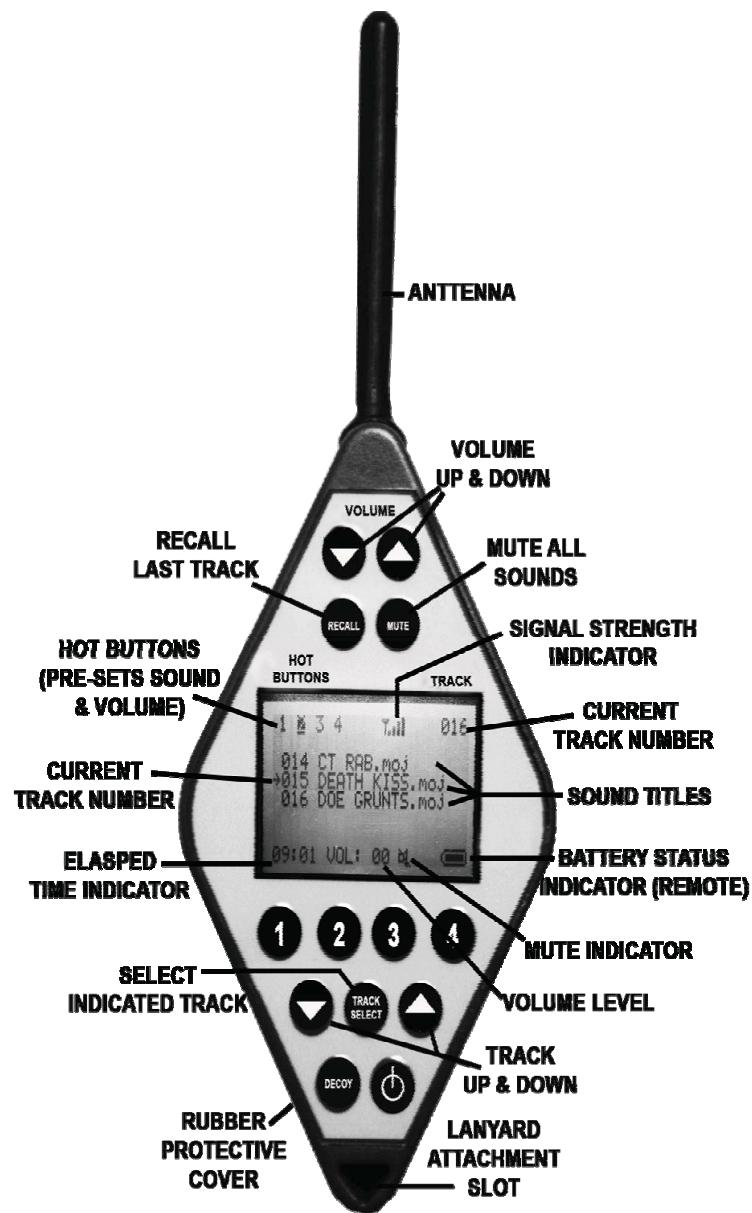

**CONTROL
PANEL
(CALLER)**

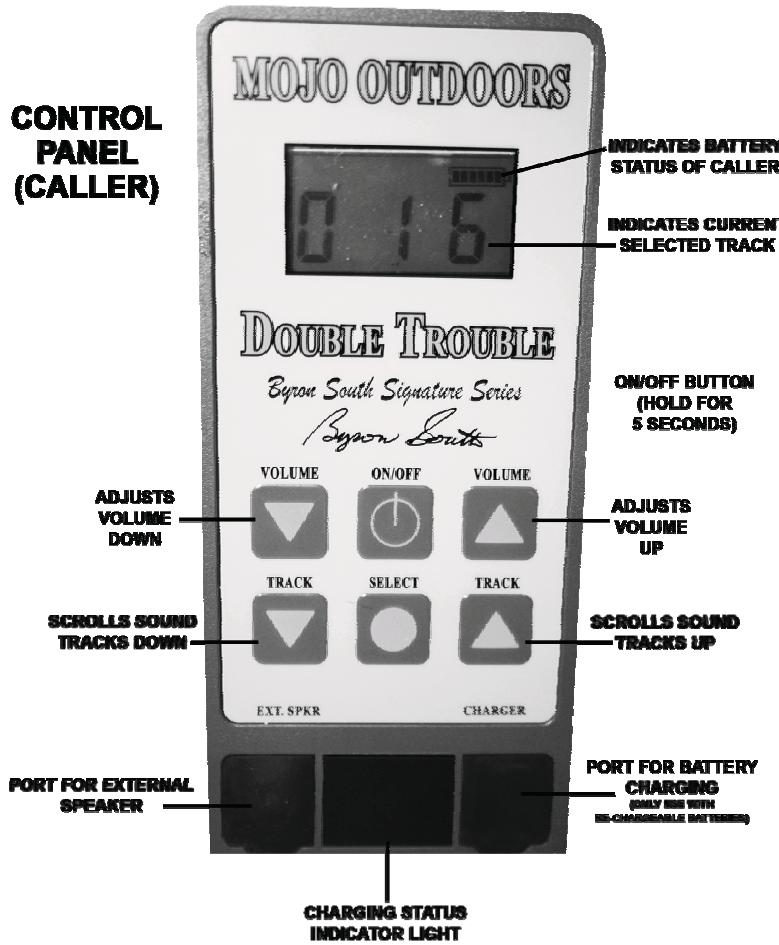

DISPLAY PANEL (CALLER)

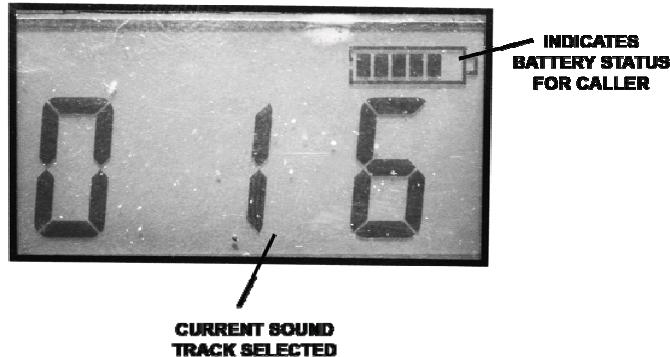

◆ Screen

Battery Status Indicator: Located at the top right corner of the caller's LCD screen. This displays the current level of power remaining in the batteries.

Track Number Selected Indicator: Displays the current track selected.

◆ Ports

External Speaker Port: This allows the use of an external speaker using a standard 1/8th speaker jack. When this feature is in use the caller will automatically disable the internal speaker in the caller. This allows for the use of a larger louder speaker to be used if needed.

Charge port: Only for use when Rechargeable (NI-MH) batteries are installed. **CAUTION:** Use only Mojo Outdoors approved charger. Never attempt to recharge non-rechargeable batteries. Doing so could damage the caller and could cause fire and/or personal injury.

USB Mini Port: Located under the battery compartment door. This is used to connect your caller to a computer (Using Supplied USB Cable) for the purpose of downloading new tracks using the Mojo Call Manager Software as well as for use in performing firmware updates. To download the "Mojo Call Manager" software and "user manual" go to www.mojooutdoors.com.

