



BlueExpert BED008 Bluetooth USB Dongle

User manual



Host Requirements

- IBM compatible PC with Pentium, Celeron™ processor or equivalent CUP or higher.
- RAM 64M or above.
- Screen : 800*600 or above.
- Display : Adapter True Color 16bits or above.
- Microsoft® Windows®98SE/ME/2000/XP

Contents for each package

- Installation CD ROM or setup disks for Windows98SE\ME\2000\XP (IVT or Toshiba).
- Bluetooth device : BED008.
- User manual.

Installation Steps

- If a previous version of IVT or Toshiba or Widcomm BTW has been installed, it is recommended to uninstall it first and restart the computer before installation.
- Insert the Installation software CD into the CD-ROM of your machine, you can follow the instructions to finish the BT software installation.
- Plug the BED008 into the USB port of a PC and the BT software would auto-detected the device BED008.



- After reboot the computer, and start the BT software. At the same time, User could use BT software and connect with other BT device by BED008.

Notice on FCC

15.21

You are cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

15.105(b)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

You are cautioned that changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.



Operation is subject to the following two conditions:

- 1) this device may not cause interference and
- 2) this device must accept any interference, including interference that may cause undesired operation of the device.

FCC RF Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.