

C63 Manual

Foreword

We are dedicated to keep improving product performance and product quality, and also make effort to ensure correctness and completeness of this manual, however the manual may be subject to change without prior notice, if parts of the software are not consistent with current version, please make use actual software as standard.

Our company could not bear any responsibility for data loss, software damage, expanded storage equipment damage and private computer damage due to malfunction caused by user's misuse.

Before using this product, please read this manual carefully.

Tip:

If the device cannot power on for first using, please check the battery's capacity, please charging when battery is lower

Notes

Please kindly read carefully all the notes below to avoid unnecessary losses to the maximum

I Safety Notes

- 1 The device doesn't possess waterproof performance. Please prohibit using under wet and dangerous environment.
- 2 Never place the device under sharp sunlight in order not to shorten the battery life
- 3、 Never squeeze display panel or put heavy object to protect the screen from getting broken
- 4、 Stop erasing the device with chemical liquid. Please clean using cotton-free soft cloth
- 5、 Don't leave out, beat or vibrate the device. Because strong vibration or falling down will cause the damage of the device or rude treatment will ruin internal structures
- 6、 Don't tear down the device personally. The device malfunction will be cause by non-professional maintenance persons without our company. The warranty won't be accepted.
- 7、 To ensure flight safety, make sure the network is switched off while taking the plane
- 8、 Normal work temperature of device display panel is 0-40° C. If surpass the scope, the display effect will become worse
- 9、 Close wireless near medical equipment, which maybe interfered at hospital or health care organizations
- 10、 Stop placing the device around heating equipment because heating battery will cause explosion

 
11、 Stop using if the battery is damaged, distorted, discolored, overheated or smells bad.

II、 Product Notes


- 1 If the reader couldn't recognize the T-card inserted, please take out and insert again
- 2 While the T-card is reading data, please stop inserting, shutdown or resetting T-card
- 3、 Choose FAT format while formatting T-card
- 4、 Stop saving or deleting on T-card frequently in order not to shorten the T-card life
- 5、 Avoid the device being beat strongly, static or battery interfere of other devices
- 6 If the device is hard to exit or suspend the operation, please press RESET button to restart

◆Instruction


Topside :

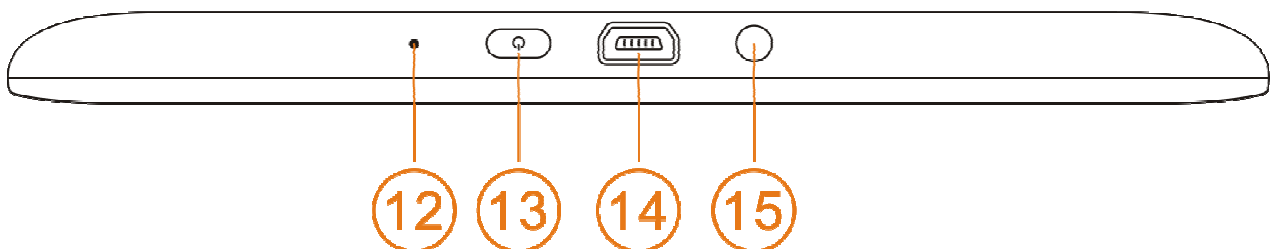

Front side :

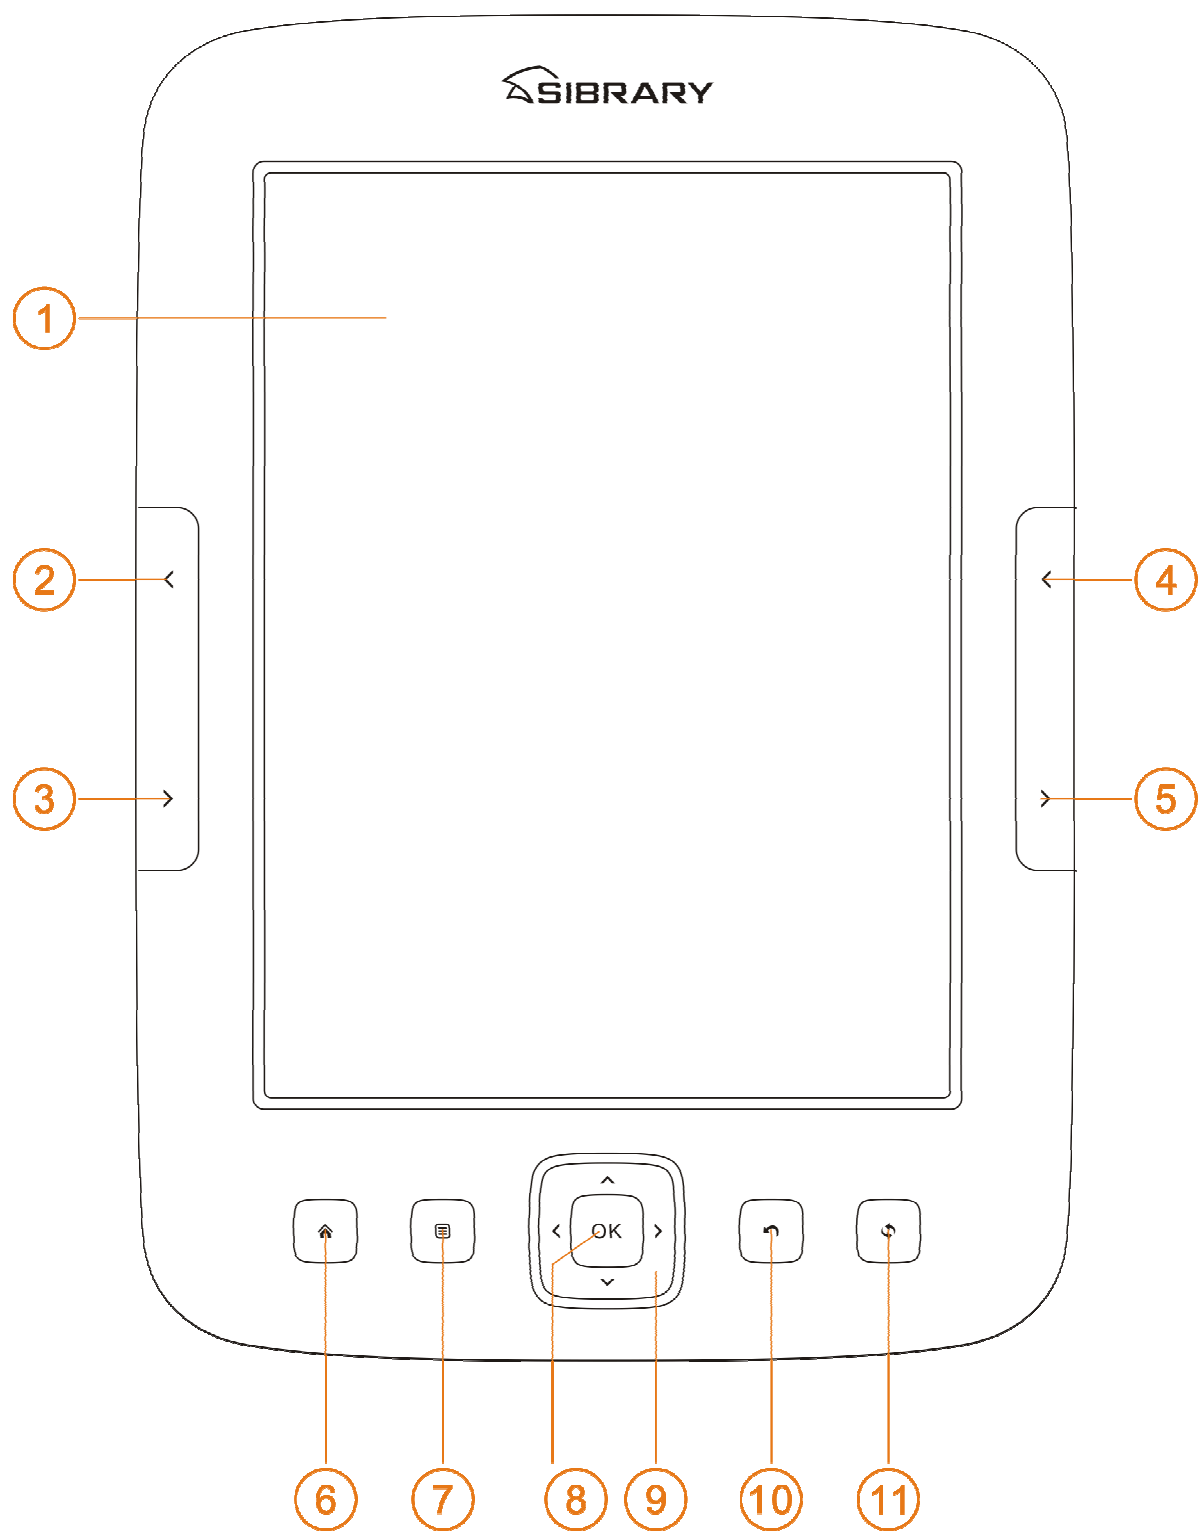 

backside :

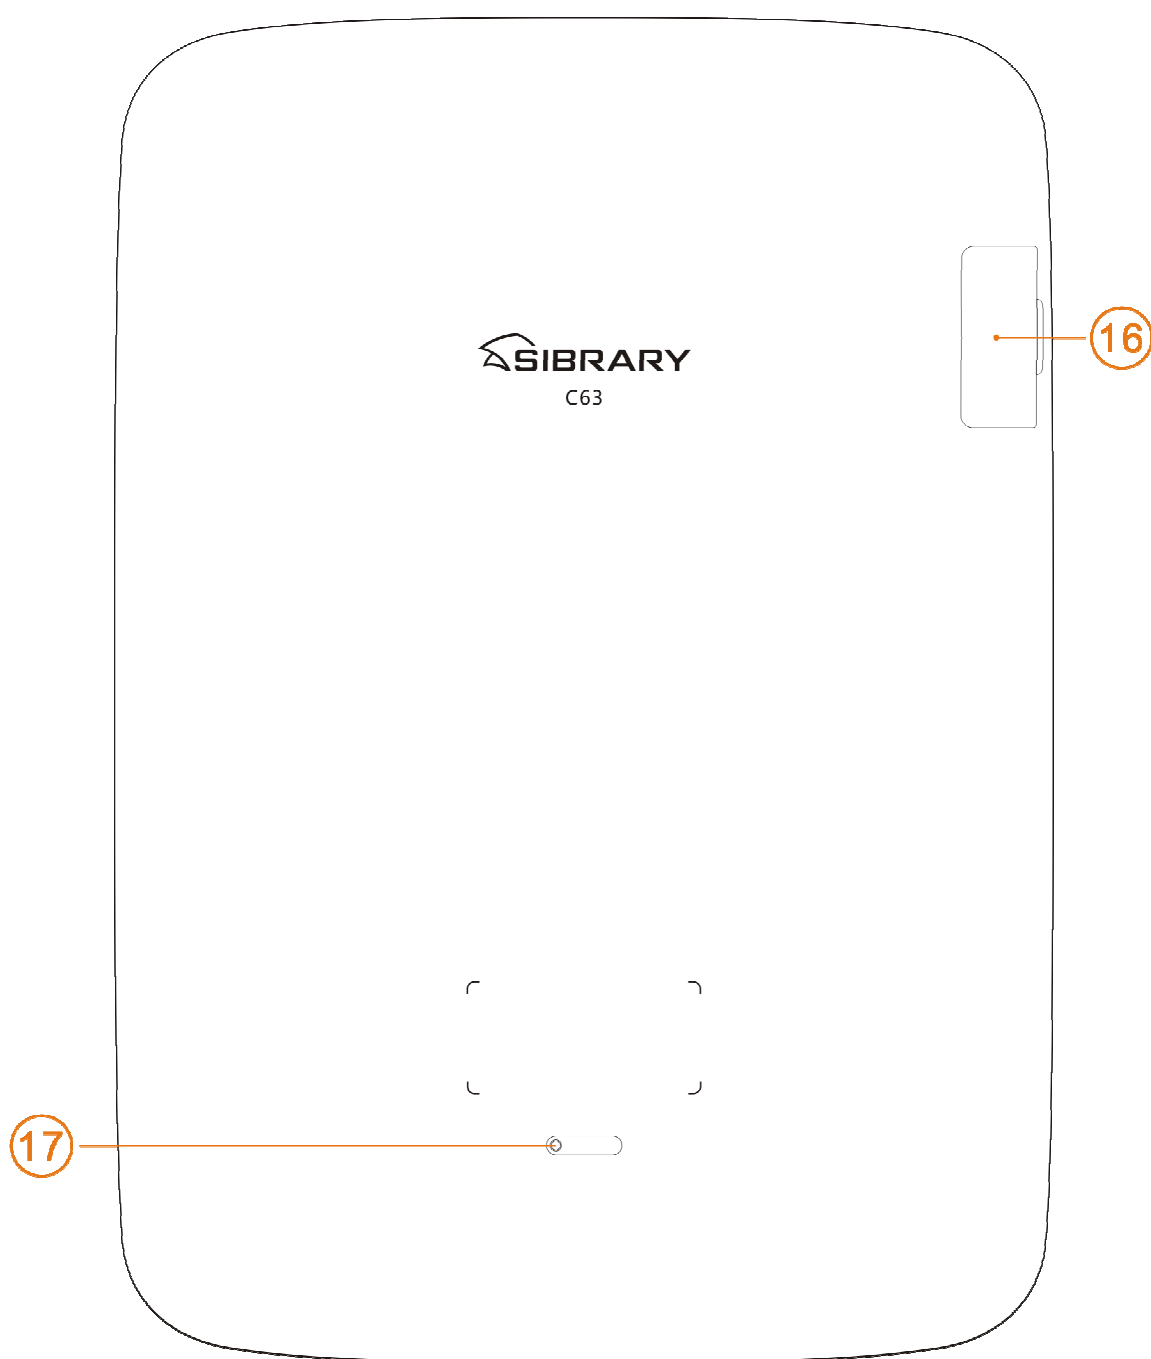 

Button function :

1	E-ink Panel	E-ink panel contents displayed area, which makes you enjoy reading like real papers
2	PreviousPage	Look though contents on previous page
3	Next Page	Look though contents on next page
4	PreviousPage	Look though contents on previous page
5	Next Page	Look though contents on next page
6	Home	Back to desktop navigation

7	Menu	Display the menu window
8	OK	Move Confirm and execute the selected item. to the previous screen
9	Joystick	Up and down, right and left navigation
10	Back	Move to the previous screen
11	Refresh	Full Screen Refresh
12	Indicator	this indicator light when charging and power on/off
13	Power	Power on/off, short pressing 5mins to shutdown and long pressing to power on
14	USB Port	Connect to the computer to transfer files or connect to the computer recharge.
15	Earphone port	Connect 3.5mm earphone
16	TF-card Slot	Insert TF-card right into the appointed slot
17	Reset	Reset to restart

◆Desktop

Main Menu : Current Reading、 Directory

Item : Recent、 Books、 Image、 Music、 File Manager、 Network、 Settings



◆Recent

Recent Reading icon on main interface shows one book read recently. Clicking on this book will open previous reading pages to keep reading.

Recent: Clicking on “recent” on desktop will directly enter into recent reading lists page, which saves more recent reading records. And press the up&down buttons you can check more reading records

MENU Functions



Delete: delete selected items



Delete All: delete all the records listed



 
Media Playing: check music executed by media player and background



Turn off: turn off device function

Books

Books showed are saved books and folders on documents folder stored on local memory and T- card; Books interface supports list details and shelf methods. Shelf method: if covers contained on books, the display will be through covers; if opposite, default covers will be added, which include book names, formats and types. List details method: display book types, sizes and building time.

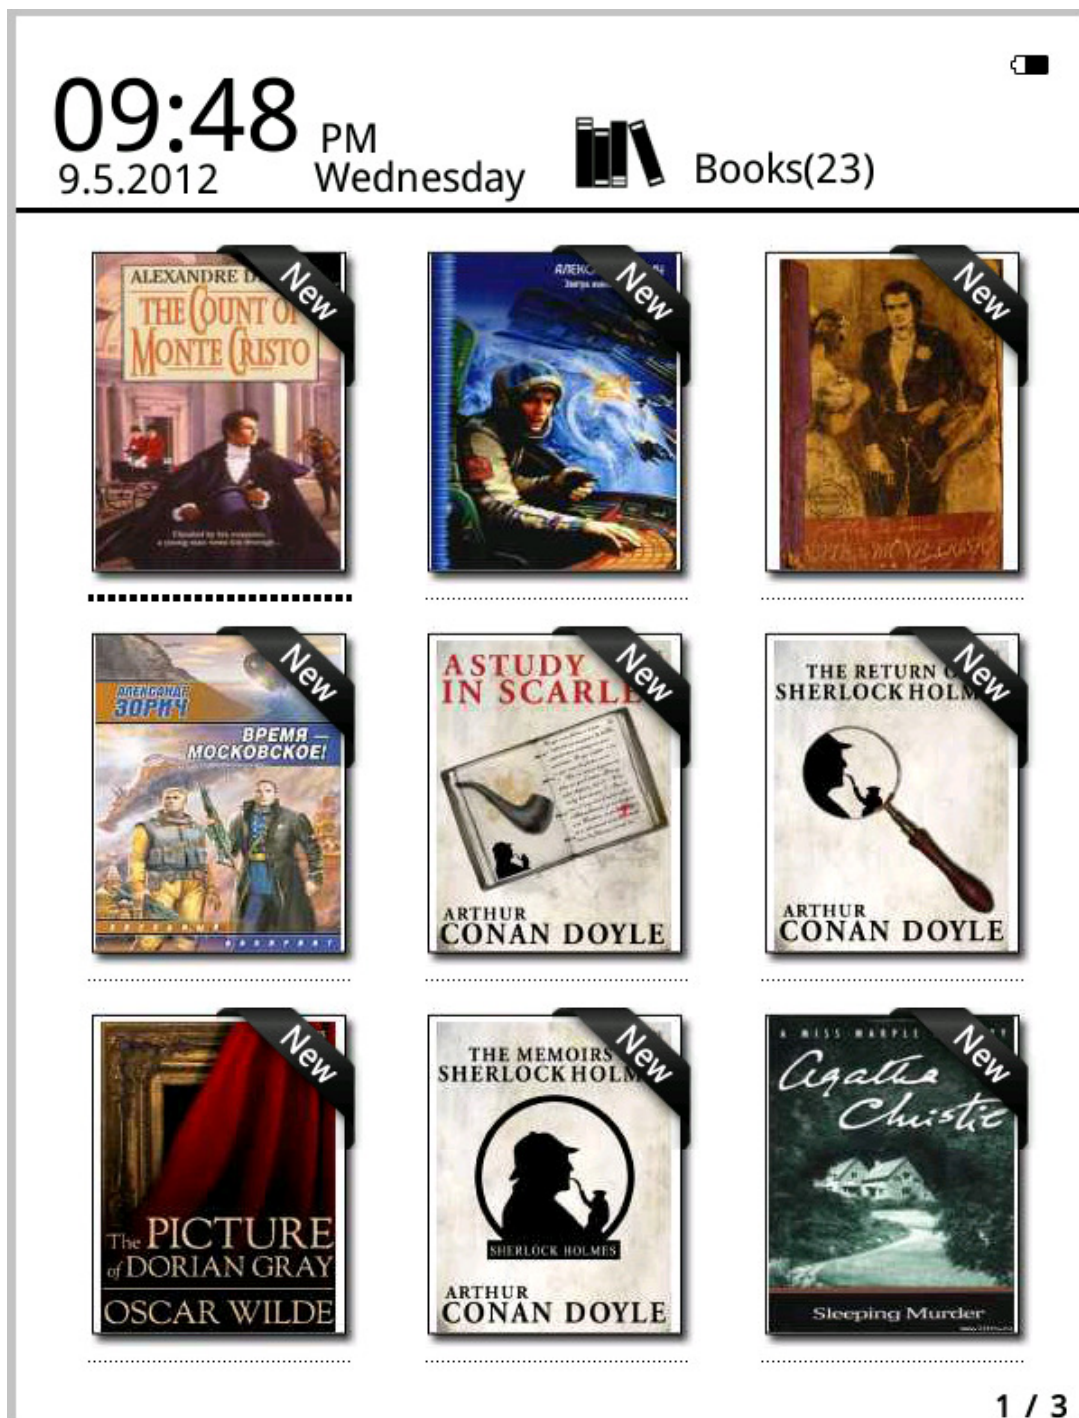

09:54

 
PM

9.5.2012

Wednesday



Books(15)



War of the Worlds, The - H. G. Wells

 
H. G. Wells

EPUB document

1008.5KB

2012.05.14

New



Herman Melville - Moby-Dick

Herman Melville

EPUB document

1.0MB

2012.05.14

New



Perdona pero quiero casarme contigo...

Federico Moccia

fb2

1.2MB

2012.05.14

New



Jacob Ludwig Karl Grimm - Grimms Fa...

Jacob Ludwig Karl Grimm

EPUB document

1.3MB

2012.05.14

New



monaldi_rita_imprimatur


Рита Мональди, Франческо Сорти

fb2

1.3MB

2012.05.14

 New



HARRY POTTER

Lee

adobe format documnet

1.9MB

2012.05.14

New

2 / 3

Warm tips: Currently supported cover formats include FB2、PDF、EPUB. Other formats couldn't be recognized until now and are only used in default covers.

My Books Menu Functions



; Search: Search all the files and folders on the contents. Support folder name search and suffix search. Exit searching result by back key



Go to page: under this menu turn the page , it will go directly to the point pages



Delete: delete selected items



Shelf and list mode: change my books into display of shelf method or list method



Sort: Support sort by file name, file size, file type, building time and descending and ascending. Default sort is by file name and ascending.



Properties: check properties of selected items. The information contains file name, file type, file size, route and building time



Media player: you can turn on the media player to play or stop play music

◆Reading

This device support below formats: TXT、EPUB、PDF、FB2、HTML、HTM、PDB、RTF、MOBI、DJVU、DJV、CHM、RAR、ZIP、DOC

Reading interface:

it my first duty to have done so had I not been barred by a positive prohibition from his own lips, which was only withdrawn upon the third of last month.

It can be imagined that my close intimacy with Sherlock Holmes had interested me deeply in crime, and that after his disappearance I never failed to read with care the various problems which came before the public, and I even attempted more than once for my own private satisfaction to employ his methods in their solution, though with indifferent success. There was none, however, which appealed to me like this tragedy of Ronald Adair. As I read the evidence at the inquest, which led up to a verdict of wilful murder against some person or persons unknown, I realised more clearly than I had ever done the loss which the community had sustained by the death of Sherlock Holmes. There were points about this strange business which would, I was sure, have specially appealed to him, and the efforts of the police would have been supplemented, or more probably anticipated, by the trained observation and the alert mind of the first criminal agent in Europe. All day as I drove upon my round I turned over the case in my mind, and found no explanation which appeared to me to be adequate. At the risk of telling a twice-told tale I will recapitulate the facts as they were known to the public at the conclusion of the inquest.

The Honourable Ronald Adair was the second son of the Earl of Maynooth, at that time Governor of one of the Australian Colonies. Adair's mother had returned from Australia to undergo the operation for cataract, and she, her son Ronald, and her daughter Hilda were living together at 427, Park Lane. The youth moved in the best society, had, so far as was known, no enemies, and no particular vices. He had been engaged to Miss Edith

Reading interface shows the ratio of reading speed, total pages and current reading page. All the books read could record last reading pages after closing and opening again. Use turning keys to execute reading turning.

Warm Tips: Pages No. maybe not showed immediately while opening books. Wait a moment to calculate page No. More book contents, longer it takes to show. You can open the backlight on any page if long press the Refresh button .

Executive functions on Reading Interface:

Add Annotation: Move navigation key on reading interface to appear a cursor. Move

cursor to the selected places  and press OK to save currently selected items and at the same time the contents will be marked underline.

Translation: Move navigation key on reading interface to appear a cursor. Move cursor to translating places to conduct choosing words. Then press OK to pop out a prompt box



to show related translation contents

Add Memo: Move navigation key on reading interface to appear a cursor. Move

cursor to the selected  and press OK to save currently selected items and at the same time the contents will be marked underline.

Footnote: Use shift+ up and down navigation keys to choose footnotes and check by pressing OK key.

Reading Menu Functions



Jump Page: Jump to initial page, last page, contents (only contents included on books), and appointed pages.



Search: input the key words and press confirm they can enter, the searched

out contents will displayed through black&white inverse mark



Page setting: you can adjust the size of letters, zoom scale, Line space , Margins , fonts family



Add Book Marks: Add book marks for current reading pages and book marks signs will be showed on the top corner of the page



Check Book Marks and Annotations: book marks and annotations interface shows successfully added book marks and annotations. Press left and right navigation keys to change book marks and annotations list interface. The menu function supports single delete and whole delete



Open and Close TTS: open and close TTS. Relevant TTS settings could follow reading setting instructions



Open and Close Auto-Turning: open and close auto-turning. Relevant auto-turning settings could follow reading setting instructions.



Rotate: select the right direction you want , then press ok



Reading Settings: Set current reading by languages, speed and volume. Current support Chinese and English.



Auto-Turning Settings: set auto-turning. The unit is by second



Books Properties: check properties of selected items. The information contains file name, file type, file size, route and building time.



Media Playing: check music executed by media player and background

◆ Image

This device support below mentioned pictures format and comic : JPG、 BMP、 TIF、 PNG、 GIF



My picture shows pictures and folders saved on local memory and T-card

Through menu you can search , delete, sort , jump to page and see Properties etc

◆MUSIC

Supported Formats :

WAV、WMA、OGG、MP3

Music Playing Interface :



Music showed on Music icon from the music files and folders saved on local memory and T-card , Open music to select music and execute playing or click on music player on desktop to play. Music player interface could appear by menu key in reading interface.

Music Player Function Introduction :

In music play interface, Click again to pop out music player. Use left and right navigation keys to play previous and next song, and long pressing to forward and backward; Up and down navigation keys are used to adjust volumes; Ok key is to suspend and play. Music player interface shows names of the songs, singers, album names and others. Pressing menu key could conduct playing methods settings such as single loop, order playing, whole loop and random playing. Exit music player or execute background playing, please press back key.

◆WiFi

Turning on WIFI will search the local wifi signal, select one ,enter password and start surfing , if there are unlocked wifi source or connected before , will be connected automatically..  means wifi source unlocked ;  means wifi source locked ;

Wifi Functions:



scan : rescan local wifi signal ;



Connect network : If there are some wifi password be recorded, will connect automatically,



Forget password : Do not remember the password and need enter password on next connection ;



Add network : Add the Wifi signal manually ;



Network Info : Show connected IP and MAC address.



Disconnect network : Disconnect current wifi ;

Reminder :

If there are 15 mins no use , the network will be disconnected automatically

◆Explorer

Make sure network is connected when use explorer ,otherwise will appear WIFI list for connection and will open Google homepage when connected, press BACK to quit.

Explorer menu: :



Enter website: Enter the website you need ;



Refresh website : Refresh website to get new info;



Add bookmark:Add current website as bookmark,but can not add the same website



Bookmark list: View the bookmarks, select and open the website directly ;



Setting: include disable/enable cookie, disable/enable JavaScript, disable/enable code detection, disable/enable Plug, disable/enable view picture;



Zoom in: Zoom in web page.



Zoom out: Zoom out web page.



Fullscreen: View web page in fullscreen



Home : Back to google homepage.

◆File Manager

Check all the files and folders on local memory and T card by this application such as Documents, Music, Pictures, Memo. If no folders showed on the device, please build according folder names manually or reboot the device. Besides, application interfaces corresponded with Documents, Music, Pictures support sub-folders.

Documents: if search for book formats on My Books, users need store books into this folder。

Music: if play music directly on My Music or music player on desktop, users need store music into this folder

Pictures: If look though pictures on My Pictures, please save pictures into this folder

Memo: save newly-built records on memo

◆Settings

1、 Fonts Settings

Five fonts can be showed in default. Besides, uses could copy required fonts into fonts folder to install new fonts. Shut down and power on, then newly installed fonts could be displayed on fonts settings.

2、 Date and Time Settings

Revise year, month, date, hour and min by this function. Press left and right navigation keys to adjust values after selecting the items. Press back key to save and exit

12 hours system and 24 hours system are optional.

Ebook will connect network and synchronize network time when select network time

3、 Standby by time settings

Choose standby by time , 1 mins . 3 mins, 5 mins, 10 mins

4、 Standby Pictures Settings

Set standby pictures by this option. Default pictures can be selected singly or in duplicate. After setting standby pictures on browsing interface, all the set pictures will be listed below, which can be optional. Users could also click Select All to choose all the standby pictures, which will change in turn when each standby time.

5、 WIFI settings

Connect , disconnect ,forget net work and create new network manually.

6、 DRM

Enter the register Adobe DRM account and password to log on to activate

7、 Preference

For screen refresh settings, alarm settings and restore factory and light settings

8、 Language settings

Change the language you need, this ebook support more than 100 languages and restart to work.

9、 System Info

Check the PCBA version, SN, memory card and sd card info.

10、 Restore factory

Restore factory default settings, previous setting will be lost. Please be cautious while choosing. Reboot will automatically proceeded after recovering factory settings

11、 Manual

Detailed description of operating the device is presented. Users could be guided to operate and use relevant functions

changes or modifications not expressly approved by the party responsible for compliance could void the user' s authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End user must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

The portable device is designed to meet the requirements for exposure to radio waves established by the Federal Communications Commission (USA). These requirements set a SAR limit of 1.6 W/kg averaged over one gram of tissue. The highest SAR value reported under this standard during product certification for use when properly worn on the body is 0.849 W/kg.