

LT8-1

Digital Transmitter Operation

1. Select Window Covering to Control


Press and hold appropriate pushbutton (1 through 8 or ALL) for at least one second.

2. Select Desired Control Function

Press and hold appropriate pushbutton (Open, Stop, or Close) for at least one second.

Battery Replacement :

The transmitter is powered by a lithium battery and should be replaced when the operating range of the transmitter decreases. To access the battery, remove the four screws from the rear of the transmitter and remove top cover. Replace with an equivalent (CR2032) battery. Make sure that the positive (+) side is facing upwards.

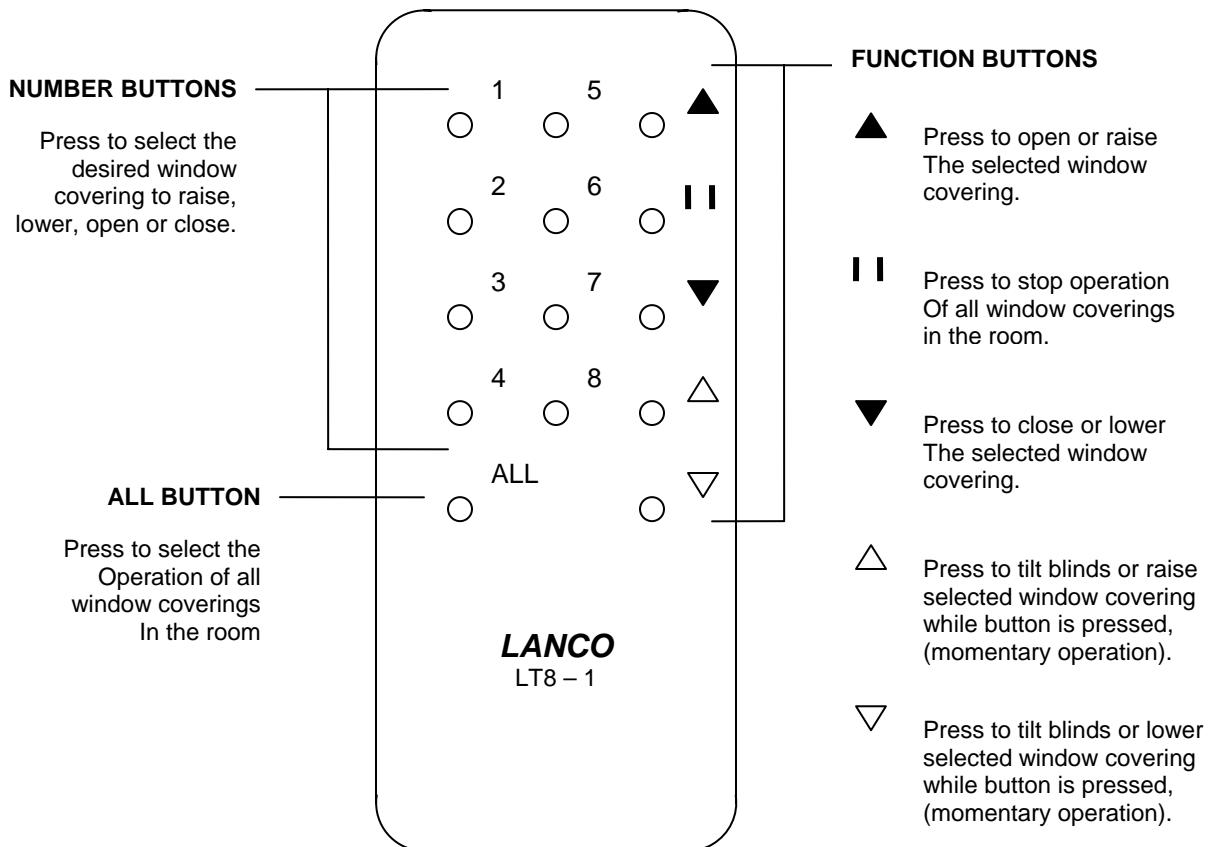

FCC ID: SI2315LT81

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Information to User

The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.