



- STEP 1** Press and push the bottom case to left direction according embossed arrow mark as following photo.

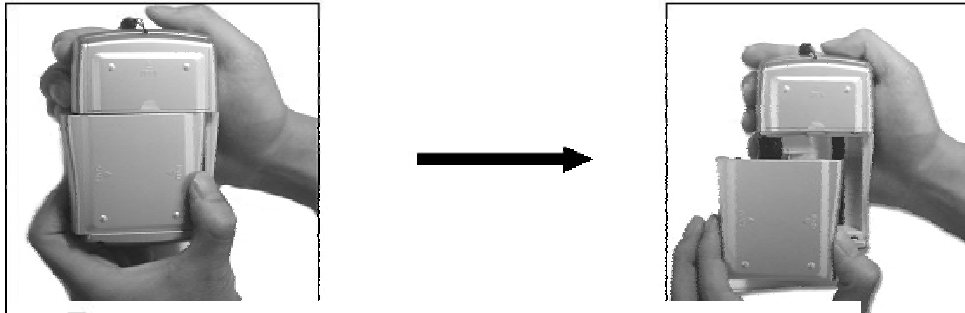

- STEP 2** Insert the roll paper into the printer and draw out the edge of roll paper enough to be set beyond paper slot of the printer.



- STEP 3** Press and push the bottom case to the right to close.

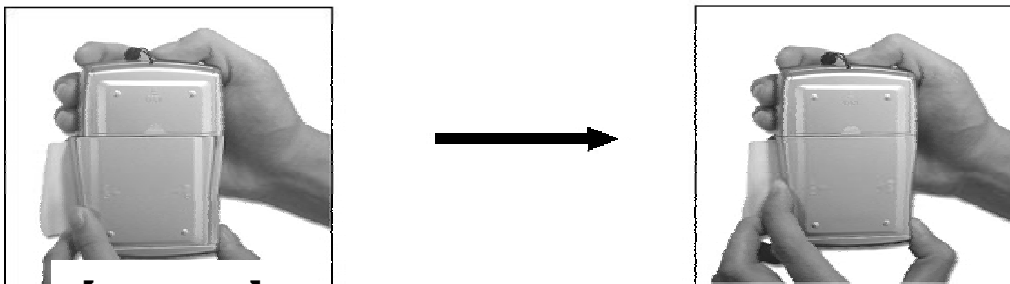


【 Caution 】

- ▲ Turn off EFT POS when you inserting roll paper, excepting “paper out” during normal transaction printing process.
- ▲ You can see red-line on both edge of roll paper, when the roll paper is almost end. We recommend you to change roll paper to prevent “paper out” during normal transaction printing process, when you see red-line on paper.
- ▲ Please set the roll paper in right position and make sure that the edge of roll paper should be flat.
- ▲ Please make sure that the roll paper is inserted before printing. It may damage the device.


Slightly press and push bottom battery case follow the direction of embossed open arrow mark as below photo.

After open the bottom battery case, tap the EFP POS-up side down- 2 or 3 time slightly on your hand for easy slip out battery. (Please do not unplug the battery connector)


Slightly press and push bottom battery case to open it.

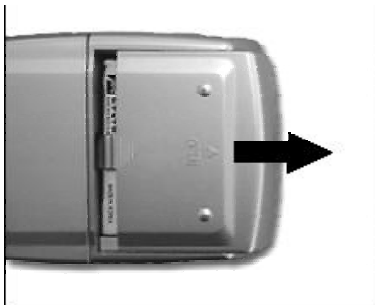

Push and pull the Strap head to penetrate into strap hole.

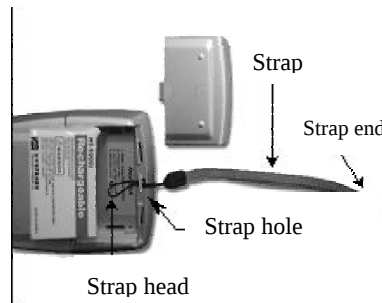

Penetrate Strap end into Strap head and fasten tightly.

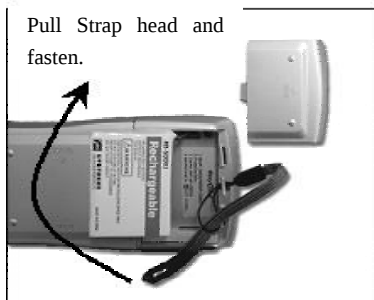

Put in battery and close bottom battery case reversely.




【 Caution 】

- ▲ To prevent falling down of EFT POS, please operate EFT POS after hang the Strap on your wrist.
- ▲ Do not spin around EFT POS using Strap.


Slightly press and push bottom battery case follow the direction of embossed open arrow mark as below photo to open it.

After open the bottom battery case, tap the EFP POS-up side down- 2 or 3 time slightly on your hand for easy slip out battery. (Please do not unplug the battery connector)

Slightly press and push bottom battery case to open it.

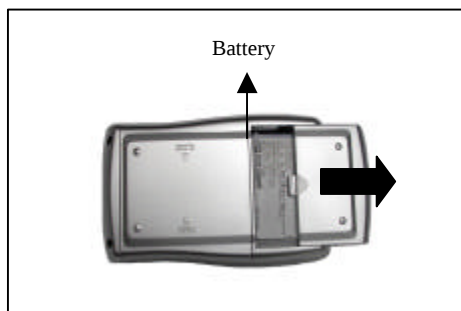

Pull out the battery and unplug the battery wire from battery connector.

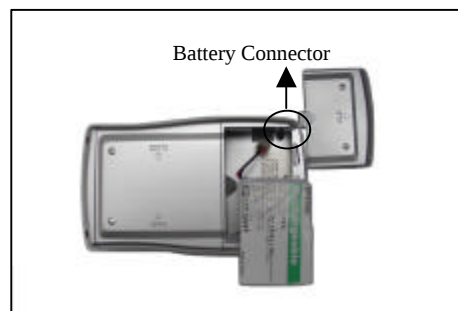

Hold battery wire of new battery and put it in battery connector.



Put in battery and close bottom battery case reversely.



【 Caution 】

- ▲ Please hold battery wire when you unplug it from connector.
- ▲ Please call to help desk when the lithium-ion battery is dead or un-rechargeable.
- ▲ Do not use other batteries. It may damage the device.

Specification



CPU	32 bit processor ARM 7
Memory	Flash 32MBit, SRAM 8MBit
Printer	Thermal Printer, paper width 58mm, 50mm/sec
Display (LCD)	Graphic 240*160, LED Back light, 16character*4line
Communication	RS 232C, TDMA
Keypad	23Keys (10 Alpha-Numeric and 4 Function Keys, Cursor point 4 Keys, Reset Key, Enter Key, Paper Feeding Key, Clear Key)
Security	Mechanical : Tamper Switch Software : SSL, CCT, 3DES,DS 5002
Card reader	ISO 7811 2&3 TRACK
Battery	Li-ion 7.2V (3.6V x 2) 2,050mAH, Rechargeable
Power	100~240V AC Adaptor
Environmental	0~50' C (30~100F), MAX 85%

● Troubleshooting

Please check the below particulars before you contact the help desk to notify an abnormality of the Mobile EFT POS.

Particulars	Possible Reasons	Actions
The window doesn't show anything when enter "ON" key.	Battery is discharged.	Recharge battery using AC Adaptor and power.
	Battery is not connected.	To connect battery.
The window fade-out quickly.	Power save function is activating.	To enter any key.
	Battery is almost discharged.	Recharge battery using AC Adaptor and power.
	Battery is just dead.	To change the battery to new one.
Printer is not normal.	Paper jam.	To open the bottom case and make the roll paper flat.
	Paper is not inserted.	To insert roll paper.
Communication fail	DoPa modem is not connected normally.	To make sure of connection of DoPa modem firmly.
	Electronic frequency is unstable or out of range.	To make sure that you are in electronic frequency reachable zone.
LCD window is too dark or light.	LCD contrast is not normal.	Enter 「F1」 key and then use arrow keys to adjust contrast.
EFT POS could not read credit card (or debit card).	Card swipe is abnormal.	To swipe the card more slowly and tightly. E
	Up-side-down card swiping.	To swipe the card right direction.
	Magnetic stripe of the card is damaged.	To enter credit card number and valid date manually.

【 Caution 】

- ▲ Please call to help desk for other abnormalities of the Mobile EFT POS.
- ▲ Please do not pull out DoPa Modem when it is working.
(If you need change of DoPa modem, please call to help desk.)