

TIPS:

For your first flight, ensure there are no strong air currents from fans, air conditioners or open windows. Adjust the trigger to find the correct position so your flying saucer will hover preventing it from flying too high or too low. It will take some practice to get the hang of it. Your flying saucer can also take off from any smooth flat surface, do not try to take off from deep pile carpet or soft furniture. This may jam the propeller before take off.

TROUBLESHOOTING


Problem	Possible cause	Solution
The flying saucer can't be controlled.	Power switch is not turned on.	Slide the power switch to the ON position.
	The battery is not charged.	Charge your battery fully before flying.
The flying saucer can't rise.	The battery power is low.	Recharge the battery fully.
	The trigger is not depressed far enough on the thrust transmitter.	Depress the trigger at least half way.
	The room may have drafts from windows, fans, air conditioner and ventilation systems.	Minimize the drafts before take off.
	Operator error.	Wait for the red LED to flash before trying to take off.
The flying saucer can not be controlled for the close distance.	The thrust transmitter batteries are low. The red LED does not flash after depressing the trigger.	Replace 9V alkaline batteries with new ones.
	The thrust transmitter batteries are inserted improperly.	Check and reinsert the batteries with the proper polarity as per the markings in the holder.

4

INSTALLING THE BATTERIES:


Installing the controller's Batteries Requires: 9V alkaline batteries

Install ALL 9V alkaline batteries, ensuring that the positive (+) and negative (-) battery ends are aligned with the "+" and "-" markings inside the battery compartment, as shown.

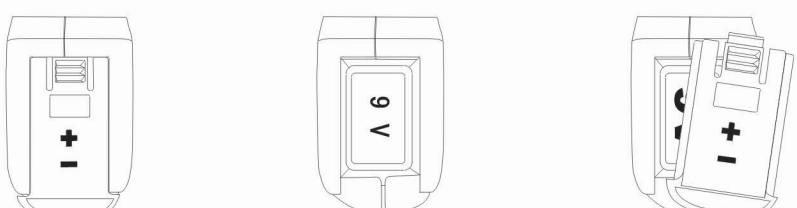**CHARGING YOUR FLYING SAUCER:**

Your flying saucer comes complete with rechargeable batteries that are pre-installed inside the flying saucer. You will need to fully charge your flying saucer before you can fly.

Important: Never charge the flying saucer which is full charged, or the damage to the battery may occur. Run out of the battery before charge again before the first flight for the best useful life of the battery.

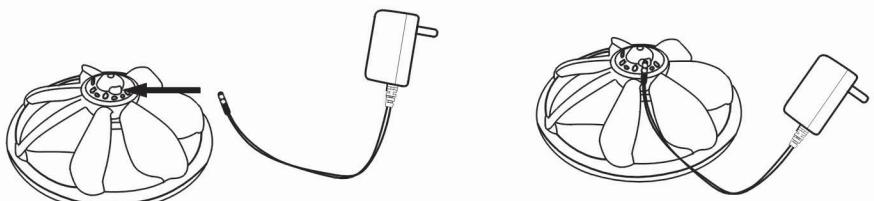

IMPORTANT: If the charging nozzle is not completely inserted into the charging cord, the red and green lights won't blink. So should insert again.

NOTES: It will take approximately 5 minutes to charge your flying saucer completely: at this point the green and red LEDs will flash continuously. When your flying saucer is new or has not been flown for a long time it will take several charge/discharge cycles for the battery to reach its full flight time.

WARNING: Never recharge your second time without having flown first. Continuous recharging without discharging first, will damage the battery.

FLYING HOVERING AND LANDING YOUR FLYING SAUCER

IMPORTANT: Ensure your flying saucer is fully charged for first time use and that you have a least 10ft(3 m) of clear area.

**WARNING****WARNING:**

CAUTION: Electrically operated product. not recommended for children under 10 years of age. as with all electric products. Precautions should be observed during handling and use to prevent electric shock.

Keep face, eyes, fingers, hair, body parts, etc away from the propeller and other moving parts. Always fly the flying saucer with 10 feet (3 meters) of open space.

Fly your flying saucer indoors only.

Do not expose your flying saucer to rain or moisture.

Do not fly in crowded environment.

Do not fly in a dusty area.

Ensure people know that you are playing the flying saucer.

Always turn your flying saucer ultralite "off" when not in use.


GETTING TO KNOW YOUR FLYING SAUCER

Check to make sure contents are complete:

1 flying saucer


1 controller

1 charger

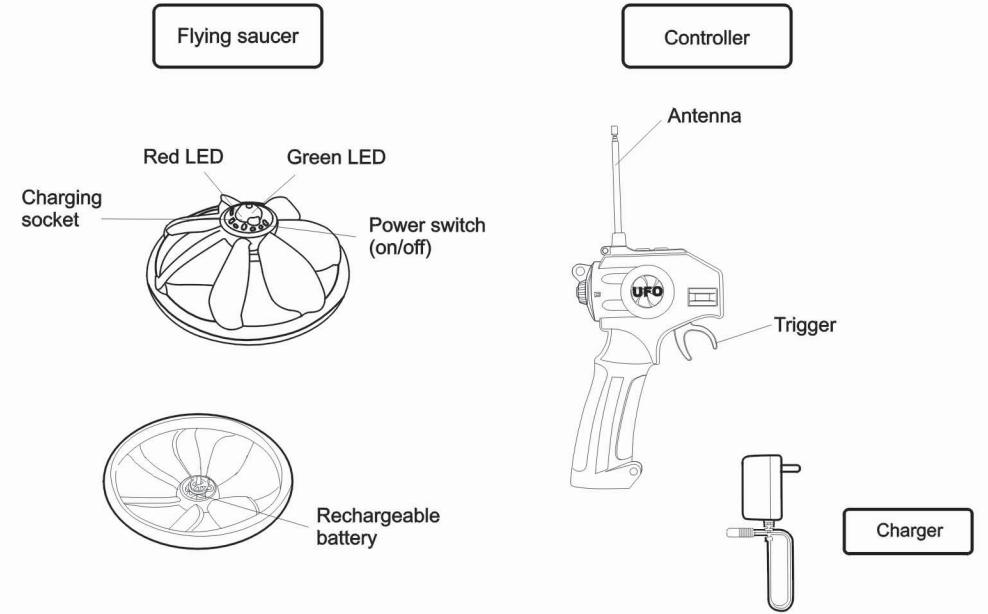


1


1. Switch on your flying saucer.

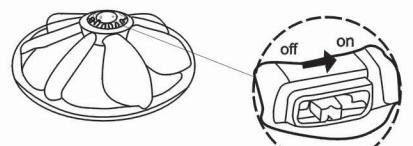


2. TO LAUNCH AND FLY HIGHER: Pull the trigger inwards. The flying saucer has proportional control. The harder you pull the trigger, the higher the flying saucer will fly.

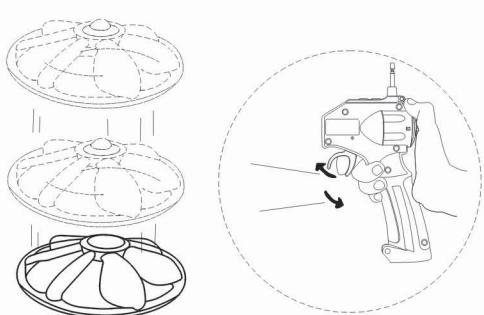

3. Adjust and hold the trigger to allow your flying saucer to hover.

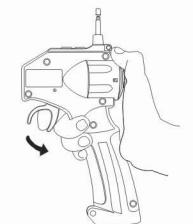

4. Release the trigger to allow your flying saucer to descend or land.

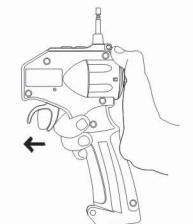

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Company Name: MZJ CORPORATION

Address: SANDY INDUSTRIAL PARK, PLAZA 9500 SUITE 205, 9500 SOUTH 500 WEST, SANDY, UTAH 84070, U.S.A

Contact person: Mr. Joseph Pun

Tel: 801-566-0999, 801-718-2066

2

3