

Programming

Review Programmed Telephone Numbers

1. While in standby mode, press  (Memory 1) button, or  (Memory 2) button, or  (Memory 3) button to review the telephone number saved into each memory.

Delete Programmed Telephone Numbers

1. Review the set telephone number to be delete by pressing the  (Memory 1), or  (Memory 2) button, or  (Memory 3) button.
2. Press and hold the DEL (Delete) button for 3 seconds to delete the telephone number. A beeping sound will confirm that the telephone number was deleted.

⚠ Important: Be certain there is at least one pre-programmed telephone number for CALL SAFE to call in case of an emergency.

Programming

When the alarm is activated, the Outgoing Message will repeat. This message will be heard by the emergency contacts and should contain contact or location information to assist emergency contacts.

Record personal OGM (Outgoing Message)

1. While in standby mode, press and hold  (Record OGM) button for 3 seconds.
2. After the beeping sound, record your personal message. Press  (Record OGM) button to stop recording. Recorded messages can be up to 10 seconds in length.
3. Repeat steps 1 and 2 to record a new message.
4. The Control Hub will playback your personal message.
5. Press  (#) (Playback OGM) button at any time to preview the personal outgoing message.
6. Press  (Delete) button during personal OGM playback to go back to factory default OGM.

Alarm Activation

How to Activate the Alarm

1. Press the **HELP** button on the Control Hub or the Panic Pendant until the alarm is activated (2 seconds). The Control Hub will start flashing and the OGM will playback repeatedly. If the Panic Pendant was used to activate the alarm, it will light up momentarily indicating that the Panic Pendant is working properly.
2. The Control Hub will playback the OGM repeatedly and its corresponding blue light will begin flashing.
3. After 30 seconds, the Control Hub will then proceed to call the telephone number preprogrammed on **M1**. Once it has completed this call, or if there is no response, it will call the telephone number preprogrammed on **M2**. Once it has completed this call, or there is no response, it will call the telephone number preprogrammed on **M3**.
4. If there is no response after calling **M3**, step 3 will automatically repeat for total of three cycles.
5. Press the **CANCEL** button on the Control Hub at any time to deactivate the alarm.

Set Time

Set Time On the Control Hub

1. While in standby mode, press and hold  (Set Time) button for 3 seconds.
2. Month setting will flash. Use Up and Down arrow buttons to scroll through the months.
3. Press  (Set Time) button again to set the date. Use Up and Down arrow buttons to adjust date.
4. Press  (Set Time) button again to set the time. Use Up and Down arrow buttons to adjust the hours.
5. Press  (Set Time) button again to set the minutes. Use Up and Down arrow buttons to adjust the minutes.
6. Press  (Set Time) button again to set the day. Use Up and Down arrow buttons to adjust the day.
7. Press  (Set Time) button again to confirm setting and exit.

Speaker Phone Feature

How to Use the Speaker Phone Feature

1. While in standby mode, when receiving an incoming call, press  (Speaker Phone) button to activate the speaker phone and receive call.
2. Press the Speaker Phone button to end the call.

Note: The speaker phone can only be used for incoming calls.

Warning

Important Safety Instructions

To prevent fire or shock hazard **do not use this plug with an extension cord, receptacle or other outlet unless the blades can be fully inserted to prevent blade exposure.** To prevent fire or shock hazard, **do not expose this appliance to rain or moisture.**



Warning

Important Safety Instructions

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Follow all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with a dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or ground-type plug. A polarized plug has two blades with one wider than the other. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Unplug this apparatus during lightning storms or when unused for long period of time.
- 13) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been exposed to rain or moisture, does not operate normally, or has been dropped.

Warning

FCC Warning

Changes or modifications to this unit not expressly approved by the party responsible for compliance will void the user's authority to operate the equipment. Any change to the equipment will void FCC grant.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warranty

(1) One-year Warranty

The manufacturer warrants this product to be free from defects in workmanship and materials under normal use for (1) year from date of purchase, excluding batteries. Warranty does not cover deterioration due to normal wear or damage from misuse, alteration, negligence, accidents or unauthorized repair. The manufacturer will replace the product free of charge if product is defective when you receive it or it malfunctions within (1) year from date of purchase. The manufacturer reserves the right to change product specifications without notice.

Service Company

Units under warranty and in need of repair should be returned, shipping prepaid, to:

MMPUSA LLC c/o Standard Merit USA LLC
6330 So. Sandhill Rd. Suite 2
Las Vegas, NV, United States 89120

Customer Service: 1-800-CALL-SAFE 8AM-4PM PST