

ISO14001 ISO9001



**The Best Digital Door Lock
in the World**

User Manual

MI-6300S

MI-6300RD



Smart card

Remote key

Notice

Please receive the entry certainly the introduction from installing store installer,
if there is no exact entry of a written guarantee, you should be disadvantaged on A/S.

The function and design will be changed without notice to improve the performance.

Thank you for purchasing this product. Please use it properly after carefully reading the instructions.

**CAUTION: Changes or modifications not expressly approved by the party responsible for
compliance could void the user's authority to operate the equipment.**

► Product Features

01



Panic release handle type

It facilitates escape while in danger opening easily with a simple action of lever down.



High reliable mechanical mortise lock type

It has high reliability mechanical mortise lock type with installing the locking device on door body inside.



Free direction mortise lock type.

Mortise lock of this product facilitates the execution adjusting to both direction of left or right handing.



Colorful display function

An 8color display and LED lamp provide easiness to users to look.



Mute function

You can open the door quiet not interrupting neighbor without any operating sound temporarily.



Two way solution

Children, handicapped and old people who feel difficulty in memorizing the passwords can use easily through touch style digital key in addition to passwords.



Double lock function

When a double lock system is activated, the door cannot be opened from outside even with the registered key or registered secret code.



Displaying of the battery quantity

A three-stage displaying function ensures the user will be aware of the battery's capacity. It will sound an alarm and lights up the lamp when batteries need to be replaced.



Low battery warning function

The LED lamp flicker with alarm when the battery is low to replace new battery.



Trespass alarm function

Emergency alarm for breaking and entering sounds while breaking and opening the door by force.



To prevent mischief and hacking

If anyone tries hacking through the combination of passwords for the purpose of mischief or breaking in, it generates alarm sound and blocks input for a specific time recognizing not registered password or digital key over 5 successive times.



Volume control function of operating sound

Volume can be controlled at 8 difference level, it can be use by your choice.



Auto lock / auto relock function

If the door is closed, you don't have to lock the door, it will be locked automatically. The lock prevents you from the mistake that you forgot to lock the door. And the door can relock itself in 10 seconds after a correct code (or registered digital key) is entered without door open.



Secret code registration function

Maximum 8 different secret codes can be registered for the convenience of the each family member or office staff individually.



Digital key

Up tp 20 digital keys are available at user's option.

It is for a large family or office

(You can purchase the additional digital key whenever you need)



The thorough security system for the case when the secret code is forgotten or the digital key is lost

In the case of the secret code is forgotten or the digital key is lost, just registering a new secret code or new digital key, will automatically nullify the previously registered secret code or digital key data, without the occurrence of any inconvenience or security problem.

➤ Notes before usange

03

- Thank you for buying the digital door lock of Milre Systek Inc.
- Please read the user manual thoroughly before using the product
- It has a movable built-in, real-time displacement numeric touchpad, which is a world-first, to avoid exposure of passwords due to fingerprint.
- Please study the safety precautions carefully (page 5) before using (page 6) for your safety and proper utilization of the device.
- The product and user manual are copyright protected by law.
- Do not disassemble or alter the lock according to your own discretion.
Assembling or disassembling the door lock may damage the product
Damage to the product caused by an unauthorized person, could damage your property.
If such a situation occurs, please contact our Customer Service.
- Please note that you may incur a legal penalty regarding any property damage, as well as not receiving normal A/S service in case of a defect caused by voluntary disassembly, processing or an unauthorized use of the product.
- We are not responsible for problems and incorrect operation of the product caused by a distorted door or a problem with the door itself.
- Please ensure that you inform the technician regarding the contents of the warranty card.
If these conditions are not complied with, the user may face a penalty, even within the warranty period of After Service, especially if the date of installation, the contact details of the store that installed it, and the installation technician are not mentioned.
- The illustrations shown in the User Manual might be different from the actual product.
- This User Manual is made of recyclable material
- The features and designs of this model are subject to change without prior notice for the sake of function improvements.

To be read before using

Special features of the product	1~2
Notes before usage	3
Contents	4
Safety precautions	5
Cautions in using	6
Brif user's page	7~8
Product composition and components	9
Name and function of each part	10~12
How to change the battery	13
How to use external emergency	14

Basic functions

How to change/register the secret code	15
How to register and delete smart card	16
Opening door from outside(secret code, digital key, mute function)	17
Locking door from outside	18
Opening door from inside	19
Locking door from inside	19
Using double lock	20
How to use remote key	21~22

Additional functions

Auto-lock function	23
Auto-relock function	23
To set automatic/manual lock	24
To set volume control	25
Function to prevent mischief and warning of hacking	26
Trespass warning function	27

Others

Troubleshooting & Cations	28~29
Warranty	30

⚠ Safety precation

05



Do not disassemble and modify the product yourself.

Disassembly or modification may damage the product and product damage by modification may lead to property damage.

Please consult with certified A/S Center for detailed inspection and reparation of the product.



In case of harmful gas and smoke entering the product.

please remove the battery of the product immediately. If this is not done, serious damage may be caused to the product.



Please keep the product away from water or any liquids.

If the product is exposed to salty water or liquids, please wipe off the moisture with a soft cloth. If moisture or foreign materials penetrates into the product, remove the batteries immediately and contact the Service Agency or Customer Service Center for advice.

Using this product with unauthorized foreign materials may cause problems to the product



Ensure that there is no battery leakage by cleaning terminal periodically (every six months)

If battery leakage is discovered, clean it with a dry cloth and replace old batteries with new ones. Leaked liquid could cause injury, so if it makes skin contact, please wipe it with soapy water.



Do not use batteries mixed with used ones or different types

It may shorten the life of battery and has risks like leakage and explosion.



Do not clean the product with flammable materials, such as alcohol, benzene or thinner.

The use of such substances may damage the surface or cause fires.



Do not expose the battery to fire or heat.

You should not leave the battery near a place of heat generation, or expose it directly to a place with fire or heat, or put it in water. It may cause serious damage like leakage or an explosion, resulting in severe damage or injury.



Do not use damaged batteries.

Do not have electrodes in the battery make contact with metal objects like a key holder. It may cause overheating, explosion or other damage.



Do not close the door with deadbolt in locked position

It may damage the product or cause malfunctions.



Do not cause shock to the numeric panel

It may damage the product or cause malfunctions.

⚠ Caution in using

Before Using

06

Make sure the secret code is not exposed



The secret code which is initially registered may be easily exposed when you set the system, so it is highly recommended to register a new code after the system is installed.



The product should be kept away from water

Clean softly using dry towels.

Product will malfunction or cease operating, if water infiltrates the interior, because of the batteries, electronic circuit, various switches, etc.



Do not disassemble, assemble, repair and remodel product indiscriminately

As the internal structure is complex and contains many precision parts, reassembly may be complicated. This should only be done by a factory-authorized person.



Change the secret code regularly

To ensure security, it is **highly recommended** to change the secret code regularly.



Please ask specialized installation shops for installation

Please always ask a specialized shop for installation because installation by an unqualified person may cause severe problems in operation, and if problems occur, an A/S fee will be charged.



Do not install this product in a place with direct exposure to rain

Do not install this product in a place with direct exposure to rain because the device can break or malfunction if water gets into the product as an electronic device.
(If the product gets damaged by rain, an A/S fee is to be charged.)



Do not touch by force and press the numeric keypad with sharp tools while using this product

It can be causes of wrong operation and device trouble.

► Brief user's page

07

1. How to change the secret code (registration)



Open the battery cover
and press 10key
button shortly

Press the secret code
(For example: 1234)

To finish set mode
once you
push [＊]

2. How to register (change) smart card



Open the battery cover
and press R/C button
shortly

Contact card key at the touch
plate on outer body.
(Flashing led lamp)
Registration is completed if you
heard beep sound of "bik bik".

To finish set mode
once you
push [＊]