

▶ How To Set Automatic / Manual Locking

Basic function

24

1. The door locked automatically being on automatic mode.
2. The door is not locked automatically being on manual mode.



Open cover



Press button [#]



Press secret code
(For example: 1234)



or



Touch digital key



Press button [#]



Press 5 to auto locking
Press 6 to manual locking



Note

- When you set "Manual Locking" mode, Door-open status would be sustained by using 1) secret code/digital key 2) inner side handle lever down one time to open the door
- In case of automatic locking mode, if the door closed on double locking mode, then the product will be locked(abnormal [Double Locking] mode) in this case. Door could be opened by normal way from outside.

➤ Volume control function of operating sound

Volume can be controlled at 8 difference level, it can be use by your choice.



Open cover



Press button [#]



Press secret code
(For example: 1234)



or

Touch digital key



Press button [#]



Press 2 to volume down
Press 3 to volume up



Note

- Press **1** to maximum volume up at once,
- Press **0** to minimum volume down at once.

➤ To prevent mischief and hacking

Additional function

26

If anyone tries hacking through the combination of passwords for the purpose of mischief or breaking in, it generates alarm sound and blocks input for a specific time recognizing not registered password or digital key over 5 successive times.



Pressing the wrong paaword
five times successively



biyong~ biyong~



Being off for one minute after warinig beeps



Touching unregistered digital key
over 5 suceessive times



Note

- The failure of password and digital keys are operated individually.
- If the function on preventing mischief and warning of hacking is activated, it will takes 1 minute to release automatically.
- When you press the [10 key] , [R/C] or [Manual lock] button during operation, sleep mode would be released.

➤ Tresspass Alarm Function

27

The trespassing warning comes on if try to open the door by force after spending more than three seconds closing the door.

The warning sound will continue for two minutes.



How to release the warning beep

1. Touch Digital Key



Touch Digital Key

2. Enter secret code



open the cover,
press button [＊]



Enter secret code
(For example: 1234)



Press [＊] to
release



Note

- Emergency warning continues to beep on unauthorized trespassing for two minutes.
- When the trespassing warning is on, to return it to normal you should enter the registered secret code or touch the digital key.

➤ Troubleshooting

others

28

Problem	Solution	Relevant Page
No response when pressing the button.	Batteries are discharged, please replace the batteries.	13
	When a door cannot be opened from outside, connect the external emergency power terminal to a 9V (6F22) square battery.	14
When pressing the button, a lamp begins flashing in red and an alarm "bik bik bik bik" comes on.	Battery power is not strong enough. Replace the batteries. (Remaining lifetimes is estimated app.10days)	13
Door lock doesn't work even after batteries were replaced.	Batteries are wrongly positioned. Make corrections as indicated.	13
Battery lifetime differs from that in manual.	Check the battery type (specifications). Use " AA(LR6) ", alkaline type only.	13
The door does not automatically lock after closing the door.	Check [auto/manual] locking mode. Confirm the auto locking mode is set on.	23,24
The door can not be closed, due to something caught in the door closing.	A square deadbolt remains projected. Retract the deadbolt back into the body and close the door.	22
When opening the door by secret code, it locks automatically without any operation.	When the correct secret code is used, the system unlocks itself. But if the user does not open and the door remains closed, it automatically relocks to protect the user's property. It is an intended function.	22
Upon entering the wrong code repeatedly, an alarm sounds and the system suspends its function.	If entering the wrong code 5 times, the burglarproof function will suspend its function to protect the user's property. Try again after one minute.	26
When you pulling down the inner handle lever, the door is open normally.	It is normal, the door is opened with just pulling down the handle lever because this product is applied Panic Release System	19
Opening the door with entering secret code and handle lever pulling down, if not open the door then it is heard "bikbikbikbik~" sounds.	If you are not open the door after pulling down handle lever, it will sound alarm on locking error.	17
It sounds "bikbik~" from the product unexpectedly.	Somebody press the product button in outside. Please check outside when this sound occurs.	

* Should the same problem occur repeatedly, despite taking the measures above indicated, please contact purchased shop when you bought the product.

► Troubleshooting

29

Problem	Solution	Relevant Page
The warning sound "bikbikbikbik" comes on when the door is not open after pulling down the handle from inner	It will activate locking error warning if door is not open after pulling down the handle.	19
When press the button, just sound comes on "bikbikbik" It makes nothing to do	Double-lock system is activated, Release the double lock system through the double lock switch turning to show green color.	20
The door can be opened by the secret code set as (1234)	The product is initially set as (1234) Please change the secret code for safer use.	15
It continuously beeps when I try to open the door	Secret code has been changed by someone. Please use it again after registering new secret code.	15
The door is not open with beeping when touching the digital key.	This digital key is unregistered or deleted by someone. Please use it again after new registration.	16
The door is not open with beeping when touching the digital key.	Double-lock system is activated. Release the double lock system through the double lock switch turning to show green color	20
The product operate is operated well but it does not make a sound or sounds little.	The product has been set on mute mode. Please release mute mode and set to beep mode.	25
	It does not sound temporarily when opening the door in mute mode.	17
It sounds a strange warning beep when touching the product	Trespassing warning is on. Please release it by touching a digital key or secret code.	27
It makes beeping sounds just when pressing the start or mute button.	Double-lock system is activated. Release the double lock system through the double lock switch turning to show green color.	20
The door can open by secret code or digital key when the door closed after set on double-lock mode.	It is normal, if double lock mode set on being open the door, it can be opened the door by secret code or digital key from outside.	20

Product Warranty

*Please keep this warranty to ensure receiving warranty services. You will be charged for the service if you fail to present the warranty.

The warranty period shall be one year from the date of installation (for agency)

Model		Serial No		Purchase Date	
Customer		Address			
Phone					
Agency		Installer		Phone	

- Please keep this warranty for your after-sales service. You may have to pay for the service if you fail to present the warranty.
- Failure to fill out form fields such as purchase date may void warranty.
- The product may not be regarded as genuine, if no serial number is described on the warranty.
- Call for installation and warranty services.

Management of the Warranty

- Milre Systek Co., Ltd conducts quality inspections, reliability tests and 3 examination processes during manufacture to provide reliable products.
- Please call Milre Systek Co. for further services if needed.

Description		Fees	
		Within warranty	Over warranty period
General Compensation	1. Within 12 months after installation	Free repair	Repair with fee
	2. Same defect repeats (2 times)	Free repair	Repair with fee
	3. Same defect repeats (3 times)	Replacement	Repair with fee
	4. Can not repair by manufacturer (when we can not repair in parts possession term, so we do not have depreciation parts).	Replacement	Replacement(will apply depreciation rate)
Consumer's mistake and on purpose	1. Wrong battery replacement or mistake	Repair with fee	Repair with fee
	2. Replacement of consumables	Repair with fee	Repair with fee
	3. Problems due to misuse	Repair with fee	Repair with fee
	4. Damage due to careless handling	Repair with fee	Repair with fee
It is not covered by consumer damage compensation, explanation of use and clean up product.			
However, we do not warrant against defects due to improper installation or failure to exercise normal maintenance, nor against the consequences of uses for which our products were not designed.			

9th floor, 201dong Chunui Techno Park Ⅱ, 202 Chunui-dong, Wonmi-Gu, Bucheon City, Gyeonggi-Do, S.Korea
<http://www.milre.com> **Milre Systek Co., Ltd.**



CAUTION

As this is a keyless digital door lock, damage may occur to parts of the dead lock system if it is not used according to the manual. Users should be fully aware of the manual and how to operate this product.

- Power : DC6V
- When the batteries completely discharged, please replace all to a new batteries immediately and don't mixed old and new one.
- There will be damaged to the product if the battery has reverse insertion.

Address :

9F 201 dong Chunui TechnoparkII , #202 Chunui Dong Wonmi-Gu, Bucheon City, Kyeonggi-Do, South Korea.

Rev.01