

PLANTPETZ™

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



Hello Tomorrow LLC

Suite 7050, 1005 Main Street
Pawtucket, RI 02860 USA

info@hellotomorrowinc.com

All rights reserved
US Pat. NO: 10,966,550
Other US and Foreign Patents Pending
Made in China

PLANTPETZ™

-Interactive Christmas Tree Instructions-

Touch branches and it responds with Christmas sounds and dance movements.


Pair with your smartphone.
It's a Bluetooth speaker to stream your own Christmas music.



Motion sensor
responds to your presence with movement and sound.

Microphone Speak or play music and it will dance. Record a message to play back.

Control Panel

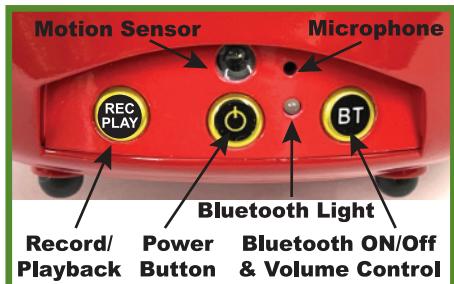

Power Supply



Getting Started

Connect the Power Supply as shown above. Press and release the Power Button to turn on. Now you are ready to interact with your Christmas Tree.

Move close to the microphone and speak, it will respond with movement.

Touch or stroke the branches and your Christmas tree will respond with holiday sounds and dance movements.

Play music from your smartphone close to the microphone and it will move and dance.

Record A Message

1. Press and hold the Record Button (REC/PLAY).
2. When you hear a beep start recording a message, speaking closely into the microphone. Continue to hold the (REC/PLAY) button for the duration of your message.
3. Press and release the (REC/PLAY) button to play back your message. Repeat steps 1 and 2 to re-record.
4. Turn PLANTPETZ™ off. Turn the power back on and your message will play when the Motion Sensor is activated. Touch your tree and the message will play back once more.

Volume Control

Short press and release (less than 1 second) the Bluetooth button (BT) to change the volume level, indicated with a beep. Each consecutive short press and release will adjust the volume level progressively one increment higher or lower.

Pair to a smartphone with Bluetooth

1. Press and hold the Bluetooth Button (BT) for more than 3 seconds until you hear “Ready to pair” and the blue light is on continuously.
2. Open Bluetooth on your phone, click on “PLANTPETZ™ Christmas” to pair.

Now your Christmas Tree is a Bluetooth speaker. Stream music or any audio from your smartphone and your tree will dance to the music.

Troubleshooting

Bluetooth - If a problem pairing check that the blue light is illuminated. If not repeat steps 1 and 2. If it still will not pair delete any previous “PLANTPETZ™” pairings on your phone.

Microphone - If your tree is not responding move closer (within 8") and speak louder. If playing music move your phone closer to the microphone and increase the volume if necessary.

Touch Response - If your tree is not responding, try touching with both hands.

If your Christmas Tree stops responding - Try switching the Power Button off and on again.