


## FAP4213-093 BMN with INTERNAL BATTERIES – FRONT VIEW

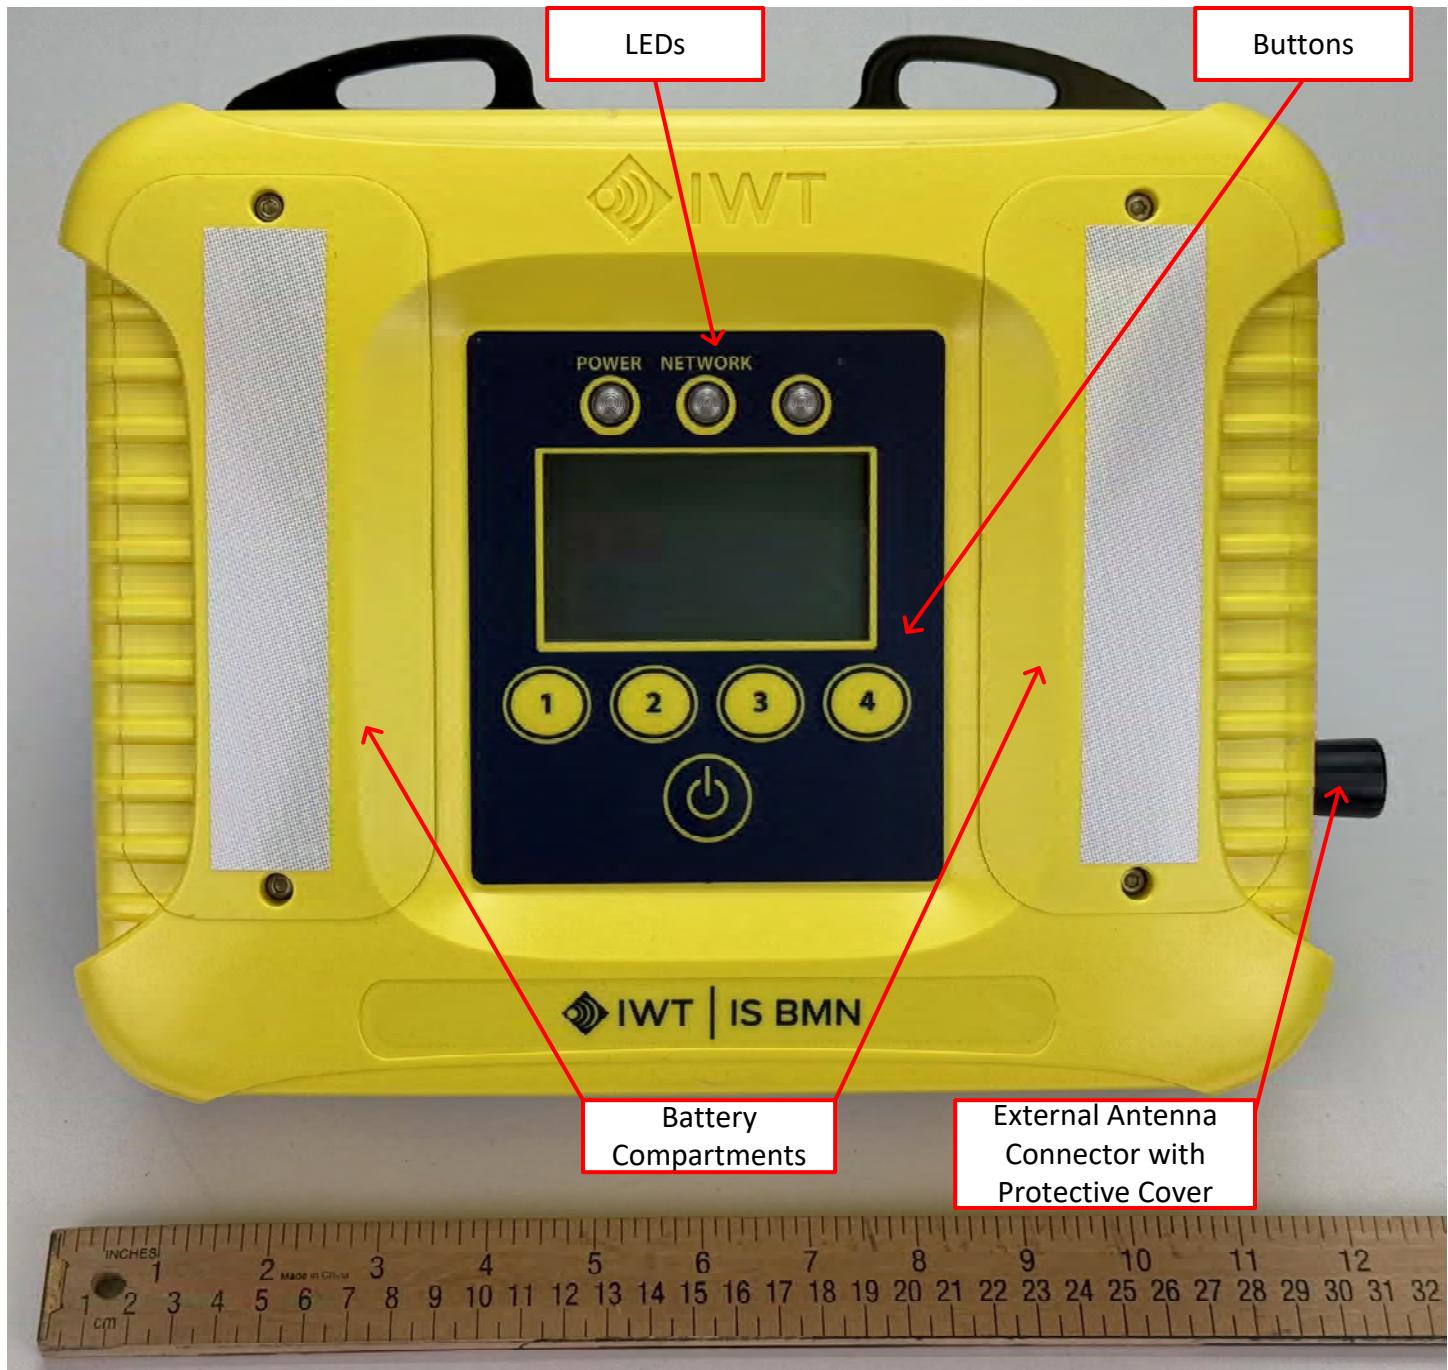


**FAP4213-093 BMN with INTERNAL BATTERIES – FRONT VIEW – BATTERY COOMPARTMENTS OPEN**




Battery  
Compartments

### FAP4213-093 BMN with INTERNAL BATTERIES – BOTTOM VIEW

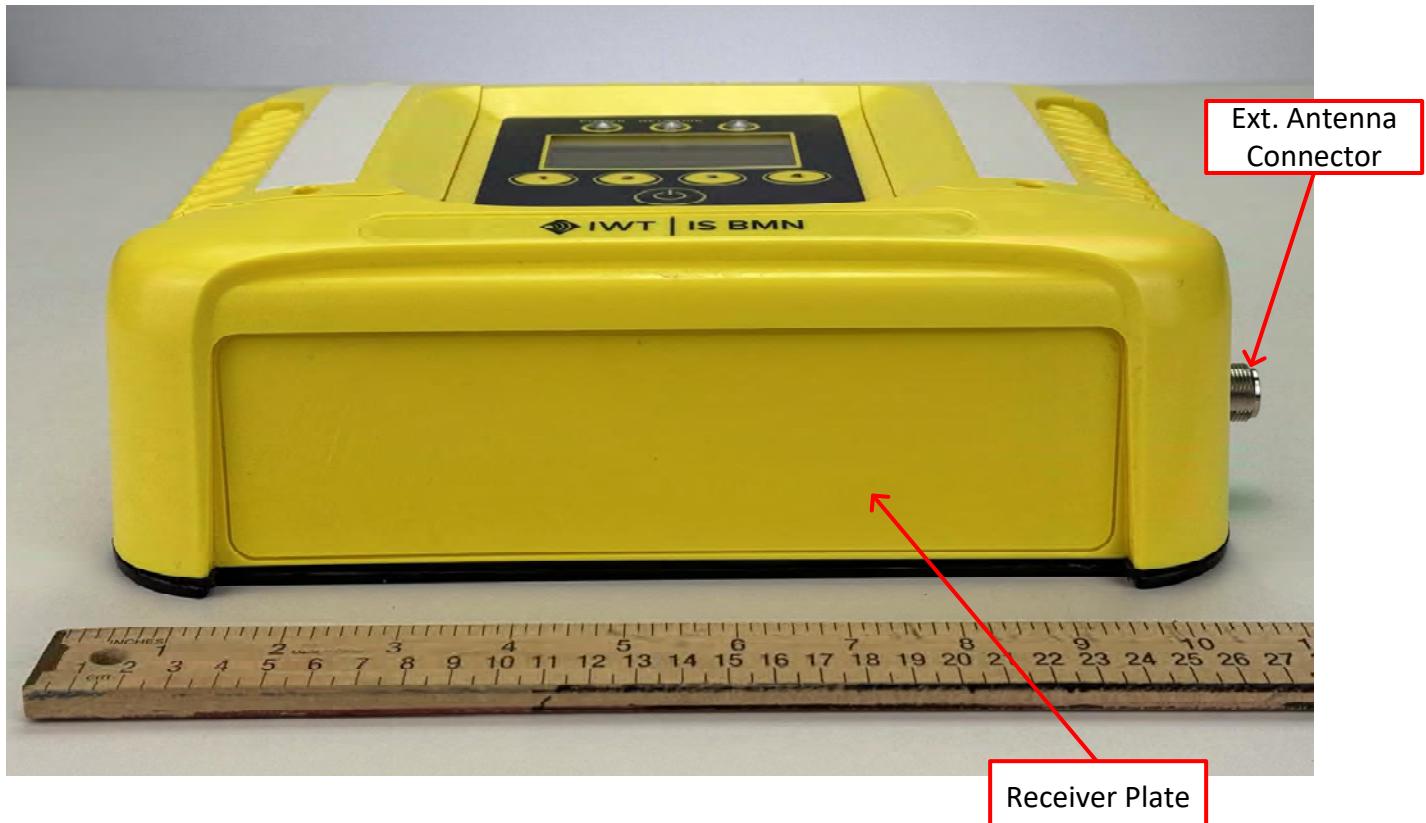

Receiver Plate is different depending on product configuration. For Model FAP4213-093 it is blank (solid).

## FAP4213-093 BMN with INTERNAL BATTERIES – RIGHT SIDE VIEW

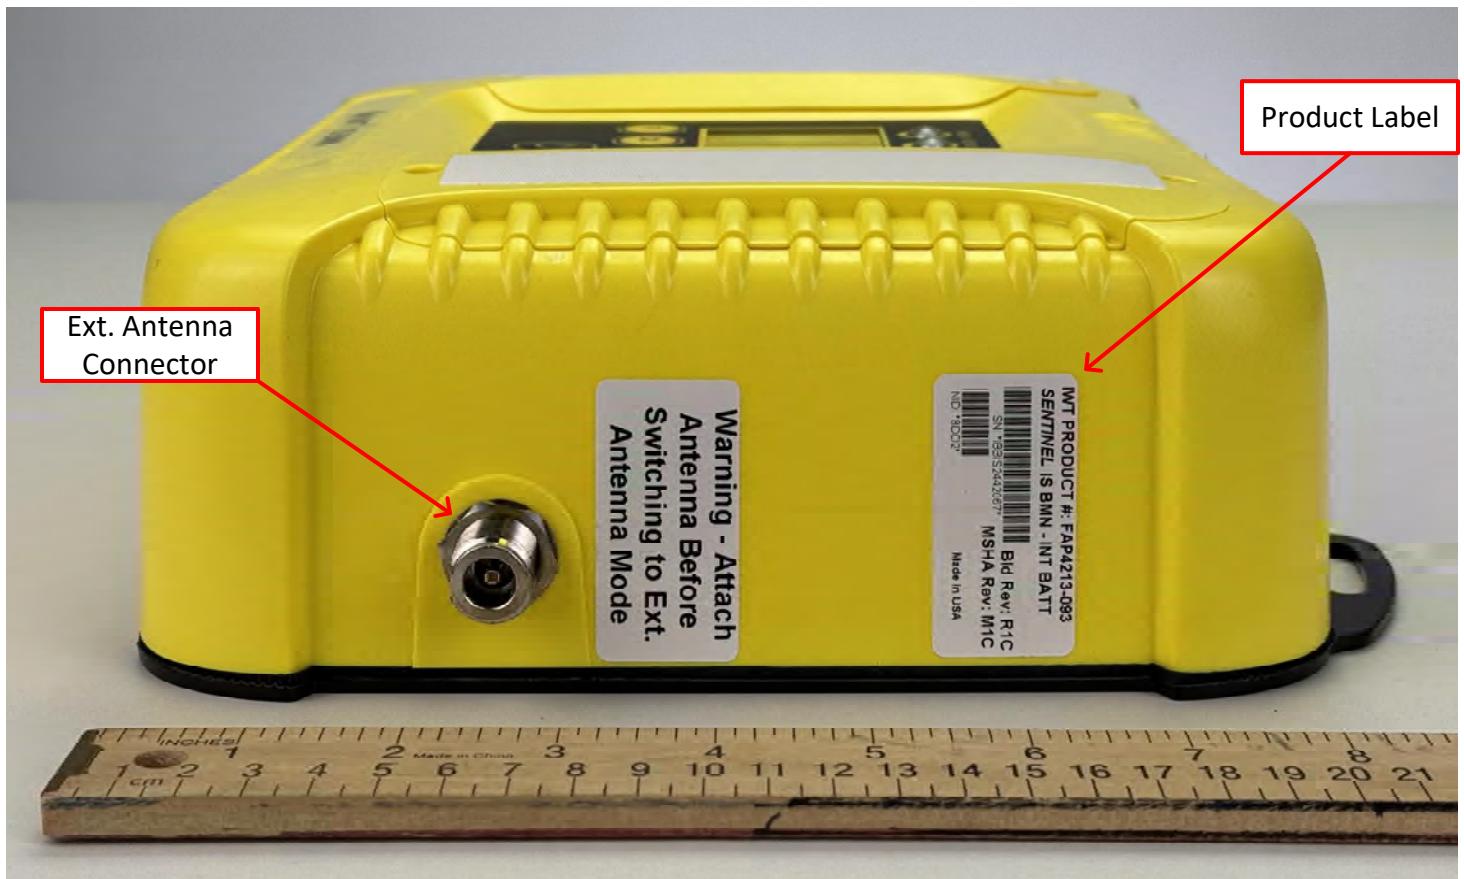


## **FAP4213-093 BMN with INTERNAL BATTERIES – TOP SIDE VIEW**



**FAP4213-093 BMN with INTERNAL BATTERIES – LEFT SIDE VIEW**





### FAP4213-093 BMN with INTERNAL BATTERIES – BACK VIEW

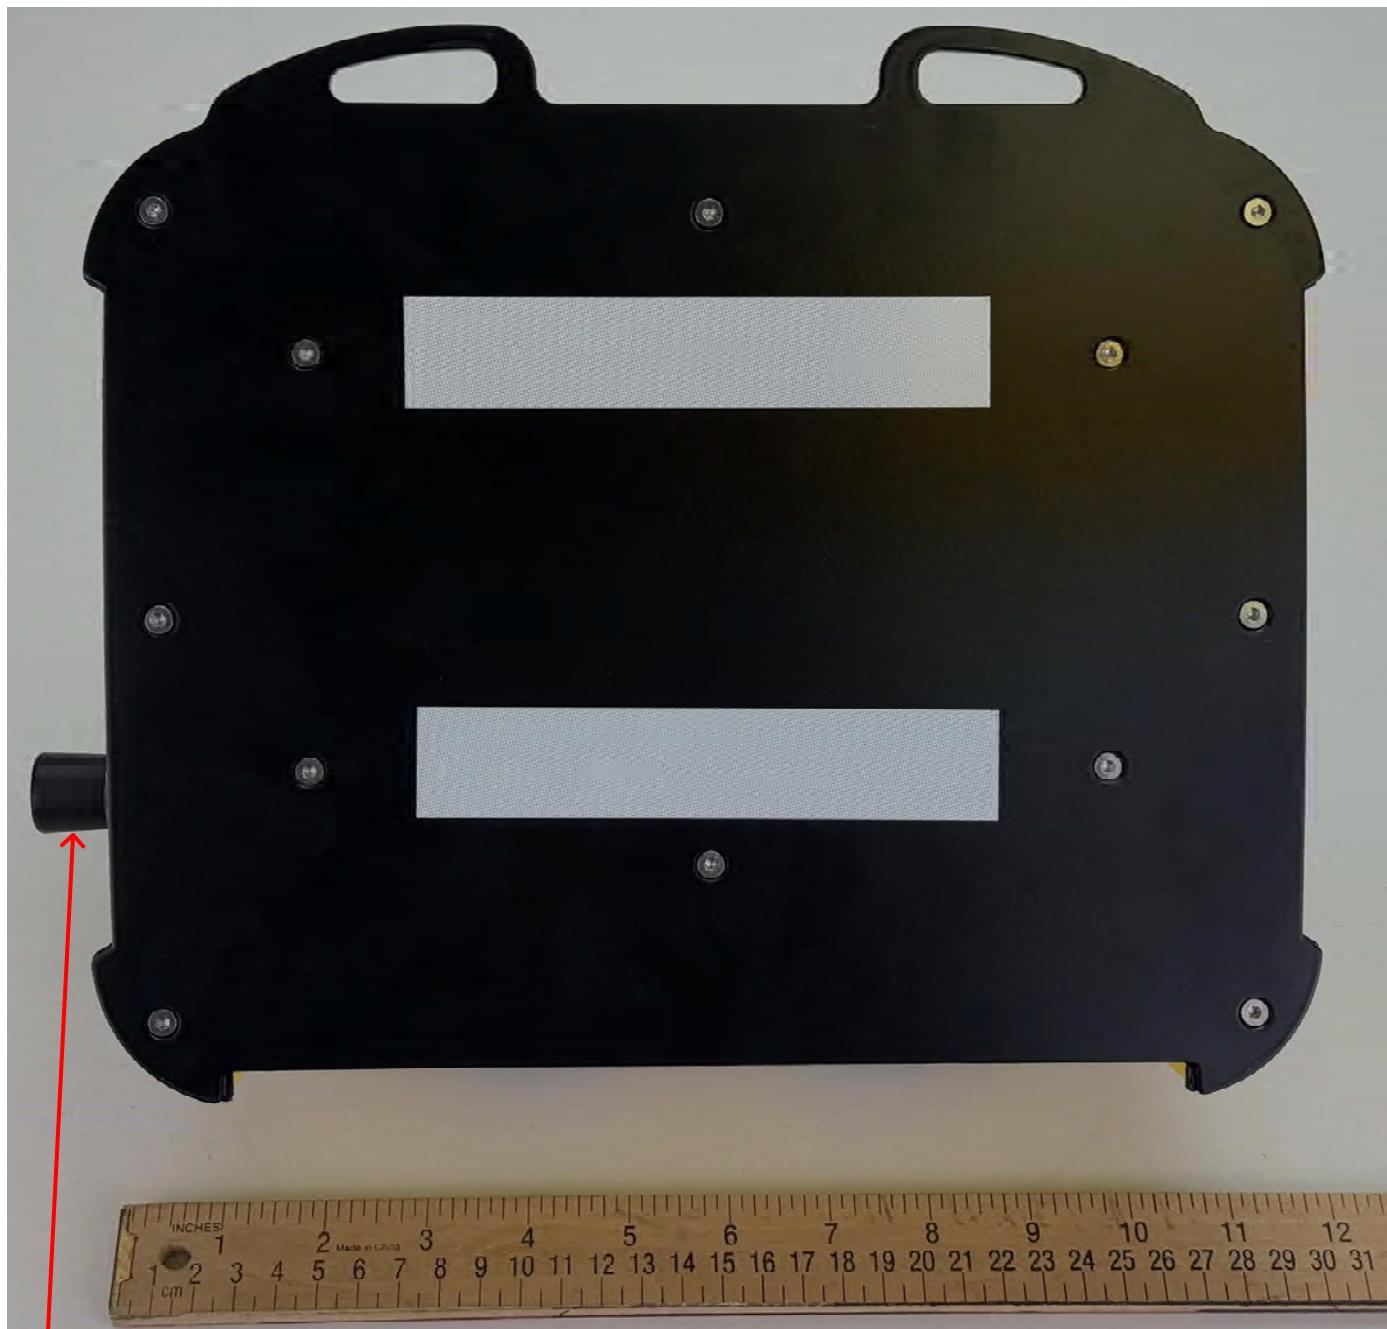

External antenna  
connector with protective  
cover installed


## FAP4213-090 BMN with EXTERNAL BATTERY – FRONT VIEW

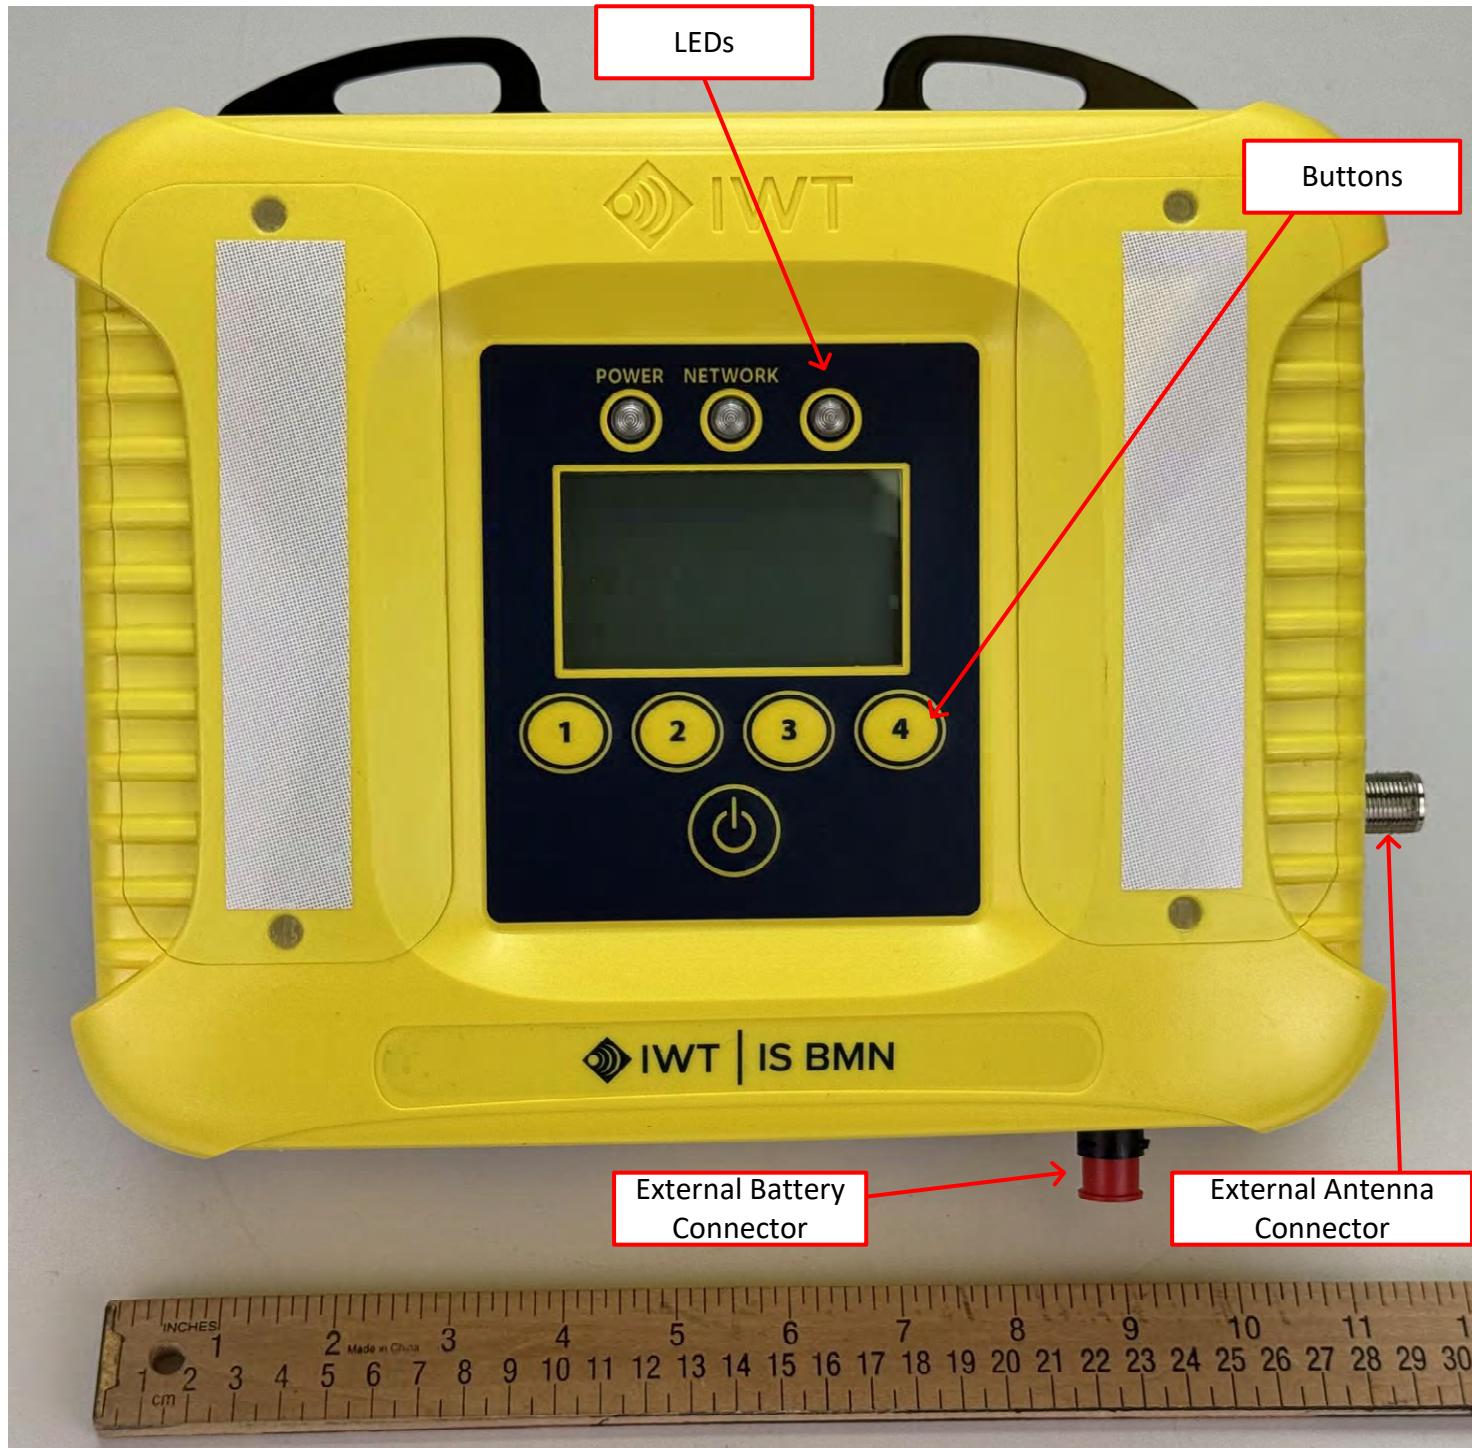

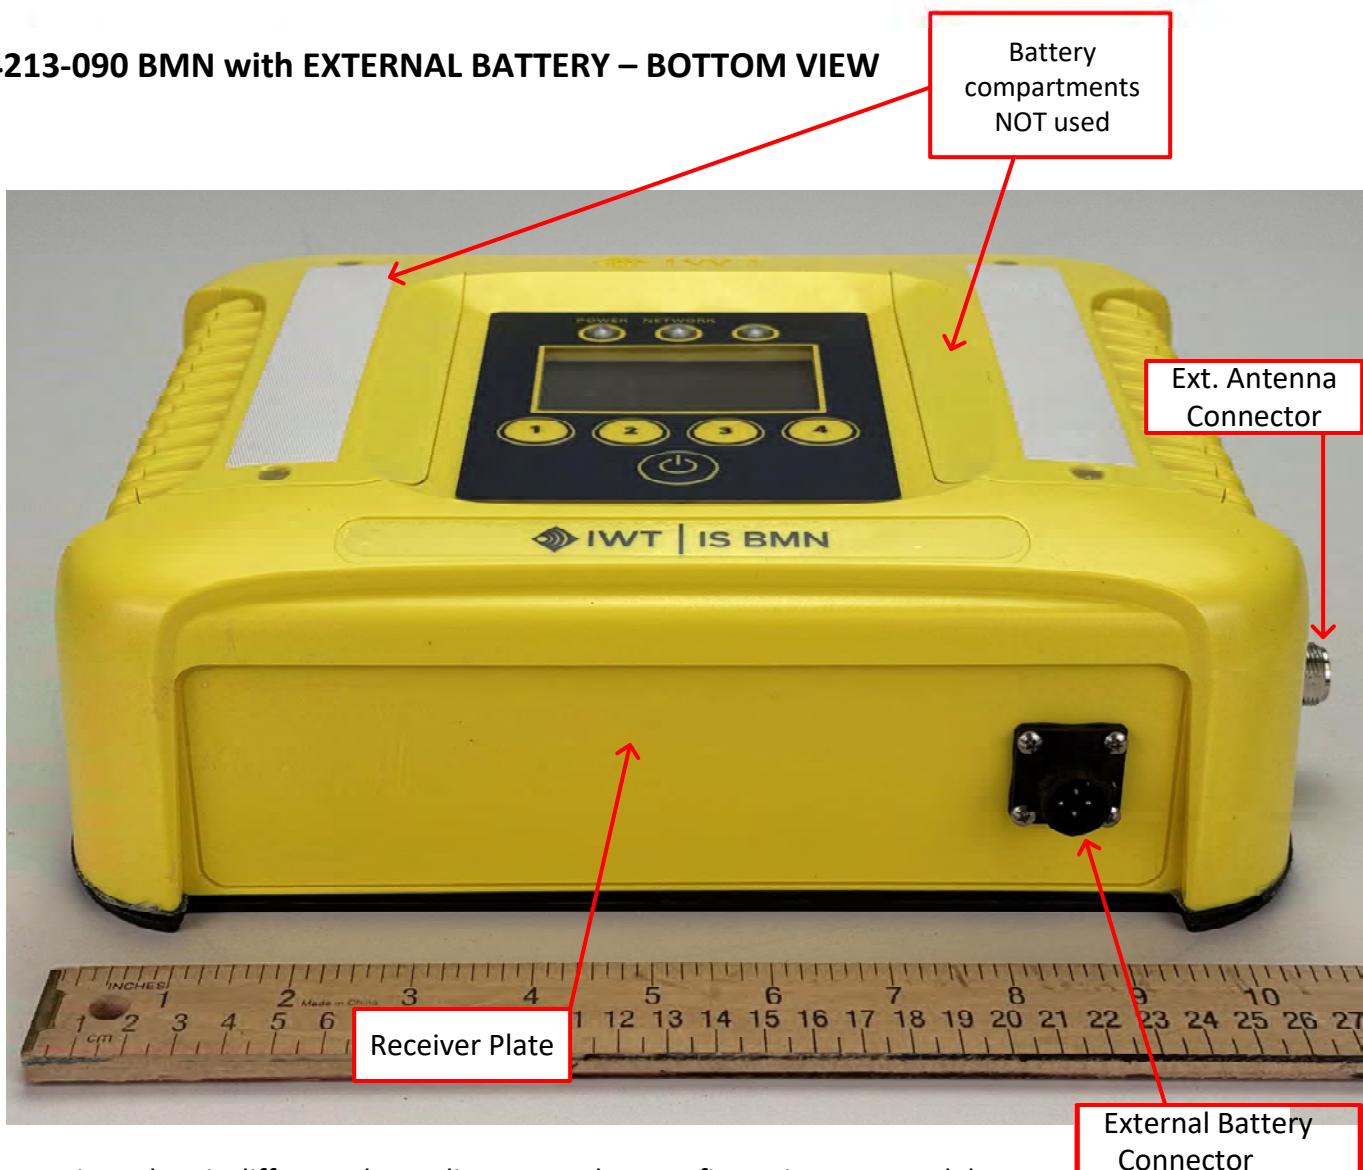**FAP4213-090 BMN with EXTERNAL BATTERY – BOTTOM VIEW**

Receiver Plate is different depending on product configuration. For Model FAP4213-090 it is blank (solid) with an external battery connector.

**FAP4213-090 BMN with EXTERNAL BATTERY – RIGHT SIDE VIEW**

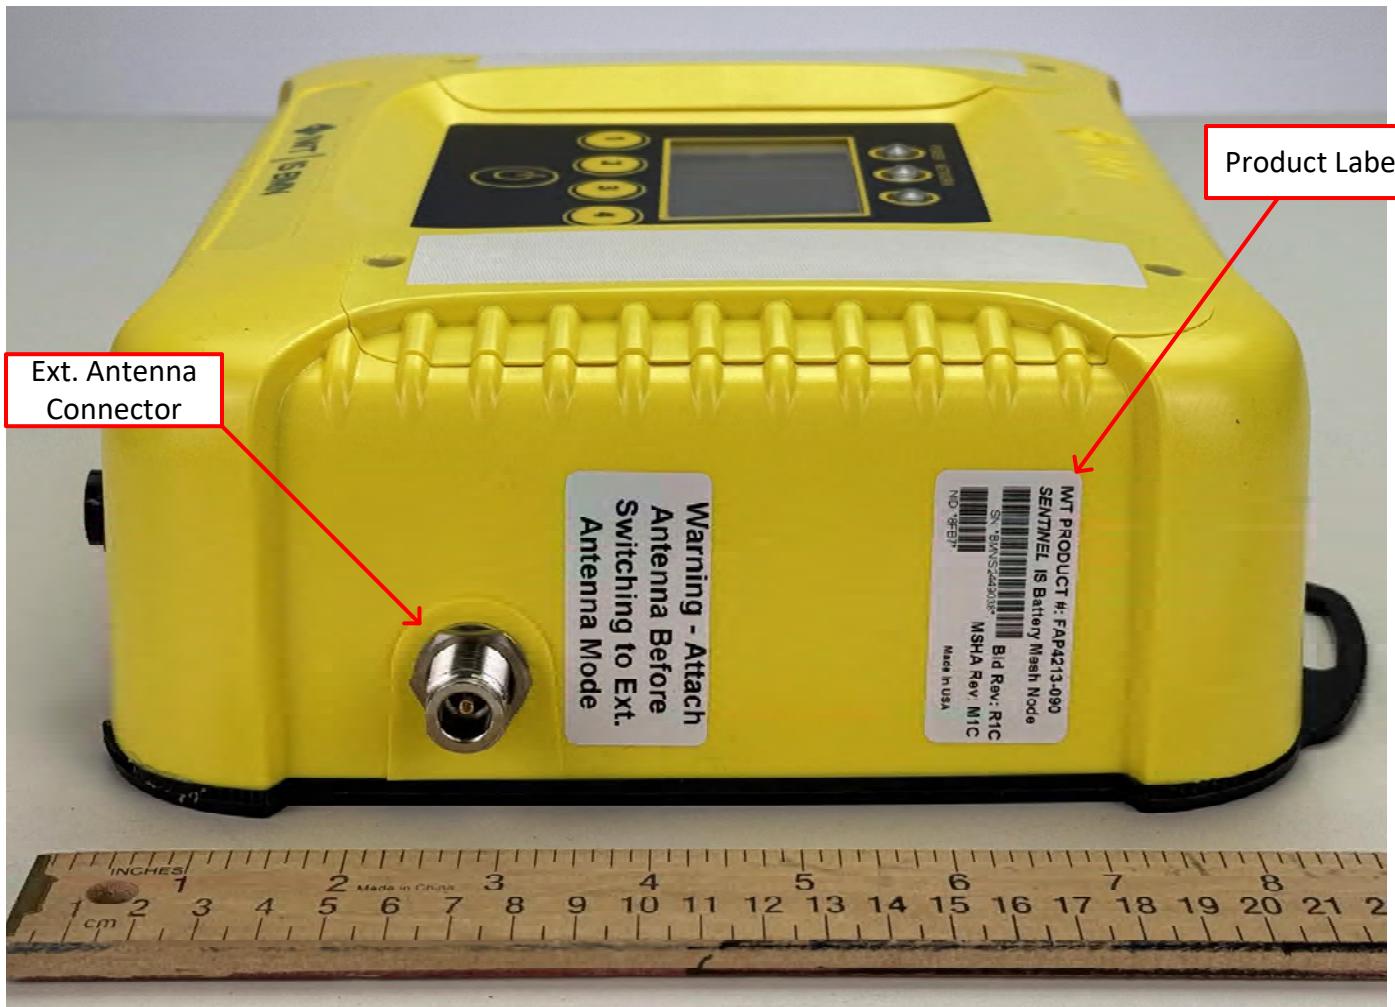

**FAP4213-090 BMN with EXTERNAL BATTERY – TOP SIDE VIEW**


**FAP4213-090 BMN with EXTERNAL BATTERY – LEFT SIDE VIEW**




**FAP4213-090 BMN with EXTERNAL BATTERY – BACK VIEW**




External antenna  
connector

External battery  
connector

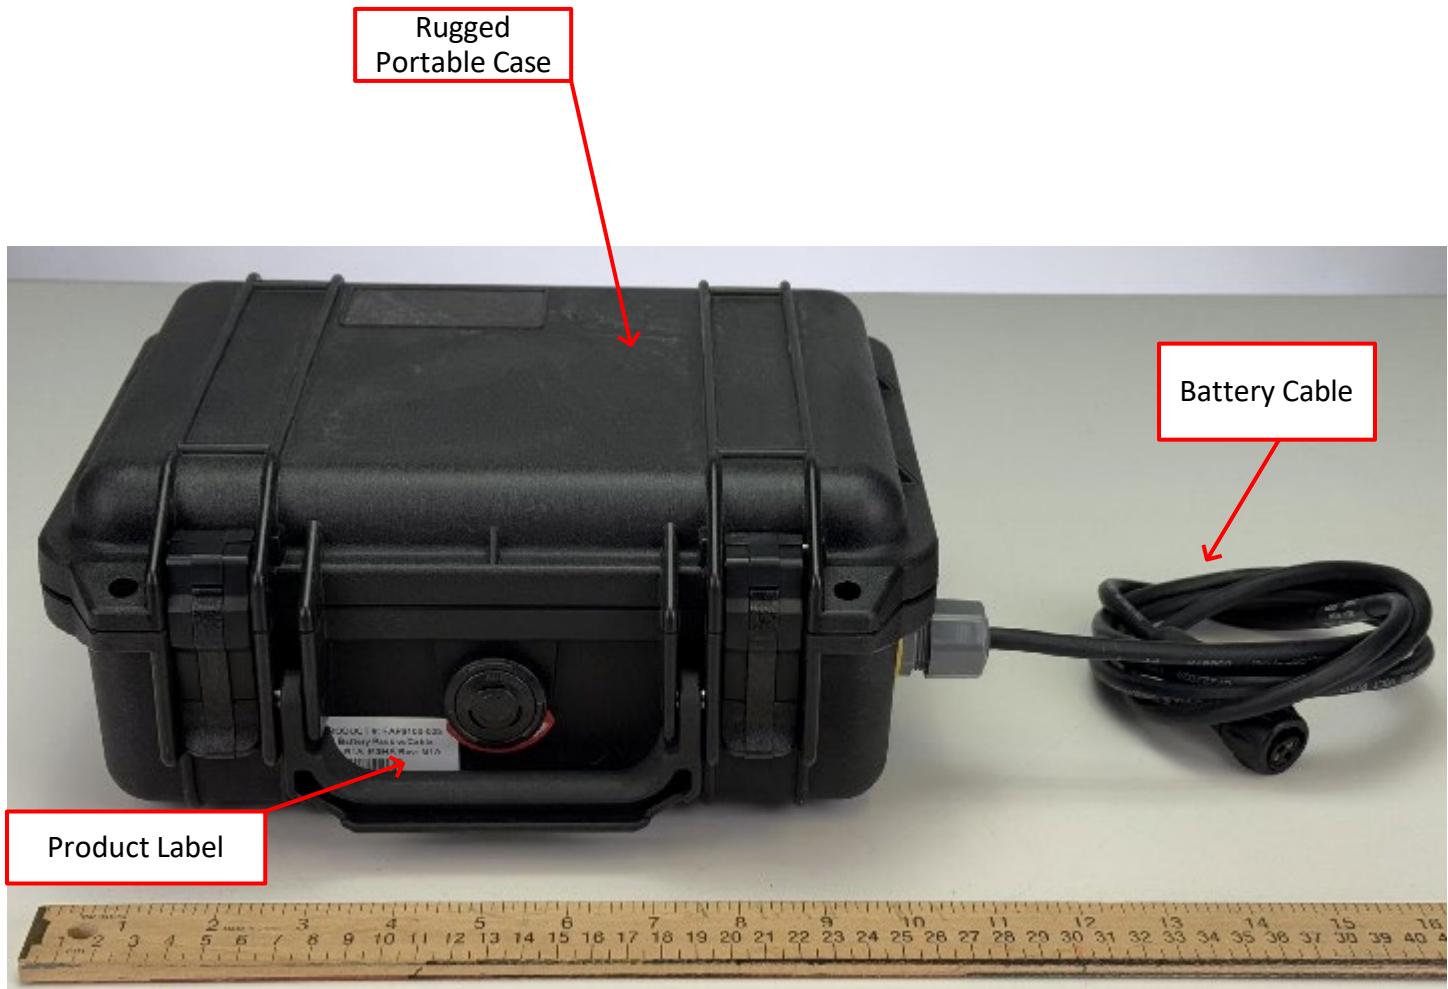**FAP9100-035 ALKALINE BATTTERY - FRONT VIEW**


FAP9100-035 External battery can be used with the products tabulated below.

IWT Product Number	Acronym	No. of gas modules	Battery configuration
FAP4213-090	BMN	0	External
FAP4913-090	WGM+	1	External

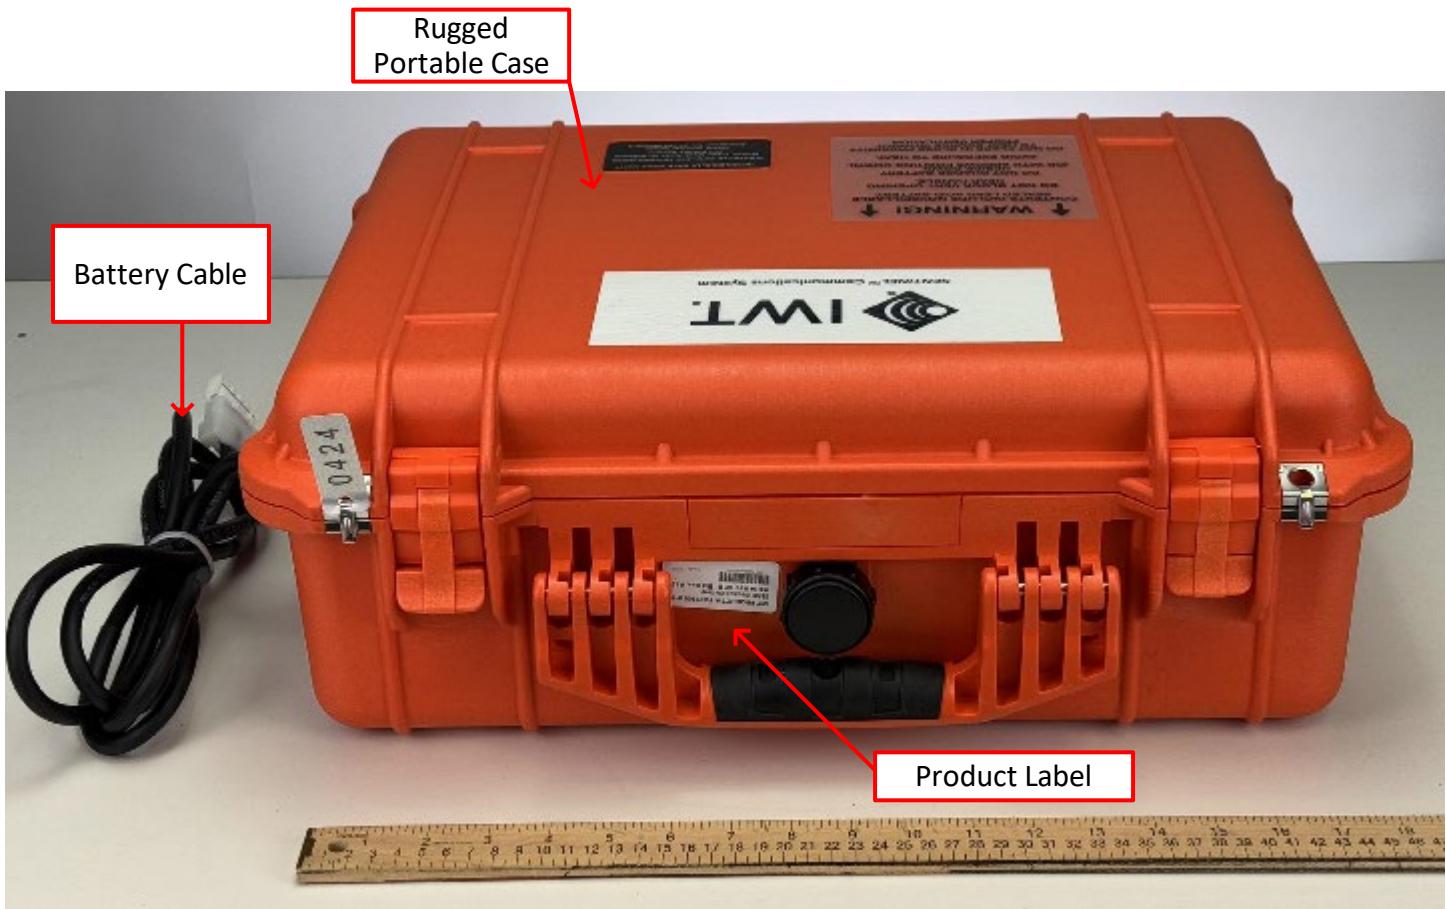**FAP9100-010 SEALED LEAD ACID BATTERY - FRONT VIEW**


FAP9100-010 External battery can be used with the products tabulated below.

IWT Product Number	Acronym	No. of gas modules	Battery configuration
FAP4213-090	BMN	0	External
FAP4913-090	WGM+	1	External