
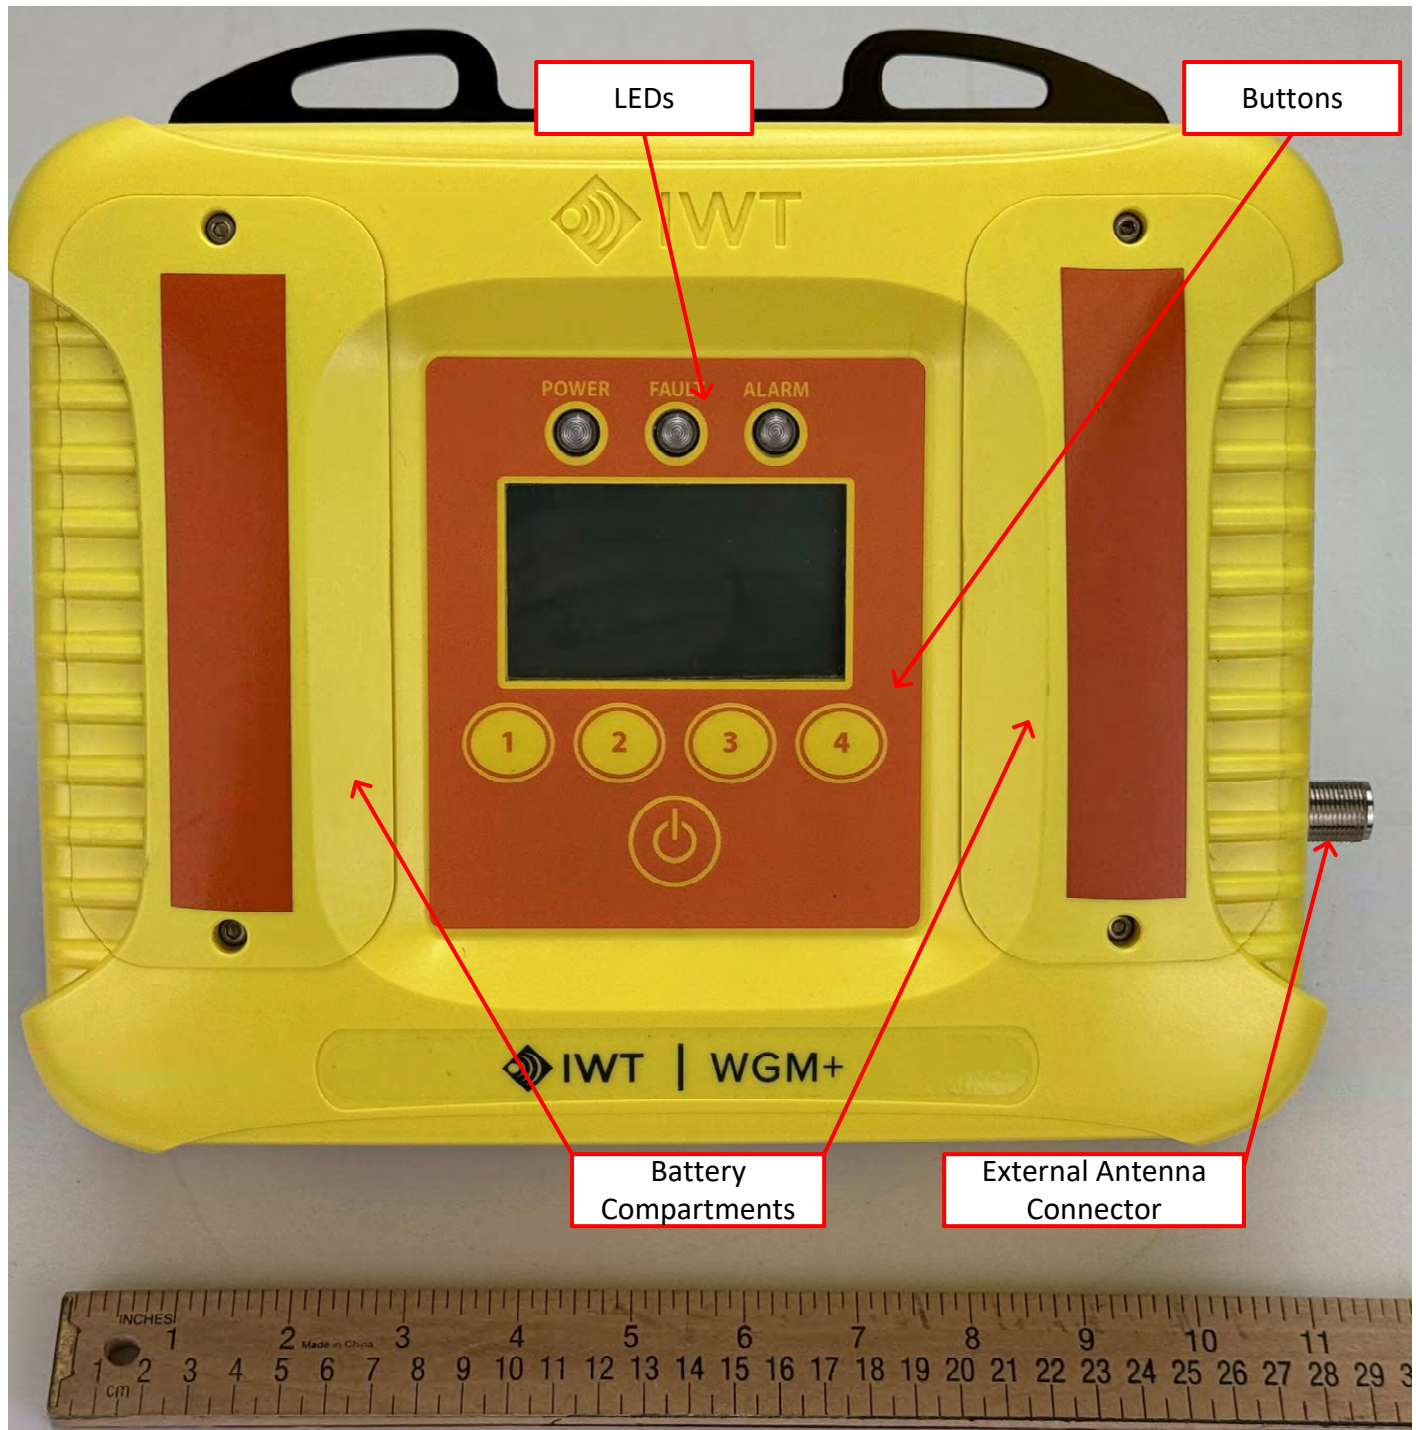
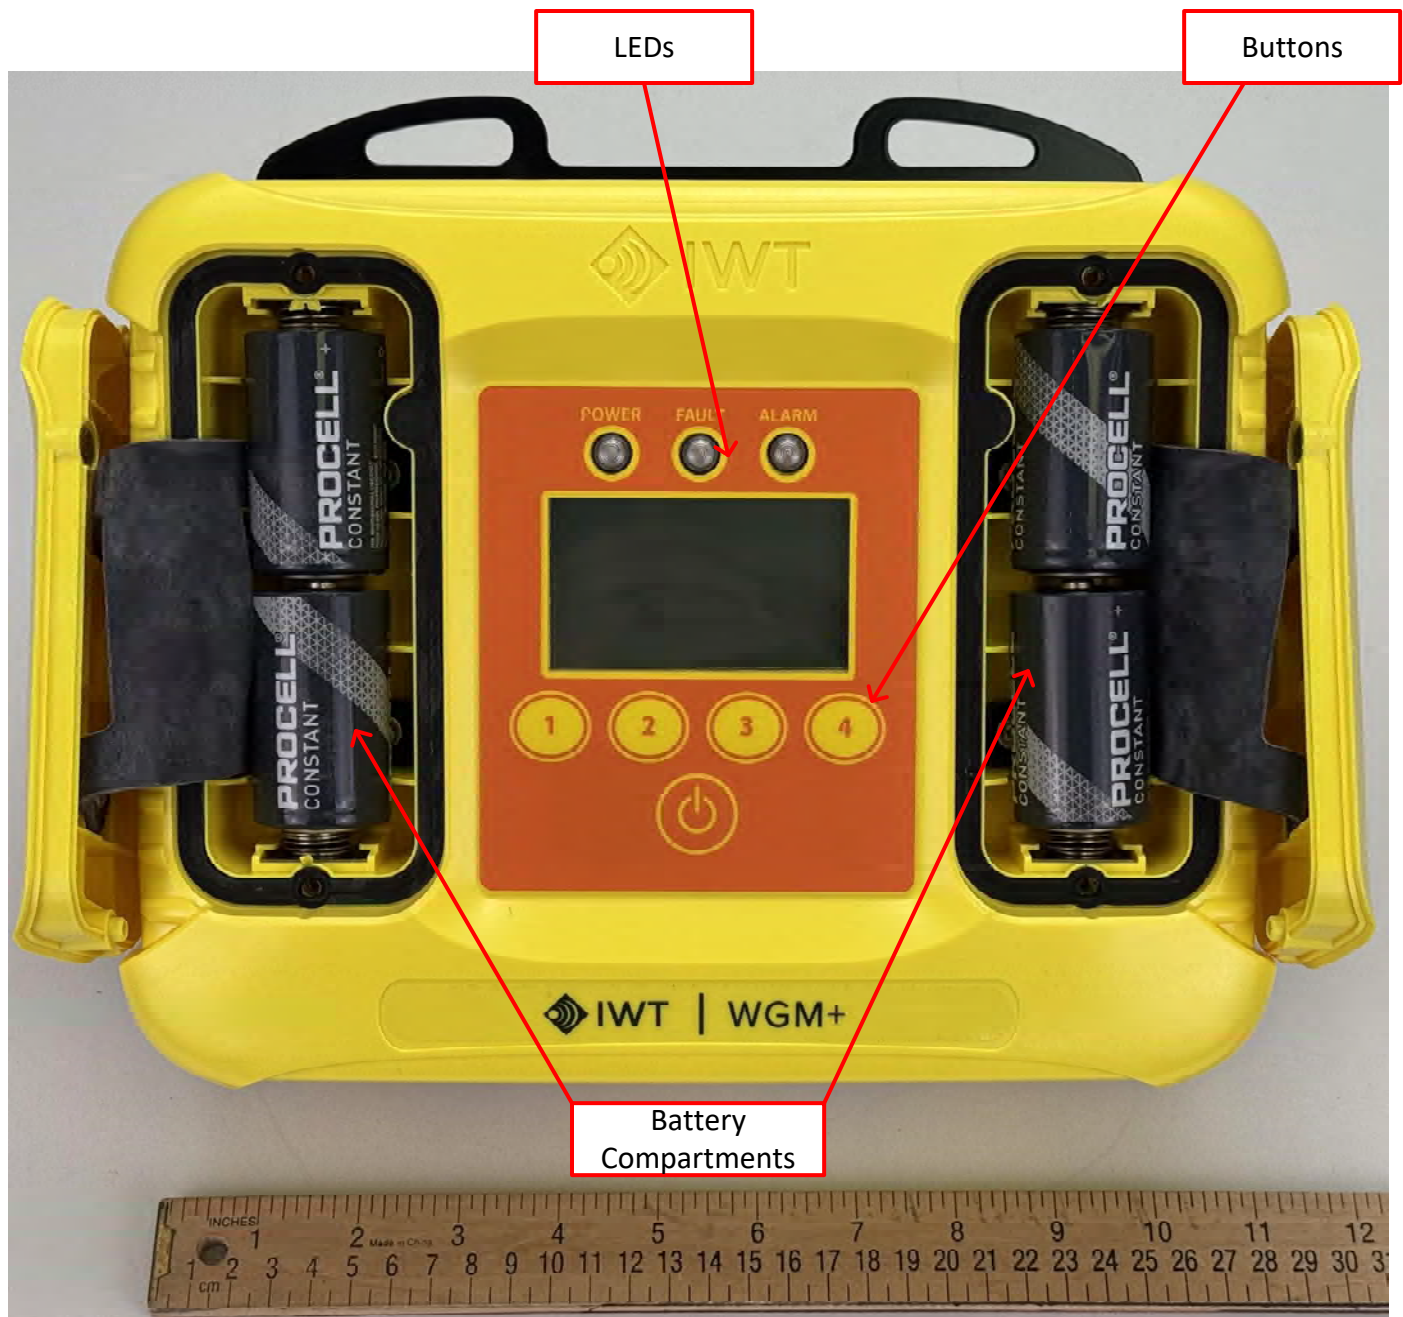


FAP4913-040 WGM+ INTERNAL BATTERY – FRONT VIEW

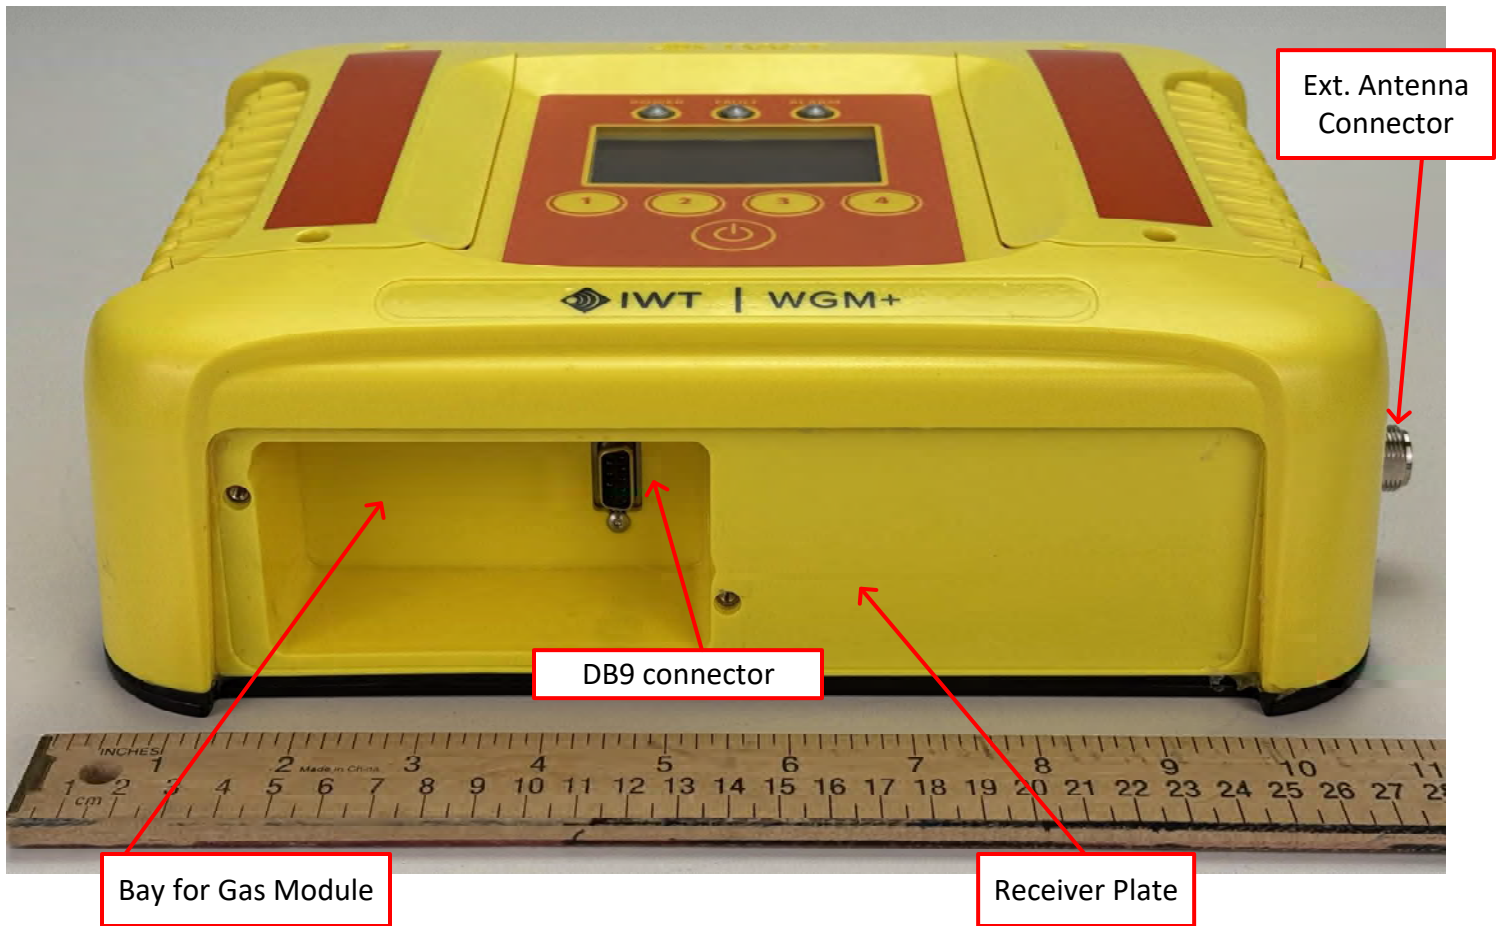


FAP4913-040 WGM+ INTERNAL BATTERY – FRONT VIEW BATTERY COMPARTMENT OPEN

FAP4913-040 WGM+ INTERNAL BATTERY – BOTTOM VIEW

Receiver Plate is different depending on product configuration. Model FAP4913-040 has a single bay and internal batteries. Internally it is identical to Model FAP4913-030.

FAP4913-040 WGM+ INTERNAL BATTERY – BOTTOM VIEW with GAS SENSOR MODULE INSTALLED

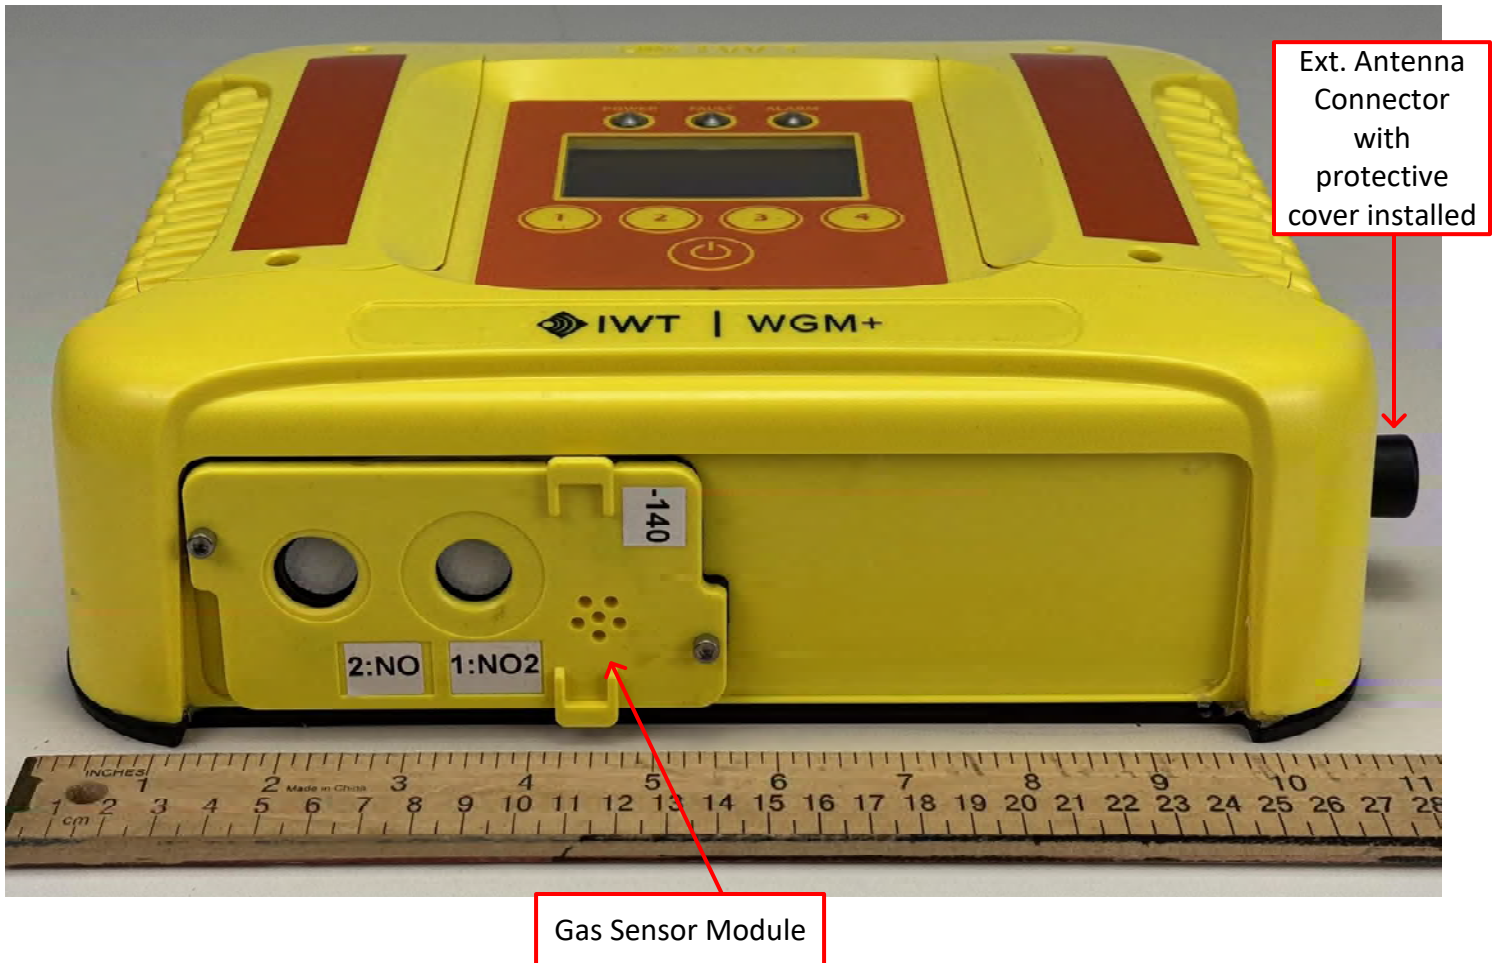

FAP4913-040 WGM+ INTERNAL BATTERY – RIGHT SIDE VIEW



FAP4913-040 WGM+ INTERNAL BATTERY – TOP SIDE VIEW




FAP4913-040 WGM+ INTERNAL BATTERY – LEFT SIDE VIEW




FAP4913-040 WGM+ INTERNAL BATTERY – BACK VIEW




External antenna
connector

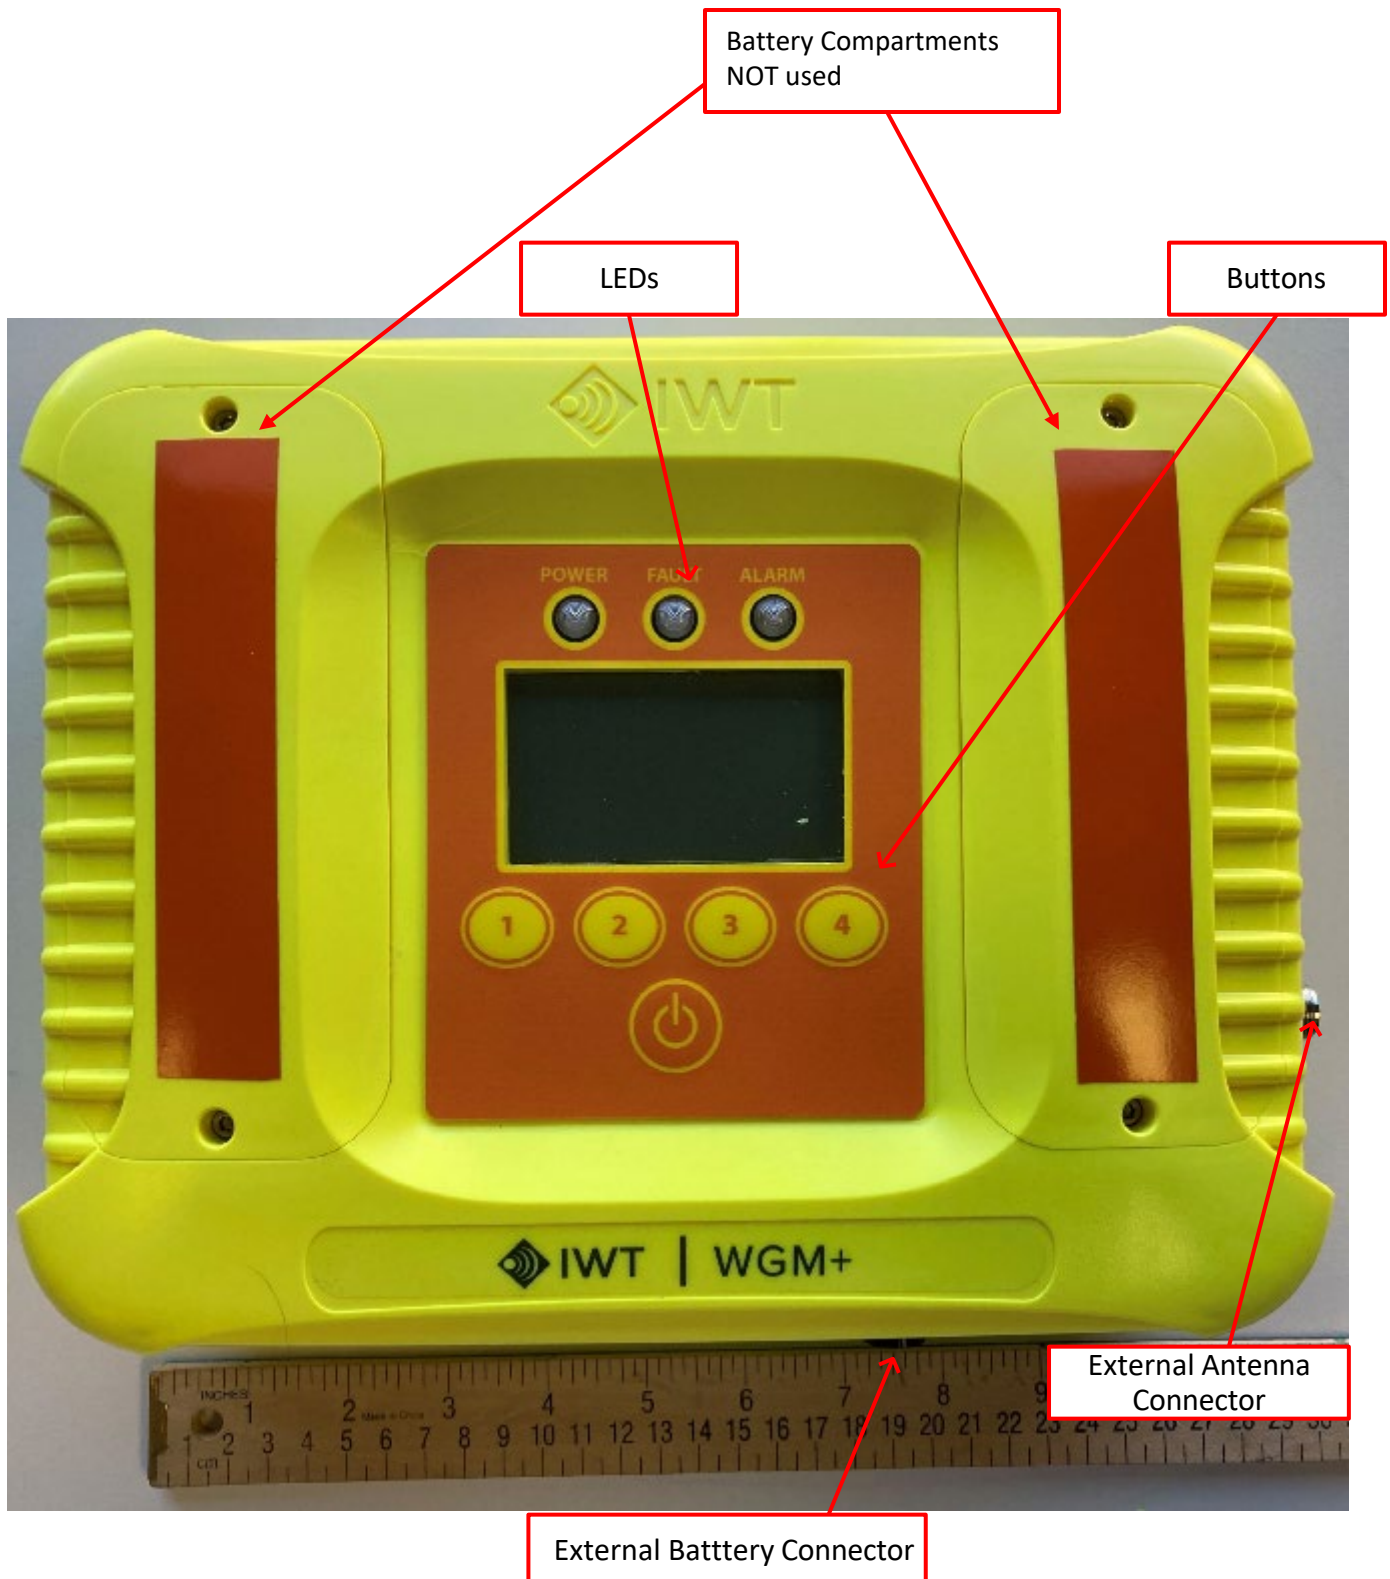FAP4913-090 WGM+ EXTERNAL BATTERY – FRONT VIEW

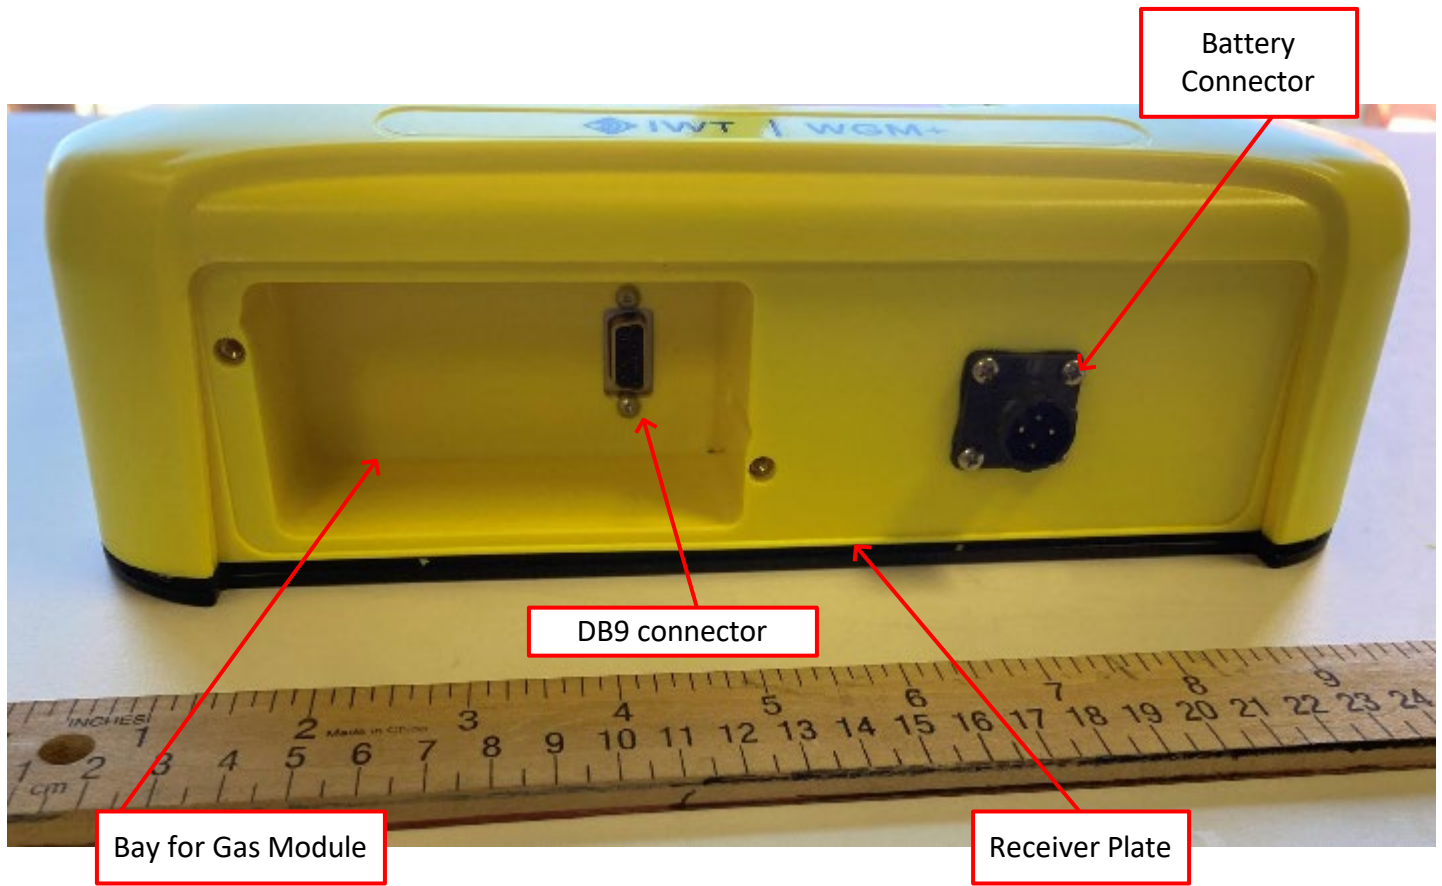
FAP4913-090 WGM+ EXTERNAL BATTERY – BOTTOM VIEW

Receiver Plate is different depending on product configuration. Model FAP4913-090 has a single bay and an external battery connector.


FAP4913-090 WGM+ EXTERNAL BATTERY – BOTTOM VIEW with GAS SENSOR MODULE INSTALLED

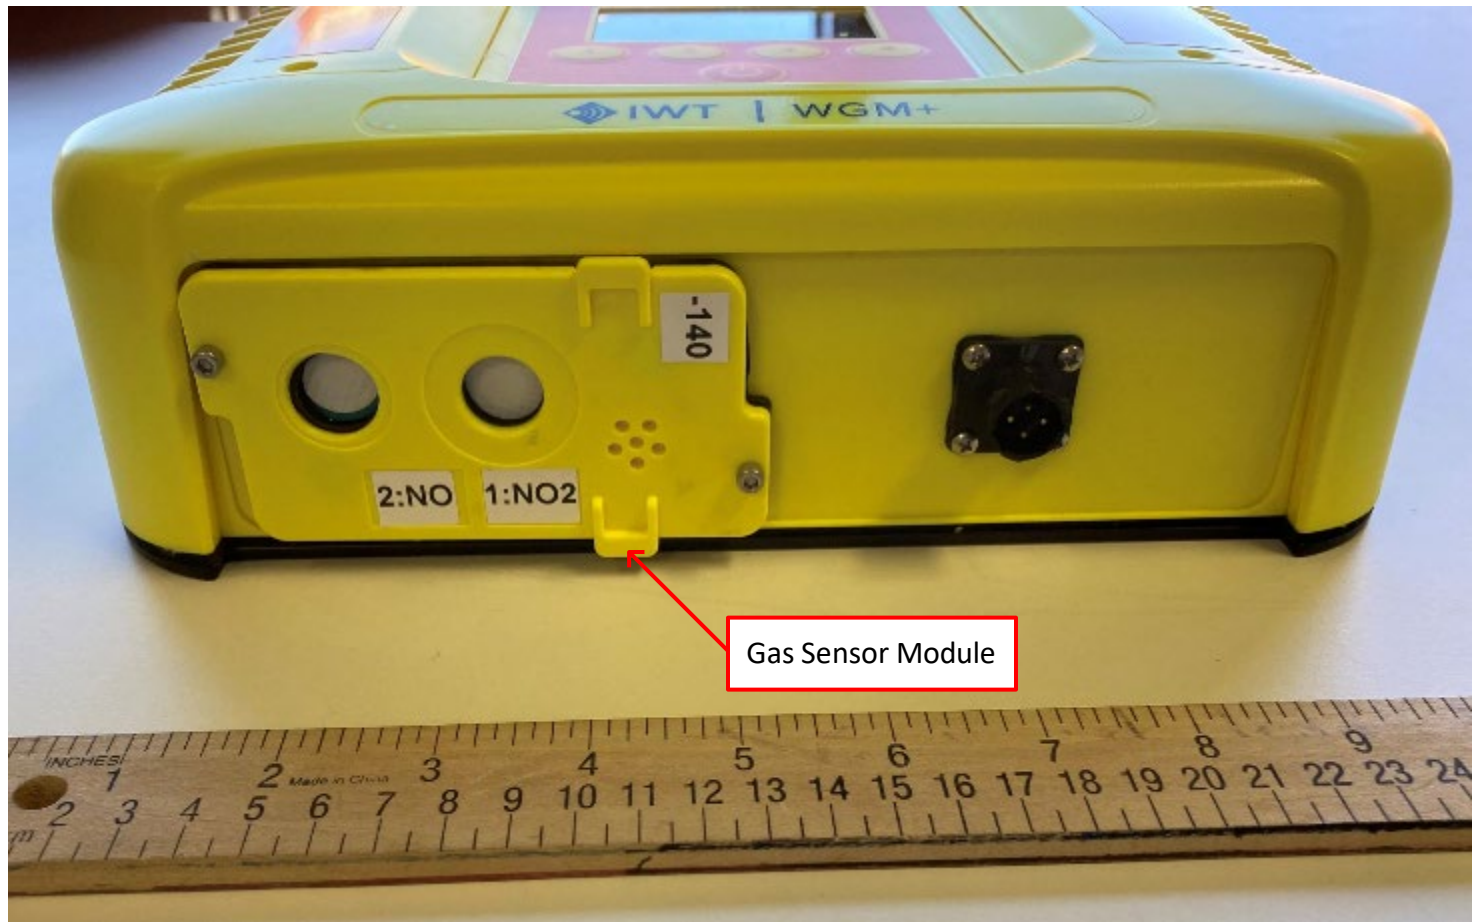

FAP4913-090 WGM+ EXTERNAL BATTERY – RIGHT SIDE VIEW

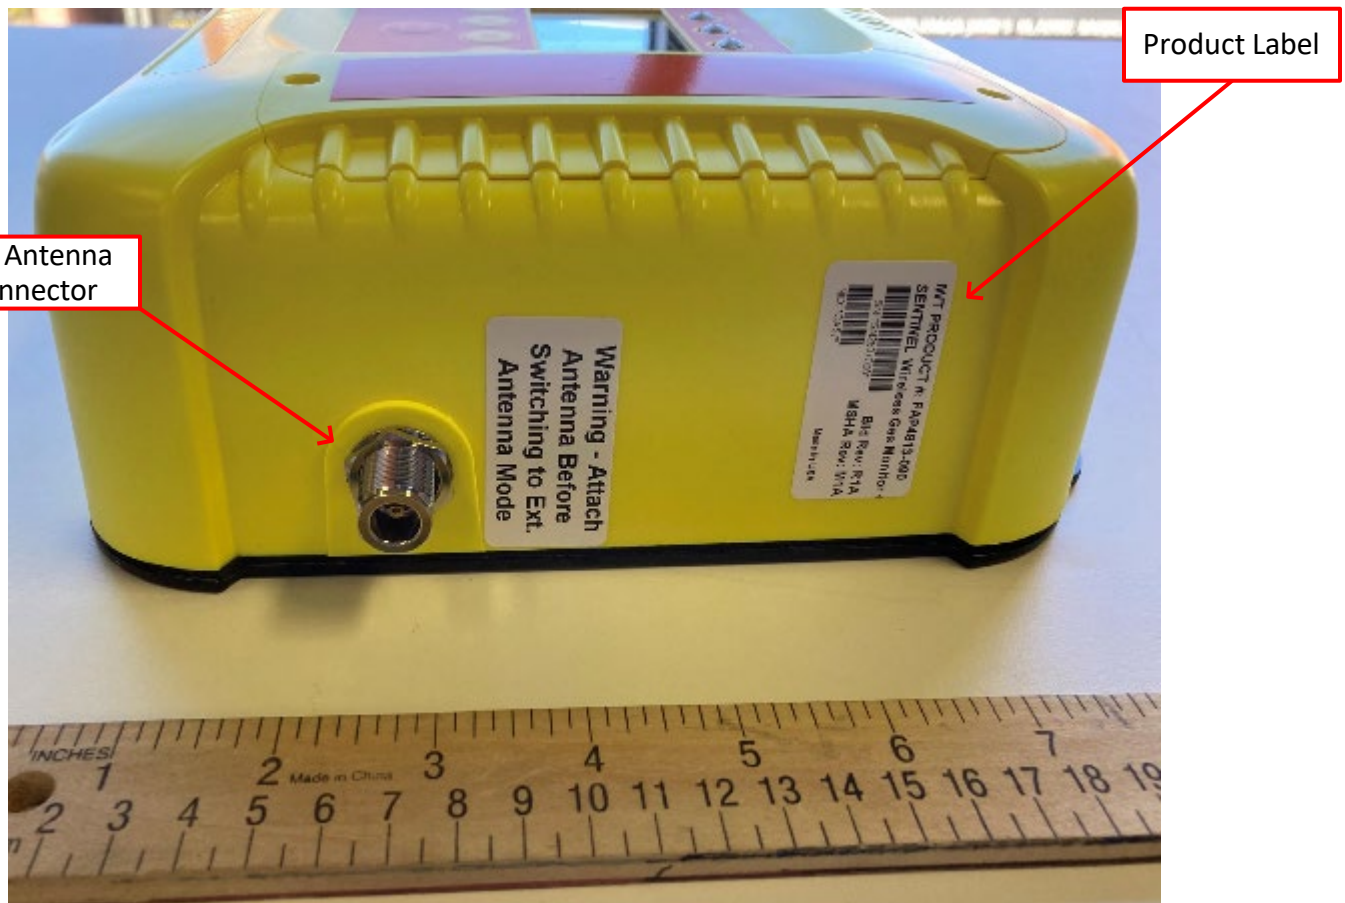


FAP4913-090 WGM+ EXTERNAL BATTERY – TOP VIEW

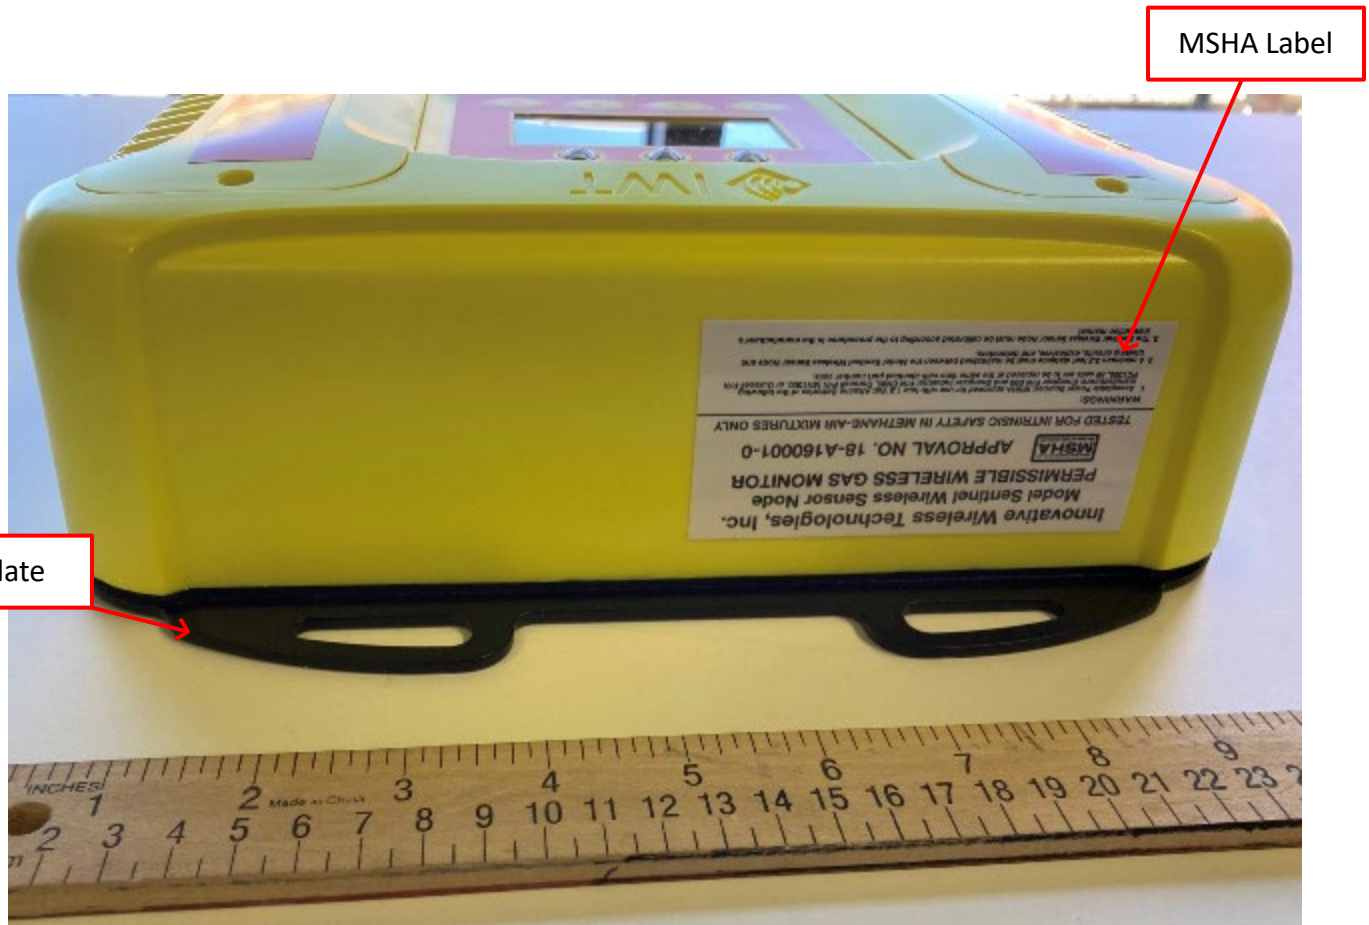

FAP4913-090 WGM+ EXTERNAL BATTERY – LEFT SIDE VIEW




FAP4913-090 WGM+ EXTERNAL BATTERY – BACK VIEW

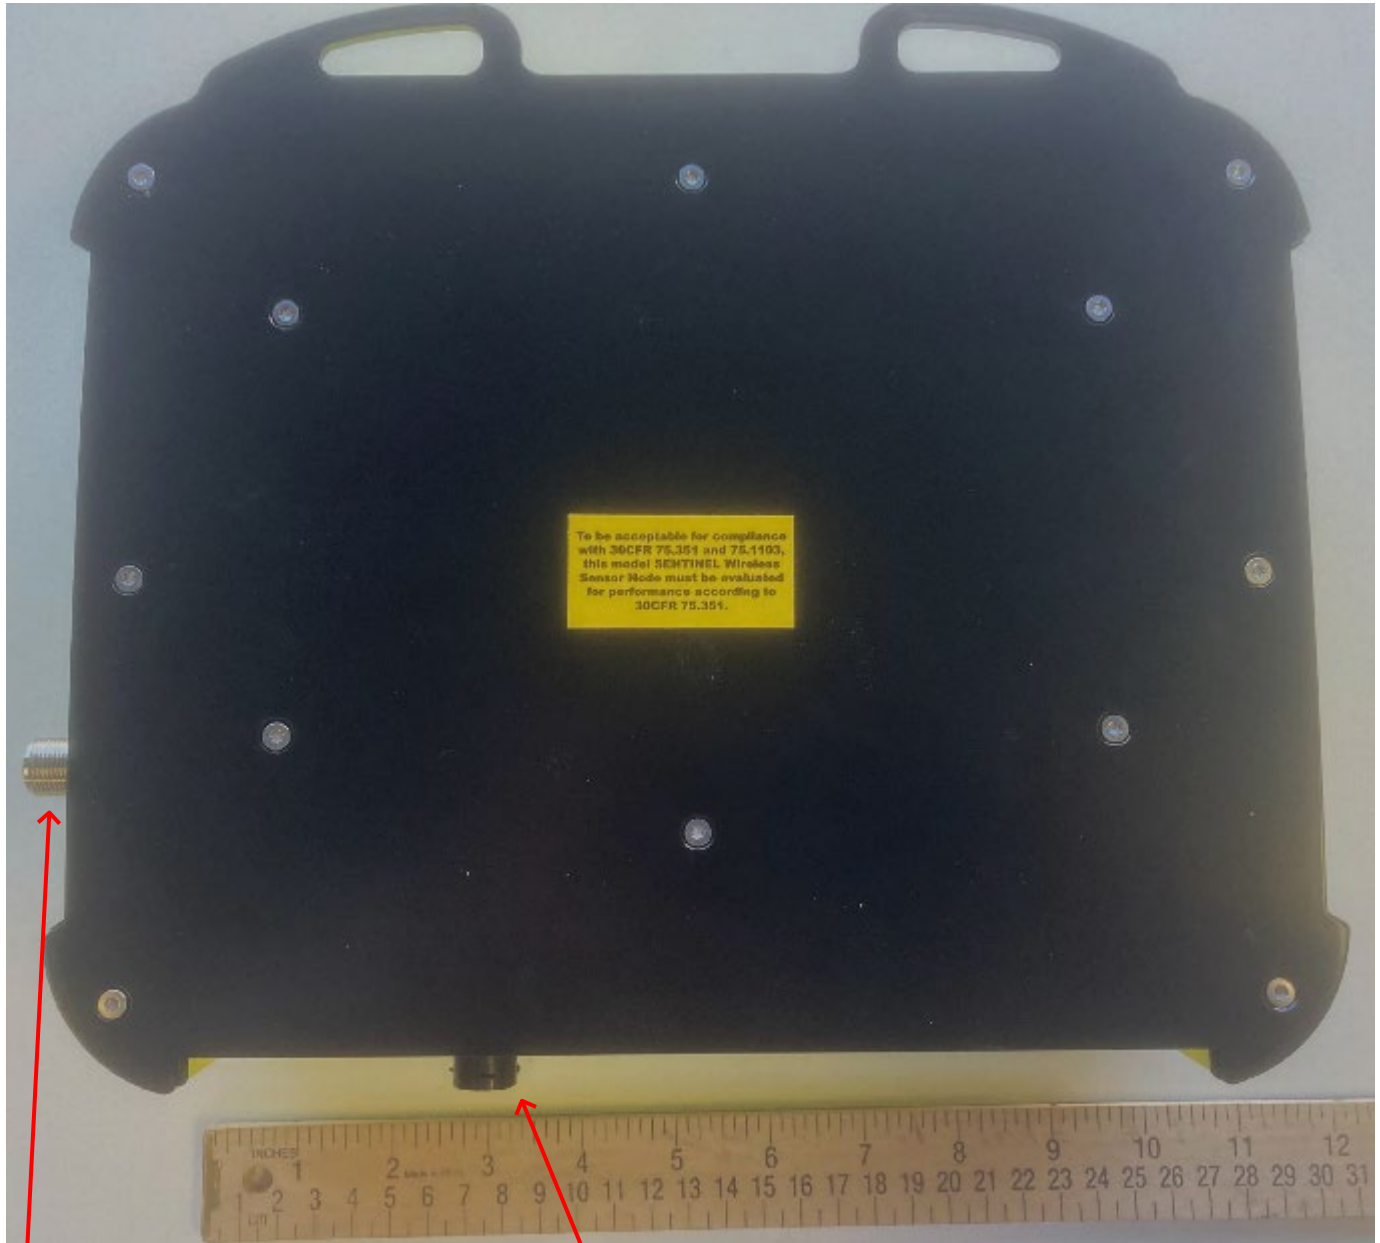

External antenna
connector

Battery connector


FAP9100-035 ALKALINE BATTERY - FRONT VIEW

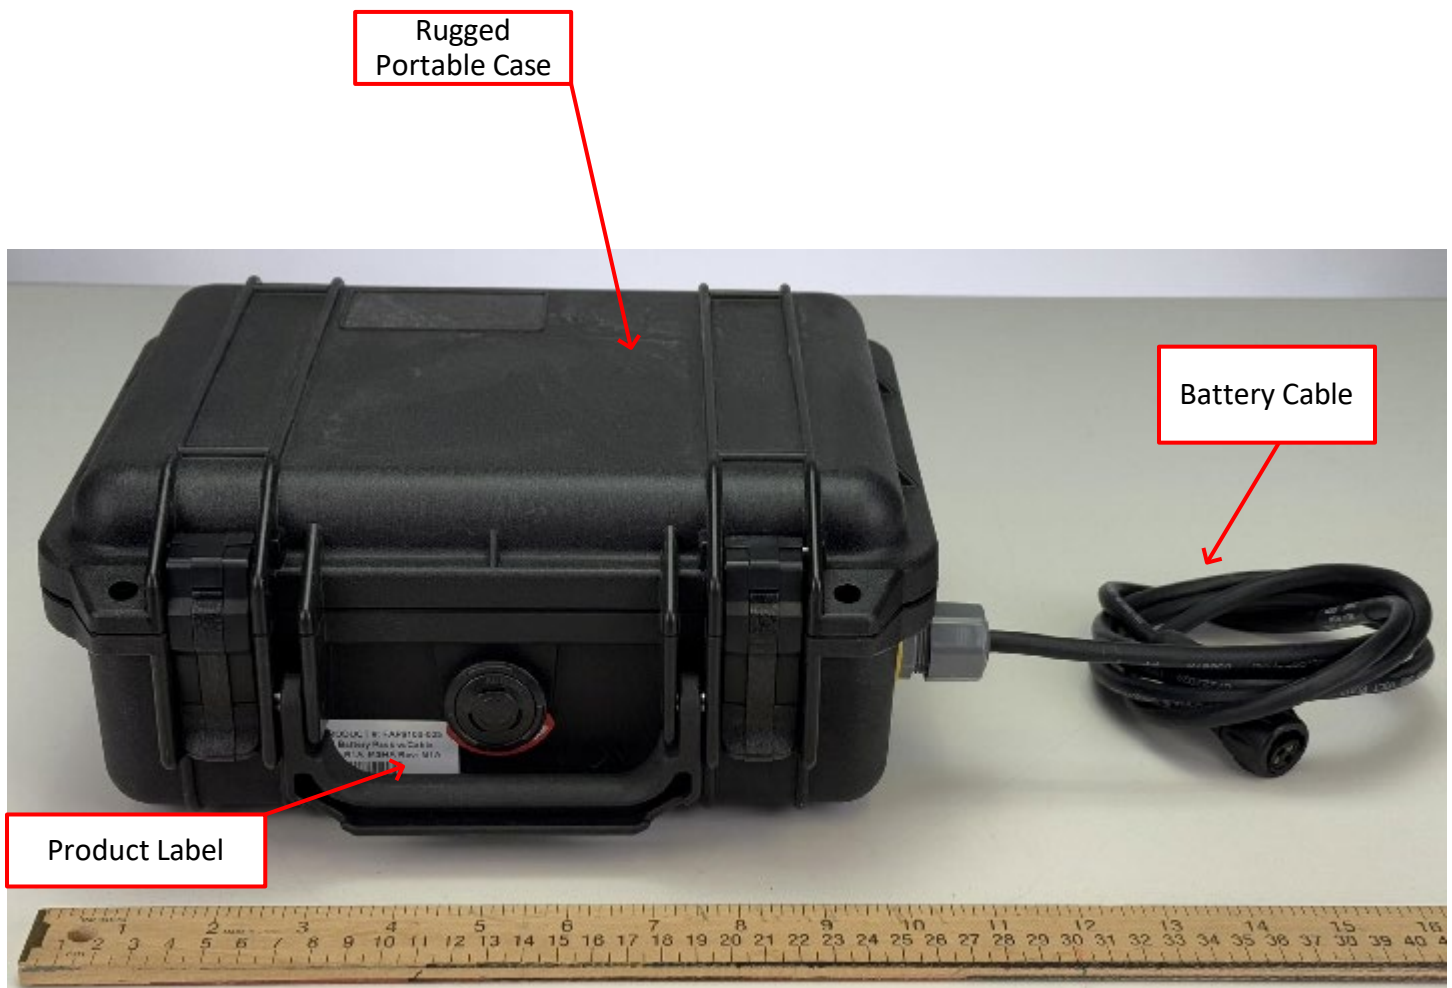

FAP9100-035 External battery can be used with the products tabulated below.

IWT Product Number	Acronym	No. of gas modules	Battery configuration
FAP4213-090	BMN	0	External
FAP4913-090	WGM+	1	External

FAP9100-010 SEALED LEAD ACID BATTERY - FRONT VIEW

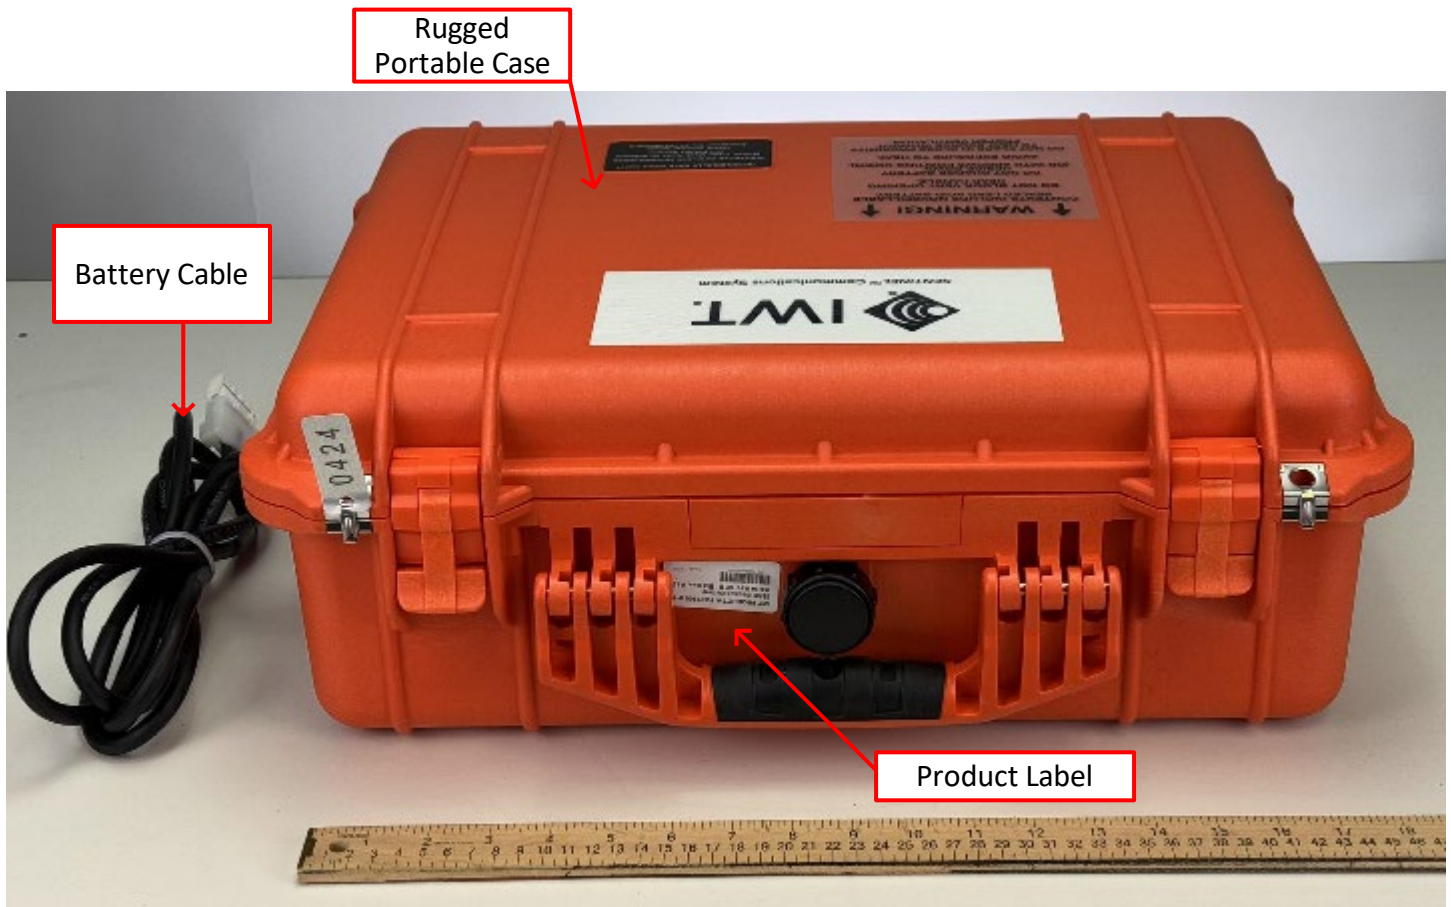

FAP9100-010 External battery can be used with the products tabulated below.

IWT Product Number	Acronym	No. of gas modules	Battery configuration
FAP4213-090	BMN	0	External
FAP4913-090	WGM+	1	External